



1, Button Instructions

Function Key: Short press to enter parameter setting mode, with the corresponding number flashing. Each press switches to the next parameter. In parameter setting mode, long press for 2 seconds to exit the setting mode.

Adjustment Key: Adjusts the corresponding parameter during setting mode. In manual mode, short press to turn the fan on, and press again to turn it off.

Ensure there are no other chassis nearby that have been powered on for less than 30 seconds. Press and hold the Function Key while powering on the device until it enters pairing mode.

(If Screen Display Connecting)

(Press the Function Key again to start pairing, and continue holding until the display shows Connected !)

(Here, '888' represents the address 888. Each display board has a unique address.)

Indicates successful pairing.

2, Icon Description

自动模式



风量调节



 
手动模式



怠速功率



光电灵敏度



延时停止



Auto Mode: In this automatic operating state, the motor starts and stops via photoelectric control.

Manual Mode: In this manual operating state, briefly press the Adjustment Key to start or stop the motor.

Air Volume Adjustment :40-100%, Each short press adds 10%.

Idle Speed (L1-L5): Short press the Adjustment Key to cycle levels, with L1 as the lowest and L5 as the highest.

Photoelectric Sensitivity (S1-S5): Short press the Adjustment Key to cycle levels, with S1 being the least sensitive.

Delay Stop: Auto Mode Delay Time Adjustment 1-5S, Short press the Adjustment Key to cycle through the delay times.