

PARTS BOOK



 
 
 
**FOUR-HEAD AUTOMATIC
EMBROIDERY MACHINE**

SMF[®]

PME-050525

SUNSTAR PRECISION CO., LTD.

Machine Layout

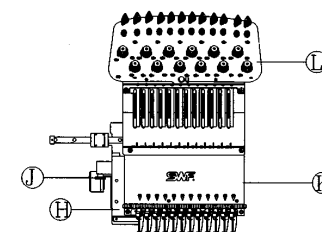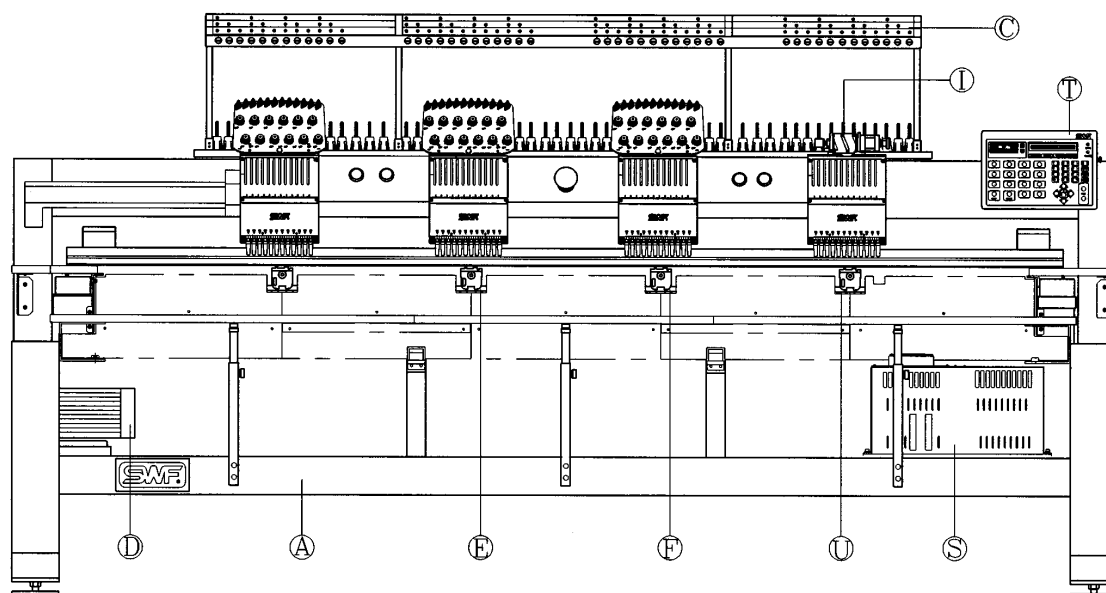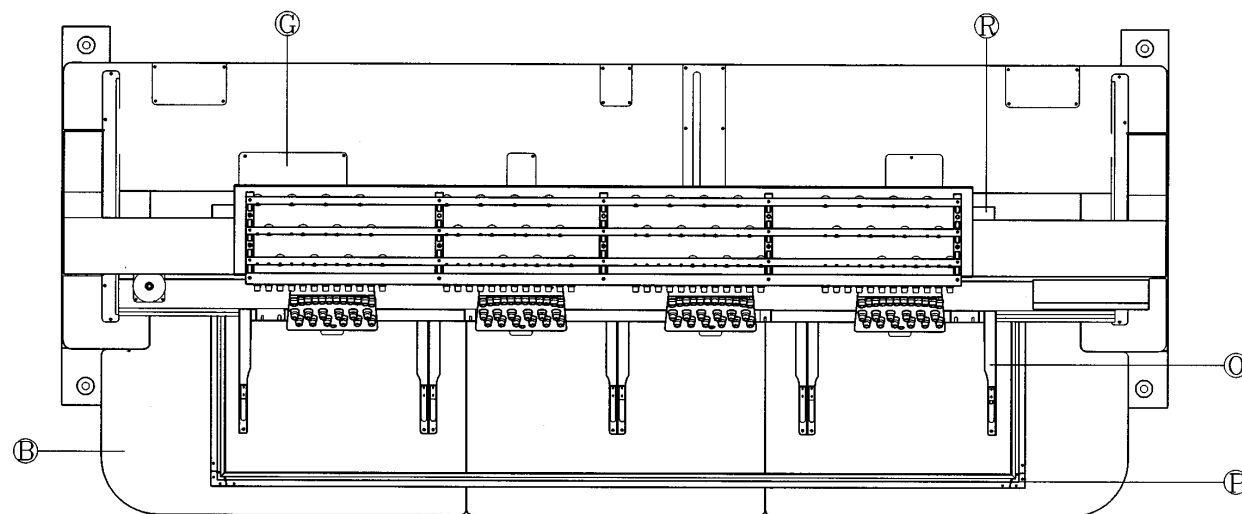




CONTENT

A	Machine Body Ass'y	7
B	Work Table	9
C	Spool Stand	11
D	Main Drive System	13
E	Bed I	17
F	Bed II	19
G	Thread Cutting System	21
H	Arm I	23
H1	Arm II	27
H2	Arm III	29
I	Color Change Set	31
J	Wiper Set	33
K	Head	37
L	Thread Tension Unit	41
M	X-Axis Drive Set	45
N	Y-Axis Drive Set	49
O	Tubular Frame	53
P	Border Frame	55
Q	S/B Switch Unit	57
R	Sub-Control Unit & Lamp	59
S	Main Controller	61
T	Operation Unit	63
U	Bobbin Winder	65

A


Machine Body Ass'y

 SWF®

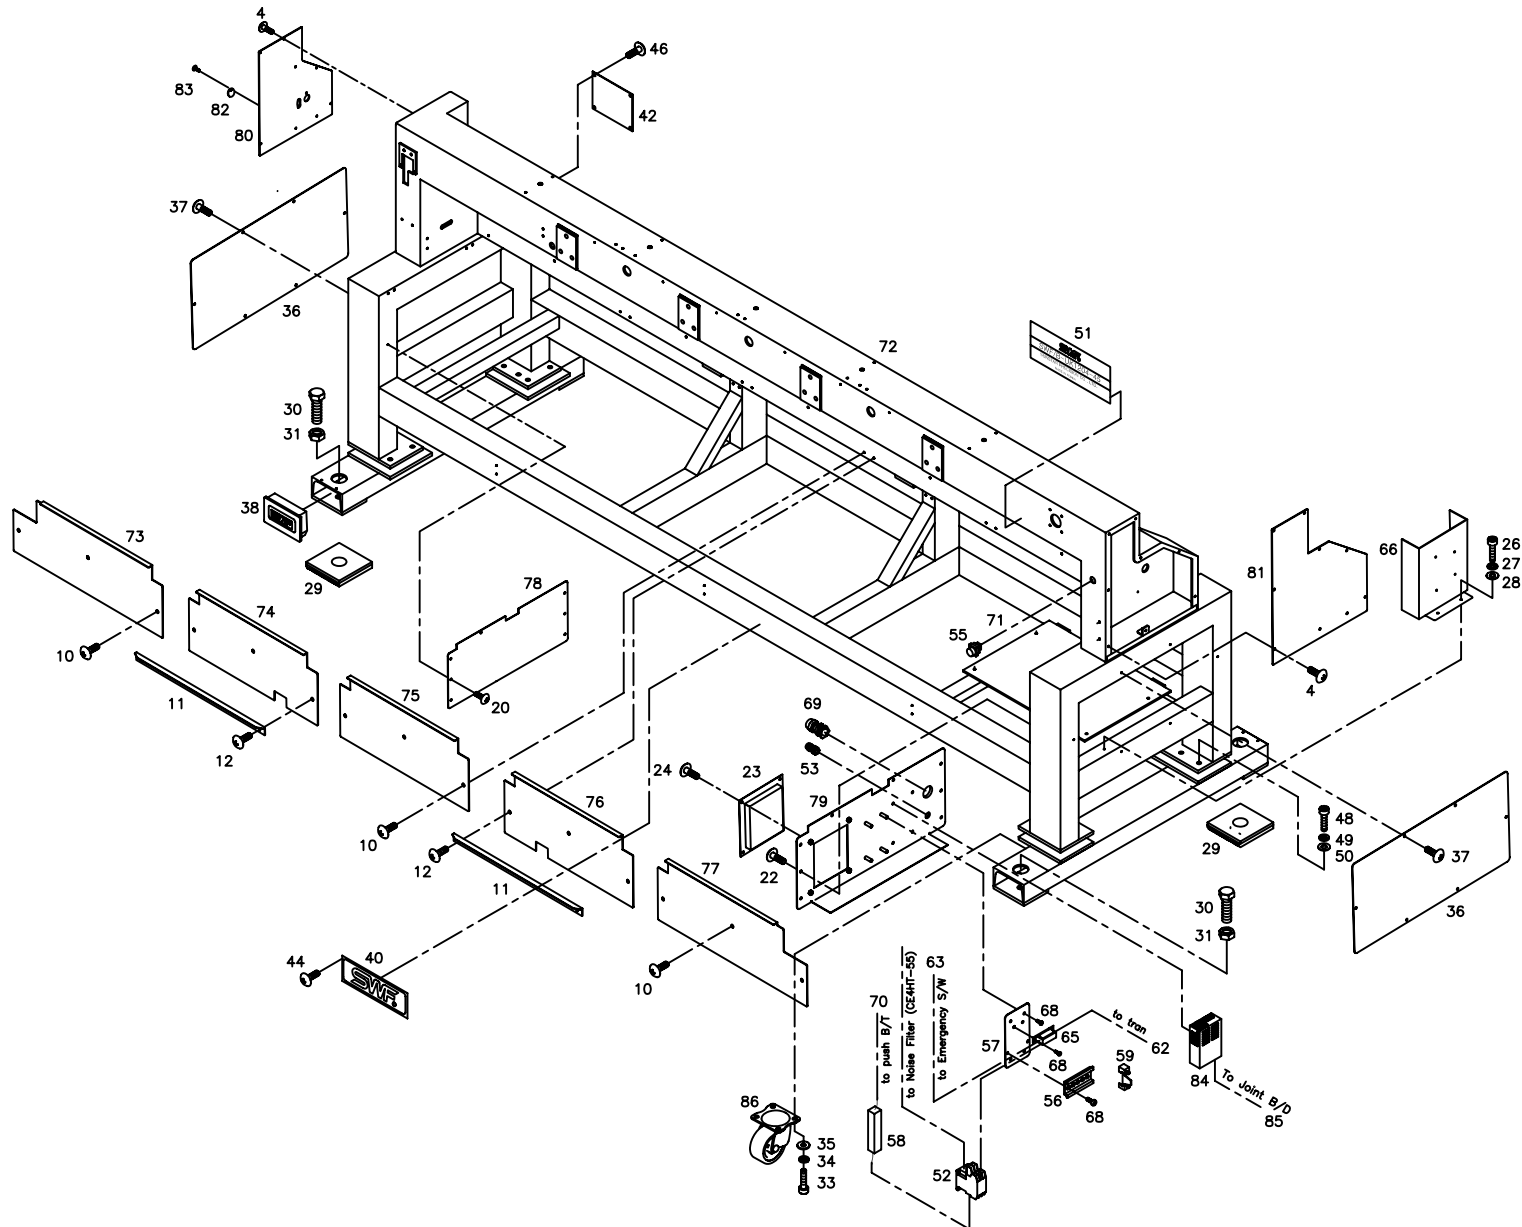


B

 Work Table

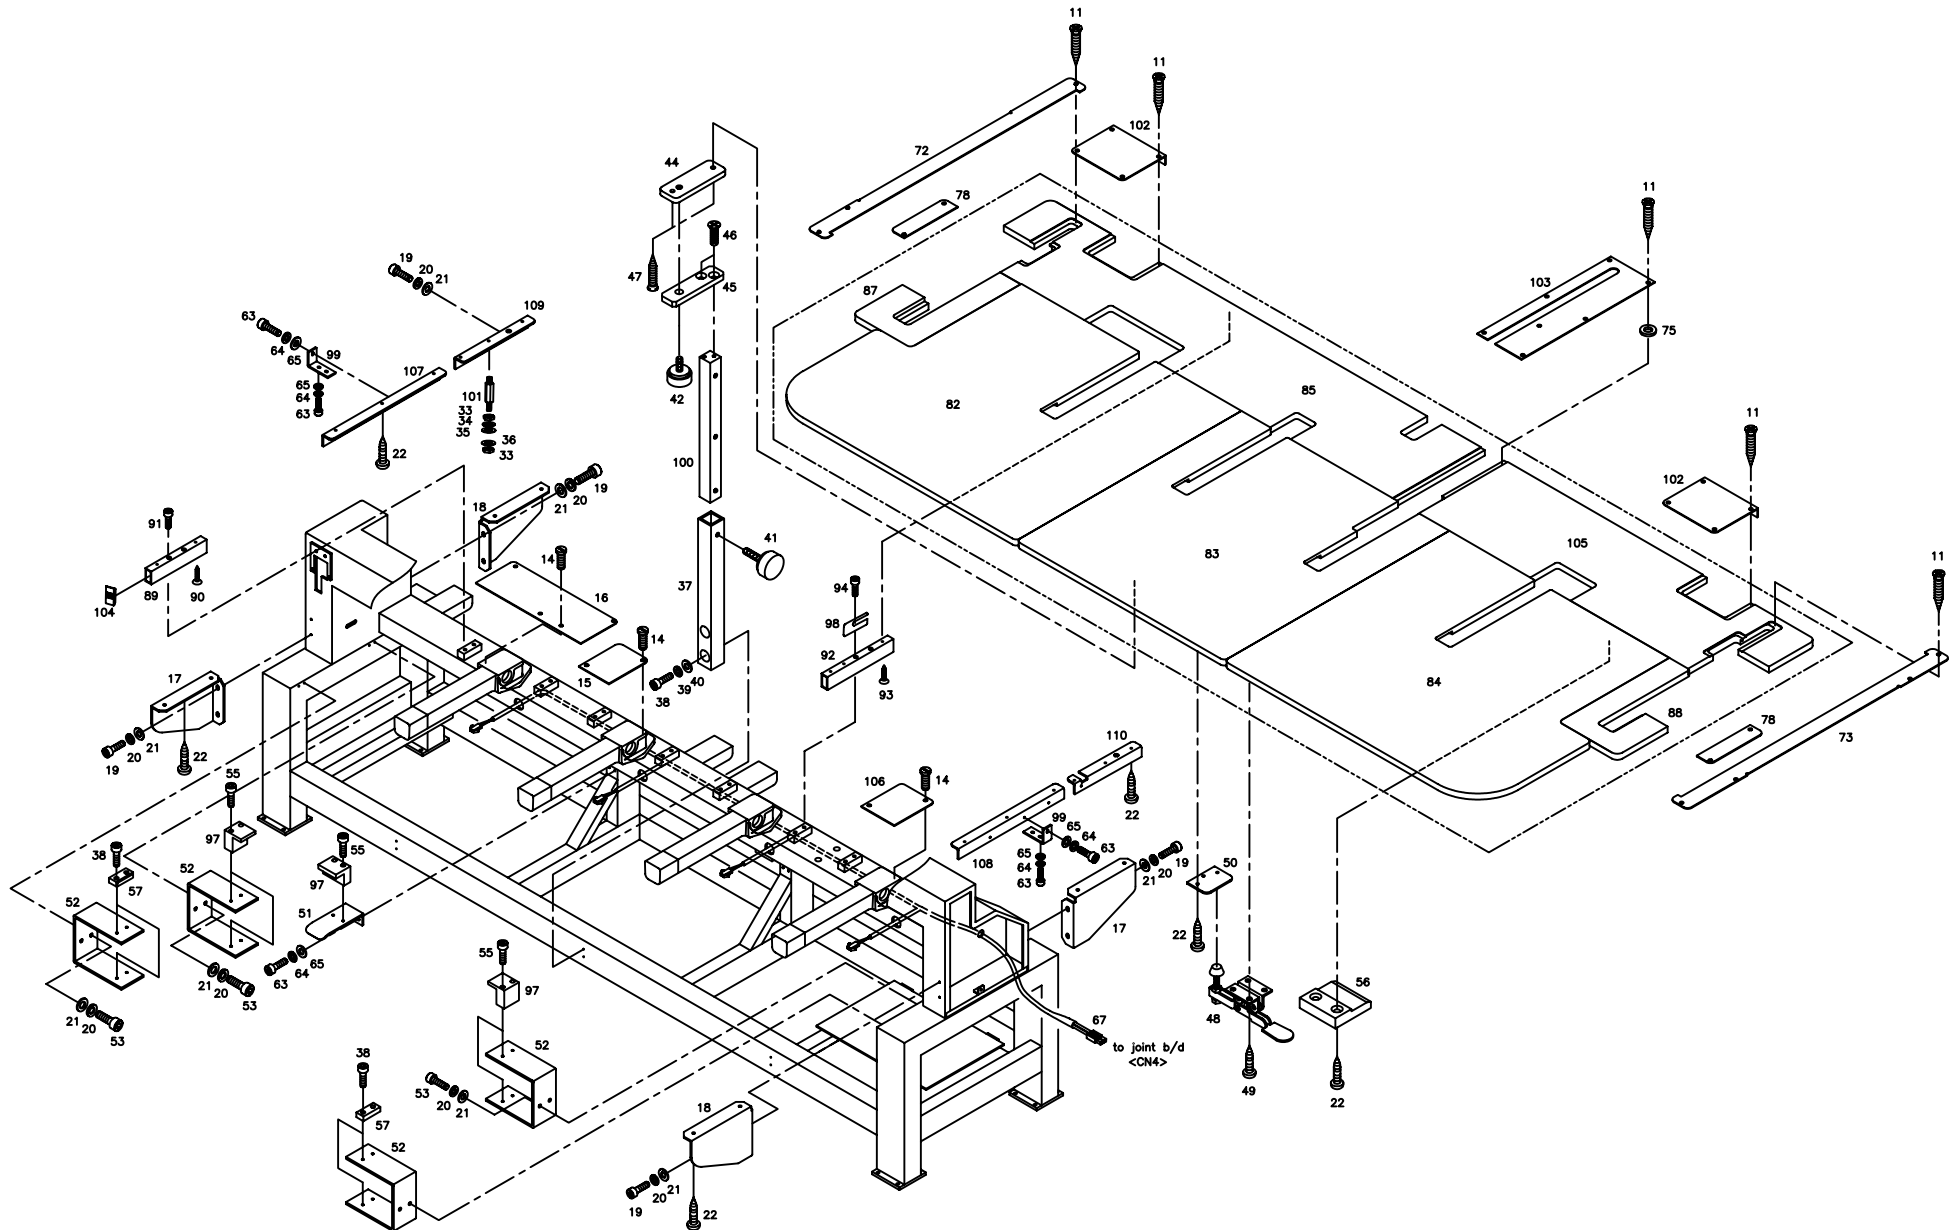

C

 Spool Stand

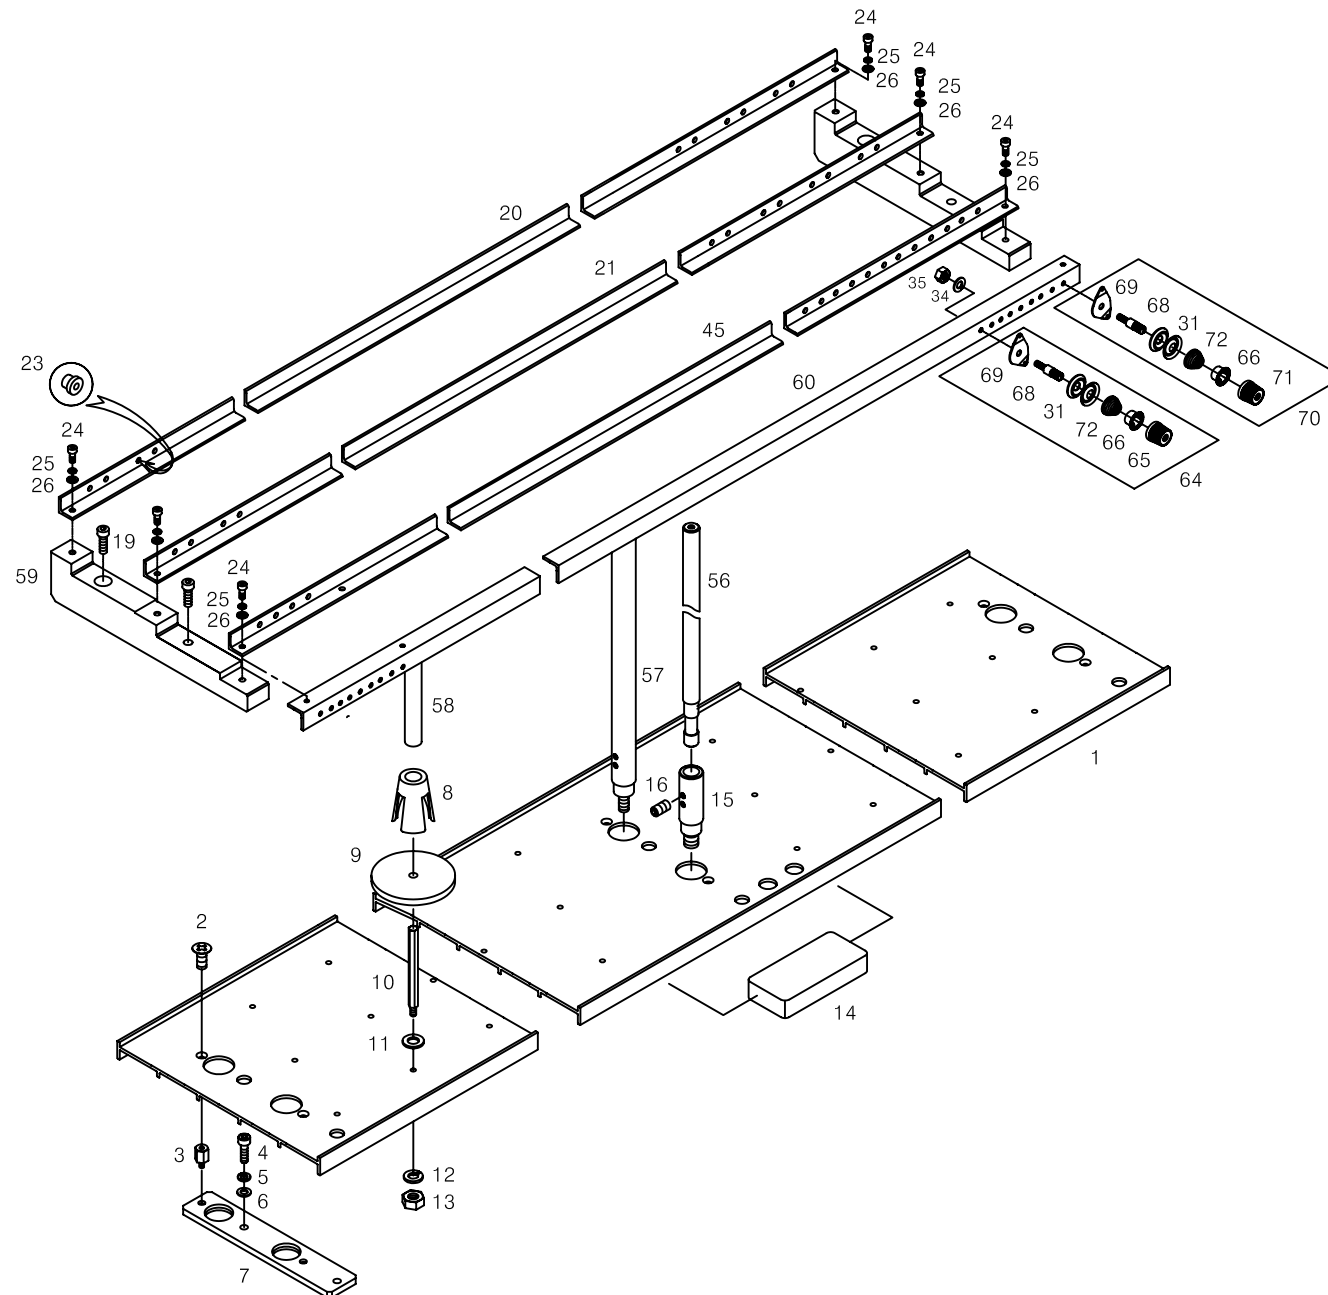


Ref. No	Part No.	Part Names	Q'ty
C-001	11000102UK00	Spool Plate (6C)	1
	11001AD-UK01	Spool Plate (12C)	
	11001AD-UK14	Spool Plate (15C)	
C-002	02002SC-7119	Pluss Screw (M4*L8)	8
C-003	11005CW-UK01	Spool Plate Fixing Bolt M6*L21	8
C-004	03016SC-4113	Hex. Socket Bolt (M5*L15)	8
C-005	18048SW-3115	Spring Washer (@5)	8
C-006	18049SW-3111	Washer (@5)	8
C-007	11006PR-UK01	Spool Plate Base	4
C-008	12012PM-A001	Spool Holder	48
C-009	12052SF-A001	Spool Sponge	48
C-010	12009SC-A001	Spool Post	48
C-011	18049SW-3111	Washer (@5)	48
C-012	18048SW-3115	Spring Washer (@5)	48
C-013	12010SN-1211	Hex.Nut (M5)	48
C-014	12033RB-UK01	Cushion Rubber	1
C-015	12014SC-A001	Spool Stand Bolt	5
C-016	04014SC-4517	Hex.Socket Set Screw(M5*L5)	10
C-019	03016SC-4113	Hex. Socket Bolt (M5*L15)	5
C-020	05200304UK24	Angle "A" (6C)	1
	11022AD-UK01	Angle "A" (12C)	
	11022AD-UK14	Angle "A" (15C)	
C-021	05200404UK24	Angle "B" (6C)	1
	11023AD-UK01	Angle "B" (12C)	
	11023AD-UK14	Angle "B" (15C)	
C-023	12042PM-A001	Eyelet	96
C-024	02015SC-7113	Hex.Socket Bolt(M4*L10)	15
C-025	02028SW-9115	Spring Washer (@4)	15
C-026	06003SW-2111	Washer (@4)	15
C-031	11153PR-B001	Tension Disc @22	96
C-034	18048SW-3115	Spring Washer (@5)	48
C-035	03031SN-A001	Pin. Nut (11/64,N=40)	48
C-045	05200104UK24	Angle "C" (6C)	1
	05200104UK40	Angle "C" (12C)	
	05200105UK40	Angle "C" (15C)	
C-056	12015SF-A001	Spool Stand (L=330) (6,12C)	5
	01001500T000	Spool Stand (L=380) (15C)	
C-057	01001504U000	Spool Stand L=345 (6,12C)	4
	01001505U000	Spool Stand L=395 (15C)	
C-058	10000100A000	Thread Guide L=200	8

[illegible]

D

 Main Drive System

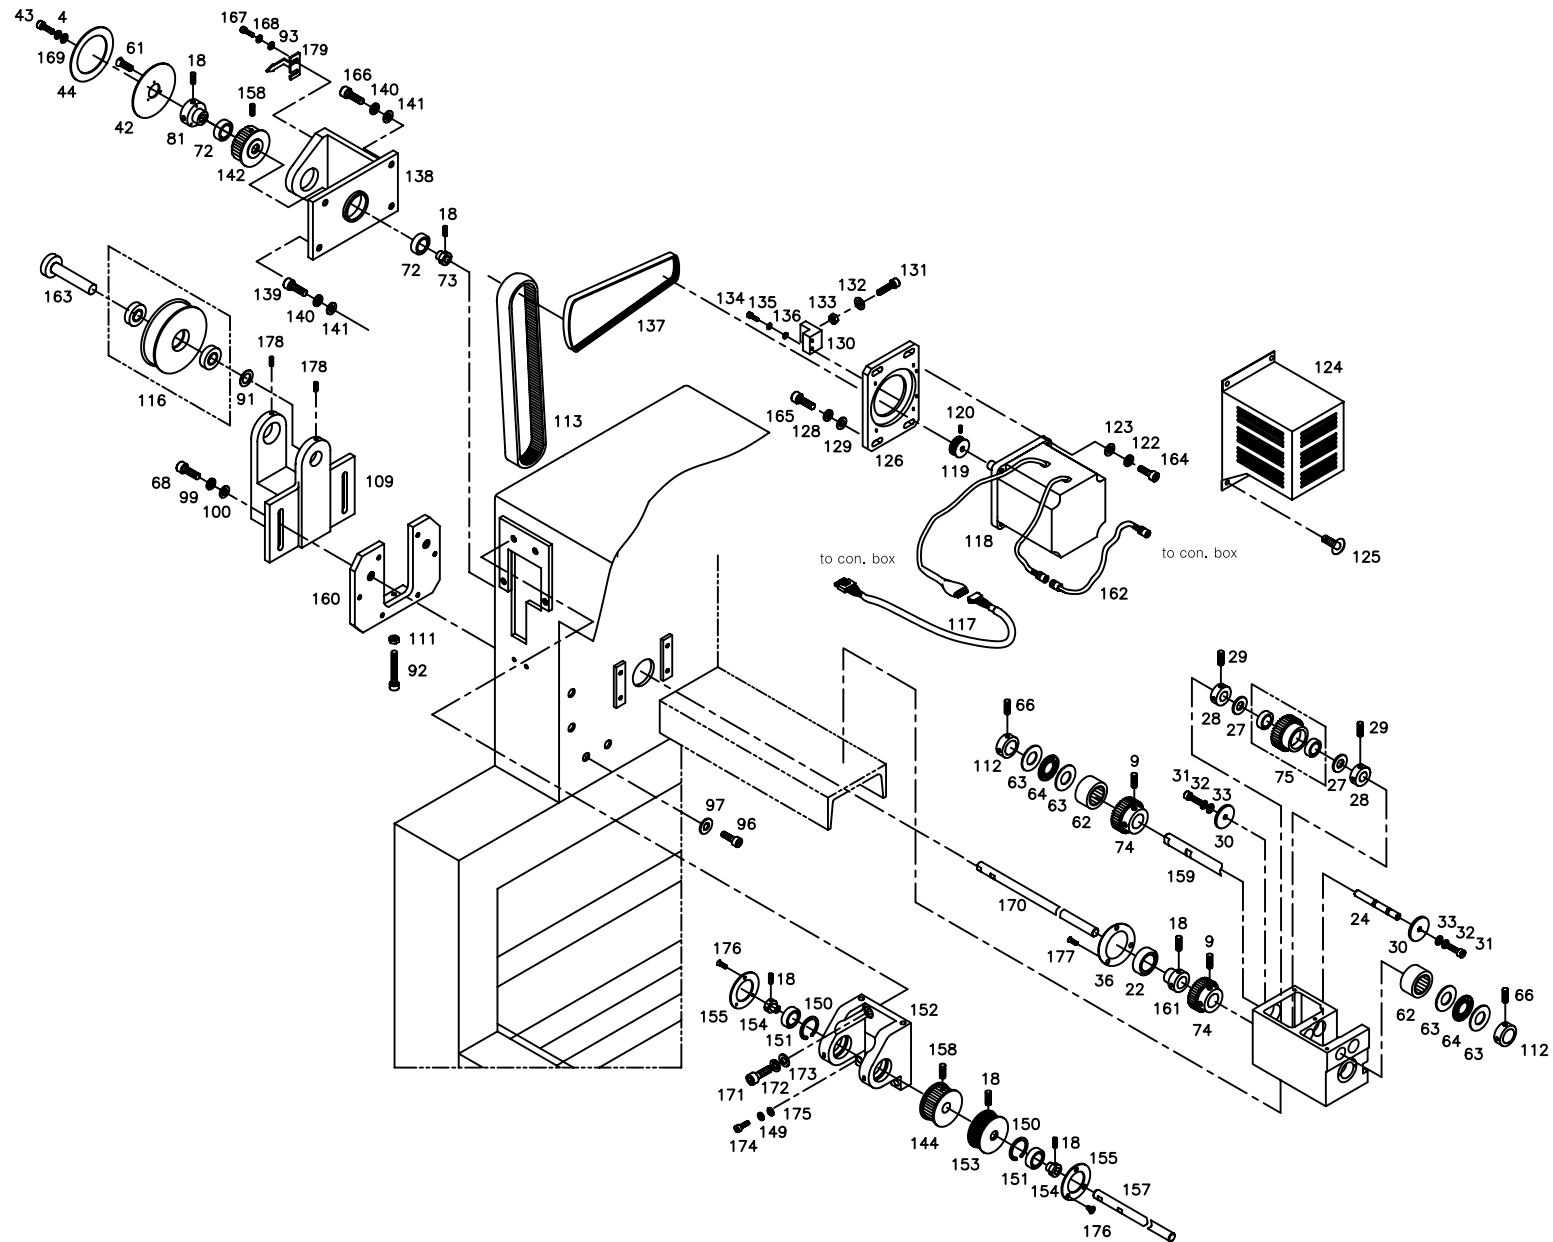


Ref. No	Part No.	Part Names	Q'ty
D-004	15095SW-3115	Spring Washer (@8)	1
D-009	04012AF-A001	Hook Shaft Bush Screw	11
D-018	14060AF-4517	Hex.Socket Screw(M6*L6)	12
D-022	04026BR-A001	Ball Bearing 6003Z	1
D-024	13041SH-UK01	Middle Shaft	1
D-027	12019BR-T121	Fiber Washer R- Tw1020	2
D-028	13038CW-UK01	Collar "C"	2
D-029	03022SC-4517	Hex. Socket Set Screw(M4*L5)	4
D-030	08053PR-A001	Lever Washer	2
D-031	02023SC-7113	Hex. Socket Bolt (M4*L8)	2
D-032	02028SW-9115	Spring Washer (@4)	2
D-033	05009SW-1111	Washer (@4-L)	2
D-036	04039PR-A001	Bearing Cover	1
D-042	13053PR-UK01	Angle Plate Base	1
D-043	14006SC-7113	Hex.Socket Set Screw(M8*L15)	1
D-044	13054ET-UK01	Angle Disk	1
D-062	04027BR-A001	Needle Bearing (Hmk1515)	2
D-063	08028BR-A001	Thrust Washer (As 1528)	4
D-064	08027BR-A001	Thrust Bearing (Ntb 1528)	2
D-066	04016AF-A001	Cam Collar Screw	4
D-068	14027SC-4113	Hex.Socket Bolt (M8*L30)	2
D-072	01029BR-A001	Ball Bearing (6004Zz)	2
D-073	14058CW-A001	Collar "A"	1
D-074	13032GA-UK06	Index Shaft Gear Uk06	2
D-075	13036BR-UK01	Needle Bearing (63800Zz)	2
D-081	13107CW-UK01	Collar	1
D-082	14017PR-E131	Bearing Cover	2
D-090	13109CL-UK01	Tension Adjusting Block	1
D-091	13106PR-UK01	Idler Spacer	1
D-092	14063SC-A001	Tension Control Bolt (M6*L40)	2
D-093	18015SW-3111	Washer (4@)	1
D-096	16059SC-7113	Hex.Socket Bolt (M6*L12)	2
D-097	08057SW-1111	Washer (@6)	8
D-099	15095SW-3115	Spring Washer (@8)	2
D-100	08041SW-1111	Washer (@8-S)	2
D-109	13118CS-UK01	Idler Support Bracket	1
D-111	13042SN-1111	Hex.Nut (M6*T5-R)	2
D-112	03704900A000	Cam Shaft Collar	2
D-113	03000200U000	Timing Belt (25-S5M*L1025)	1
D-116	03000300U000	Idler	1
	13026BR-T121	Needle Bearing (6002Z)	2

Ref. No	Part No.	Part Names	Q'ty
D-117	02106500U040	Sh-65-2	1
D-118	03000400U000	Main Motor (Xp50B07050Dxe92)	1
D-119	03010800UH80	MAIN MOTOR PULLEY	1
D-120	04014SC-4517	Hex.Socket Set Screw (M5*L5)	2
D-122	18048SW-3115	Spring Washer (5@)	4
D-123	18049SW-3111	Washer (@5)	4
D-124	03006300U000	Main Motor Cover	1
D-125	02044SC-3123	Truss Screw (M5*L8)	4
D-126	03006400U000	Motor Fixing	1
D-128	16014SW-4115	Spring Washer (@6)	4
D-129	08057SW-1111	Washer (@6)	4
D-130	03000900U000	Tension Adjusting Block	1
D-131	14063SC-A001	Tension Control Bolt (M6*L40)	1
D-132	08057SW-1111	Washer (@6)	1
D-133	08058SN-1311	Hex. Nut (M6-No3)	1
D-134	08062SC-7113	Hex. Socket Bolt (M5*L20)	2
D-135	18048SW-3115	Spring Washer (5@)	2
D-136	18049SW-3111	Washer (@5)	2
D-137	03100700H000	MAIN DRIVING BELT 290J*10R	1
D-138	03012100U000	Low Shaft Support Bracket	1
D-139	08091SC-7113	Hex. Socket Bolt (M6*L20)	2
D-140	16014SW-4115	Spring Washer (@6)	4
D-141	08057SW-1111	Washer (@6)	4
D-142	03000130U000	Pulley (Tubular)	1
D-144	03000120U000	Pulley (Tubular)	1
D-149	03026SW-9115	Spring Washer (@6)	2
D-150	03010SR-4013	C-Ring (@47)	2
D-151	01001100H000	Ball Bearing (6005Zz)	2
D-152	03101300UH80	UPPER SHAFT SUPPORT BRACKET	1
D-153	03010800UH00	TOP SHAFT PULLEY	1
D-154	03005210H000	Collar "A"	2
D-155	03101400U000	Upper Shaft Support Cover	2
D-157	03000100UK40	Top Shaft (L2298)	1
D-158	14061AF-4517	Hex.Socket Screw(M8*L8)	8
D-159	03000200UK40	Low Shaft	1
D-160	13123CW-E121	Idler Plate	1
D-161	01102000B000	Bearing Bushing	1
D-162	02106400U040	Cable (Sh-64-2)	1
D-163	13120CW-UK01	IDLER SHAFT	1
D-164	08062SC-7113	HEX. SOCKET BOLT (M5*L20)	4
D-165	08091SC-7113	HEX. SOCKET BOLT (M6*L20)	4


D

 Main Drive System

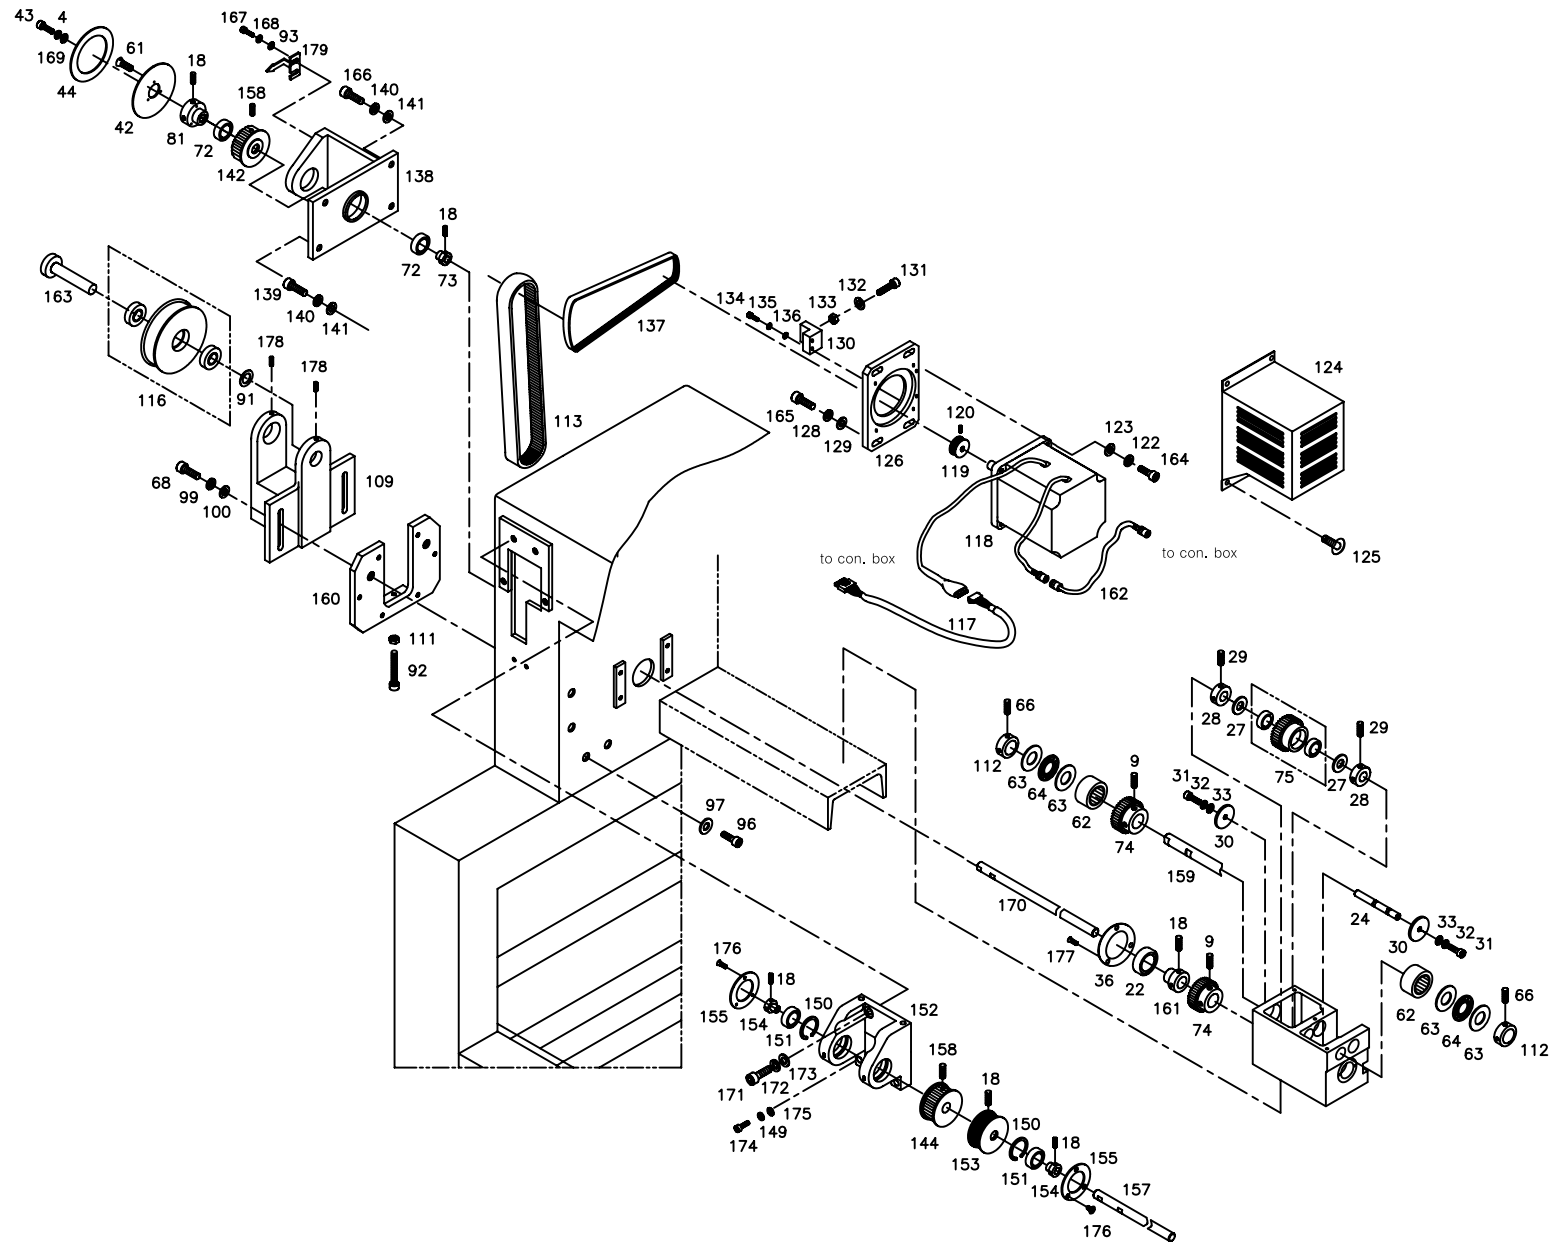

E

 Bed I

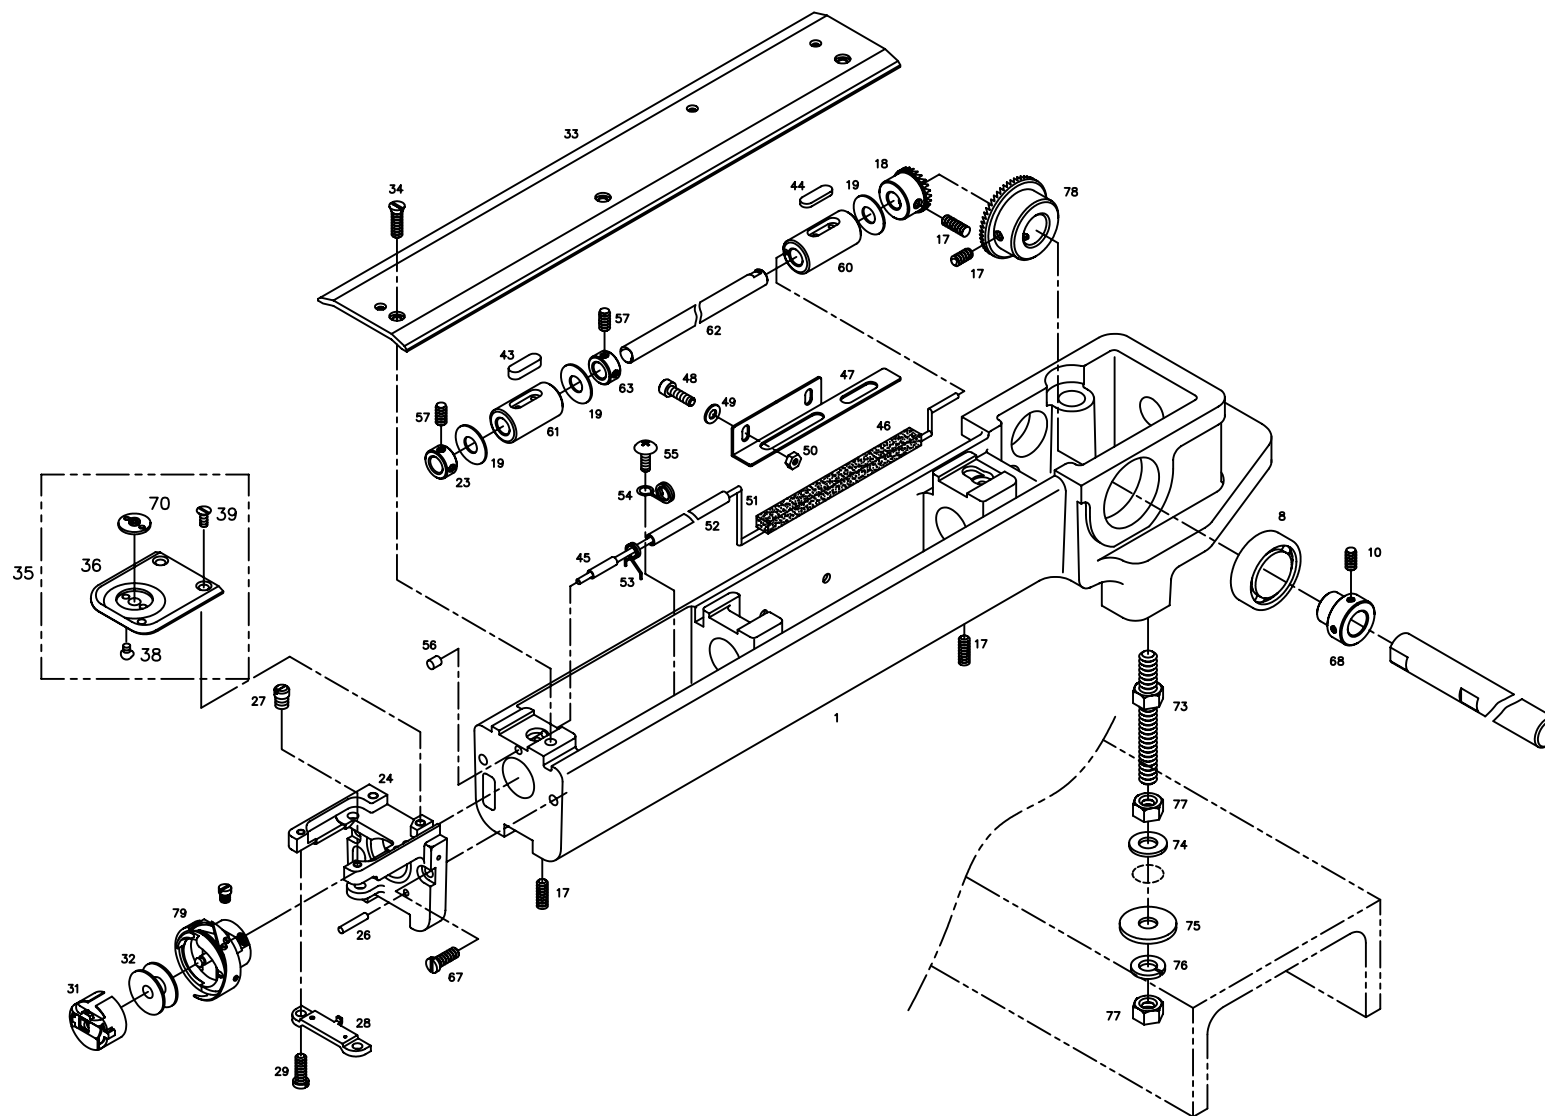


Ref. No	Part No.	Part Names	Q'ty
E-001	04001CS-UK01	Bed "A"	2
E-008	04026BR-A001	Ball Bearing 6003Z	4
E-010	04016AF-A001	Cam Collar Screw	8
E-017	04012AF-A001	Hook Shaft Bush Screw	24
E-018	04019GA-UK01	Hook Shaft Gear	4
E-019	02004BR-T121	Hook Shaft Bearing Washer	12
E-024	02007CL-T121	Needle Plate Bracket	4
E-025	02008SC-4122	NEEDLE PLATE BRACKET SCREW	8
E-026	02009PI-T121	Spring Pin	8
E-027	04026SC-T121	Needle Plate Pin	4
E-028	02010CL-T121	Rotary Hook Support	4
E-029	02011SC-3125	Rotary Hook Support Screw	8
E-031	04034AF-A001	Bobbin Case Set	4
E-032	04035AF-A001	Bobbin	4
E-033	04036PR-UK01	Bed Cover	4
E-034	02030SC-T121	Bed Cover Screw(9/64" 40)	12
E-035	02019BM-T121	Needle Plate Set(Cap)	4
E-036	02019PR-T121	Needle Plate(Cap)	4
E-038	04007SC-A001	Cushion Cover Screw (M3*L2.3)	8
E-039	04004AF-A001	Needle Plate Screw	8
E-043	32043SF-T121	Front Bushing Felt	4
E-044	18039SF-UK01	Felt	4
E-045	32045CW-T121	Oil Hose Pin	4
E-046	18041SF-UK01	Bed Felt	4
E-047	32040PR-T121	Bed Felt Cover	4
E-048	02023SC-7113	Hex. Socket Bolt (M4*L8)	8
E-049	02063SW-1111	Washer(@4)	8
E-050	05016SN-1211	Hex.Nut (M4)	8
E-051	-	Wick	4
E-052	-	Oil Tube	4
E-053	32046SP-T121	Holder For Oil Hose	4
E-054	32021SP-T121	Needle Bar Hose Holder "B"	4
E-055	28021SC-3123	Truss Screw (M3*L4)	4
E-056	32047RB-T121	Oil Rubber Cap	4
E-057	08113SC-A001	Collar Screw	16
E-060	01102200U000	Hook Shaft Rear Bushing	4
E-061	02000300T000	Hook Shaft Front Bushing	4
E-062	02100300U000	Hook Shaft	4
E-063	03707300A000	Solenoid Collar	8
E-067	04037SC-A001	Picker Bracket Screw(R)	8

[illegible]


F

 Bed II

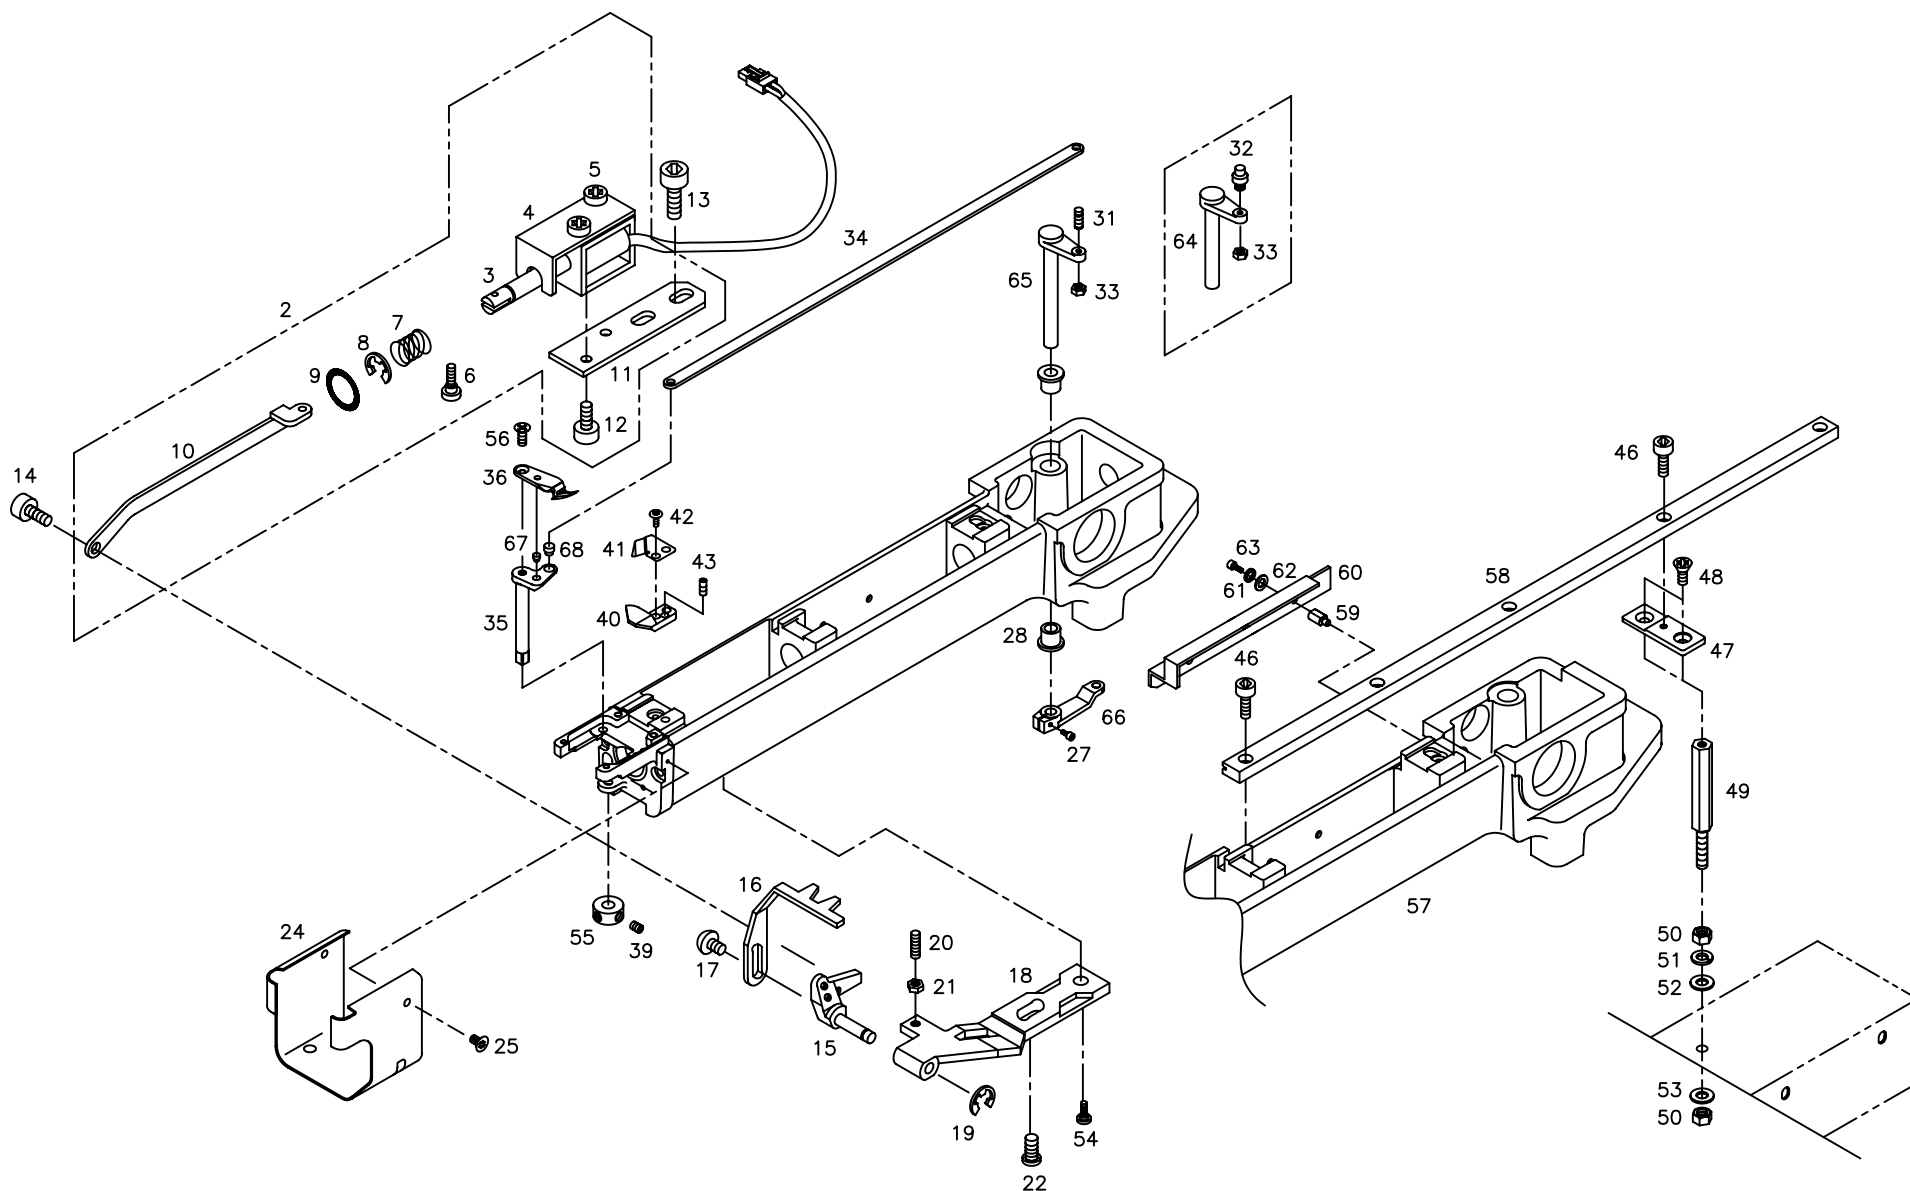


Ref. No	Part No.	Part Names	Q'ty
F-002	10009EL-A004	Picker Sol. Set	4
F-003	10009EL-T121	Picker Sol.	4
F-004	01-012A-AT10	Picker Sol. Cover	4
F-005	28021SC-3123	Truss Screw (M3*L4)	8
F-006	10021SC-A001	Sol. Stud Screw	4
F-007	10011SP-A001	Sol. Spring	4
F-008	13044SR-4013	E-Ring (@4)	4
F-009	10012RB-A001	Cushion Washer	4
F-010	01-011A-AT10	Connecting Plate	4
F-011	01-013A-AT10	Picker Sol. Base	4
F-012	06010AF-8118	Plus Screw (M3*L4)	8
F-013	02015SC-7113	Hex.Socket Bolt (M4*L10)	8
F-014	08012CW-T121	Connecting Plate Stud Screw	4
F-015	08018CL-T121	Picker Base	4
F-016	08021PR-T121	Picker	4
F-017	07018SC-8118	Plus Screw (M3*L8)	8
F-018	08013CL-T121	Picker Bracket	4
F-019	15159SR-4013	E-Ring (3@)	4
F-020	10015SC-4215	Plus Screw (M3*L10)	4
F-021	08112SN-A001	Hex. Nut (M3)	4
F-022	08016SC-T121	Plus Screw (15/64*N28)	4
F-024	04038PR-T121	Hook Cover	4
F-025	08014AF-A001	Plus Screw (M3*L8)	8
F-027	02015SC-7113	Hex.Socket Bolt (M4*L10)	4
F-028	07021MP-T121	Lever Shaft Bush	8
F-031	07023CW-T121	Lever Pin "A"	3
F-032	08122CW-UK01	Lever Pin "B"	1
F-033	02029SN-9311	Hex. Nut (M4-No2)	4
F-034	07006LA-UK01	Mes Connecting Link	4
F-035	07026FU-T121	Moving Mes Shaft	4
F-036	07028PR-T121	Moving Mes	4
F-039	03022SC-4517	Hex. Socket Set Screw (M4*L5)	8
F-040	07032CL-T121	Fixed Mes	4
F-041	07033PR-T121	Under Thread Presser	4
F-042	07018SC-8118	Plus Screw (M3*L8)	8
F-043	03050SC-4517	Hex. Socket Set Screw (M3*L3)	4
F-046	02023SC-7113	Hex. Socket Bolt (M4*L8)	2
F-047	04053PR-UK01	Rail Support Plate	2
F-048	16022AF-8119	Plus Screw (M6*L20)	4
F-049	16021CW-A001	Table Support Stud	4

 [illegible]

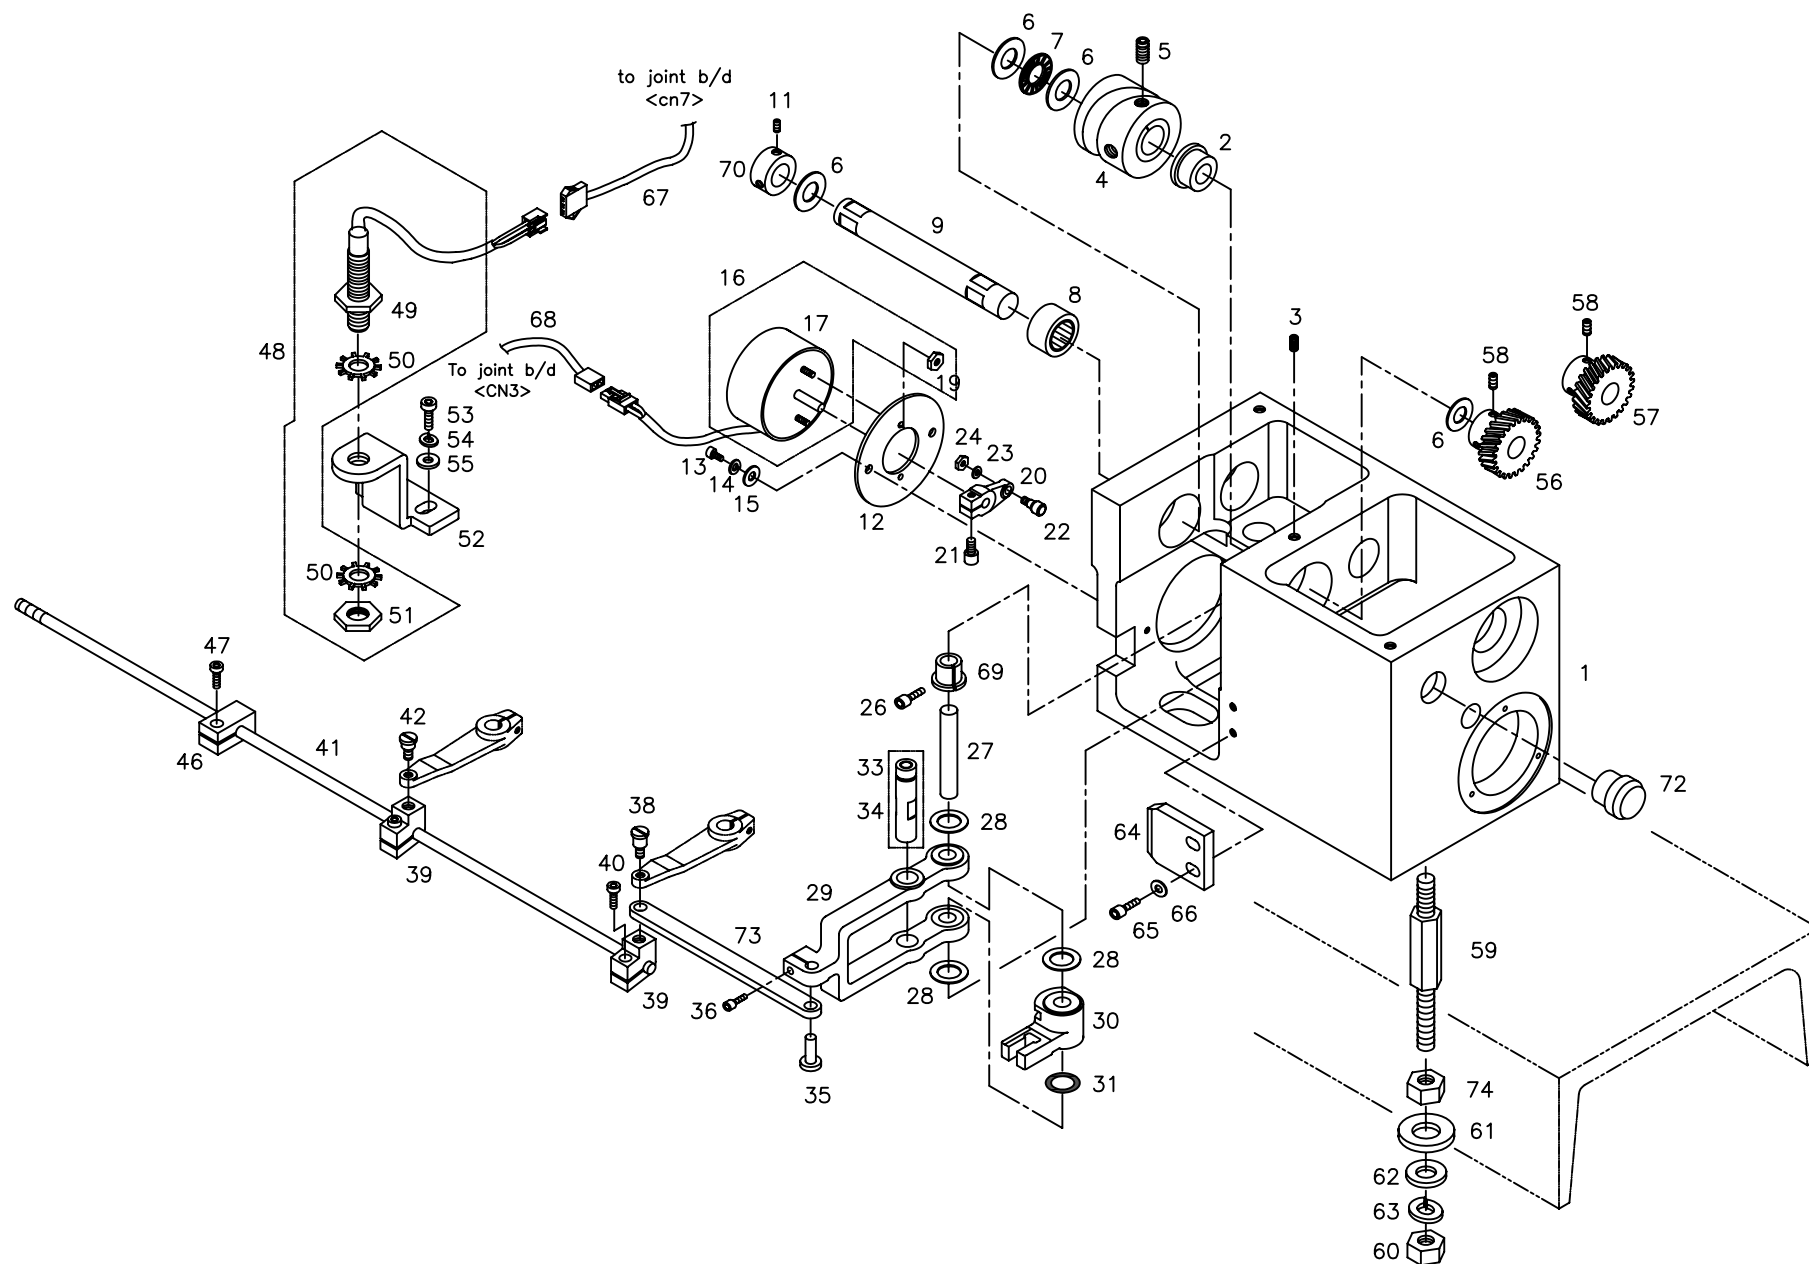

H

 Arm I

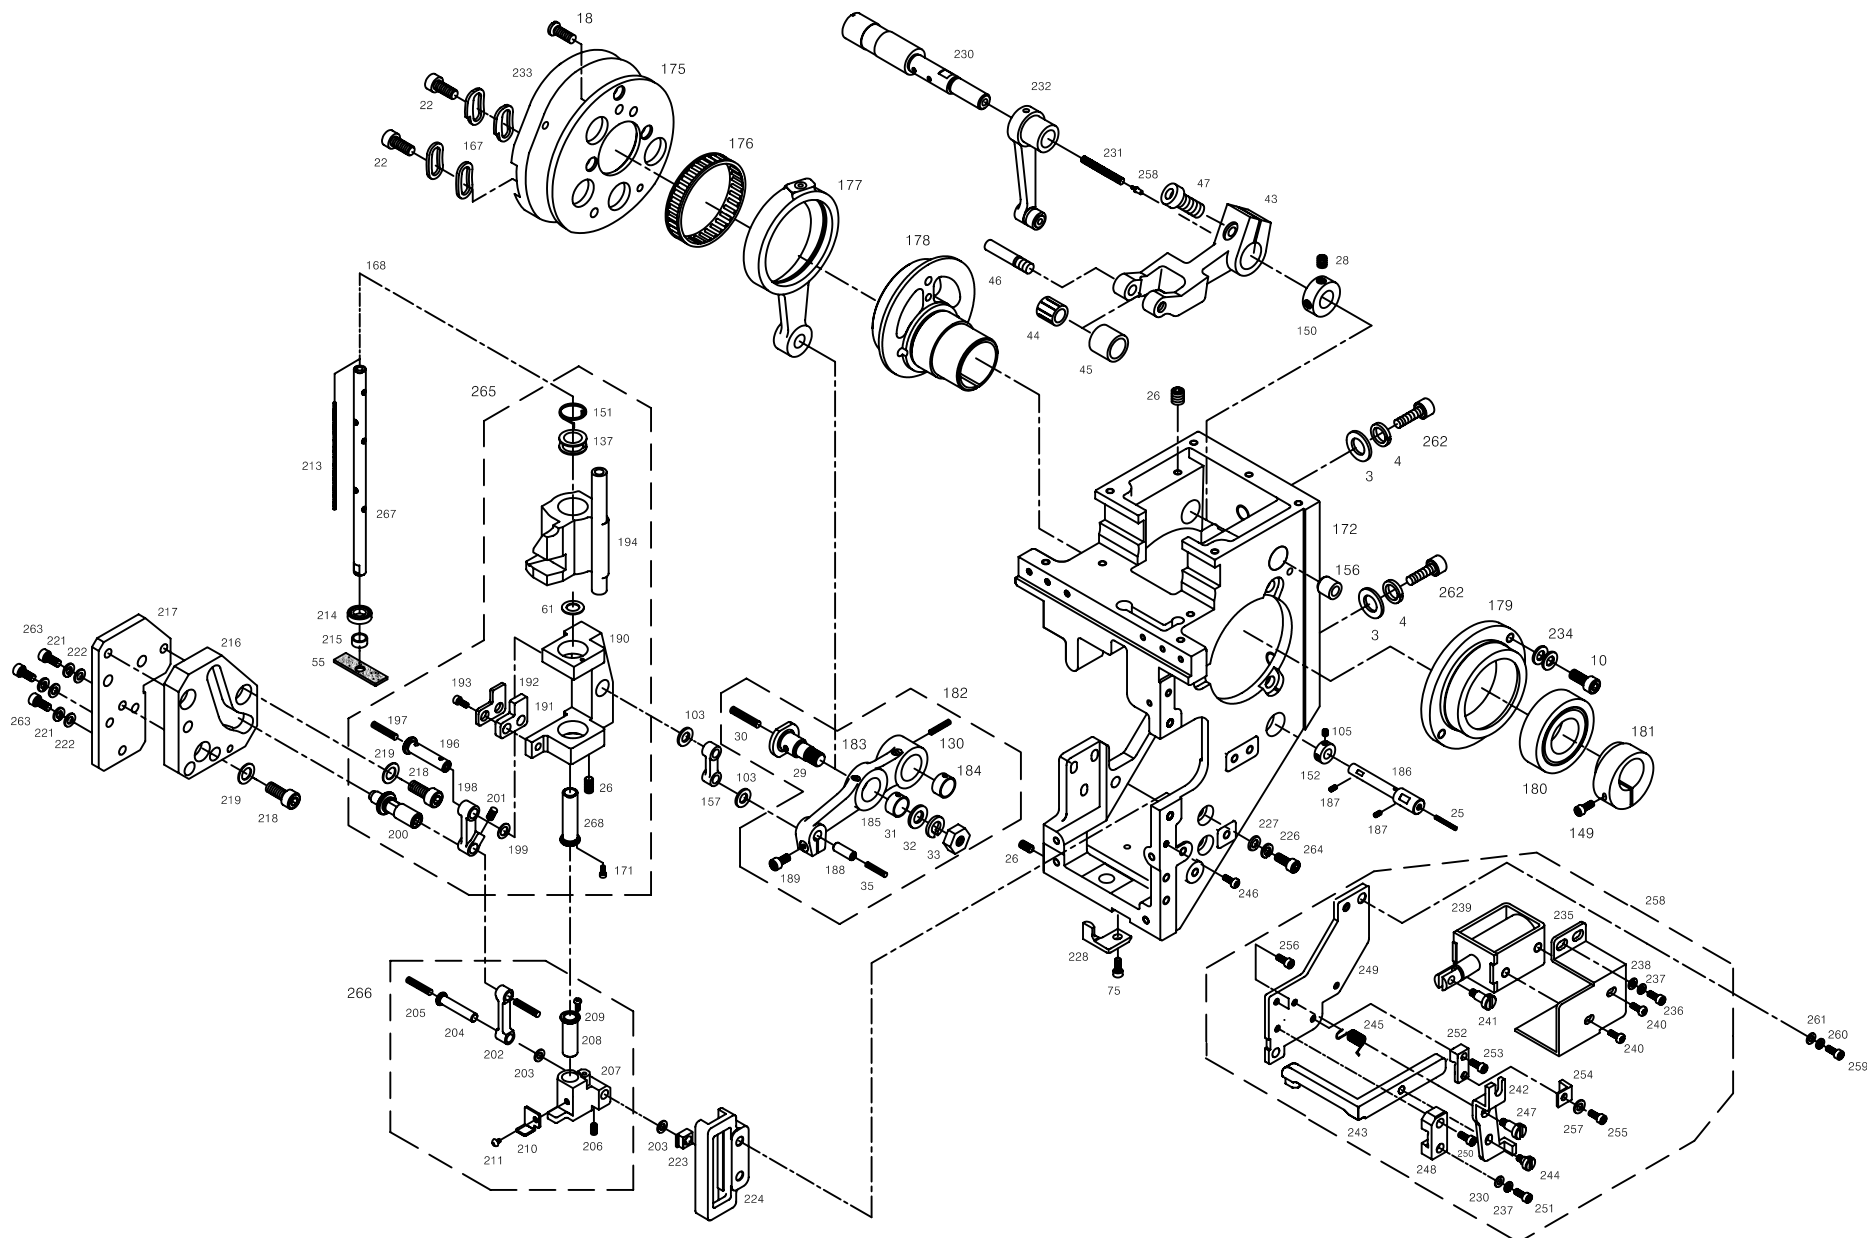


Ref. No	Part No.	Part Names	Q'ty
H-003	04029SW-A001	Stud Bolt Washer(S) (@8)	12
H-004	15095SW-3115	Spring Washer (@8)	12
H-010	02031SC-7113	Hex. Socket Screw(M5*L10)	12
H-018	03007SC-A001	Cam Base Screw	12
H-022	02023SC-7113	Hex. Socket Bolt (M4*L8)	8
H-025	-	Wick	4
H-026	03020SC-A001	Drive Pin Screw 11/64,N40,L8	20
H-028	03022SC-4517	Hex. Socket Set Screw(M4*L5)	32
H-029	03023SC-A001	Connecting Rod Stud	4
H-030	-	Wick	4
H-031	03025SW-1211	Washer (@6)	4
H-032	03026SW-9115	Spring Washer (@6)	4
H-033	03027SN-A001	Stud Nut	4
H-035	-	Wick	4
H-043	07018CA-UK01	Take-Up Driving Lever "B"	4
H-044	04021BR-T121	Neddle Bearing Kt367N (lko)	4
H-045	04020AF-T121	Roller For Take-Up Gear-B	4
H-046	04019CW-T121	Pin Stud Screw	4
H-047	02015SC-7113	Hex.Socket Bolt(M4*L10)	4
H-055	03053SF-A001	Felt "B"	4
H-061	03048SW-A001	Reciprocator Washer	4
H-075	03057SC-A001	Head Rail Holder Screw	12
H-103	03034SW-A001	Reciprocator Washer	12
H-105	04012AF-A001	Hook Shaft Bush Screw	8
H-130	-	Needle Bar Drive Lever Wick	4
H-137	03046CW-B001	Jump Spring Guide	4
H-149	05015MC-4113	Hex. Socket Bolt (M5*L15)	4
H-150	03302100A000	Pin Collar	4
H-151	03045SP-B001	Jump Spring	4
H-152	01101300A000	Hook Shaft Collar	4
H-156	03301200A000	Bushing	4
H-157	03003200A000	Needle Bar Drive Rink	4
H-167	03300100A000	Cam Washer A	8
H-168	03300200A000	Cam Washer B	8
H-171	03006MC-3123	Truss Screw (M3*L6)	4
H-172	03300100U000	Arm	4
H-175	03300210H000	Take-Up Lever Cam Base	4
H-176	03302900H000	Needle Case (Kt-42469)	4
H-177	03303000H000	Connecting Rod	4
H-178	03300310H000	Needle Bar Driving Cam @20	4

Ref. No	Part No.	Part Names	Q'ty
H-179	03303100H000	Bearing Case A @20	4
H-180	01001100H000	Ball Bearing (6005Zz)	4
H-181	03000110H000	Cam Tightening Collar (@20)	4
H-182	03313200H000	Needle Bar Drive Lever	4
H-183	03000200A000	NEEDLE BAR DRIVE LEVER	4
H-184	03307200A000	Needle Driving Lever Bushing	4
H-185	03307300A000	Needle Driving Lever Bushing	4
H-186	03301800U000	Needle Bar Drive Pin	4
H-187	03020SC-A001	Drive Pin Screw 11/64,N40,L8	8
H-188	03303300H000	Lever Pin	4
H-189	02015SC-7113	Hex.Socket Bolt(M4*L10)	4
H-190	03600110H000	Needle Driving Shaft Driver	4
H-191	03600300H000	Reciprocator Stopper	4
H-192	03600600H000	Stopper Bracket	4
H-193	03046SC-8118	Plus Screw (M3*L5)	8
H-194	03600210H000	Needle Bar Reciprocator	4
H-196	03600500H000	Driver Pin	4
H-197	-	Wick	4
H-198	03007600H000	Foot Drving Connect Link A	4
H-199	03034SW-A001	Reciprocator Washer	4
H-200	03302800H000	Presser Foot Hinge Pin Ass'Y	4
H-201	08113SC-A001	Collar Screw	4
H-202	03007700H000	Foot Drving Connect Link B	4
H-203	03034SW-A001	Reciprocator Washer	8
H-204	03007800H000	Presser Foot Reciprocator Pin	4
H-205	-	Wick	4
H-206	08113SC-A001	Collar Screw	8
H-207	03001510H000	Presser Foot Reciprocator	4
H-208	03001610H000	Presser Foot Bush @20	4
H-209	09005SC-3123	Truss Screw (M3*L6)	4
H-210	03001710H000	Presser Foot Stopper	4
H-211	08006SC-8118	Plus Screw (M3*L5)	4
H-213	-	Wick	4
H-214	03008000H000	Ball Bearing 6800	4
H-215	03008100H000	Bearing Bushing For Shaft	4
H-216	03300810H000	Presser Foot Driver Cam	4
H-217	03303400H000	Presser Foot Drving Cam Base	4
H-218	02023SC-7113	Hex. Socket Bolt (M4*L8)	18
H-219	06003SW-2111	Washer (@4)	12
H-221	18014SW-3115	Spring Washer (@4-No2)	12

H

 
Arm I

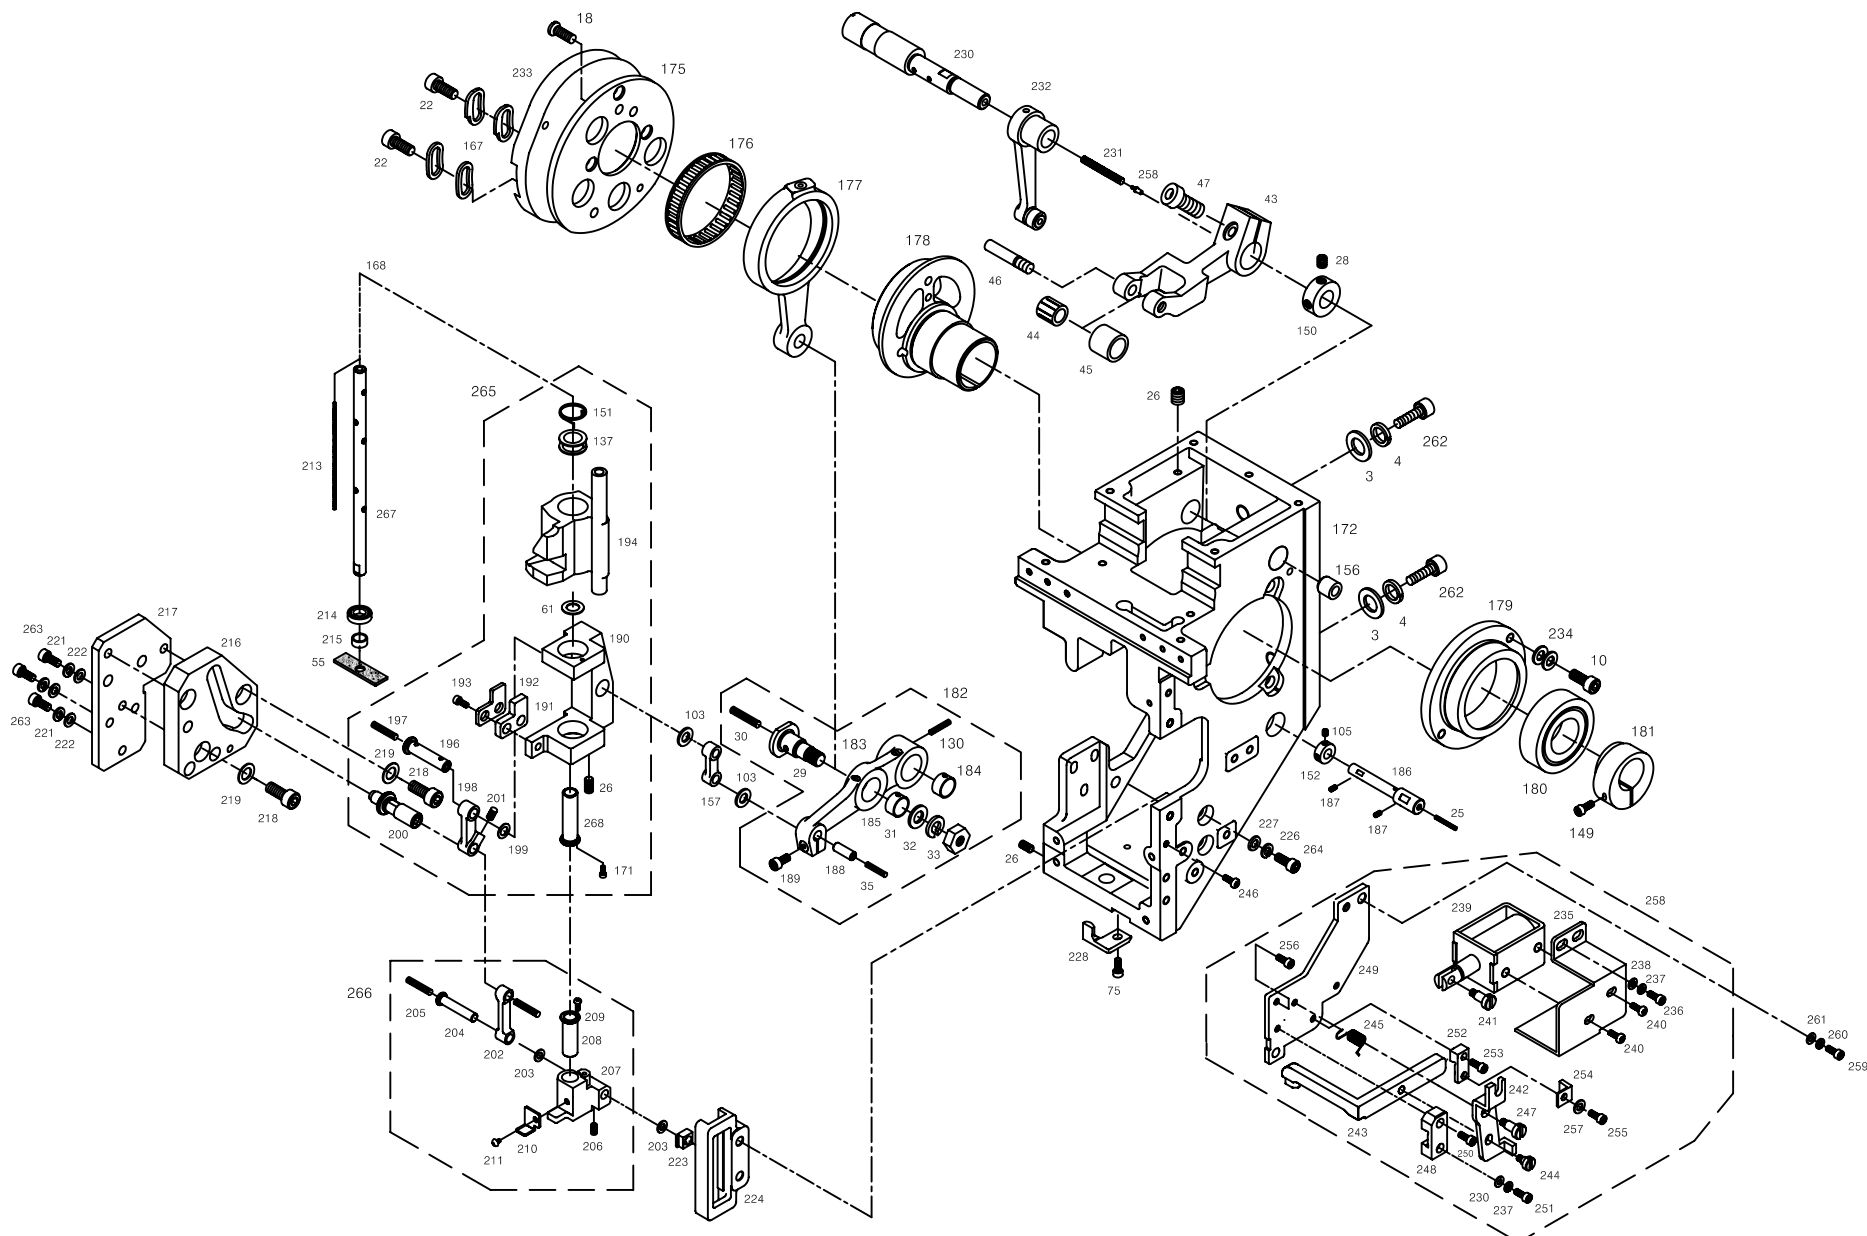

[illegible]

H1

 
Arm II

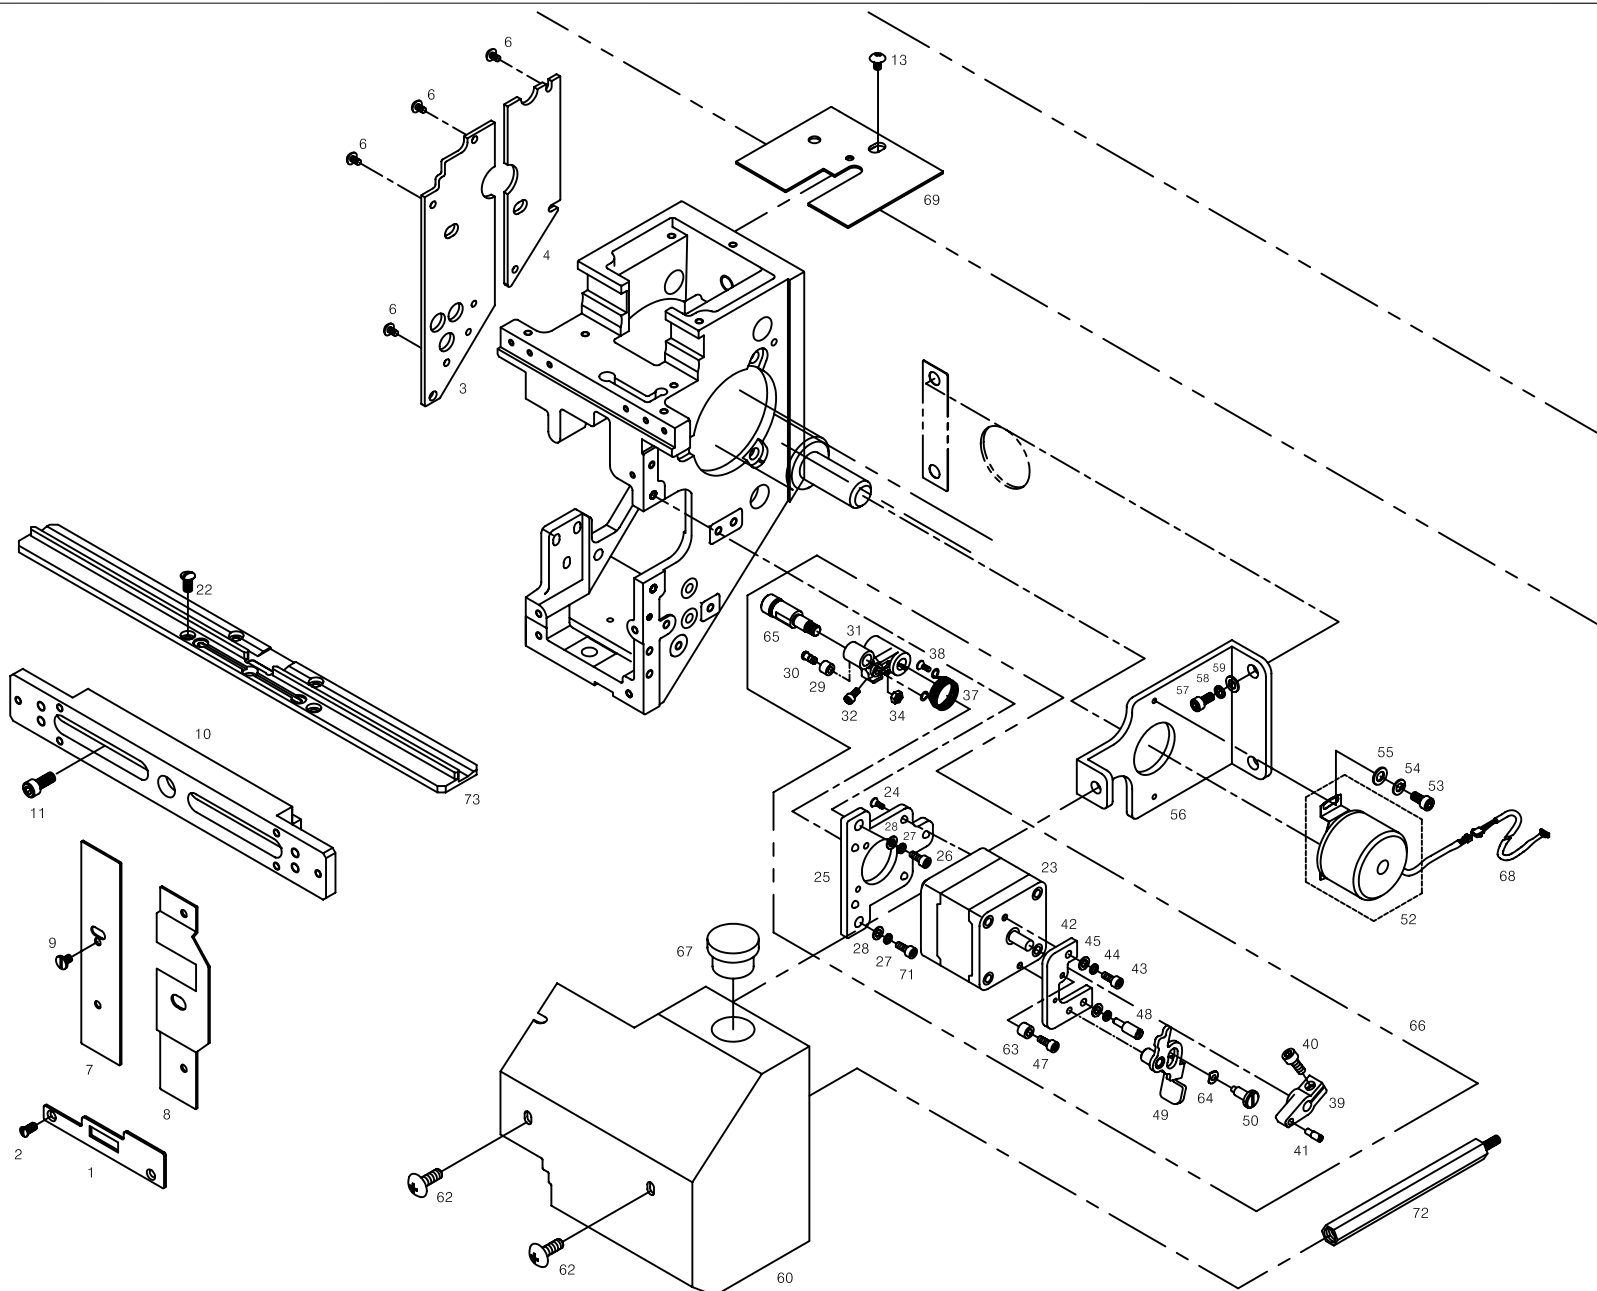


[illegible]

H2

  
Arm III

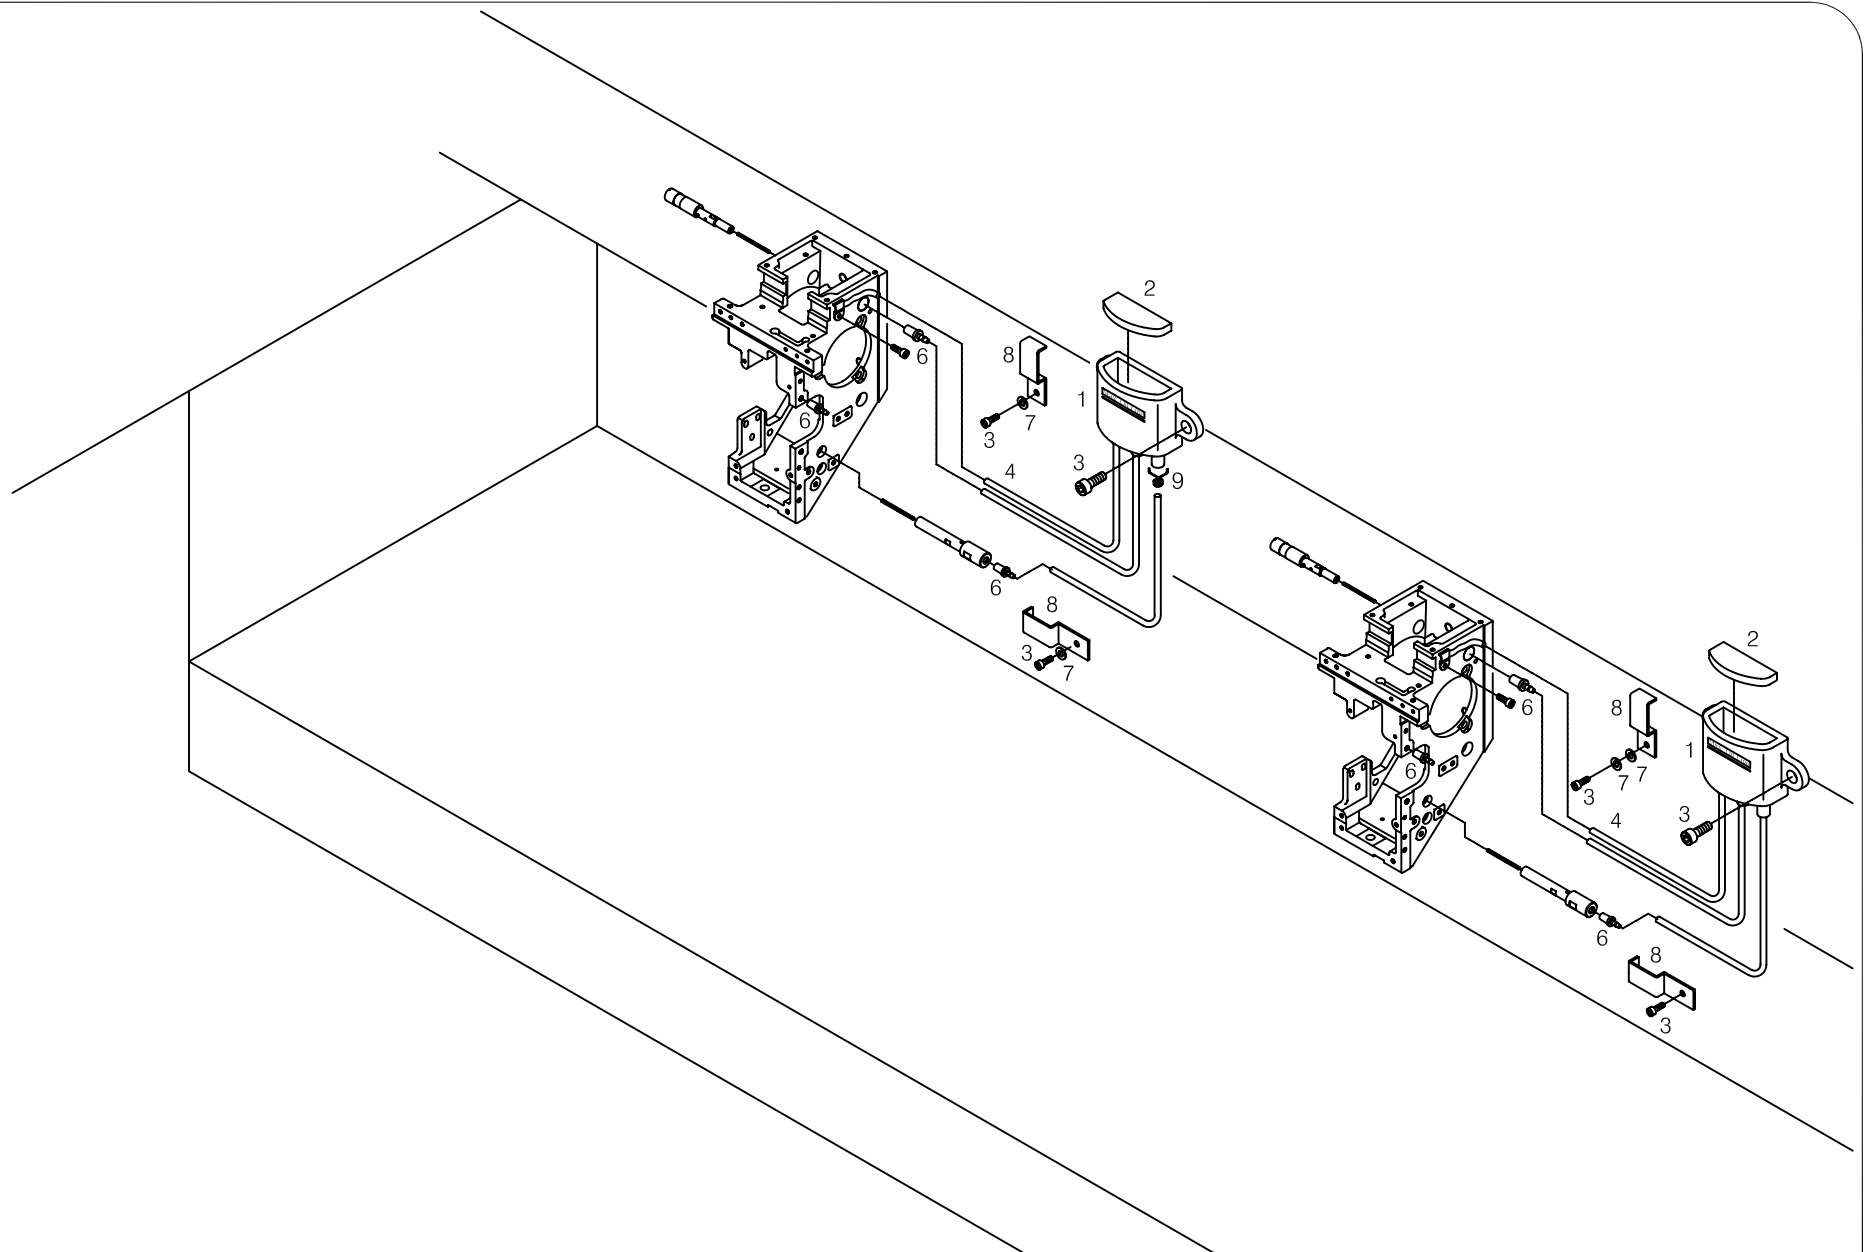

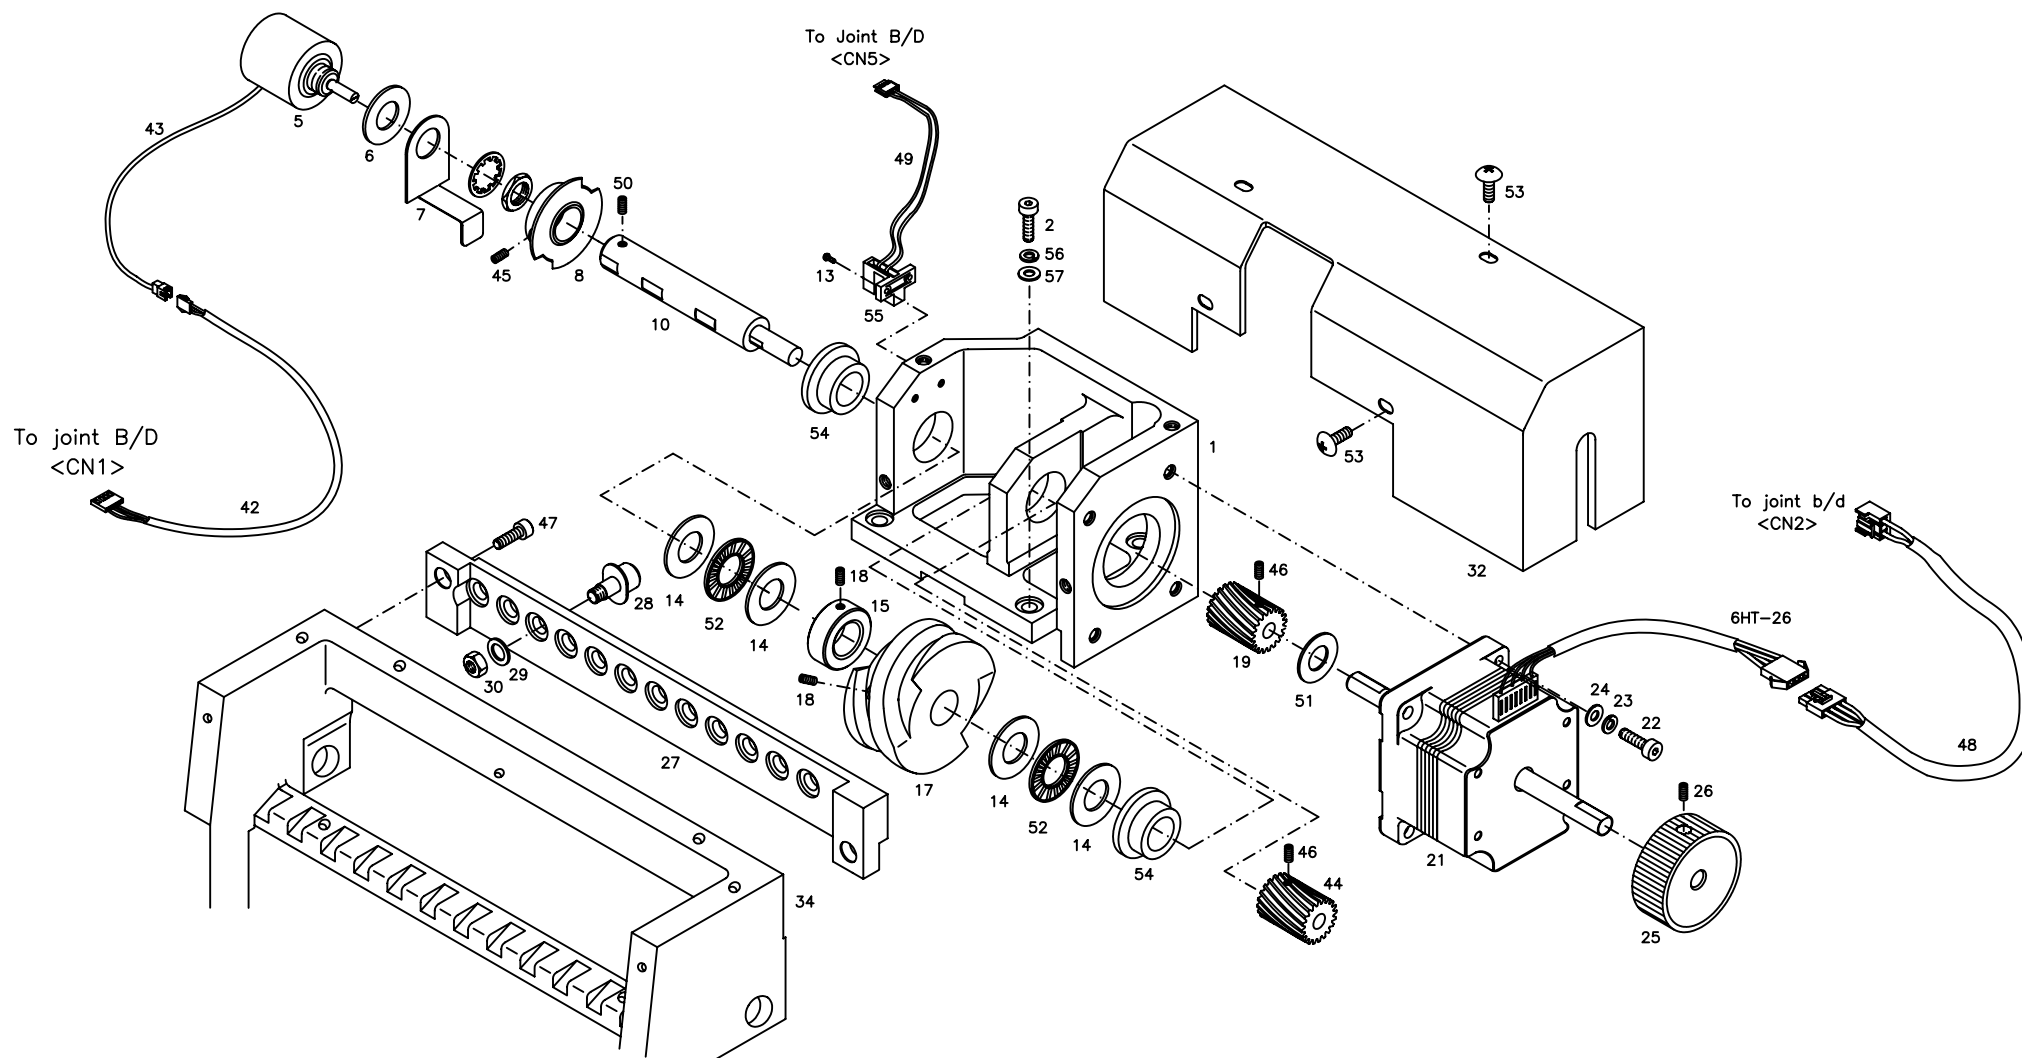

J

 Wiper Set

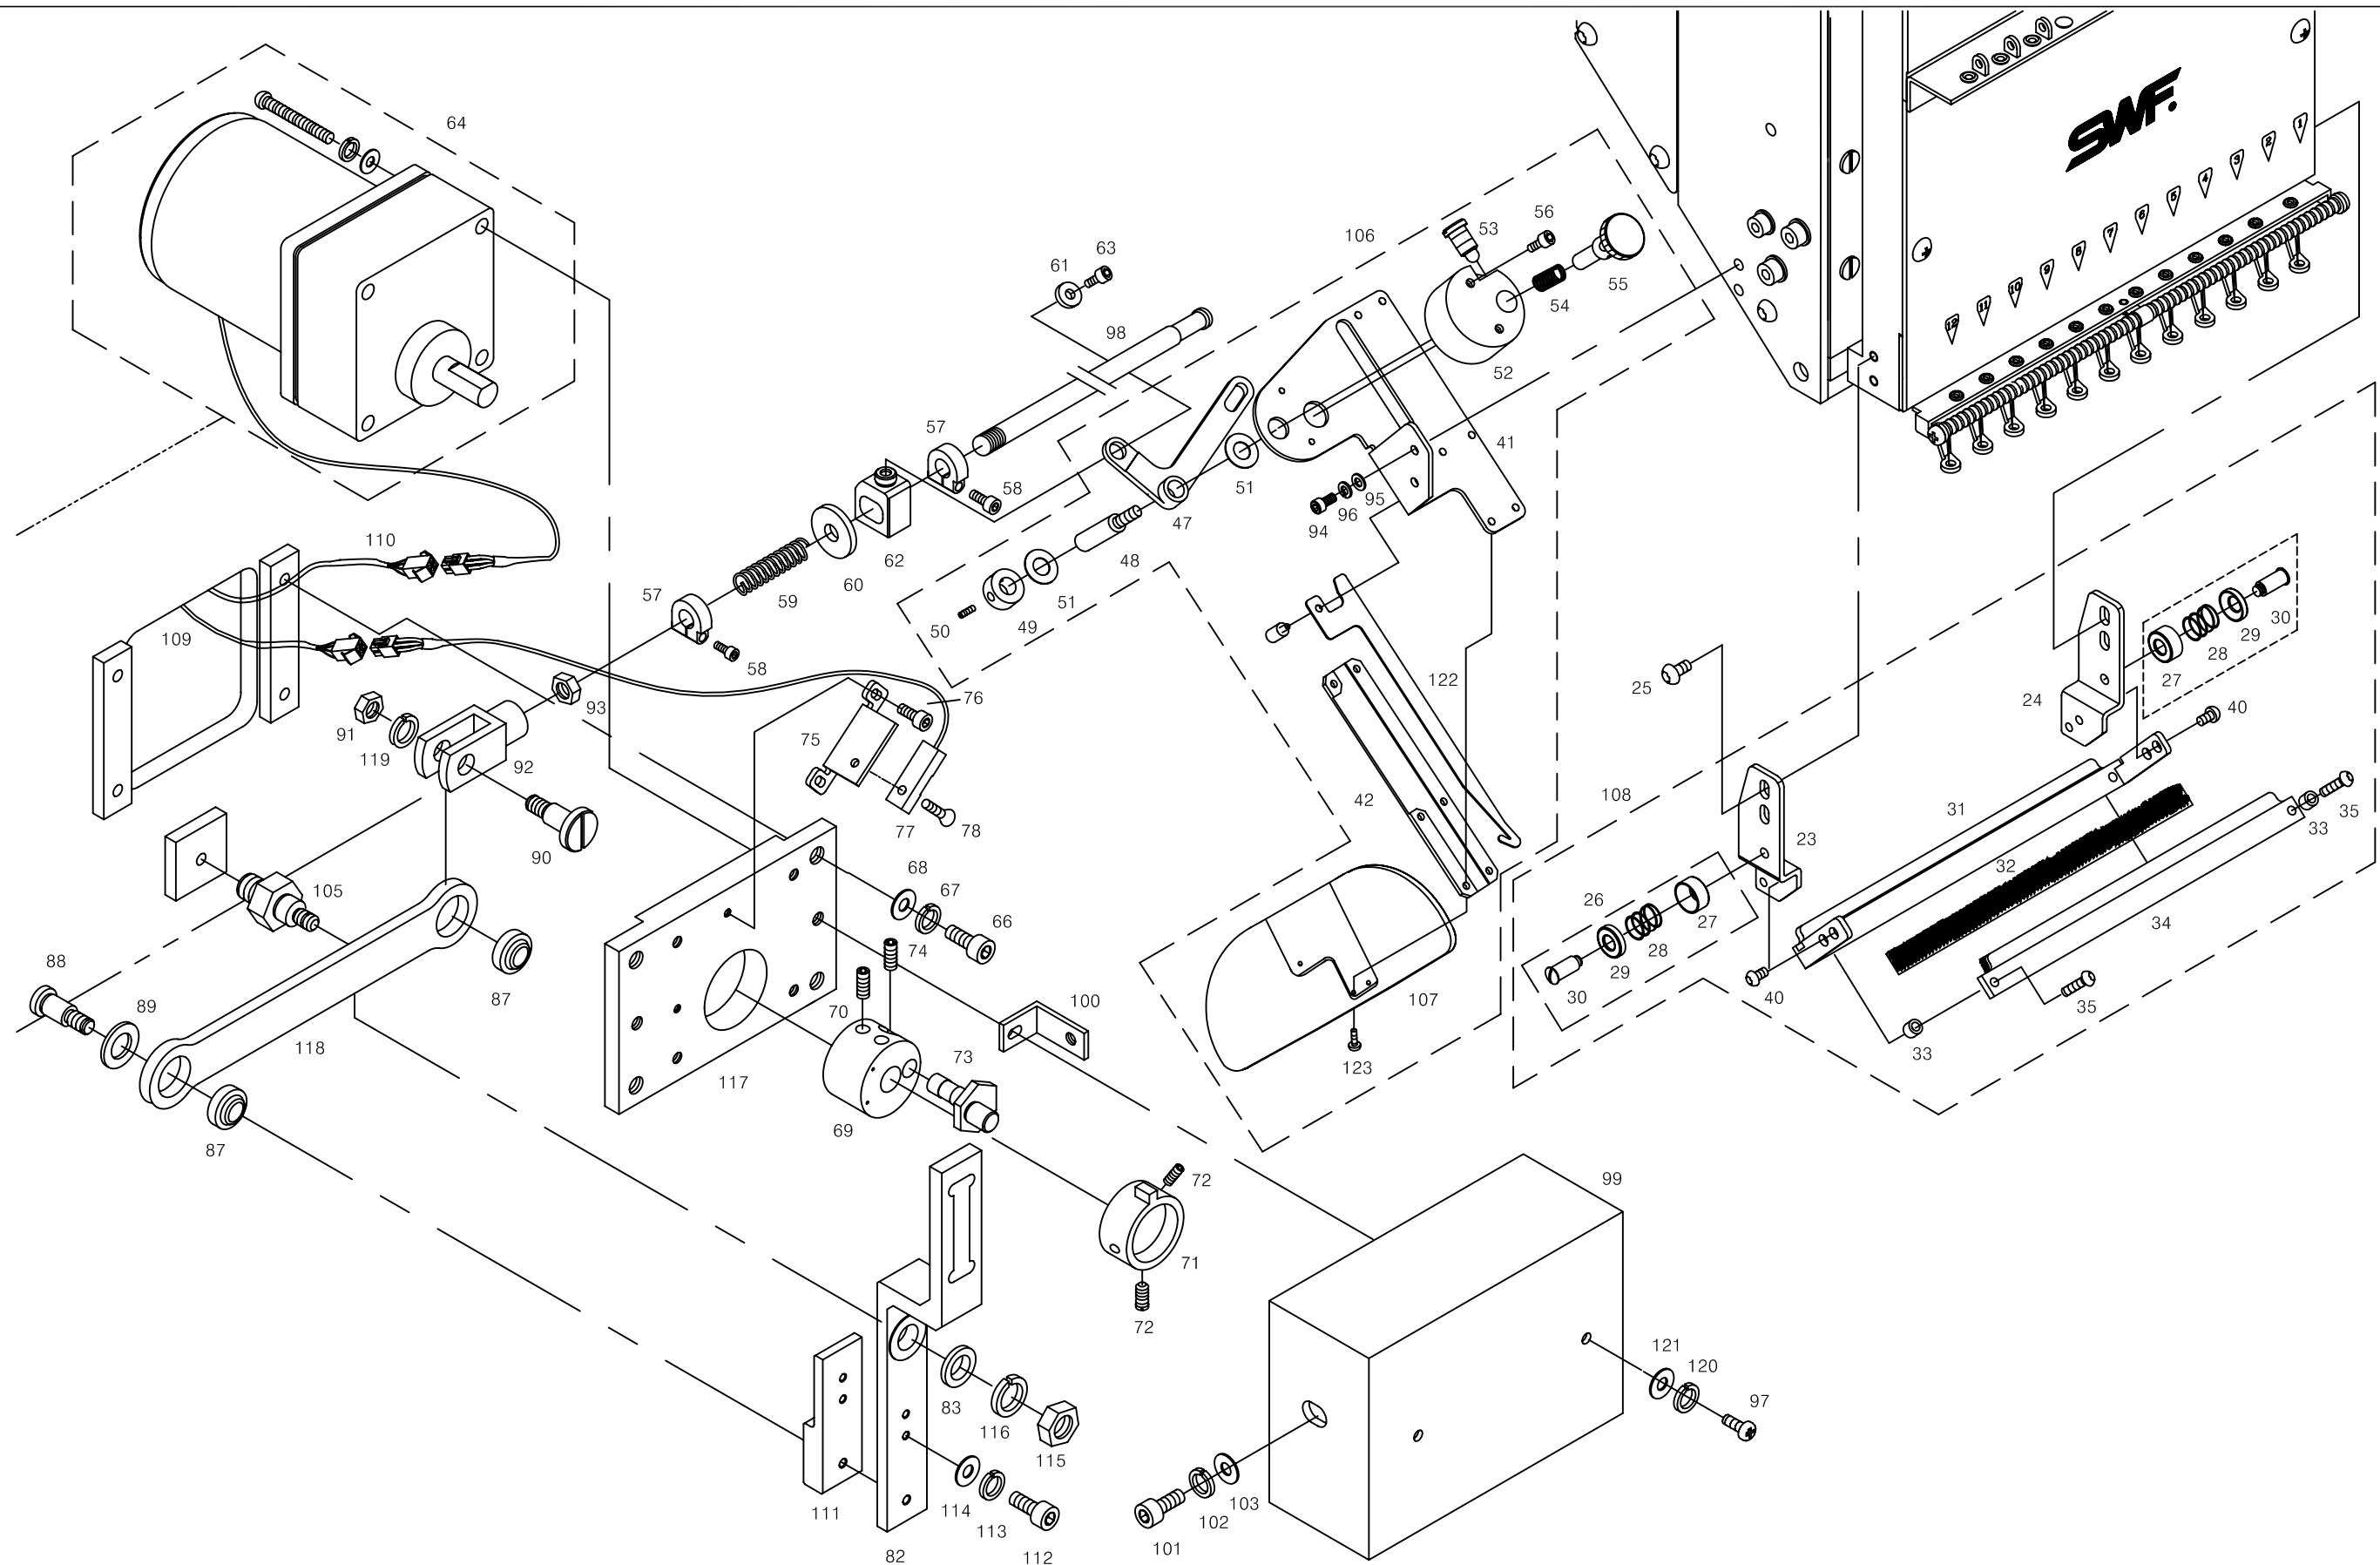


Ref.No	Part No.	PartNames	Q'ty
J-023	09040PR-A001	Bracket (L)	4
J-024	09041PR-A001	Bracket (R)	4
J-025	02009SC-A001	Side Cover Screw	16
J-026	09044PR-A001	Upper Thread Holder Disk Set	8
J-027		Upper Thread Holder Disk "A"	8
J-028		Spring	8
J-029		Upper Thread Holder Disk "B"	8
J-030		Upper Thread Holder Stud	8
J-031	09034PR-AE00	Upper Thread Presser Base (6C)	4
	09026PR-AB00	Upper Thread Presser Base (12C)	
	09052PR-T151	Upper Thread Presser Base (15C)	
J-032	09035ET-AE00	Velcro (6C)	8
	09027ET-AB00	Velcro (12C)	
	09027ET-T151	Velcro (15C)	
J-033	09038CW-A001	Thread Presser Space	8
J-034	09037PR-AE00	Presser Base Cover (6C)	4
	09029PR-AB00	Presser Base Cover (12C)	
	09029PR-T151	Presser Base Cover (15C)	
J-035	07018SC-8118	Plus Screw (M3*L8)	8
J-040	06010SC-8118	Plus Screw (M3*L4)	16
J-041	03500110H000	Upper Thread Catcher Base	4
J-042	03500210H000	Upper Thread Hook Base Cover	4
J-047	03500500H000	Upper Catcher Driving Lever	4
J-048	03500600H000	Driving Lever Pin	4
J-049	03500700H000	Driving Lever Pin Collar	4
J-050	04014SC-4517	Hex.Socket Set Screw(M5*L5)	8
J-051	03500800H000	Driving Lever Pin Washer	8
J-052	03500900H000	Clutch Block	4
J-053	03501000H000	Clutch Stud Screw	4
J-054	03501100H000	Clutch Spring	4
J-055	03501200H000	Clutch Dial	4
J-056	11029SC-4113	Hex. Socket Bolt (M4*L20)	8
J-057	03002610H000	Return Spring Stopper	8
J-058	05008SC-4113	Hex.Socket Bolt (M4*L16)	8
J-059	03002700H000	Return Spring	4
J-060	03002800H000	Return Spring Stopper Washer	4
J-061	03002900H000	Return Spring Fix Pin Washer	4
J-062	03003000H000	Return Spring Fix Pin	4
J-063	02015SC-7113	Hex.Socket Bolt(M4*L10)	4
J-064	03003100H000	Upper Thread Hook Motor Unit	1

Ref. No	Part No.	Part Names	Q'ty
J-066	06025MC-7113	Hex.Socket Bolt(M6*L25)	4
J-067	16014SW-4115	Spring Washer (@6)	4
J-068	08057SW-1111	Washer (@6)	4
J-069	03003300H000	Cam Shaft Fixing Block	1
J-070	05008MC-4517	Hex.Socket Bolt(M5*L8)	2
J-071	GP-005184-00	SENSOR SENSING ADJUSTING RING	1
J-072	04014SC-4517	Hex.Socket Set Screw(M5*L5)	2
J-073	03003500H000	Motor Driving Cam Shaft	1
J-074	04014SC-4517	Hex.Socket Set Screw(M5*L5)	1
J-075	GP-005180-00	UPPER THREAD HOOK SENSOR BASE	1
J-076	07035SC-7113	BRACKET SCREW (M3*L6)	2
J-077	15-027A-2070	SENSOR	1
J-078	13061SC-8119	Plus Screw (M3*L10)	1
J-082	03003910H000	Upper Thread Driving Plate	1
J-083	03004000H000	Stud Bolt Washer	1
J-087	03004400H000	Motor Driving Connect Bearing	2
J-088	03008300H000	Connecting Plate Stud Screw A	1
J-089	03004500H000	Connecting Plate Pin Washer	1
J-090	03004700H000	Connecting Plate Stud Screw	1
J-091	13042SN-1111	Hex.Nut (M6*T5-R)	1
J-092	03004800H000	Connecting Plate Knuckle	1
J-093	04032SN-A001	Hex. Nut (M8-No2)	1
J-094	02023SC-7113	Hex.Socket Bolt (M4*L8)	8
J-095	18015SW-3111	Washer (4@)	8
J-096	18014SW-3115	Spring Washer (@4-No2)	8
J-097	02023SC-7113	Hex. Socket Bolt (M4*L8)	2
J-098	03007000UK40	Upper Thread Driving Shaft	1
J-099	12001900U000	Upper Thread Hook Motor Cover	1
J-100	03008600H000	Motor Cover Fixing Bracket	2
J-101	02023SC-7113	Hex.Socket Bolt (M4*L8)	2
J-102	18014SW-3115	Spring Washer (@4-No2)	2
J-103	18015SW-3111	Washer (4@)	2
J-105	03003810H000	Stud Bolt For Driving Plate	1
J-106	08500010U000	Upper Thread Catcher Set	4
J-107	12209100U000	Cap Guide	4
J-108	08600002B000	Upper Thread Base Set (6C)	4
	08600004B000	Upper Thread Base Set (12C)	
	08600005B000	Upper Thread Base Set (15C)	
J-109	02106600U040	Sh-66-2	1
J-110	02106700U040	Sh-67-2	1


J

 Wiper Set

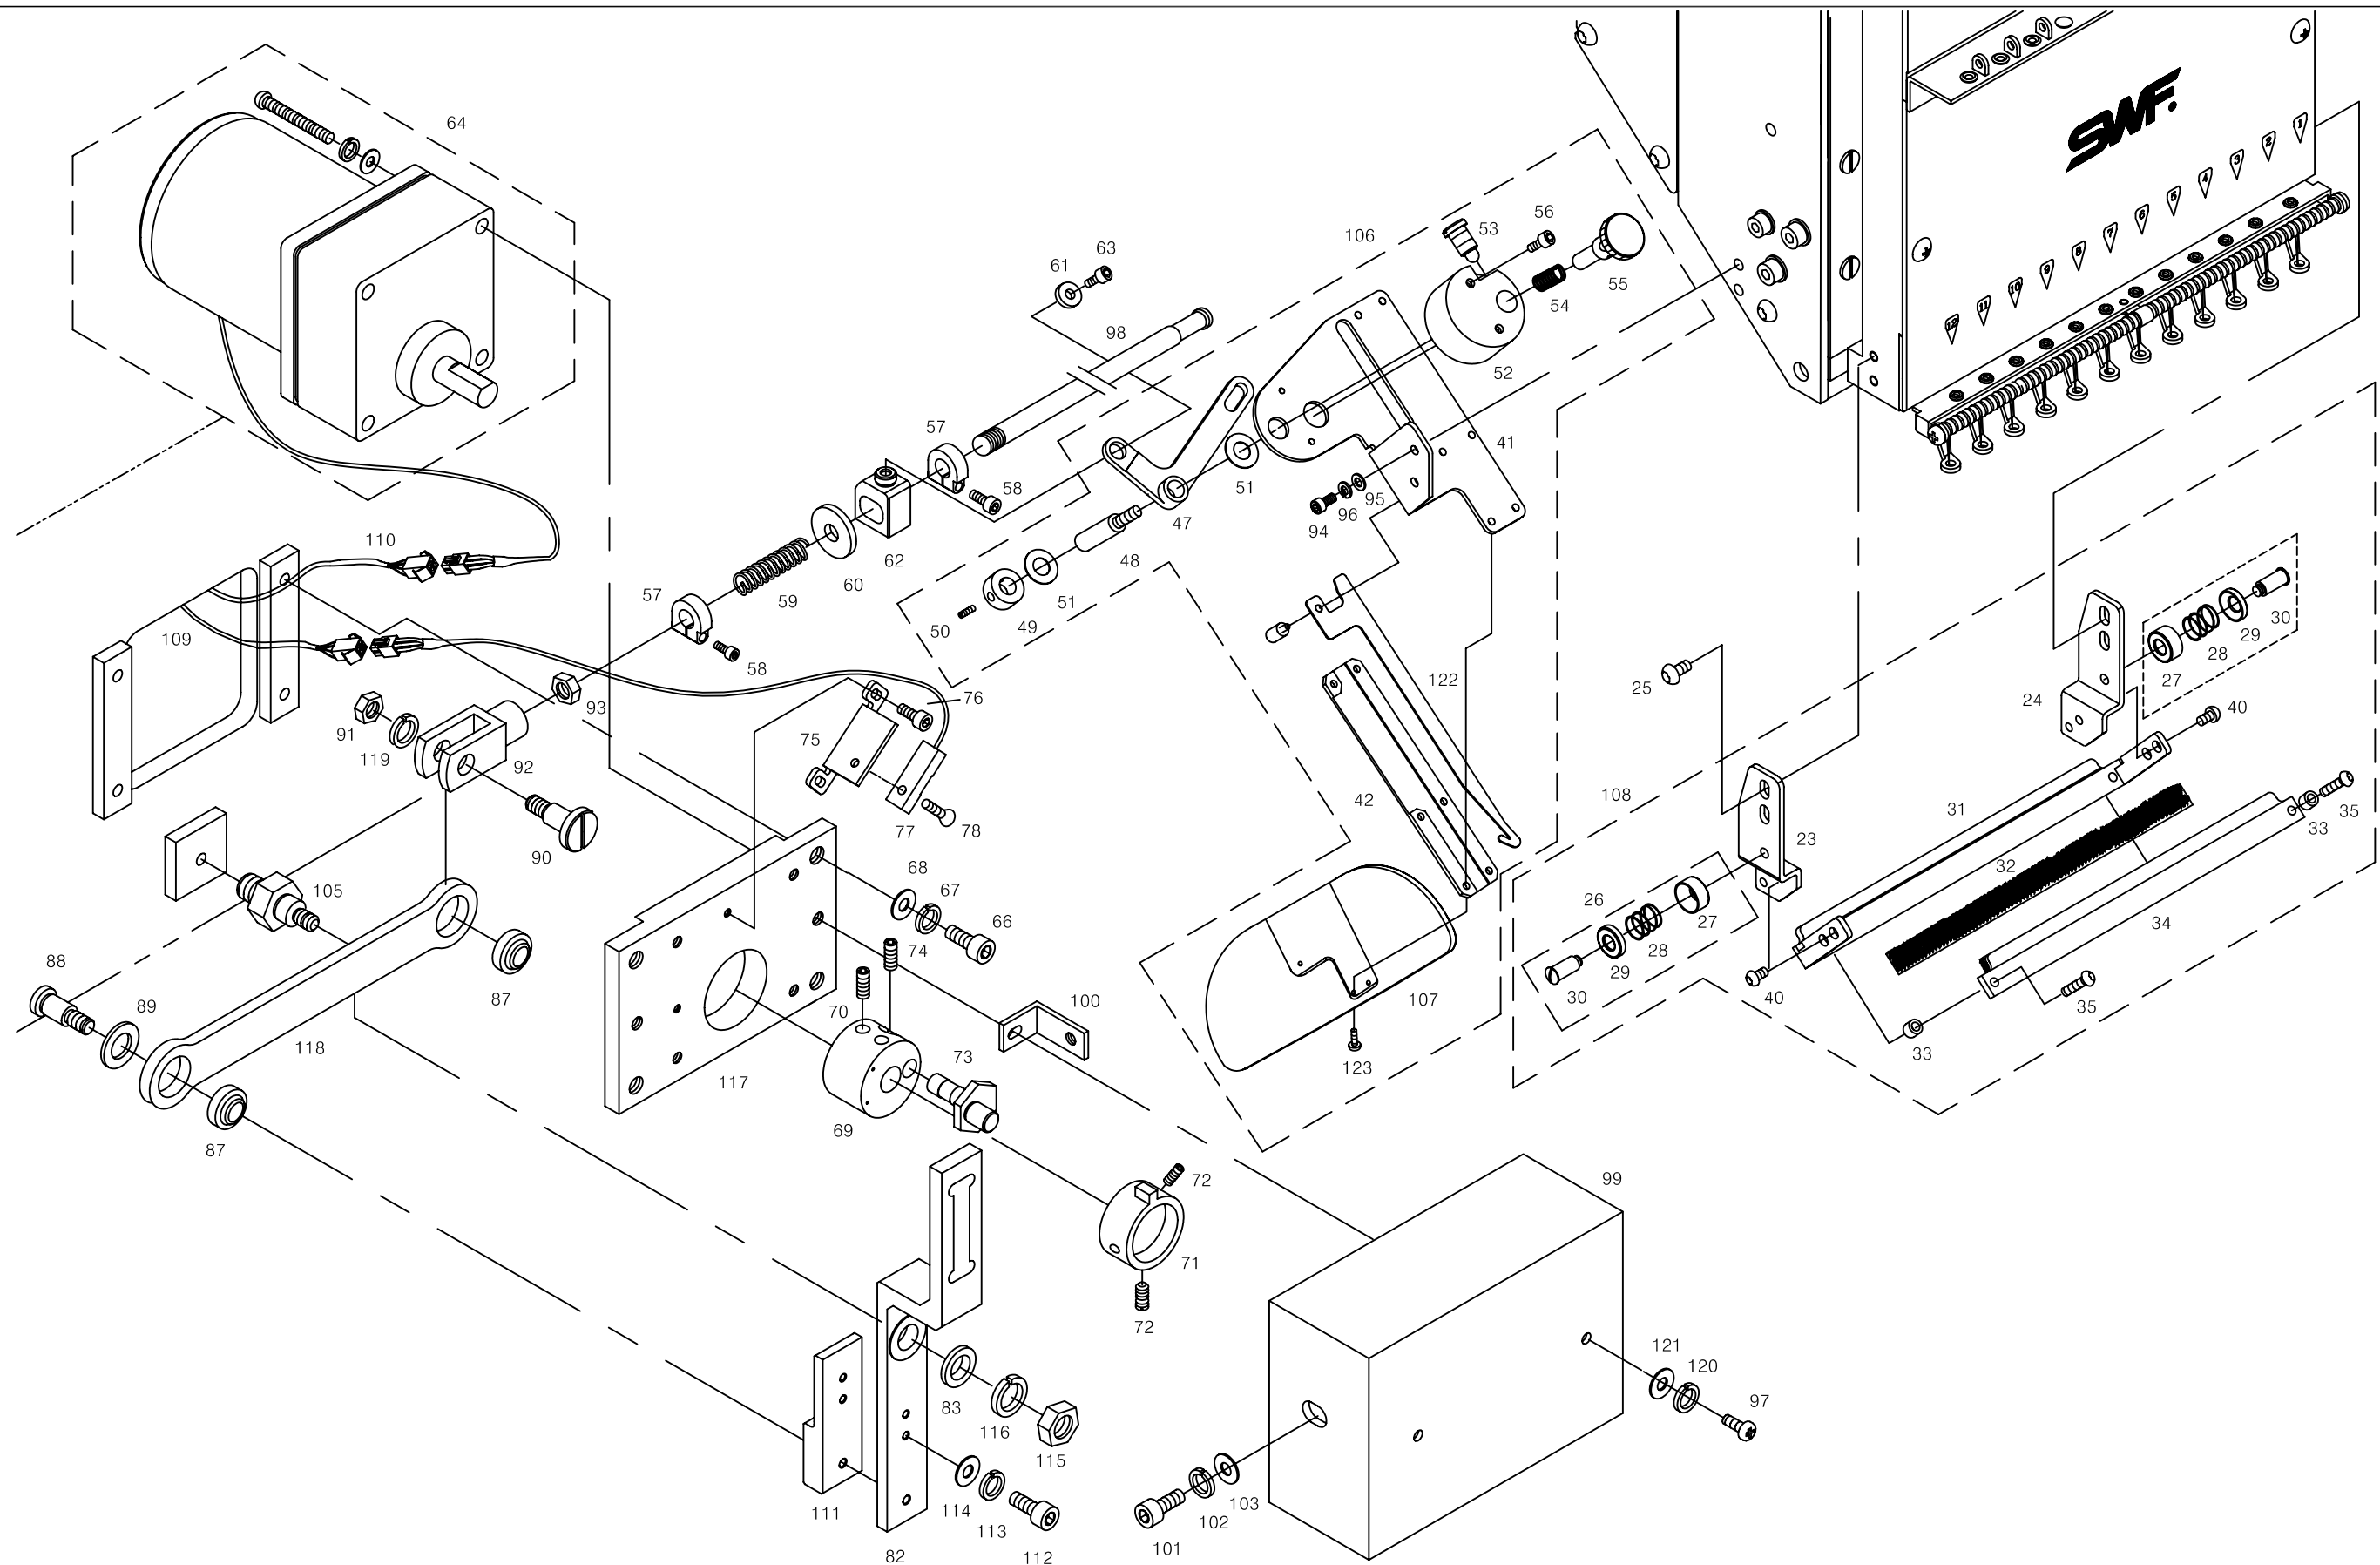

K

 Head

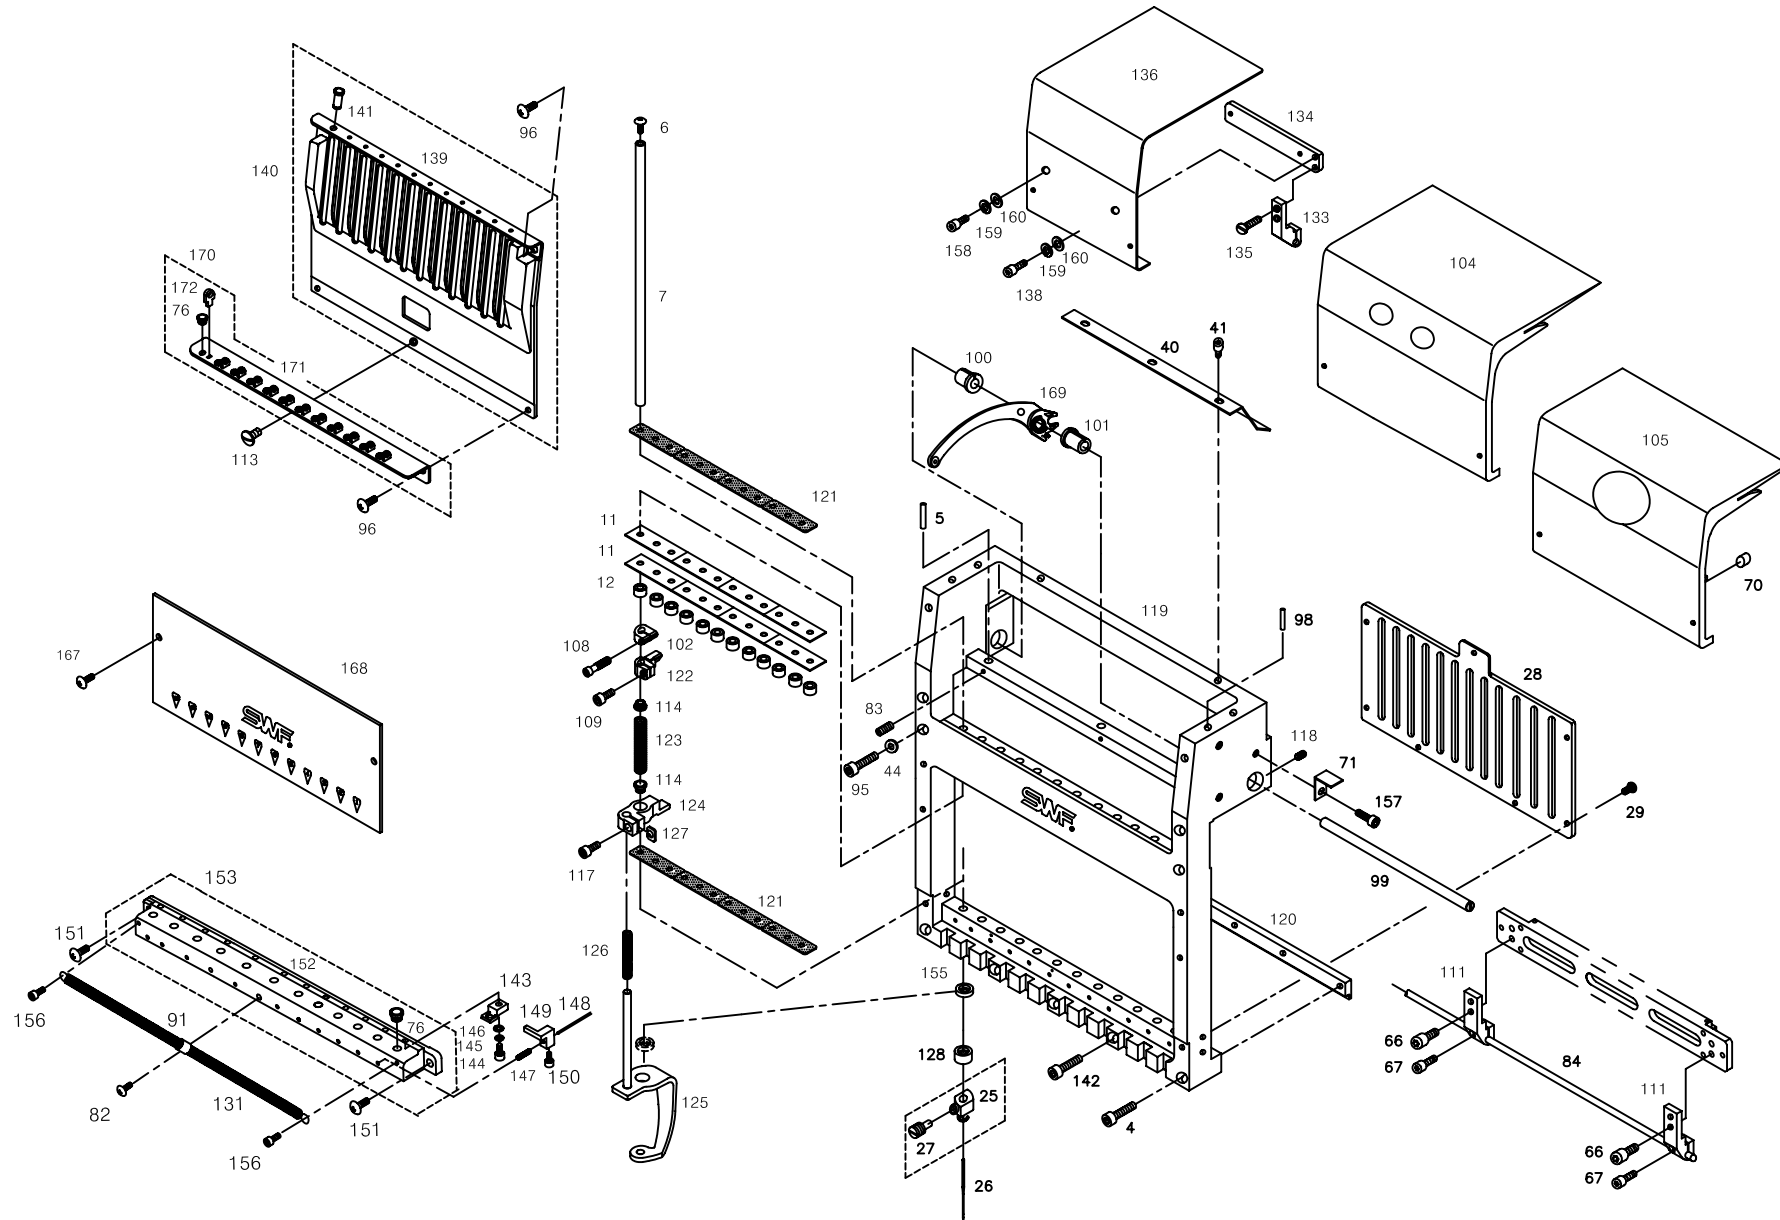


Ref.No	Part No.	PartNames	Q'ty
K-004	05014SC-7113	Hex. Socket Bolt (M4*L25)	40
K-005	05015CW-A001	Head Base Pin(@5*L15)	8
K-006	05019SC-A001	Needle Bar Cover Screw (M5*L6)	48
K-007	05018CW-A001	Needle Bar	48
K-011	05023RB-A001	Needle Bar Cushion Rubber "A"	32
K-012	05024RB-A001	Needle Bar Cushion Rubber "B"	48
K-025	05036CW-A001	Needle Fixed Holder	48
K-026	05037DB-A001	Needle (Db-K5, #11)	48
K-027	05363SC-A001	Needle Fixed Screw (A/S)	48
K-028	05040PM-AE00	Needle Bar Guide Rail (6C)	4
	05038PM-AB00	Needle Bar Guide Rail (12C)	
	05038PM-H003	Needle Bar Guide Rail (15C)	
K-029	05041SC-A001	Guide Rail Screw	32
K-040	11048PR-AE00	Cable Support Plate "B" (6C)	3
	11046PR-AB00	Cable Support Plate "B" (12C)	
	11046PR-H003	Cable Support Plate "B" (15C)	
K-041	02023SC-7113	Hex. Socket Bolt (M4*L8)	12
K-044	06003SW-2111	Washer (@4)	16
K-066	02031SC-7113	Hex. Socket Screw(M5*L10)	16
K-067	02015SC-7113	Hex.Socket Bolt(M4*L10)	8
K-070	02023ET-A001	Top Shaft Cover Magnet	6
K-071	02022PR-UK01	Upper Shaft Cover "B" Bracket	2
K-076	05452CM-A001	Eyelet "A"	96
K-082	05060SC-8118	Screw (M3*L3)	4
	05060SC-8118	Screw (M3*L3)	8
K-083	03022SC-4517	Hex. Socket Set Screw(M4*L5)	8
K-084	05000103UK00	Color Change Shaft (6C)	1
	23007SH-UK01	Color Change Shaft (12C)	
	23007SH-UK14	Color Change Shaft (15C)	
K-091	10400304B000	Spring Holder (12C)	4
	10400304B000	Spring Holder (15C)	8
K-095	05008SC-4113	Hex.Socket Bolt (M4*L16)	16
K-096	05070SC-3123	Head Face Plate (U) Screw	16
K-098	01303700H000	Tension Plate Pin	8
K-099	08200602A000	Take-Up Lever Shaft (6C)	4
	08200404A000	Take-Up Lever Shaft (12C)	
	07004SF-T151	Take-Up Lever Shaft (15C)	
K-100	08203000A000	Take-Up Lever Shaft Bush(L)	4
K-101	08200800A000	Take-Up Lever Shaft Bush(R)	4
K-102	11101200T000	Upper Dead Point Stopper	48

Ref.No	Part No.	PartNames	Q'ty
K-104	09000104UK00	Top Shaft Cover "A"	1
K-105	09000204UK00	Top Shaft Cover "B"	1
K-108	05026SC-4113	Stopper Screw (9/64-11.5)	48
K-109	05028SC-4113	Holder Screw (9/64-L8)	48
K-111	08004900A000	Color Change Bracket "B"	7
K-113	05062SC-A001	Thread Guide (L) Screw	4
K-114	05021PM-H001	Presser Foot Spring Guide	48
K-117	05026SC-H001	Presser Foot Holder Screw	48
K-118	07009SC-4517	Hex.Socket Set Screw (M5*L6)	8
K-119	08200102U000	Head (6C)	4
	08200104U000	Head (12C)	
	08200105U000	Head (15C)	
K-120	05200BM-UK24	Head Rail (6C)	4
	08201304H000	Head Rail (12C)	
	08201305H000	Head Rail (15C)	
K-121	08200700H000	Needle Bar Felt	48
K-122	08201400H000	Needle Bar Holder	48
K-123	08200800H000	Needle Bar Return Spring	48
K-124	08200900H000	Presser Foot Holder Set	48
K-125	08200510H000	Presser Foot (Hight Speed)	48
K-126	08201000H000	Presser Foot Return Spring	48
K-127	08201100H000	Presser Foot Spacer	48
K-128	08201200H000	Presser Foot Cushion Rubber A	48
K-131	10800502H000	Thread Guide Spring (6C)	4
	10800504H000	Thread Guide Spring (12C)	
	10800505H000	Thread Guide Spring (15C)	
K-133	08004700A000	Color Change Bracket "A"	1
K-134	09000200H000	Top Shaft Cover (L) Bracket	1
K-135	13048SC-A001	Bracket "A" Screw	2
K-136	01001400UK00	Top Shaft Cover (L)	1
K-138	02015SC-7113	Hex.Socket Bolt(M4*L10)	1
K-139	10200102B000	Head Face Plate (U) (6C)	4
	10200104B000	Head Face Plate (U) (12C)	
	10200105B000	Head Face Plate (U) (15C)	
K-140	10200012H000	Thread Guide (U) Set (6C)	4
	10200014H000	Thread Guide (U) Set (12C)	
	10200015H000	Thread Guide (U) Set (15C)	
K-141	10200100H000	Eyelet "A-1"	48
K-142	05014SC-7113	Hex. Socket Bolt (M4*L25)	12
K-143	10900200H000	Upper Thread Holder Block	48


K

 Head

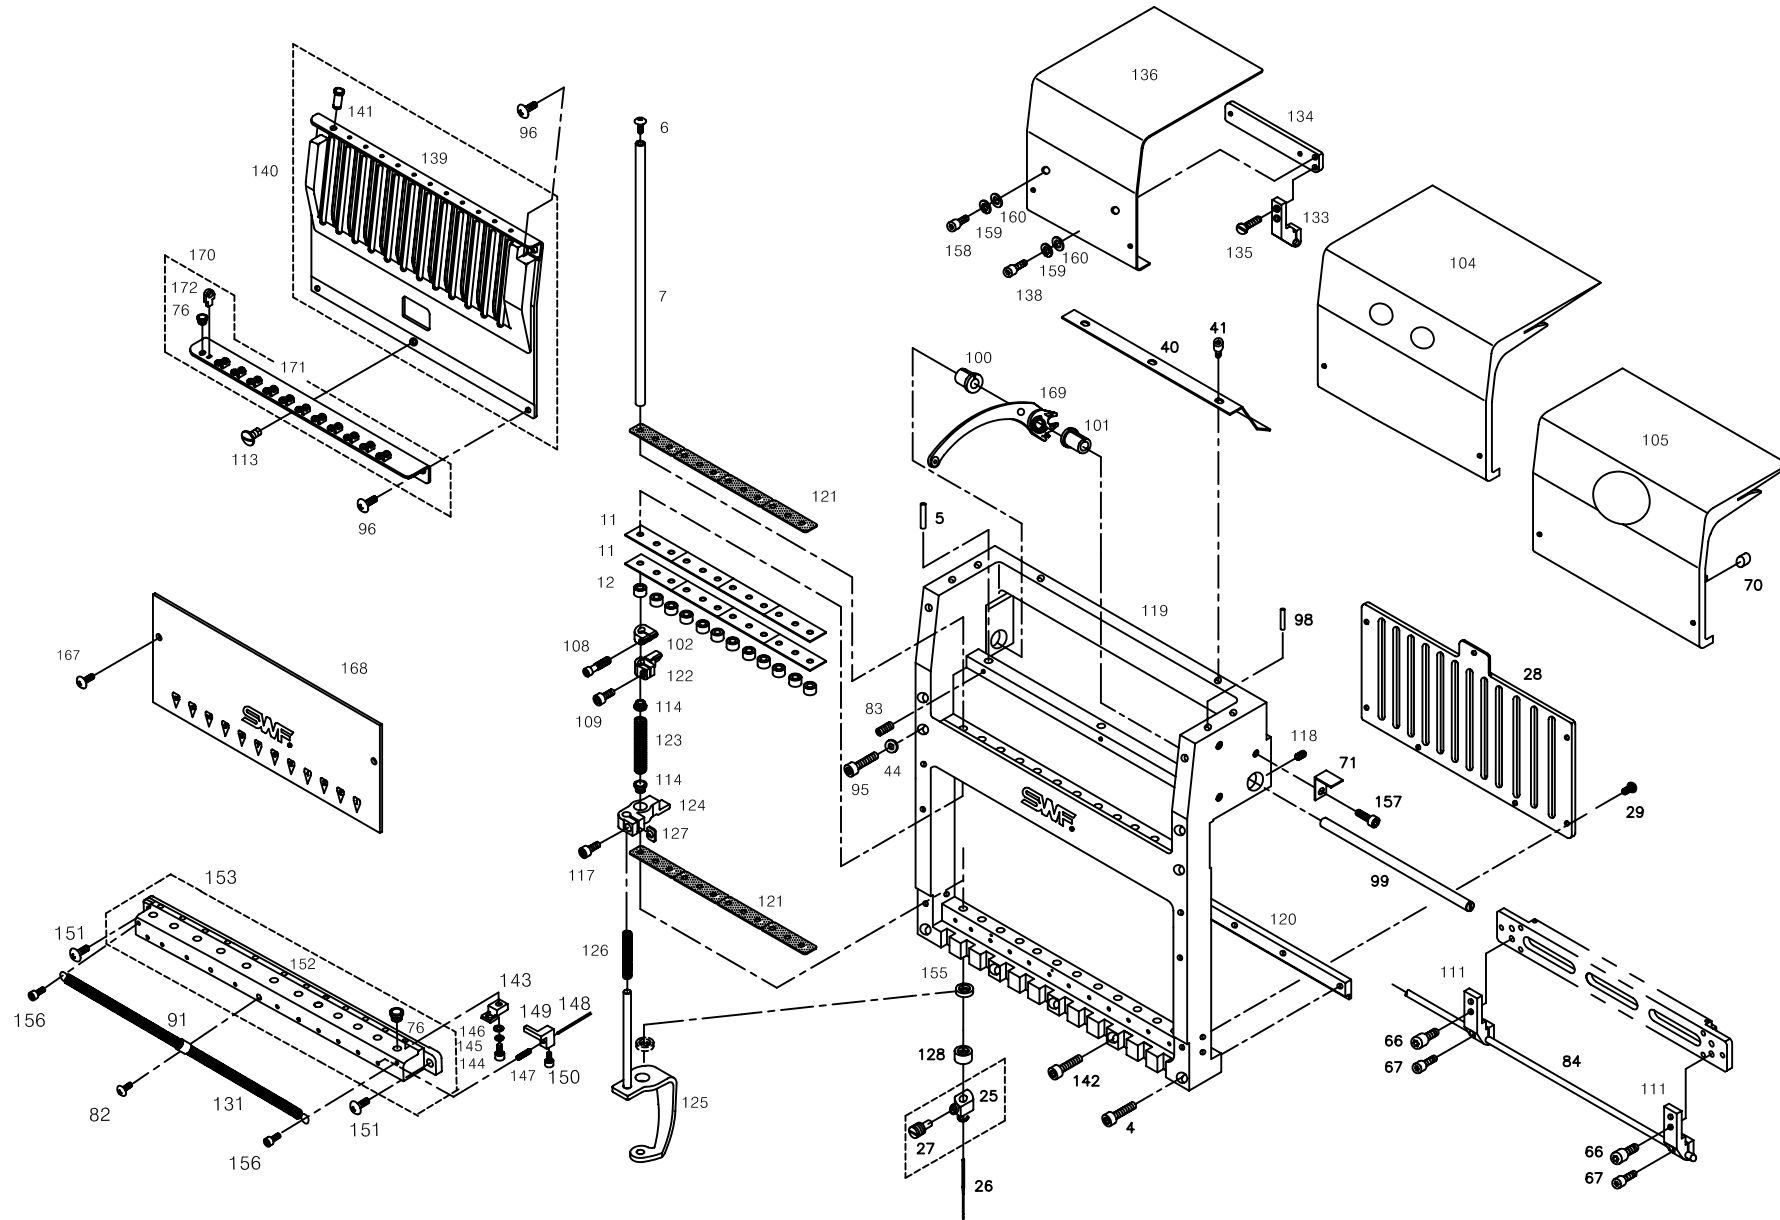

L

 Thread Tension Unit

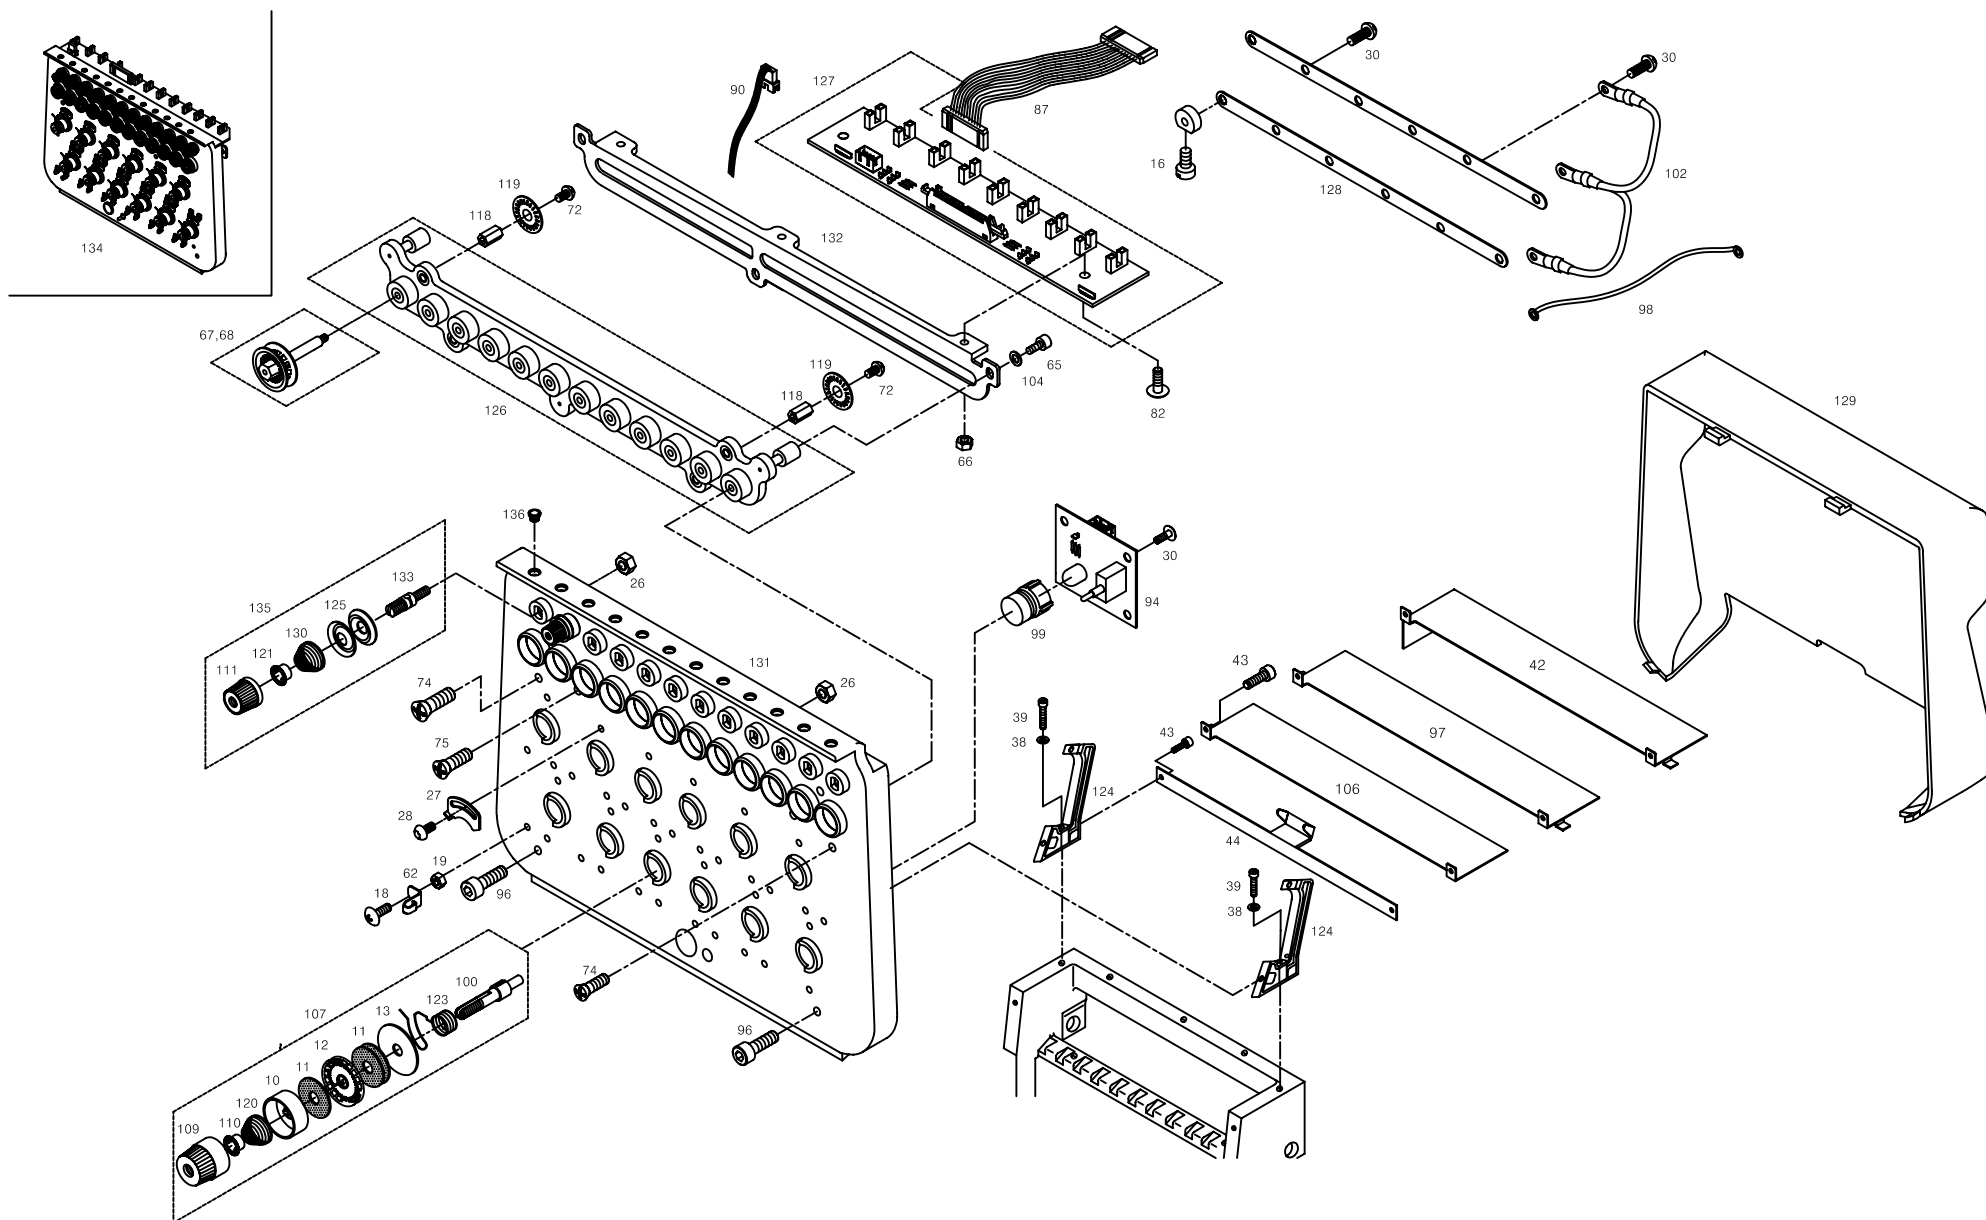


Ref. No	Part No.	Part Names	Q'ty
L-010	11086PM-A001	Tension Spring Collar	48
L-011	11084AF-A001	Felt	144
L-012	11085AF-A001	Rotary Tension Disc	48
L-013	11083PM-A001	Disc Plate	48
L-016	11009SC-A001	Stud Screw	48
L-018	09005SC-3123	Truss Screw (M3*L6)	120
L-019	11014SN-1211	Hex.Nut (M3-No2)	120
L-026	03031SN-A001	Pin. Nut (11/64,N=40)	48
L-027	11009PR-B001	Thread Breakage Detecting Plat	48
L-028	09005SC-3123	Truss Screw (M3*L6)	48
L-030	09005SC-3123	Truss Screw (M3*L6)	48
L-038	05009SW-1111	Washer (@4-L)	8
L-039	11029SC-4113	Hex. Socket Bolt (M4*L20)	8
L-042	02009PR-UK01	Cover Plate (L)	1
L-043	02023SC-7113	Hex. Socket Bolt (M4*L8)	6
L-044	11032PR-T121	Cable Supporter 12C	1
L-045	02010AF-3123	Truss Screw (M4*L8)	2
L-062	11012PR-B001	Thread Guide (New) (12C)	120
L-065	02023SC-7113	Hex.Socket Bolt (M4*L8)	12
L-066	05016SN-1211	Hex.Nut (M4)	12
L-067	11075PM-B001	Thread Sensor Roller(B1)Set (6C)	24
	11075PM-B001	Thread Sensor Roller(B1)Set (12C)	48
	11075PM-B001	Thread Sensor Roller(B1)Set (15C)	28
L-068	11076PM-B001	Thread Sensor Roller(B2)Set (15C)	32
L-072	08011SC-8118	Screw (M2*L4)	48
L-074	15089SC-7119	C.S Screw (M4*L10)	8
L-075	02002SC-7119	Pluss Screw (M4*L8)	20
L-082	02010SC-3123	Truss Screw (M4*L8)	12
L-087	02102200U000	Plate To B/B Cable	4
L-090	02101800B000	Plate Led S/W Board Cable	4
L-094	03-0000-EMB1	Head On/Off S/W Board 6C,12C	4
	02-0000-EMB1	Head On/Off S/W Board 9C,15C	
L-096	04010MC-7113	Hex.Socket Bolt (M4*L10)	8
L-097	11031PR-AB00	Cover Plate 12C	1
L-098	25126EL-B001	Sensor Board To Wheel Earth	4
L-099	08300400A000	Lamp Cover	4
L-100	11081CW-A001	Thread Tension Adjusting Stud	48
L-102	02103903H000	Wheel Earth 6,9,12C	4
	25124EL-B001	Tension Plat Earth Cable 15C	
L-104	06003SW-2111	Washer (@4)	12

Ref. No	Part No.	Part Names	Q'ty
L-106	08003204B000	COVER PLATE (R) 12C	1
	02006PR-UK14	COVER PLATE (R) 15C	
L-107	08310000B000	TENSION ADJUSTING SET	48
L-109	08300500A000	TENSION ADJUSTING NUT	48
L-110	08300700A000	TENSION SPRING STOPPER	48
L-111	08300600A000	SUB TENSION ADJUSTING NUT(A)	48
L-118	08308300B000	THREAD DETECTING WHEEL STUD (6C)	24
	08308300B000	THREAD DETECTING WHEEL STUD (12C)	48
	11083CW-B001	THREAD DETECTING WHEEL STUD (15C)	60
L-119	GP-005179-00	THREAD BREAKAGE DETECTING WHEEL	48
L-120	08300800A000	TENSION ADJUSTING SPRING	48
L-121	11088PM-A001	TENSION SPRING STOPPER	48
L-123	11082AF-A001	THREAD TAKE-UP SPRING	48
L-124	08202000A000	TENSION ADJUSTING PLATE HOLDER (6C)	8
	08202000I000	TENSION ADJUSTING PLATE HOLDER (12C)	
	11020PM-B001	TENSION ADJUSTING PLATE HOLDER (15C)	
L-125	08301200I000	TENSION DISC	96
L-126	08300702I000	ROLLER BASE (6C)	4
	08300704I000	ROLLER BASE (12C)	
	08300705I000	ROLLER BASE (15C)	
L-127	18009EL-WH06	WHEEL SENSOR BOARD (6C)	4
	20009EL-WH12	WHEEL SENSOR BOARD (12C)	
	20009EL-WH15	WHEEL SENSOR BOARD (15C)	
L-128	08300302I000	CONNECTION PLATE (6C)	8
	08300304I000	CONNECTION PLATE (12C)	8
	08300305I000	CONNECTION PLATE "A" (15C)	4
	08300405I000	CONNECTION PLATE "B" (15C)	4
L-129	08000804I000	TENSION PLATE COVER (12C)	4
	08000805I000	TENSION PLATE COVER (15C)	
L-130	08301100I000	TENSION SPRING	48
L-131	08300102I000	TENSION UNIT PLATE (6C)	4
	08300104I000	TENSION UNIT PLATE (12C)	
	08300105I000	TENSION UNIT PLATE (15C)	
L-132	08300202I000	BOARD BASE (6C)	4
	08300204I000	BOARD BASE (12C)	
	08300205I000	BOARD BASE (15C)	
L-133	08301000I000	TENSION ADJUSTING STUD	48
L-134	08300002I000	TENSINO UNIT SET (6C)	4
	08300004I000	TENSINO UNIT SET (12C)	
	08300005I000	TENSINO UNIT SET (15C)	


L

 Thread Tension Unit

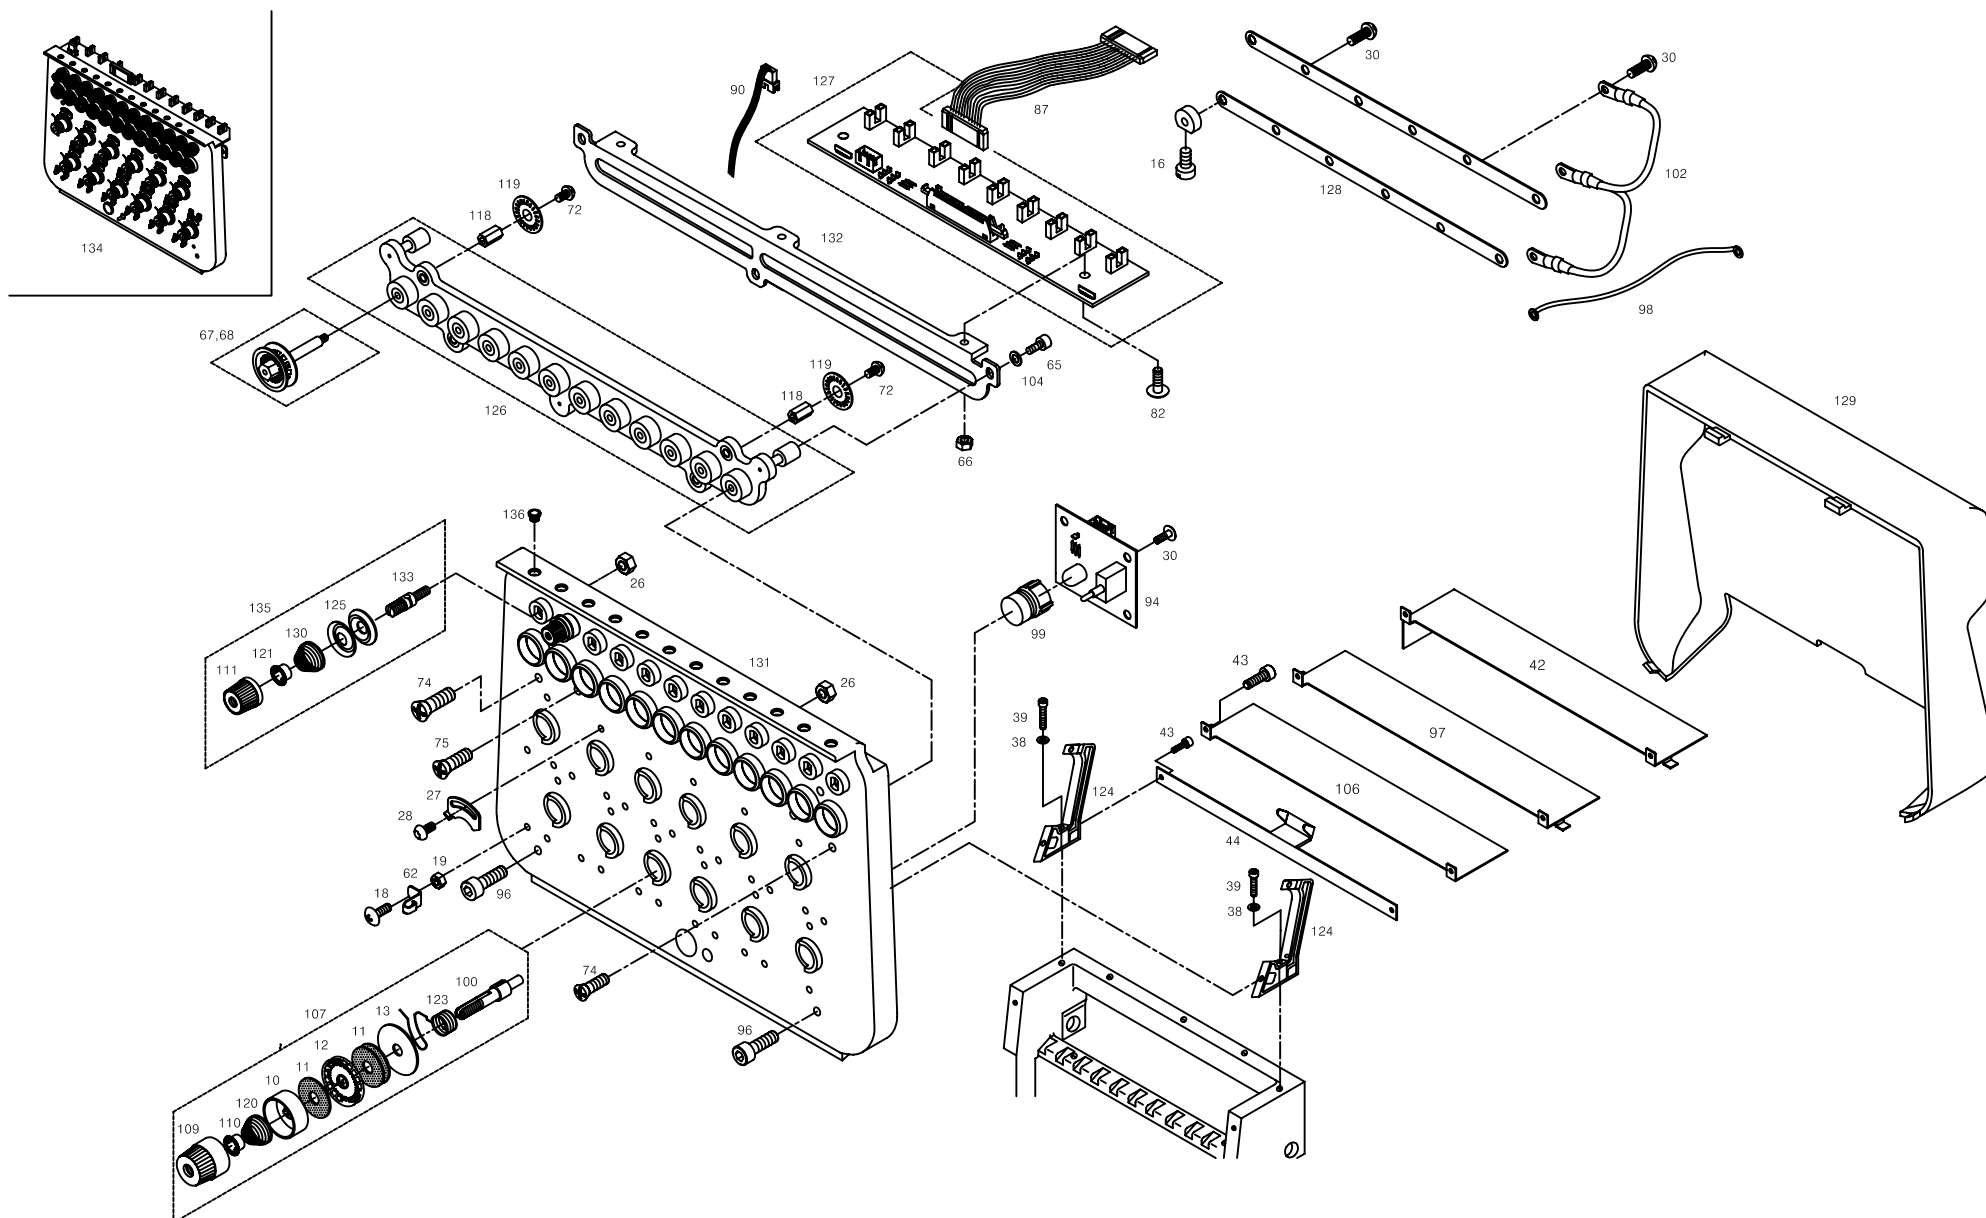

M

 
X-Axis Drive Set

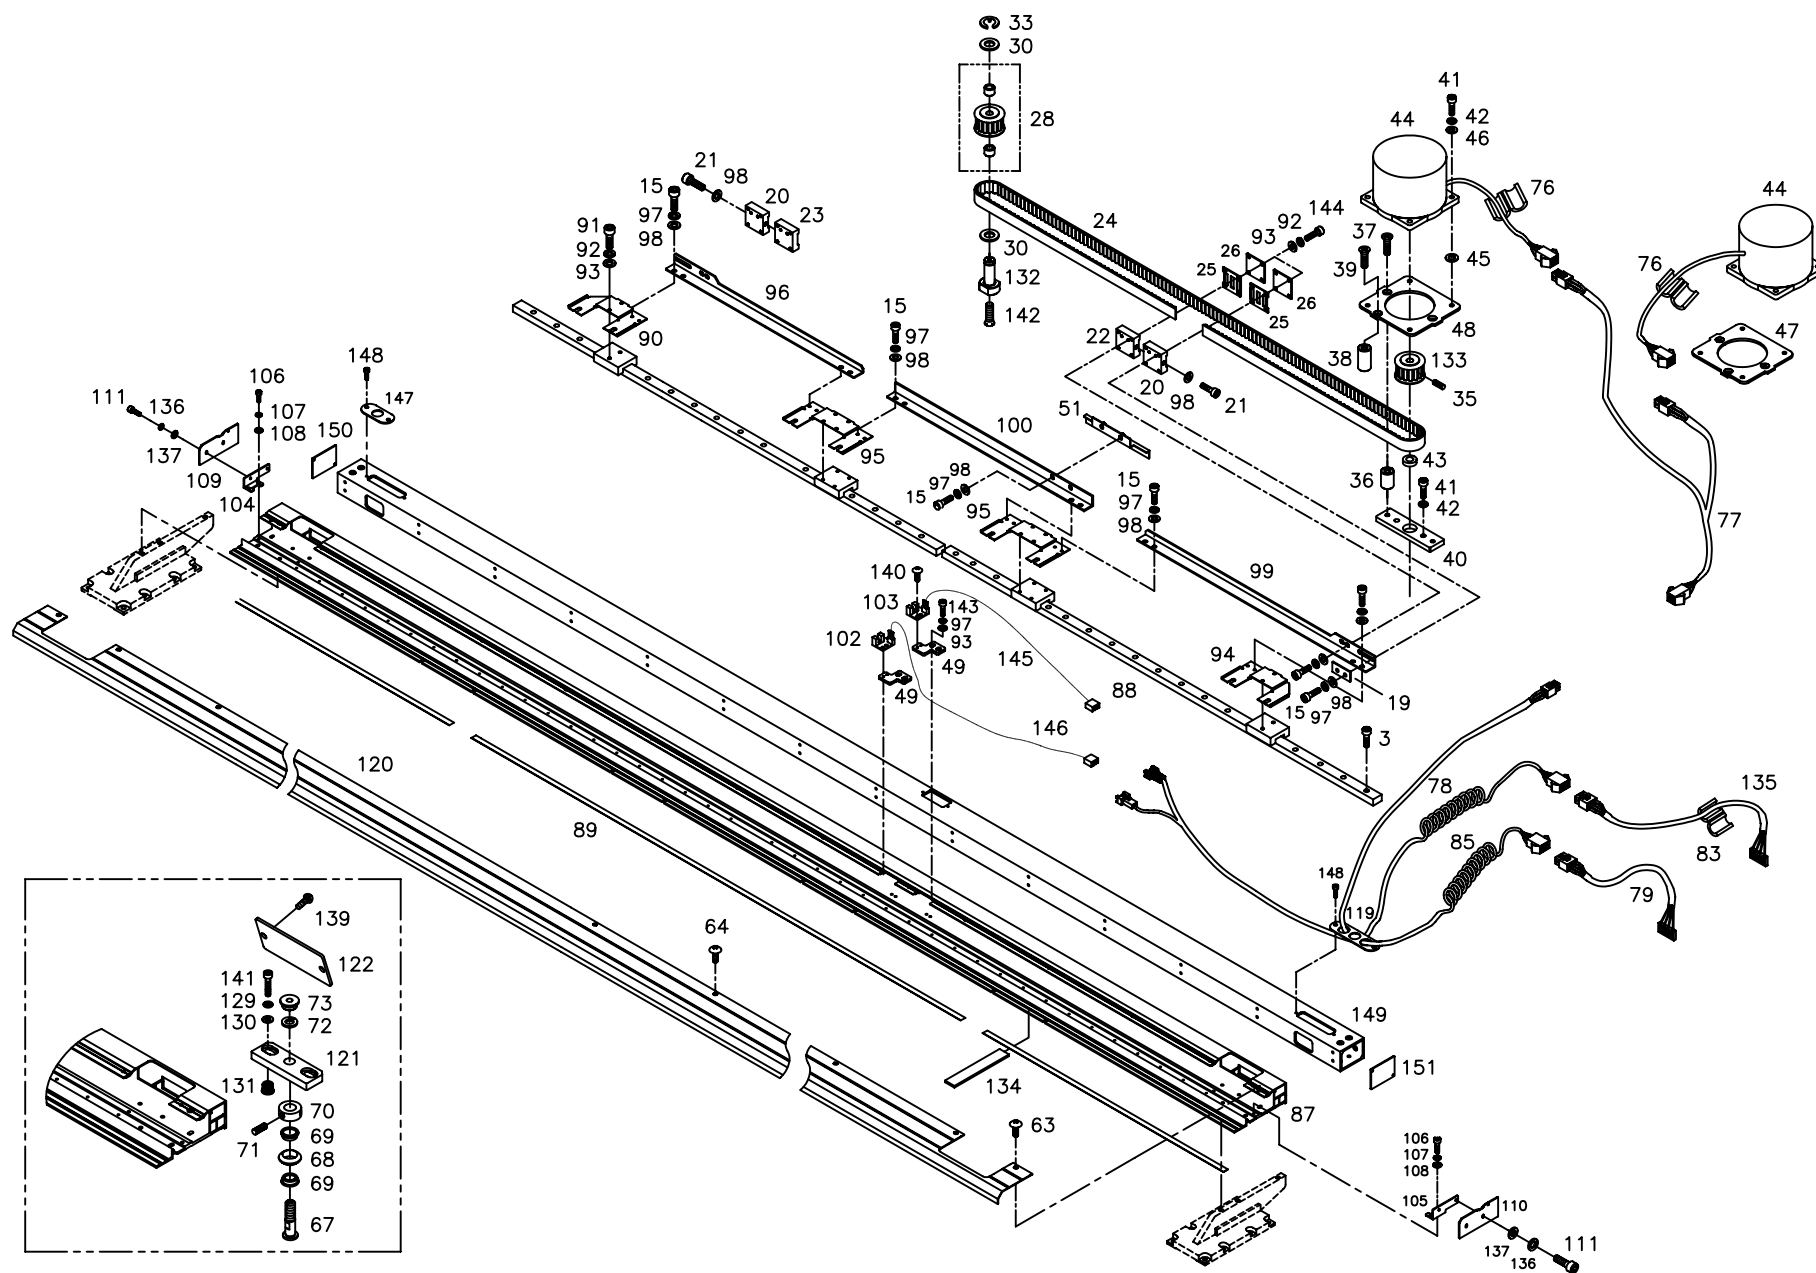

Ref.No	Part No.	PartNames	Q'ty
M-003	22006SC-7113	Hex. Socket Bolt (M3*L8)	62
M-015	02023SC-7113	Hex. Socket Bolt (M4*L8)	32
M-019	14020PR-UK01	Space	2
M-020	14045AD-UK01	Belt Bracket (B)	2
M-021	15034SC-4113	Hex. Socket Boit (M4*L45)	2
M-022	14049AD-UK01	Belt Bracket (C)	1
M-023	14048AD-UK01	Belt Bracket (A)	1
M-024	12048BT-T121	X-Axis Timing Belt	2
M-025	14051PR-UK01	Fixing Plate	4
M-026	14052PR-UK01	Fixing Plate Holder	4
M-028	12017PU-T121	Timing Pulley "A"	2
	12018BR-T121	Neddle Bearing Hk1010(Ina)	4
M-030	12019BR-T121	Fiber Washer R-Tw1020	4
M-033	08044SR-4013	E-Ring (@8)	2
M-035	04014SC-4517	Hex.Socket Set Screw(M5*L5)	4
M-036	14065AD-UK01	Motor Fixing Shaft (A)	4
M-037	15053SC-4119	Plus Screw (M5*L30)	4
M-038	14067AD-UK01	Motor Fixing Shaft (B)	2
M-039	15055SC-4119	Plus Screw (M5*L35)	2
M-040	14069AD-UK01	Motor Block	2
M-041	08076SC-7113	Hex. Socket Bolt (M5*L12)	12
M-042	18048SW-3115	Spring Washer (@5)	12
M-043	14071BR-UK01	Bearing Bc616Zz	2
M-044	15076AF-UK01	X-Motor (103H8221-5044)	2
M-045	15061PR-UK01	Motor Space (@5*@11*2T)	8
M-046	16018SW-1111	Washer (@5)	8
M-047	14074PR-UK01	Motor Base (L)	1
M-048	14075PR-UK01	Motor Base (R)	1
M-049	15067PR-UK01	Sensor Plate	2
M-051	15071PR-UK01	Perception Plate	1
M-063	15042SC-3123	Truss Screw (M4*L6)	12
M-064	18153SC-3123	Plus Screw (M4*L10)	2
M-067	15104CW-UK01	Roller Stud Bolt	2
M-068	15130AF-A001	Roller Guide	2
M-069	15106BR-A001	Flange Bearing (1280Zz)	4
M-070	15107CW-UK01	Roller Collar	2
M-071	03022SC-4517	Hex. Socket Set Screw(M4*L5)	4
M-072	15095SW-3115	Spring Washer (@8)	2
M-073	04032SN-A001	Hex. Nut (M8-No2)	2
M-076	15044EL-T121	Bid (S)	2


Ref. No	Part No.	Part Names	Q'ty
M-077	25014EL-UK01	Calble (4Ht-14)	1
M-078	25019EL-T121	Power Cable 2 (1Ht-19)	1
M-079	25041EL-UK01	X Original In (4Ht-41)	1
M-083	15045EL-UK01	Bid (L)	1
M-085	25038EL-UK06	Cable (25-38)	1
M-087	GP-005113-00	X-LM GUIDE FRAME L2635	1
M-088	03200500UK40	X-Axis L/M Guide 1160L	2
M-089	03200700UK40	Tubular Frame Rail Plate	1
M-090	15007PR-UK02	Connecting Plate(L)	1
M-091	02015SC-7113	Hex.Socket Bolt(M4*L10)	12
M-092	18014SW-3115	Spring Washer (@4-No2)	12
M-093	18015SW-3111	Washer (4@)	12
M-094	15011PR-UK02	Connecting Plate(R)	1
M-095	15015PR-UK02	Connecting Plate	2
M-096	03200800UK40	L/M Block Connecting Plate (L)	1
M-097	18014SW-3115	Spring Washer (@4-No2)	30
M-098	18015SW-3111	Washer (4@)	30
M-099	03200900UK40	L/M Block Connecting Plate (R)	1
M-100	03201000UK40	L/M Block Connecting Plate	1
M-102	03201700UH00	X-Positioning Sonsor	1
M-103	03201600UH00	X-Positioning Sensor	1
M-104	GP-005104-00	X-FRAME SIDE COVER HOLDER (L)	1
M-105	GP-005105-00	X-FRAME SIDE COVER HOLDER (R)	1
M-106	02023SC-7113	Hex. Socket Bolt (M4*L8)	8
M-107	18014SW-3115	Spring Washer (@4-No2)	8
M-108	05009SW-1111	Washer (@4-L)	8
M-109	GP-005106-00	X-AXIS FRAME SIDE COVER (L)	1
M-110	GP-005107-00	X-AXIS FRAME SIDE COVER (R)	1
M-111	15042SC-3123	Truss Screw (M4*L6)	4
M-119	15087PR-UK02	Cable Plate For Bushing	1
M-120	03201300UK40	X-Cover (L=2635)	1
M-121	03101700UH00	Roller Fixed Plate	2
M-122	03000100UH00	Roller Plate Cover	2
M-129	18014SW-3115	Spring Washer (@4-No2)	4
M-130	18015SW-3111	Washer (4@)	4
M-131	03201900UH00	X-Frame Screw Bush	4
M-132	03106000U000	Timing Pulley Driving Pin	2
M-133	14063PU-UK01	Timing Pulley "B"	2
M-134	03201800UH00	Felt (190*30*1.5T)	4
M-135	02101300U040	Cable (Sh-13-1)	1

 X-Axis Drive Set

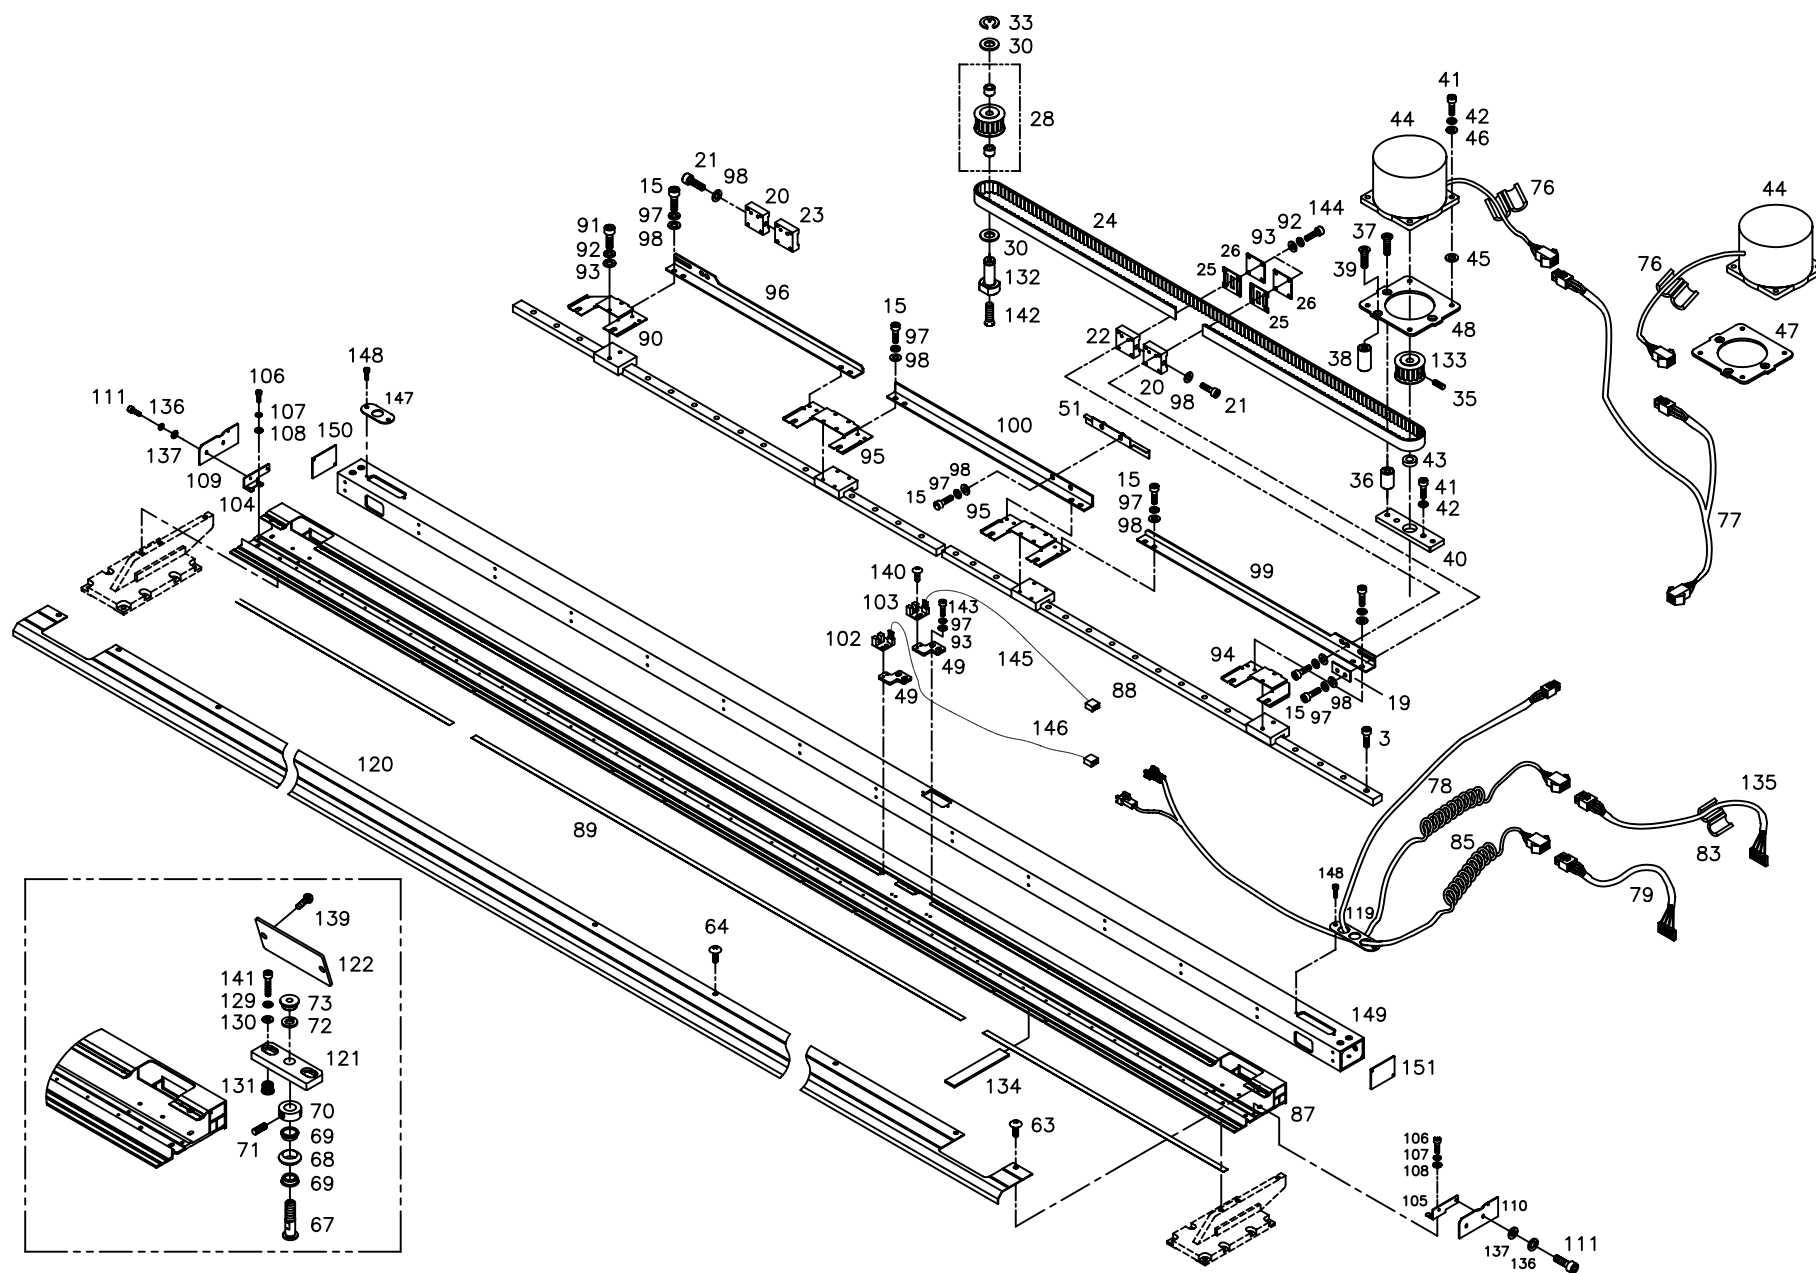

N

 Y-Axis Drive Set

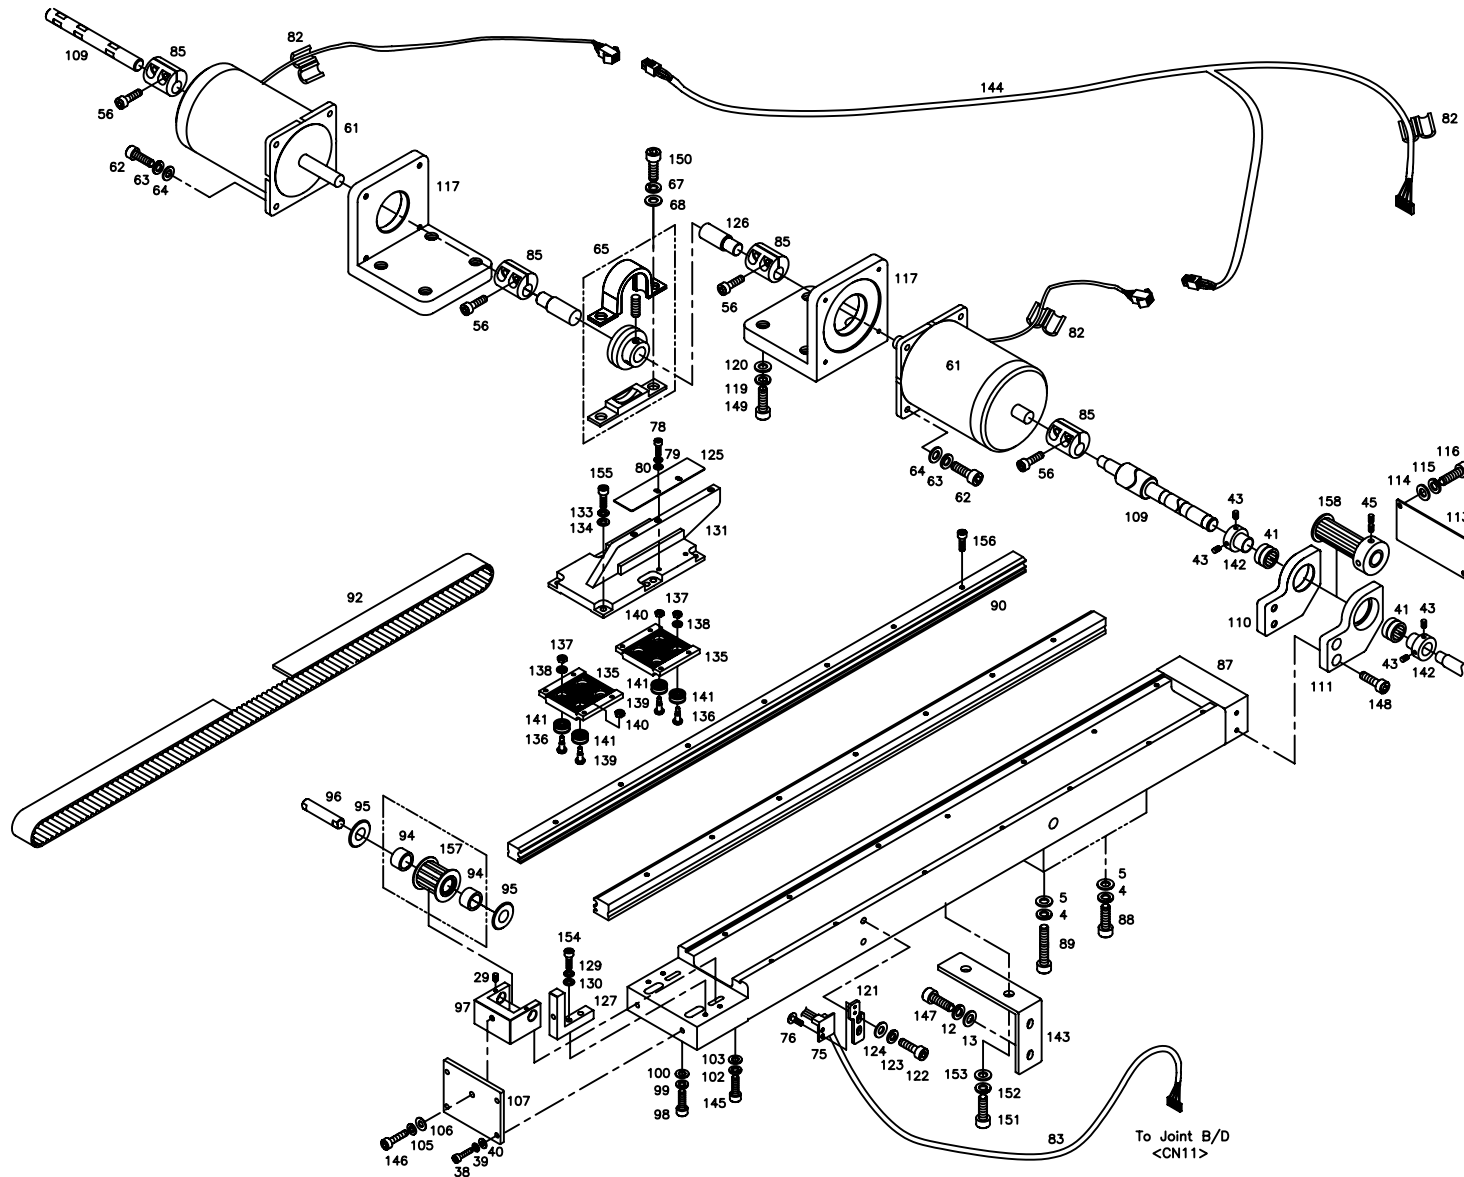


Ref.No	Part No.	PartNames	Q'ty
N-004	15095SW-3115	Spring Washer (@8)	8
N-005	04029SW-A001	Stud Bolt Washer(S) (@8)	8
N-012	18048SW-3115	Spring Washer (@5)	4
N-013	16018SW-1111	Washer (@5)	4
N-029	08007SC-4517	Hex. Socket Set Screw (M3*L5)	4
N-038	07016SC-7113	Hex.Socket Bolt (M4*L12)	6
N-039	02028SW-9115	Spring Washer (@4)	6
N-040	05009SW-1111	Washer (@4-L)	6
N-041	13026BR-T121	Needle Bearing (6002Z)	4
N-043	04012AF-A001	Hook Shaft Bush Screw	8
N-045	04014SC-4517	Hex.Socket Set Screw(M5*L5)	8
N-056	03016SC-4113	Hex. Socket Bolt (M5*L15)	8
N-061	16055AF-UK01	Y Motor (103H8222-5013)	2
N-062	08062SC-7113	Hex. Socket Bolt (M5*L20)	8
N-063	18048SW-3115	Spring Washer (@5)	8
N-064	16018SW-1111	Washer (@5)	8
N-065	16078BR-UK01	Pillow Block Set	1
N-067	16014SW-4115	Spring Washer (@6)	2
N-068	08057SW-1111	Washer (@6)	2
N-075	09018EL-UK01	Y-Positioning Sensor	1
N-076	08006SC-8118	Plus Screw (M3*L5)	2
N-078	22006SC-7113	Hex. Socket Bolt (M3*L8)	2
N-079	11019SW-9115	Spring Washer (3@)	2
N-080	08011SW-1111	Spring Washer (@3-S)	2
N-082	15045EL-UK01	Bid (L)	3
N-083	25045EL-UK01	Joint - Io B/D 40P	1
N-085	03005100U000	Coupling "A"	4
N-087	03100200UH01	Y-Lm Guide Frame (L650)	2
N-088	14027SC-4113	Hex.Socket Bolt (M8*L30)	4
N-089	03003SC-4113	Hex. Socket Bolt "B"(M8*L35)	4
N-090	03100100UH01	Cam Roller Guide Rail (L590)	4
N-092	03100400UH01	Y-Driving Timing Belt (L1250)	2
N-094	15042BR-A001	Needle Bearing (1210Zz)	4
N-095	15046RB-A001	Driving Pin Washer (Tw1225)	4
N-096	16100CW-UK06	Timing Pulley Shaft (Y)	2
N-097	03100500UH00	Y-Tension Adjusting Bracket	2
N-098	08062SC-7113	Hex. Socket Bolt (M5*L20)	4
N-099	18048SW-3115	Spring Washer (5@)	4
N-100	18049SW-3111	Washer (@5)	4
N-102	18014SW-3115	Spring Washer (@4-No2)	2

Ref. No	Part No.	Part Names	Q'ty
N-103	18015SW-3111	Washer (4@)	2
N-105	18048SW-3115	Spring Washer (5@)	2
N-106	18049SW-3111	Washer (@5)	2
N-107	03100600UH00	Tension Adjusting Plate	2
N-109	03100800UH60	Y-Driving Shaft "A"	2
N-110	03100900UH00	Y-Bearing Bracket (L)	2
N-111	03101000UH00	Y-Bearing Bracket (R)	2
N-113	03101100UH00	Y-Bearing Bracket Cover	2
N-114	06011SW-2111	WASHER (@3)	4
N-115	11019SW-9115	Spring Washer (3@)	4
N-116	07035SC-7113	Bracket Screw (M3*L6)	4
N-117	16056CA-UK06	Y-Driving Motor Bracket	2
N-119	15095SW-3115	Spring Washer (@8)	8
N-120	04029SW-A001	Stud Bolt Washer(S) (@8)	8
N-121	03101300UH00	Sensor Bracket	1
N-122	02015SC-7113	Hex.Socket Bolt(M4*L10)	2
N-123	18014SW-3115	Spring Washer (@4-No2)	2
N-124	18015SW-3111	Washer (4@)	2
N-125	03101400UH00	Plate For Y-Sensing	1
N-126	03101200UK40	Y-Driving Shaft "B" (L=2095)	1
N-127	03100700UH00	Fixed Block	4
N-129	18014SW-3115	Spring Washer (@4-No2)	4
N-130	18015SW-3111	Washer (4@)	4
N-131	GP-005614-00	BRACKER FOR X-Y CONNECTING	2
N-133	18014SW-3115	Spring Washer (@4-No2)	16
N-134	18015SW-3111	Washer (4@)	16
N-135	16104CL-H001	Belt Catcher Plate (Y)	4
N-136	15002CW-B001	Cam Roller Stud (A)	8
N-137	15029SN-3211	Hex. Nut (M4-No2)	8
N-138	02028SW-9115	Spring Washer (@4)	8
N-139	15003CW-B001	Cam Roller Stud (B)	8
N-140	12010SN-1211	Hex.Nut (M5)	8
N-141	15001BR-B001	Cam Roller Baearing	16
N-142	03002700T000	Bearing Collar	4
N-143	16074PR-UK06	Y-Lm Support Fixing Plate	2
N-144	02101700U040	Cable (Sh-17-2)	1
N-145	11029SC-4113	HEX. SOCKET BOLT (M4*L20)	2
N-146	16028SC-7113	HEX. SOCKET BOLT (M5*L25)	2
N-147	08076SC-7113	HEX. SOCKET BOLT (M5*L12)	4
N-148	16059SC-7113	HEX.SOCKET BOLT (M6*L12)	8


N

 Y-Axis Drive Set

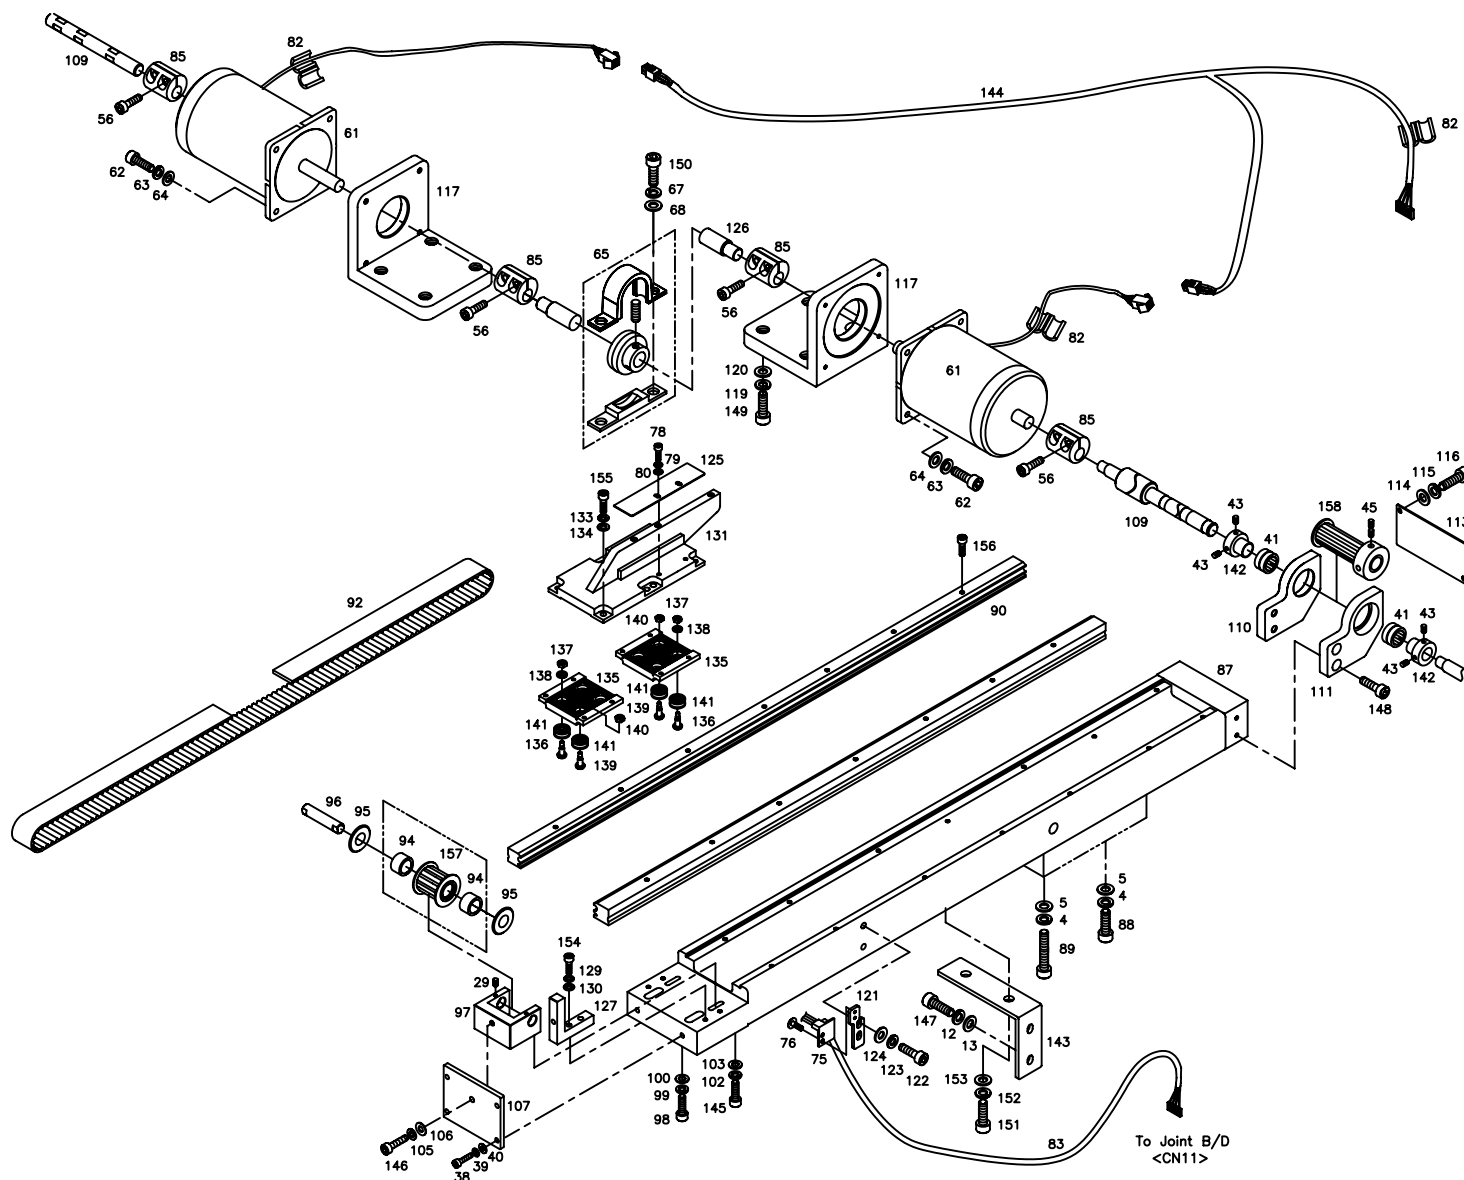


O

 Tubular Frame

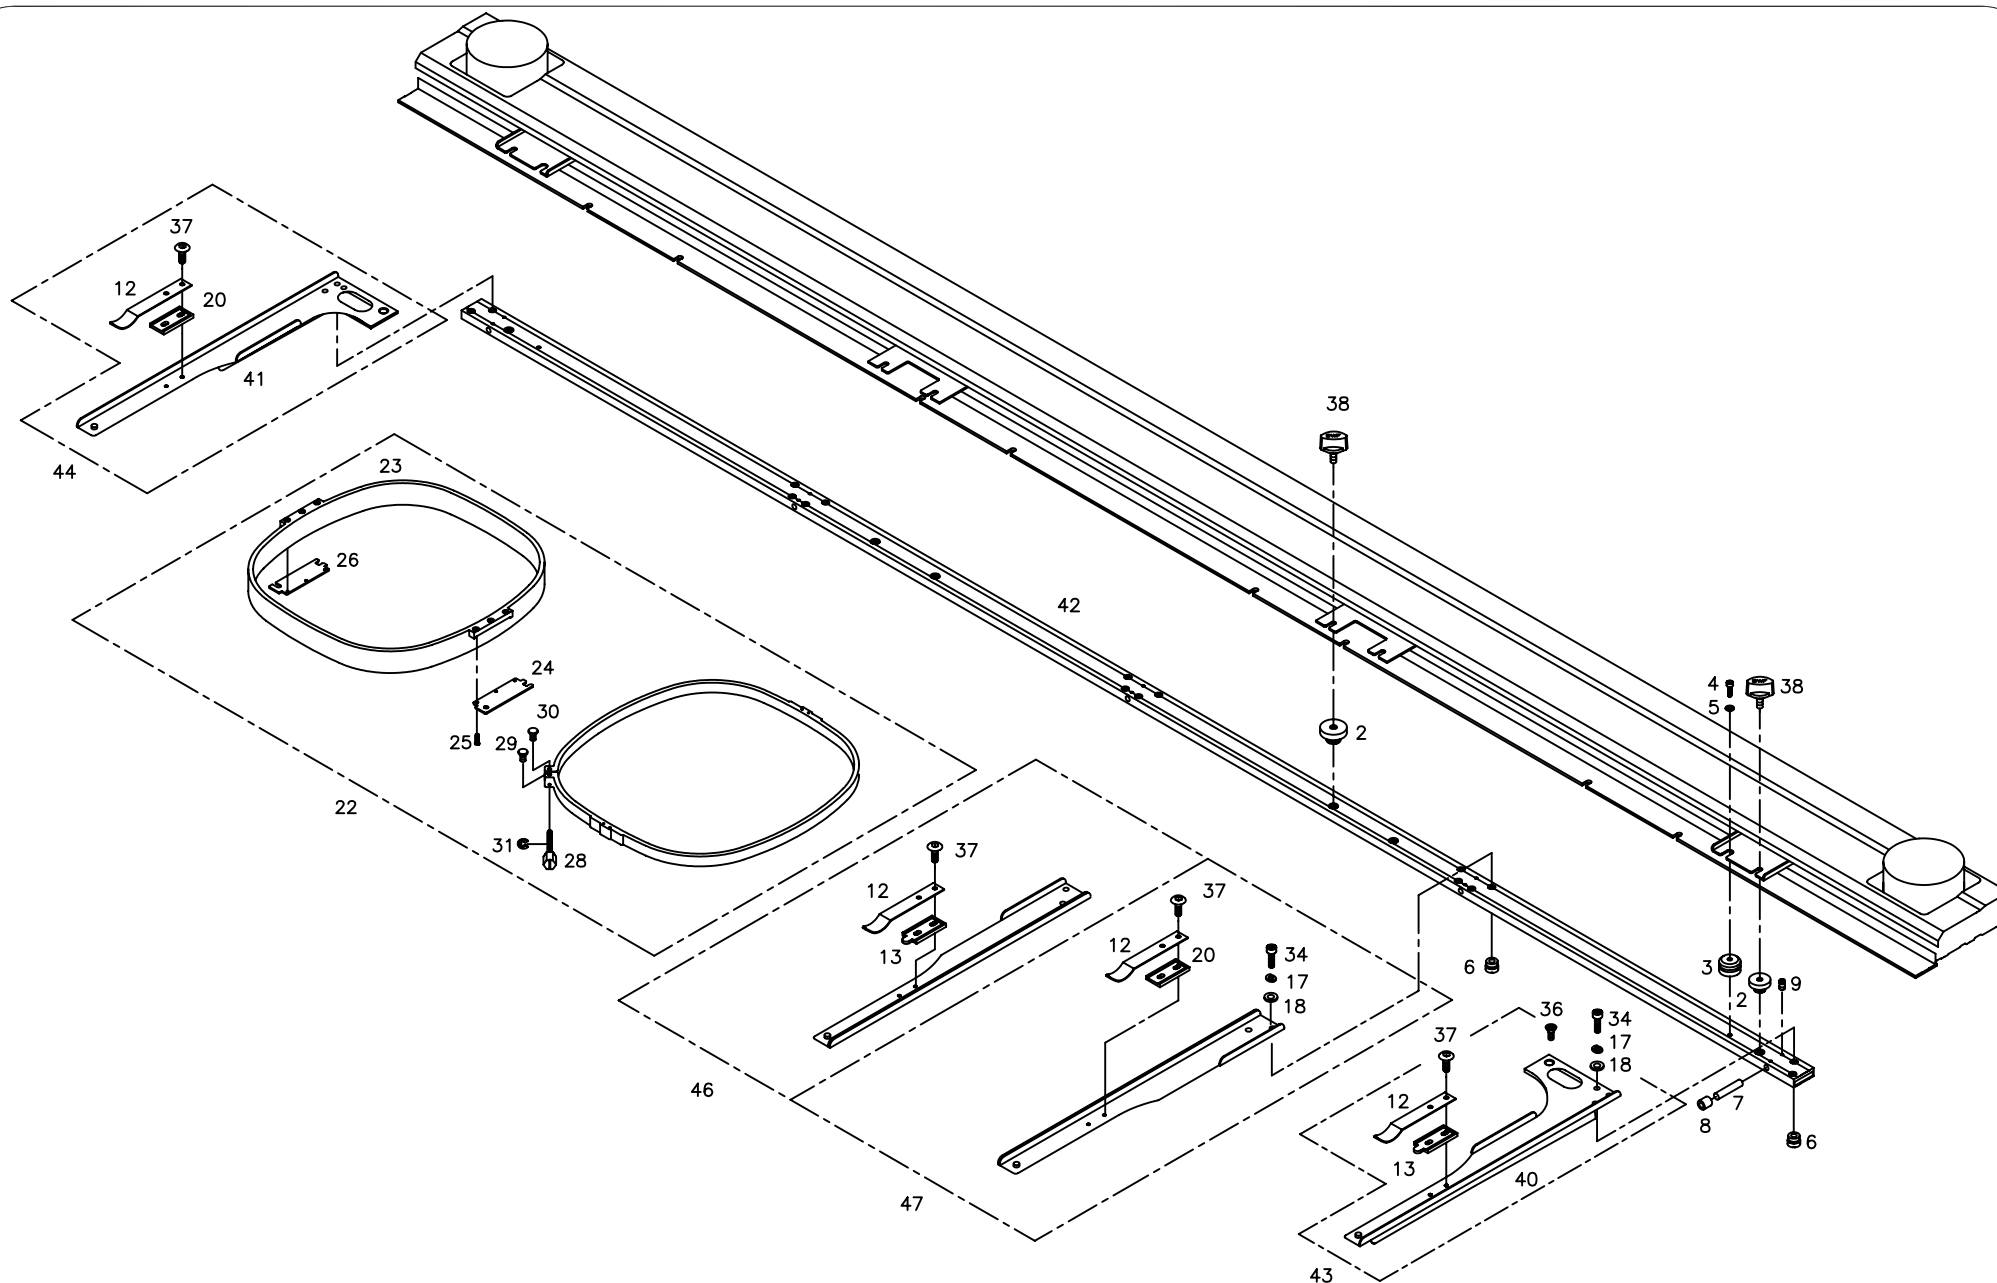

P

 
Border Frame

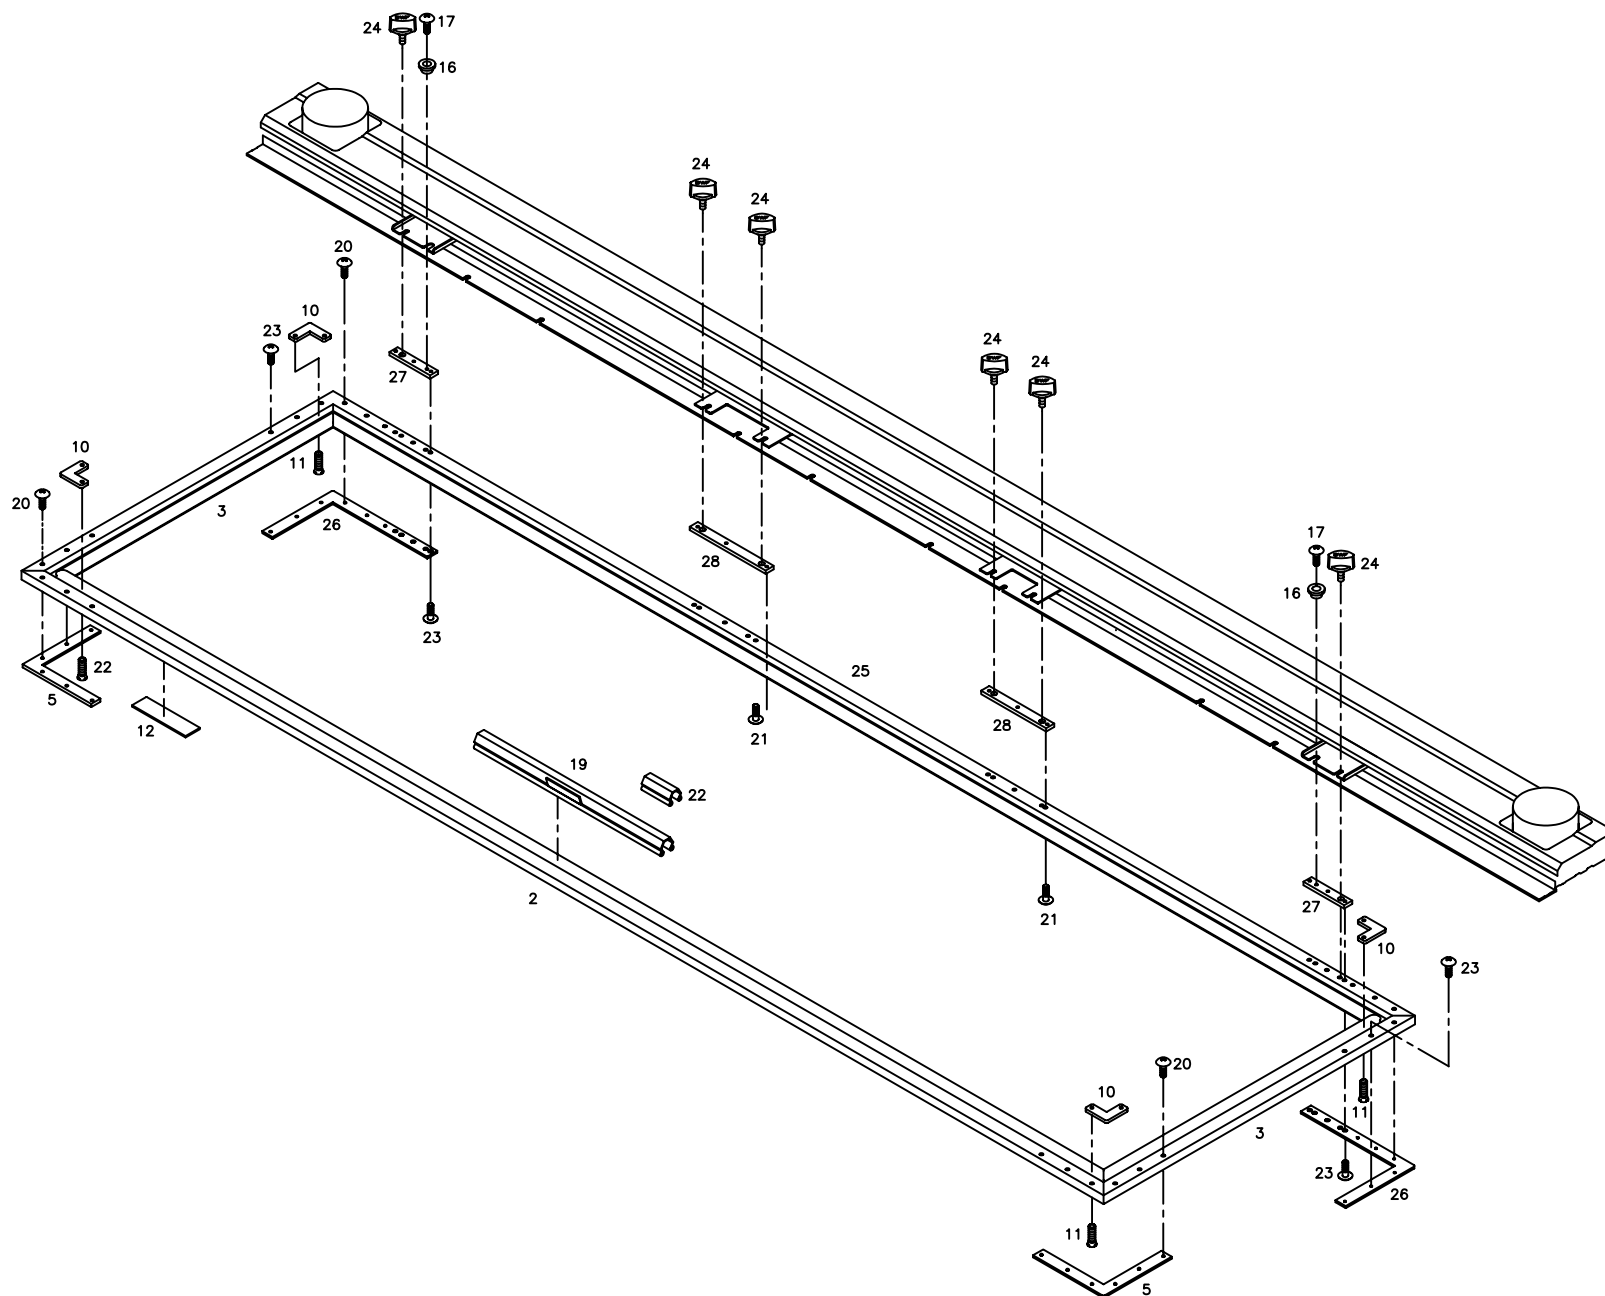

Q


S/B Switch Unit

 SWF®

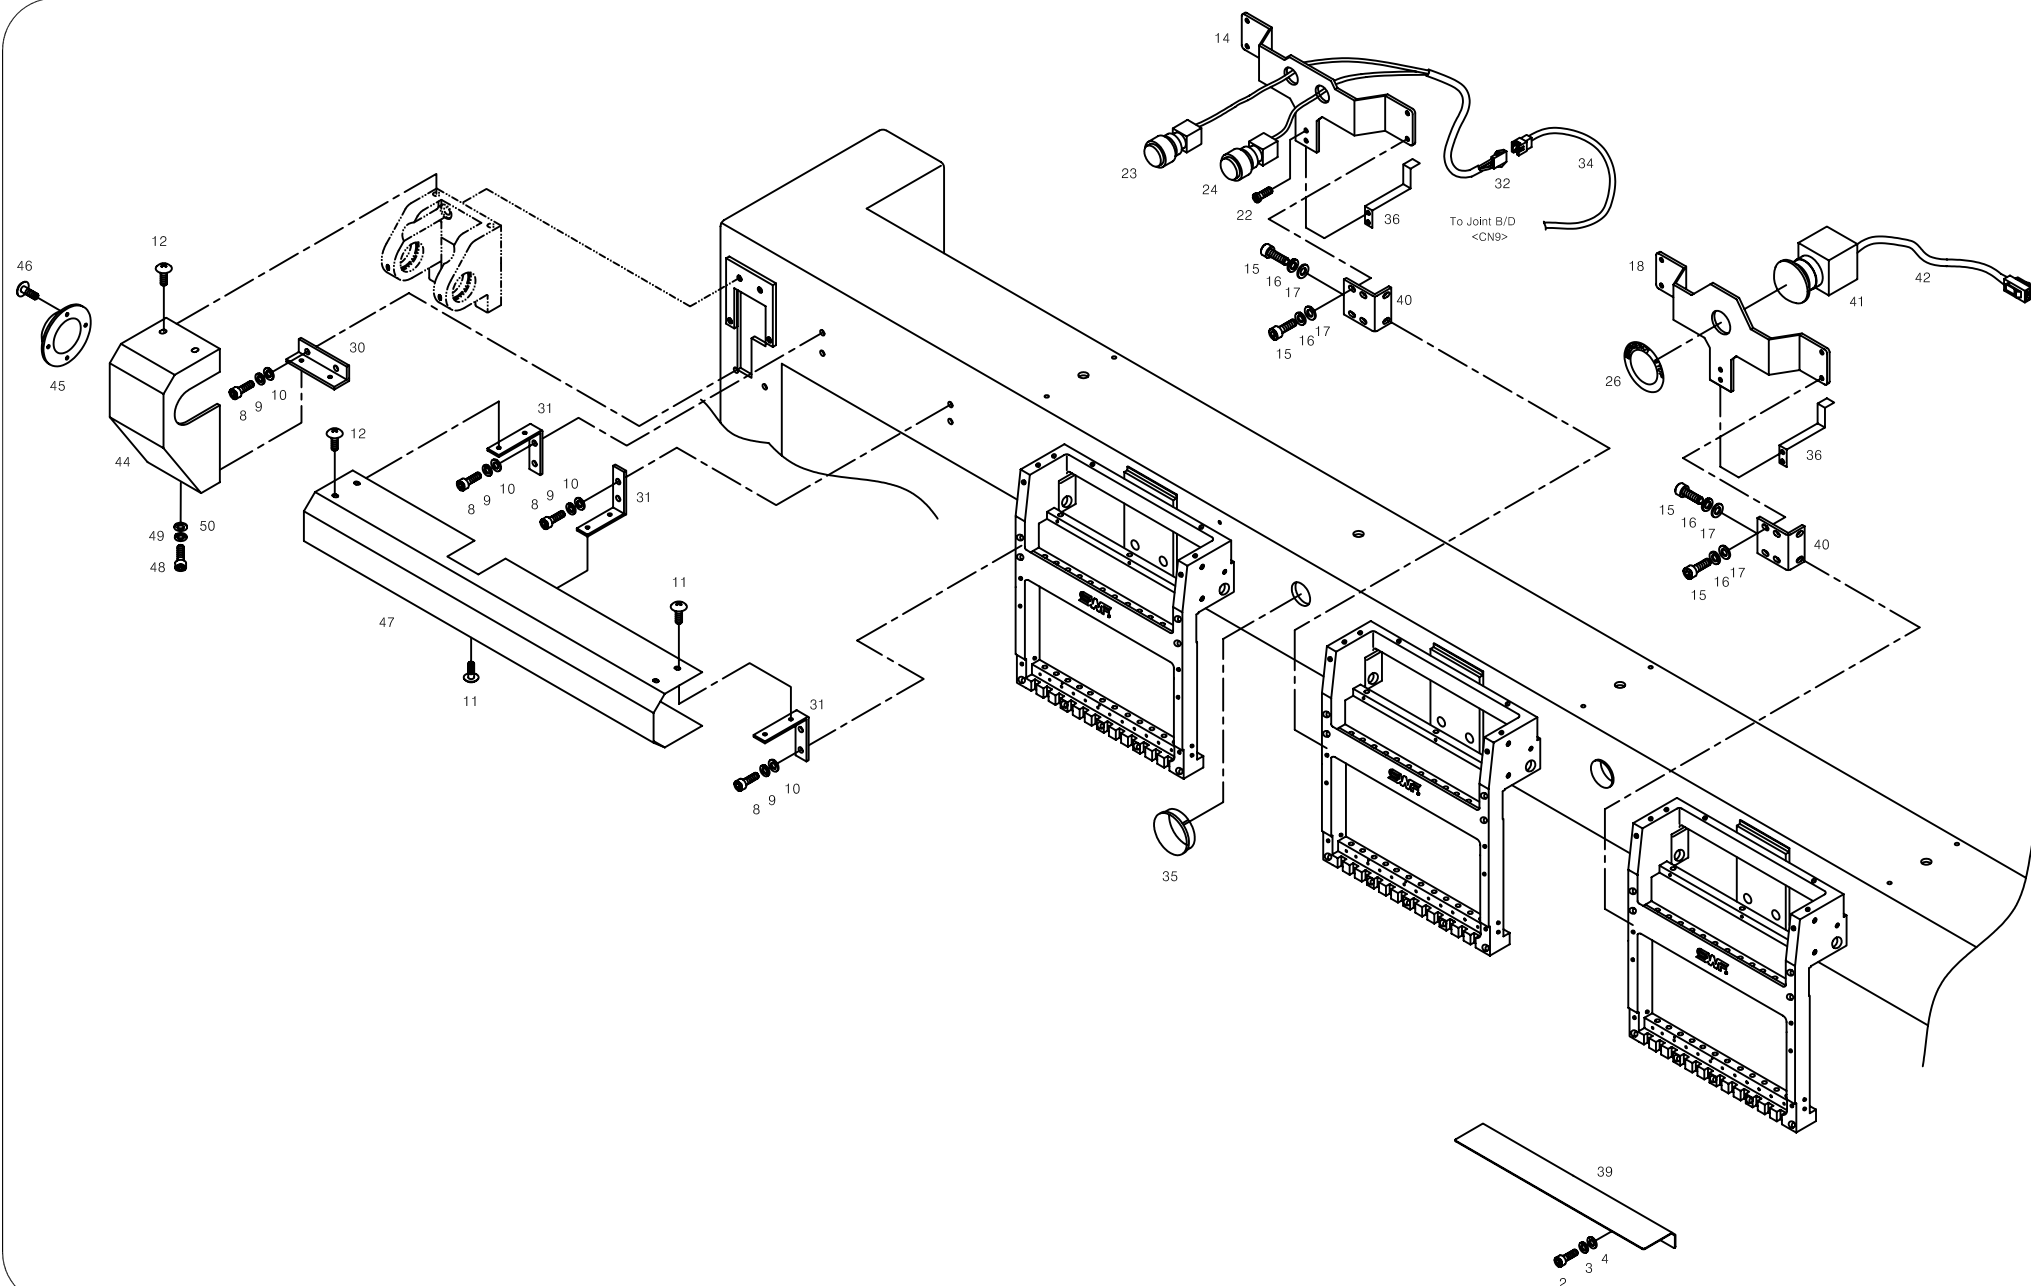


Sub Control Unit & Lamp

 [illegible]

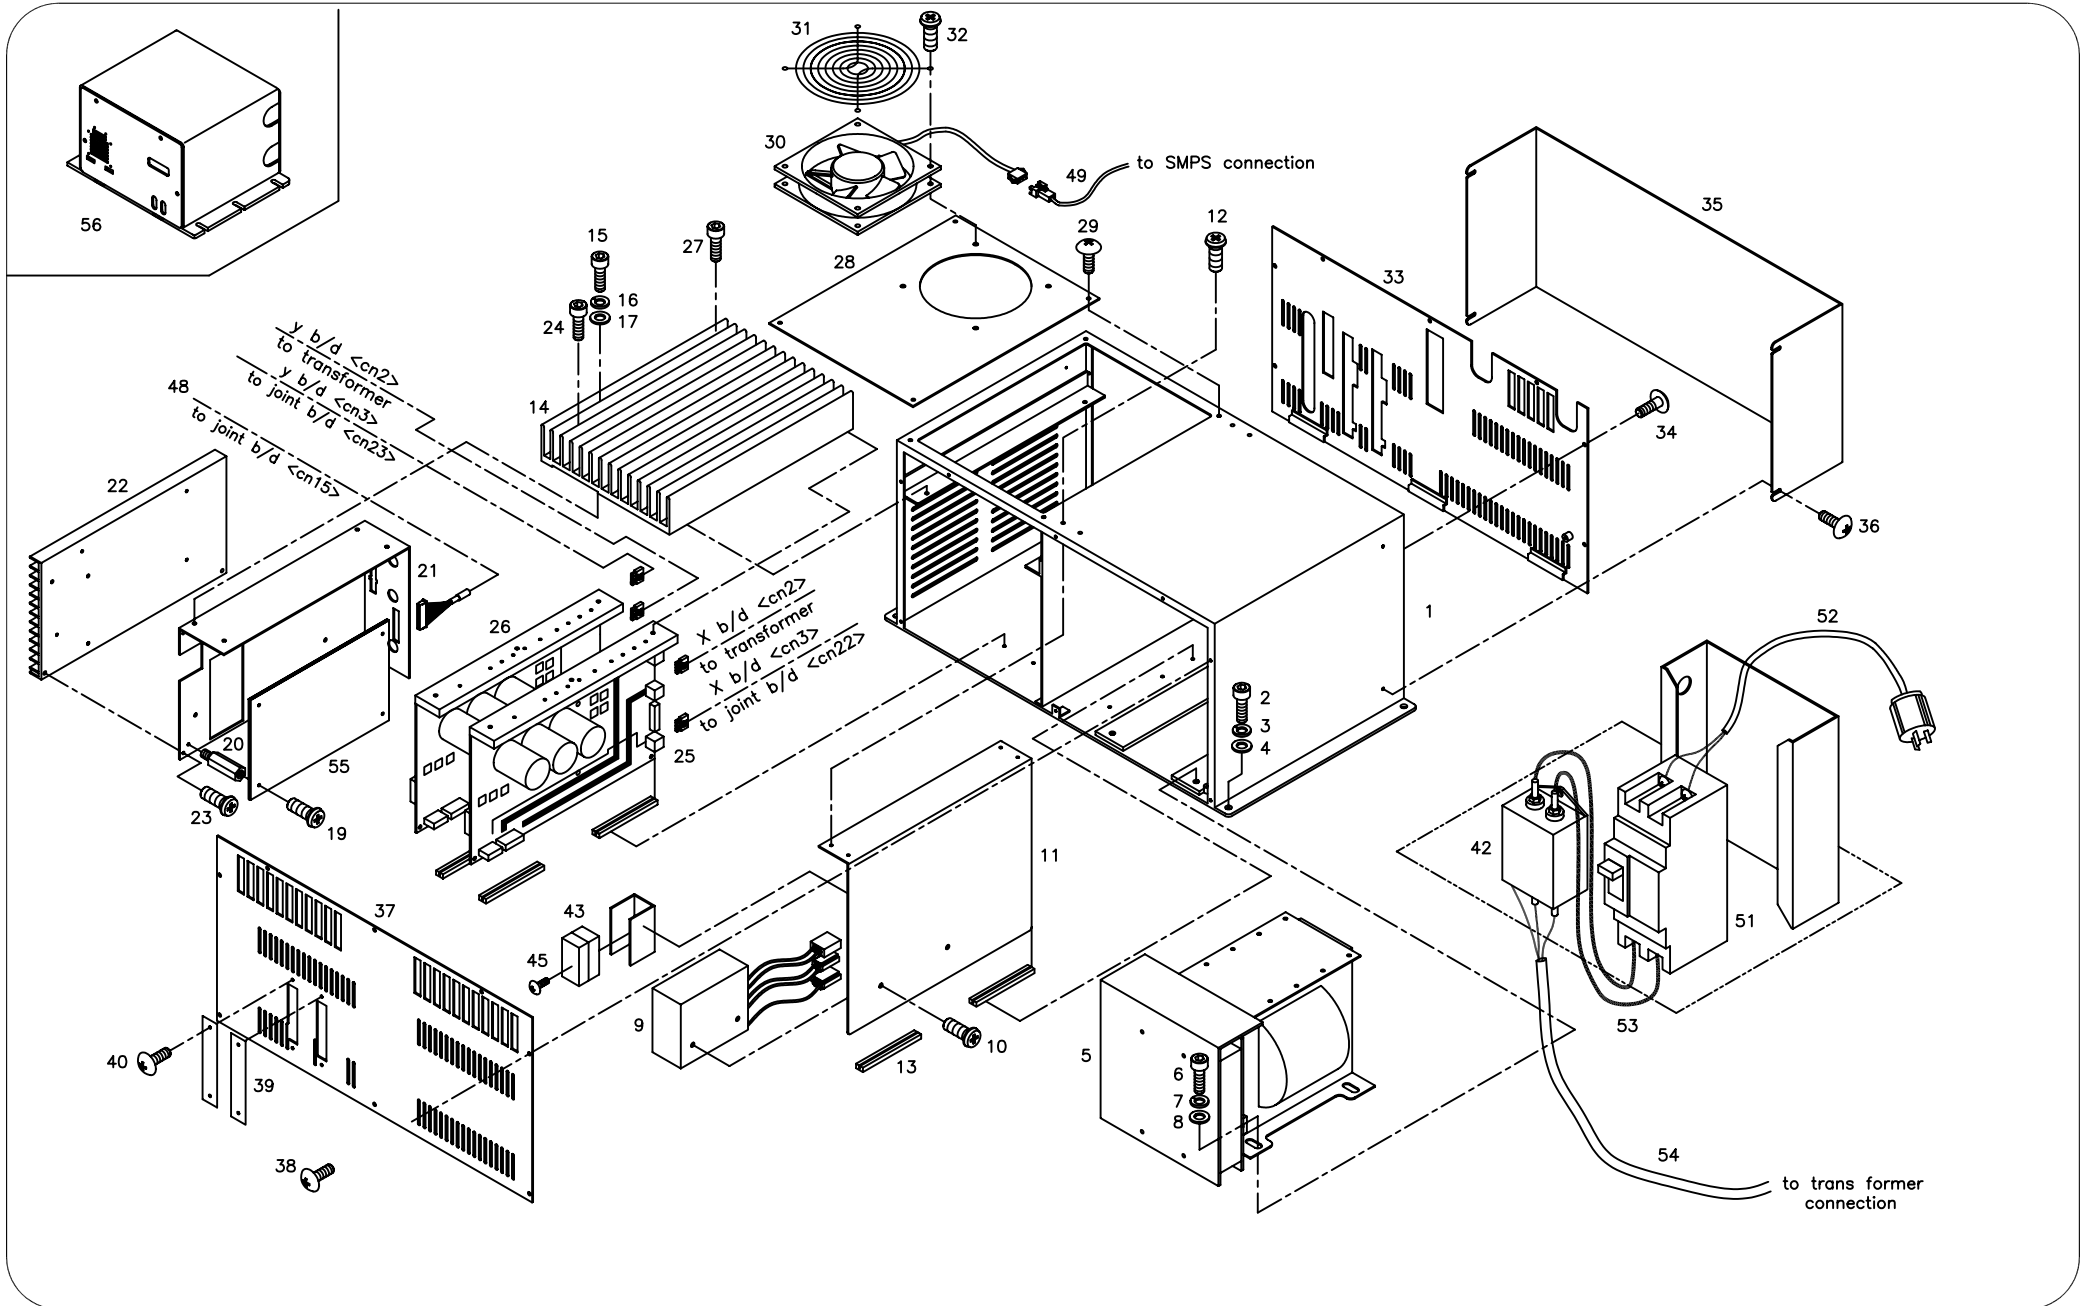

T

 Operation Unit

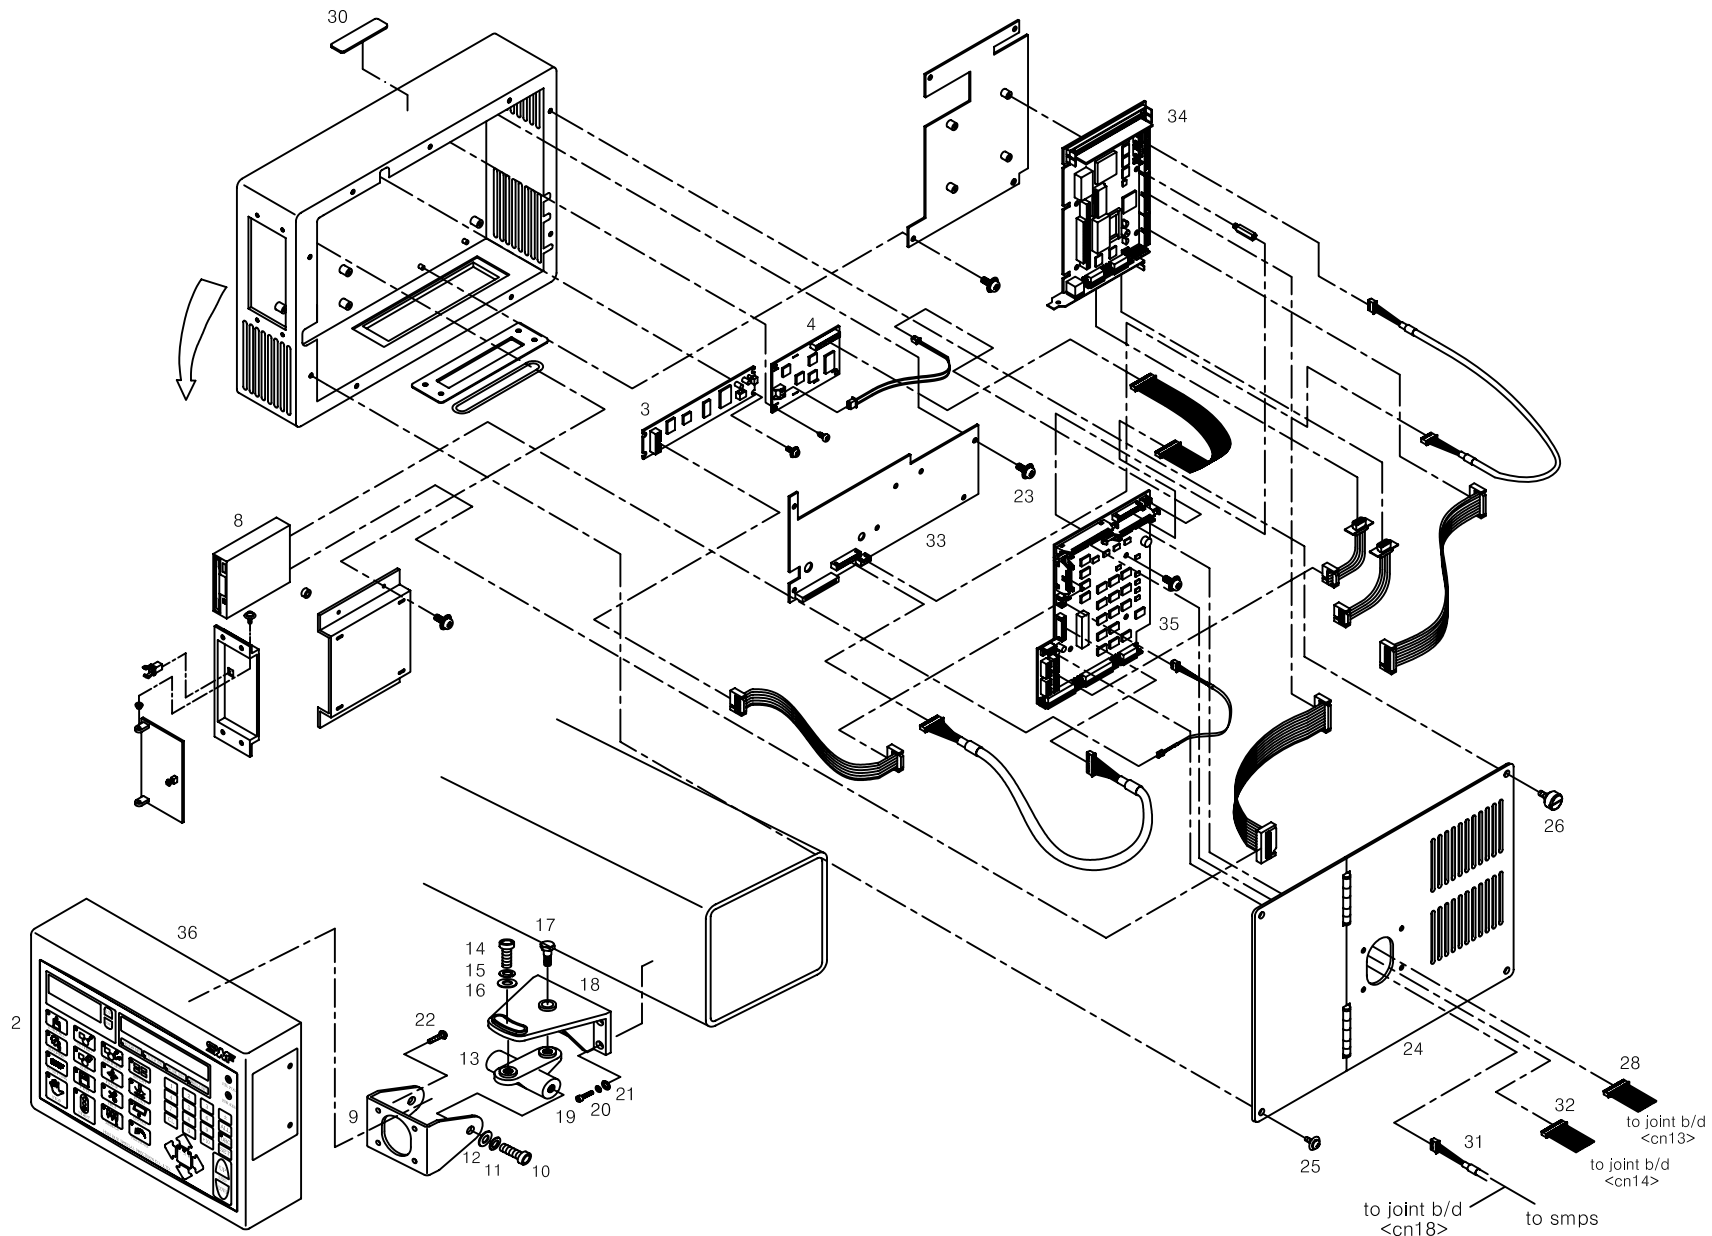

U

Bobbin Winder

