

FORTEVER®

零件书

SPARE PARTS BOOK

SINGLE HEAD TUBULAR EMBROIDERY MACHINE

M式马头机

Y500D

MODEL: FT-1201 FT-1201D

FT-1501 FT-1501D

SINGLE HEAD TUBULAR EMBROIDERY MACHINE

M式马头机


Y500D

C O N T E N T S

目 录

1	Rotary Hook Base 梭床	7-3	Head Cover Thread Lock 面盖 下过线
2	Trimming Parts 底线剪线部分	8	Thread Stand 线架
3-1	Arm 机头臂	9	
3-2	Arm (Main Motor) 机头臂(主电机)	10	Color Change Parts 换色
4	X Axis Guide Rail X向导轨	11	Table 台板
5-1	Y Axis Guide Rail Y向导轨	12	Tension 夹线器
5-2	Y Drive System Y导轨驱动系统	13	Stand 底架
6-1	Arm Motor 机头电机		
6-2	Needle Bar Driving Cam Set 针杆驱动块 挑线杆AB		
7-1	Needle Bar Case 1 针架1 (普通压脚)		
7-2	Needle Bar Case 2 针架2 (电机压脚)		


1 Rotary Hook Base 梭床

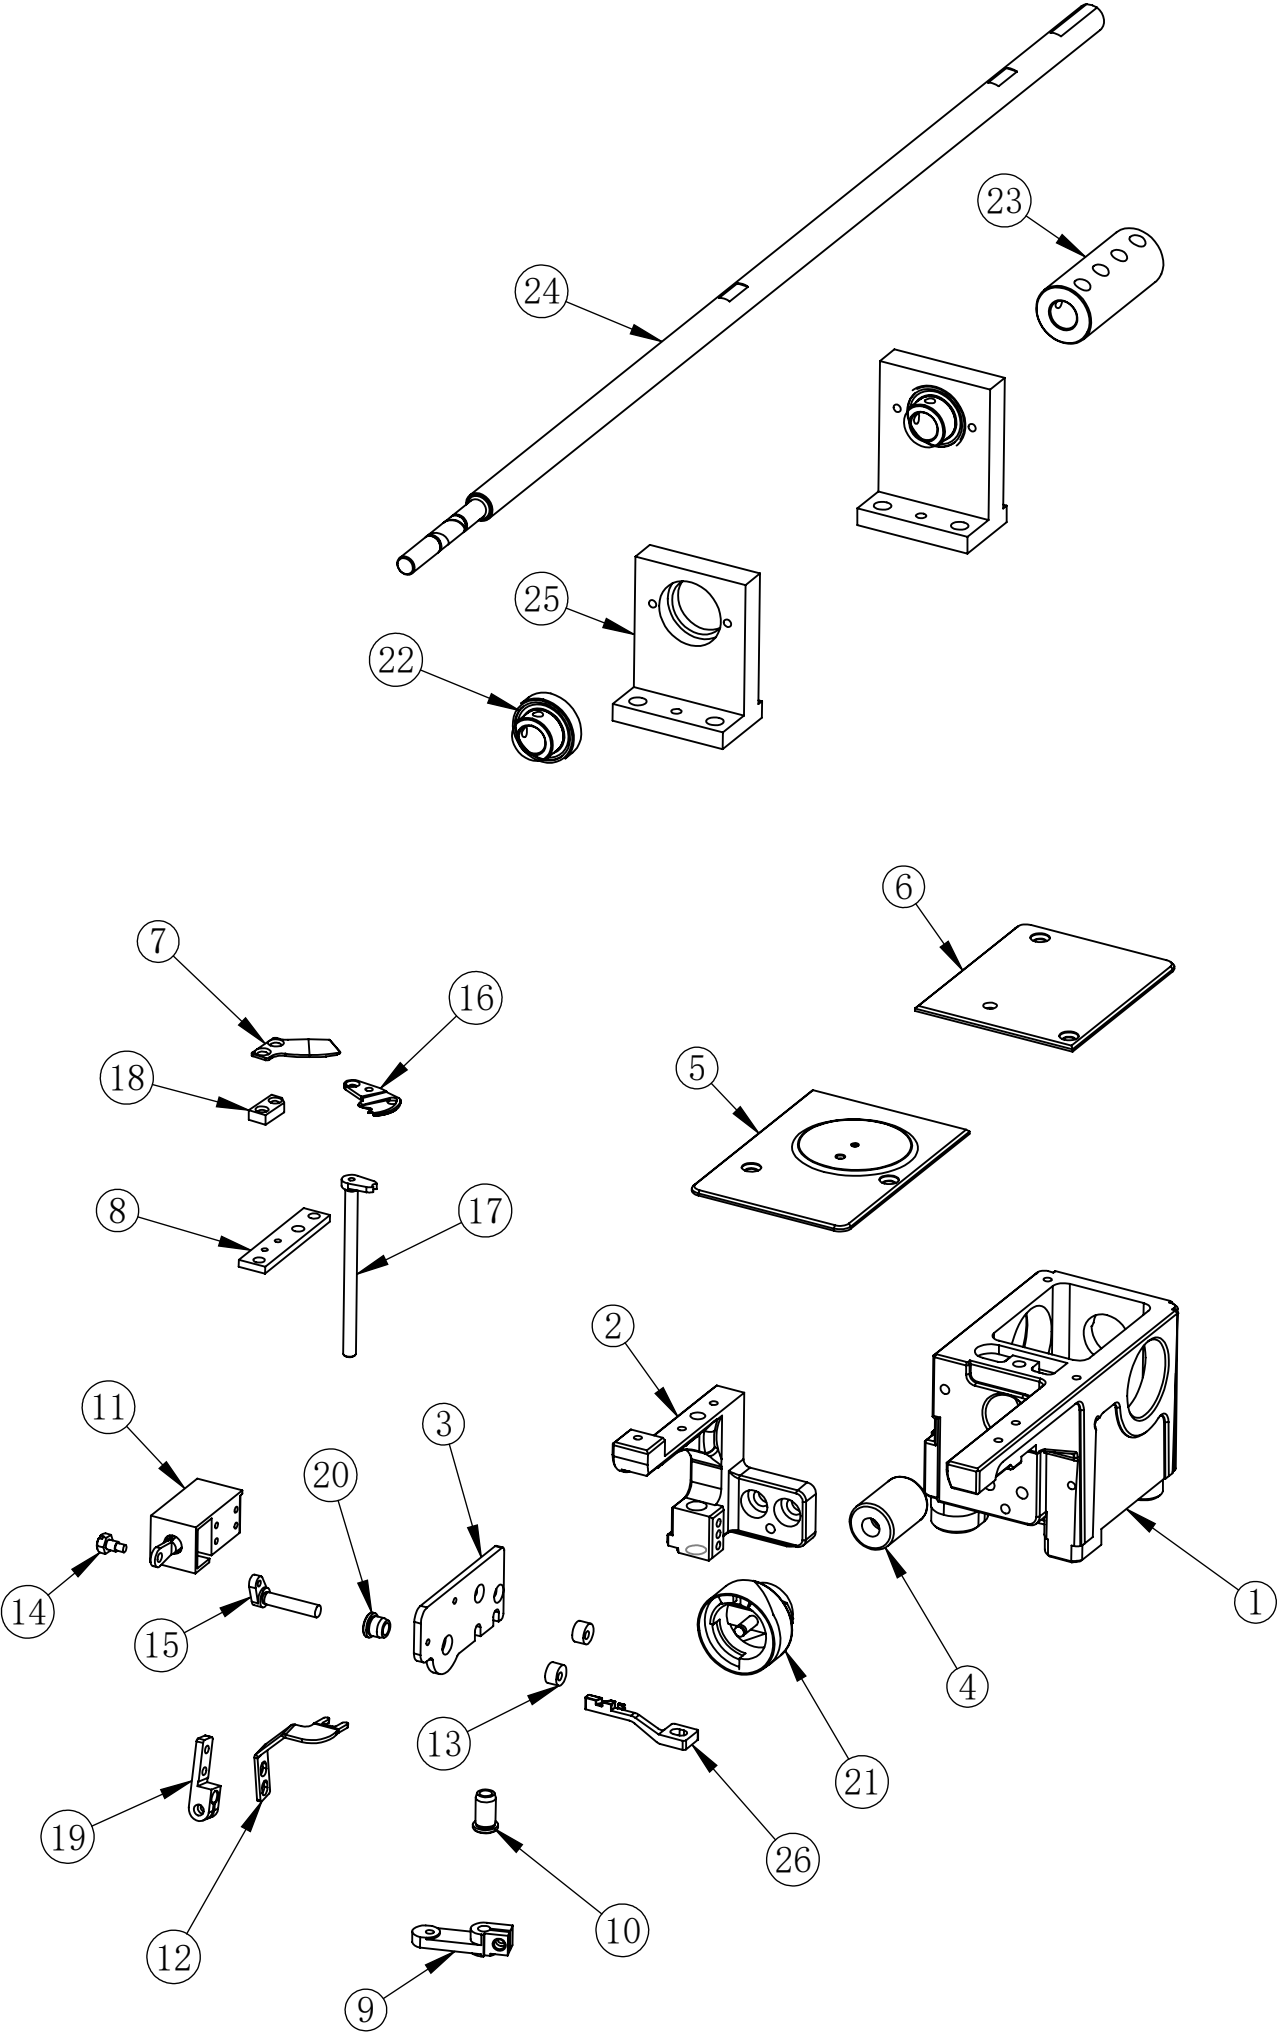

1 Rotary Hook Base 梭床

No.	Chinese Description	Description	Part No.	Qty
1	小头距梭箱W71	Sewing Bed Case	0102030061	1
2	分体剪线座	Trimming Base	0102030062	1
3	扣线分体板	Picker Fork Base	0102030063	1
4	旋梭粉末套	Collar	0105060011	1
5	针板W71（前）	Needle Plate	0102030064	1
6	针板W71（后）	Needle Plate	0102030065	1
7	定刀	Fixed Knife	0102030066	1
8	定刀板	Knife Base	0102030067	1
9	切刀连杆驱动	Knife Driving Arm	0102030028	1
10	轴套	Collar	0102030023	1
11	扣线电磁铁	Picker Solenoid	0206120002	1
12	分线叉	Picker Fofk	0102030035	1
13	橡胶环	Enccentric Stopper	0102030036	2
14	扣线传动轴螺丝	Slider Drive Shaft Screw	0102030032	1
15	扣线传动轴	Slider Drive Shaft	0102030033	1
16	动刀	Movable Knife	0102030068	1
17	动刀驱动柄	Connecting Rod	0102030069	1
18	定刀垫块	Washer	0102030070	1
19	扣线叉安装块	Picker Fork Base	0102030034	1
20	轴套 - 短	Collar	0102030050	1
21	旋梭	Hook	0211030001	1
22	联体轴承6902 d12D28	Bearing	0202150019	2
23	联轴器 d12	Cushing d12	0105160050	1
24	旋梭轴Y600	Shaft	0105030025	1
24	旋梭轴Y500D	Shaft	0105030042	
25	轴承座 - Y减速轴	Bearing Base	0105160064	2
26	旋梭定位勾	Rotary Position Hook	0102030060	1


2 Trimming Parts 底线剪线部分

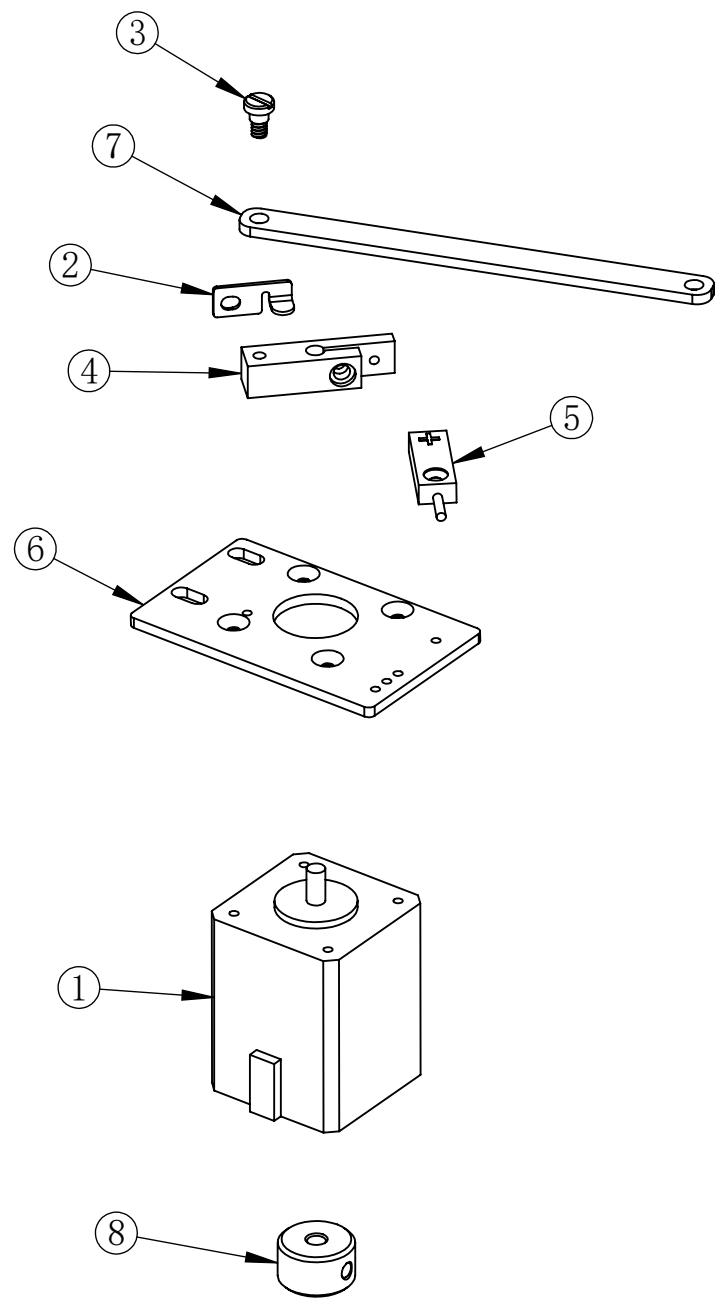

2 Trimming Parts 底线剪线部分

No.	Chinese Description	Description	Part No.	Qty
1	42电机 42H53	Cutting Motor	0206014002	1
2	剪线感应片	Sensor Plate	0105070005	1
3	剪线螺丝	Screw Pin	0105070008	1
4	剪线驱动块	Trimming Drive Rod	0105070004	1
5	接近感应器	Limit Sensor	0105070001	1
6	马头42剪线电机安装板	Motor Base	0108070004	1
7	剪线驱动连杆-Y600用	Connecting Plate	0105070020	1
8	电机手动旋钮	Handle	0105040001	1


3 Arm 机头臂

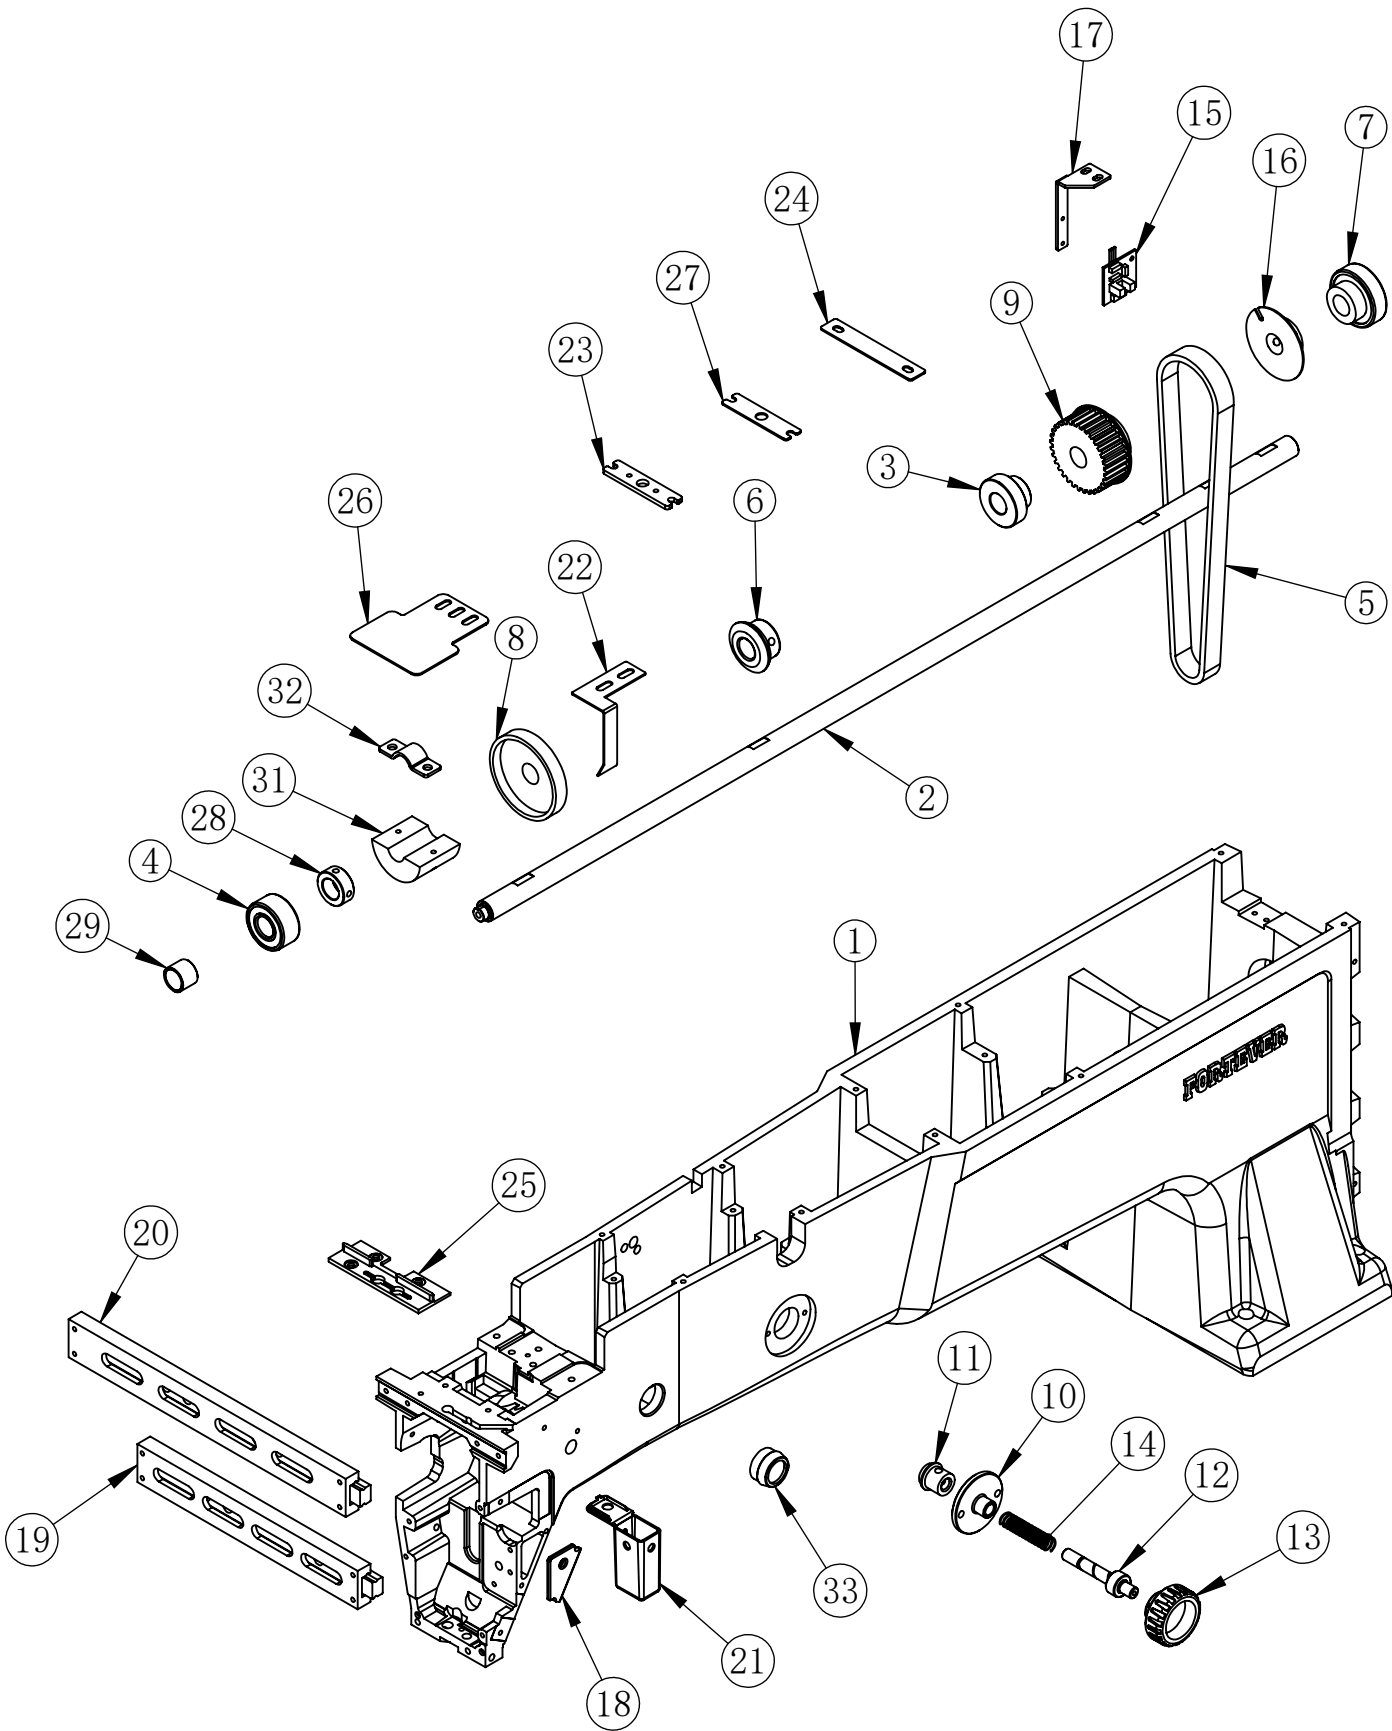

3 Arm 机头臂

No.	Chinese Description	Description	Part No.	Qty
1	M式机头臂 - Y500	Arm	0105010076	1
2	马头机Y500上轴 - 压簧挑线	Upper Shaft	0110010002	1
3	带轴承套轴承6003	Bearing 6003	0202010006	1
4	双列轴承3202 D35d15H16	Bearing	0202010057	1
5	同步带 S5M L555 W15	Timing Belt	0204030061	1
6	伞齿轮 大	Lower shaft Gear -A	0102030004	1
7	联体轴承S6004RS d15D42	Bearing	0202010027	1
8	马头机刻度盘	Shaft Dial	0105010009	1
9	同步轮 S5M 32T W20	Timing Pulley	0110010003	1
10	手柄轮座	Handle Bushing	0105010015	1
11	伞齿轮 小	Lower shaft Gear -B	0102030005	1
12	旋梭轴	Shaft	0105010013	1
13	塑料手柄	Adjustment Handle	0105010017	1
14	手柄弹簧	Spring	0105010016	1
15	主轴零位感应板	ZERO Board		1
16	主轴零位感应轮-d15	Zero Postion Disk	0110010017	1
17	马头零位光耦支架	Support	0105010055	1
18	凸轮油封堵头	Plug Up	0110010015	1
19	12针嵌装直线导轨	Guide Rail	0105010071	1
20	15针嵌装直线导轨 - 马头用	Guide Rail	0105010072	1
21	机头上油杯 - T	Oil Cup	0110010013	1
22	马头机刻度盘指针H50	Pointer	0105010056	1
23	指针安装基板	Base Plate	0105110083	1
24	机头隔线条	Isolation Plate	0105110084	1
25	换色导条 - M式马头机用	Color Change Guide Plate	0105080003	1
26	平衡块上遮盖板	Cover	0105110082	1
27	机头隔线条B	Isolation Plate B	0105110085	1
28	上轴定位挡圈	Back Collar	0105010079	1
29	上轴前隔圈	Front Collar	0105010080	1
31	半圆平衡块d15	Counterblance Block	0105010088	1
32	平衡块安装板d15	Mounting Plate	0105010089	1
33	刻度盘目镜	Dial Observer	0105010062	1


3-2 Arm(Main Motor) 机头臂（主电机）

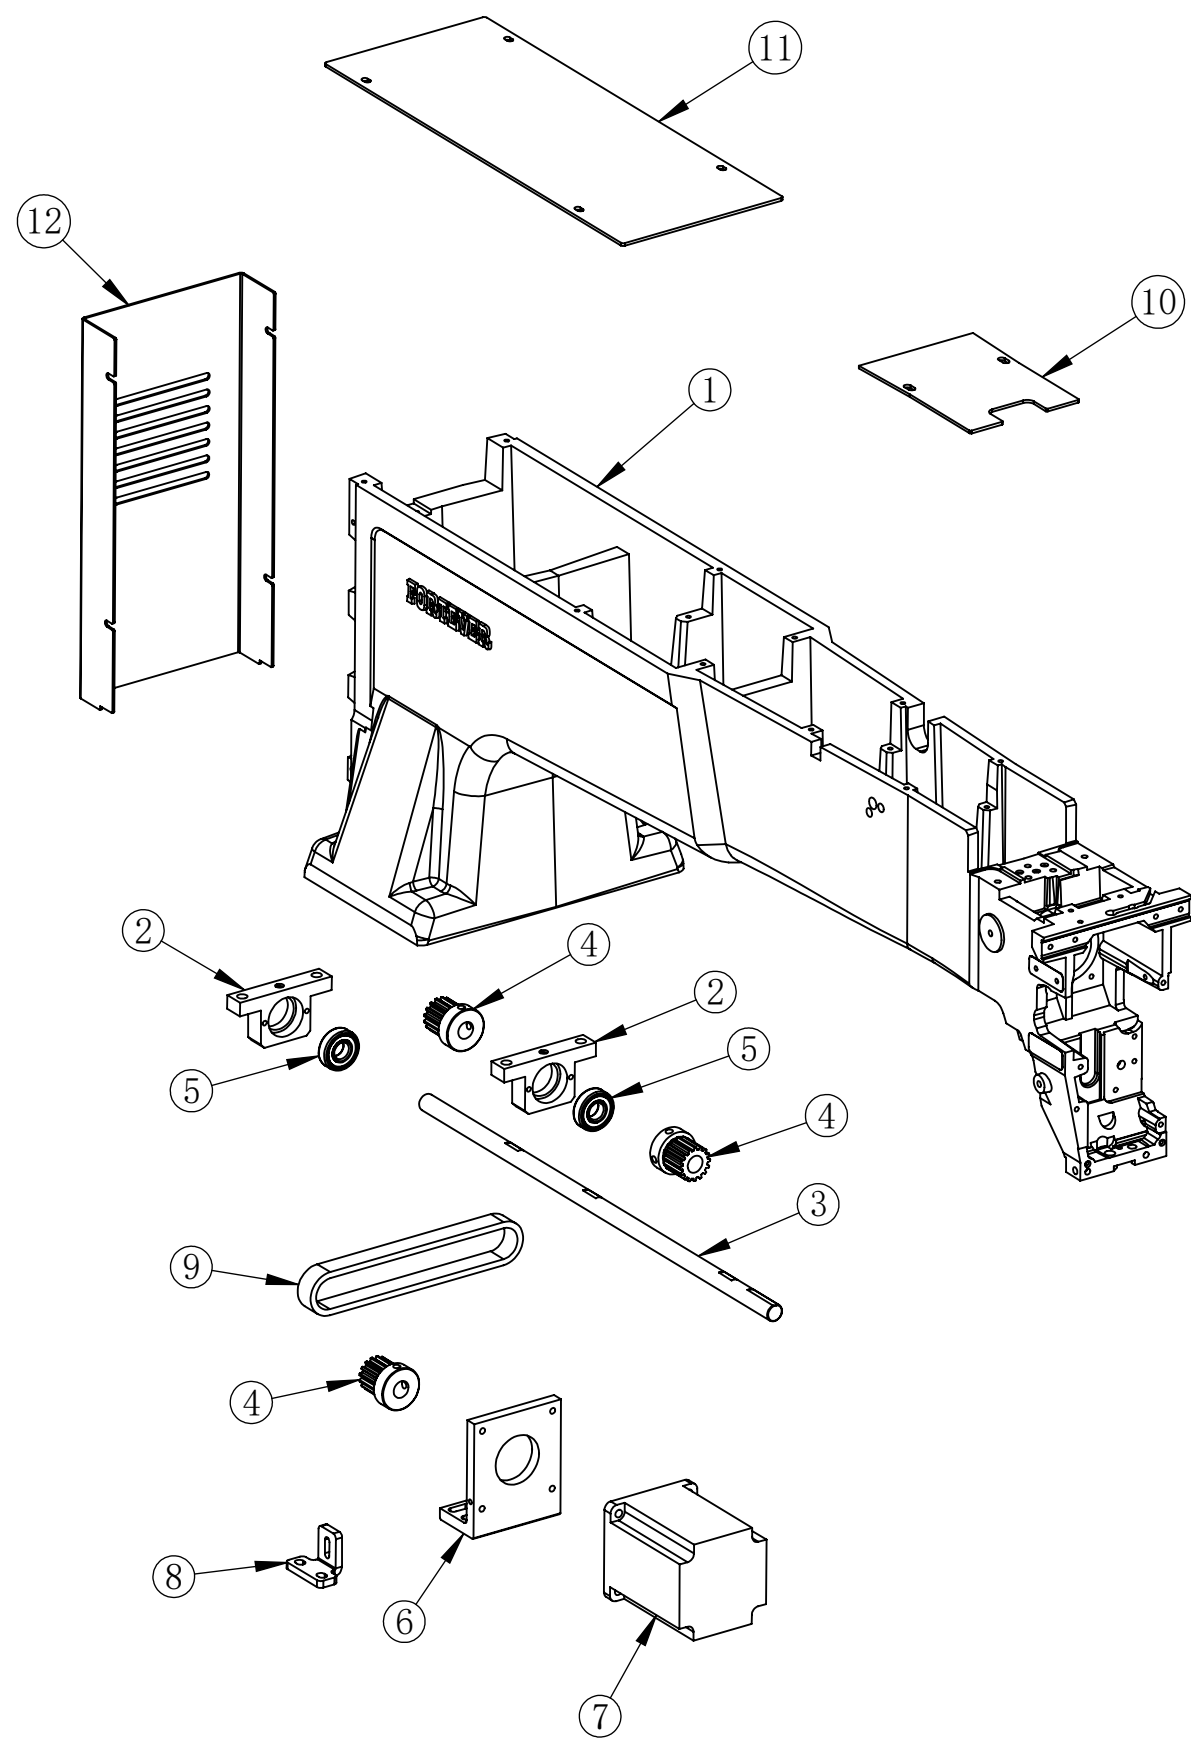

3-2 Arm(Main Motor) 机头臂（主电机）

No.	Chinese Description	Description	Part No.	Qty
1	M式机头臂 - Y500	Arm	0105010076	1
2	轴承座 - 机头下轴	Bearing Base	0105150064	2
3	下轴后段 - 马头Y500 去梭床	Lower Shaft	0105010085	1
4	同步轮 S5M 16T W20 d12	Timing Pulley	0105010084	3
5	轴承6001	Bearing	0202010011	2
6	70主电机座 - 盆内用	Motor Base	0105010082	1
7	70直流无刷伺服电机	Motor	0206017003	1
8	Y电机座调节块	Adjust Plate	0108160011	1
9	同步带 S5M L360 W15	Timing Belt	0204030063	1
10	机头顶前盖板-Y500用	Top Front Cover	0105110086	1
11	马头后上盖板 - 去梭床Y500	Top Back Cover	0105110087	1
12	马头后罩盖 - 去梭床Y500	Head Back Cover	0105110088	1


4 X Axis Duide Rail X向导轨

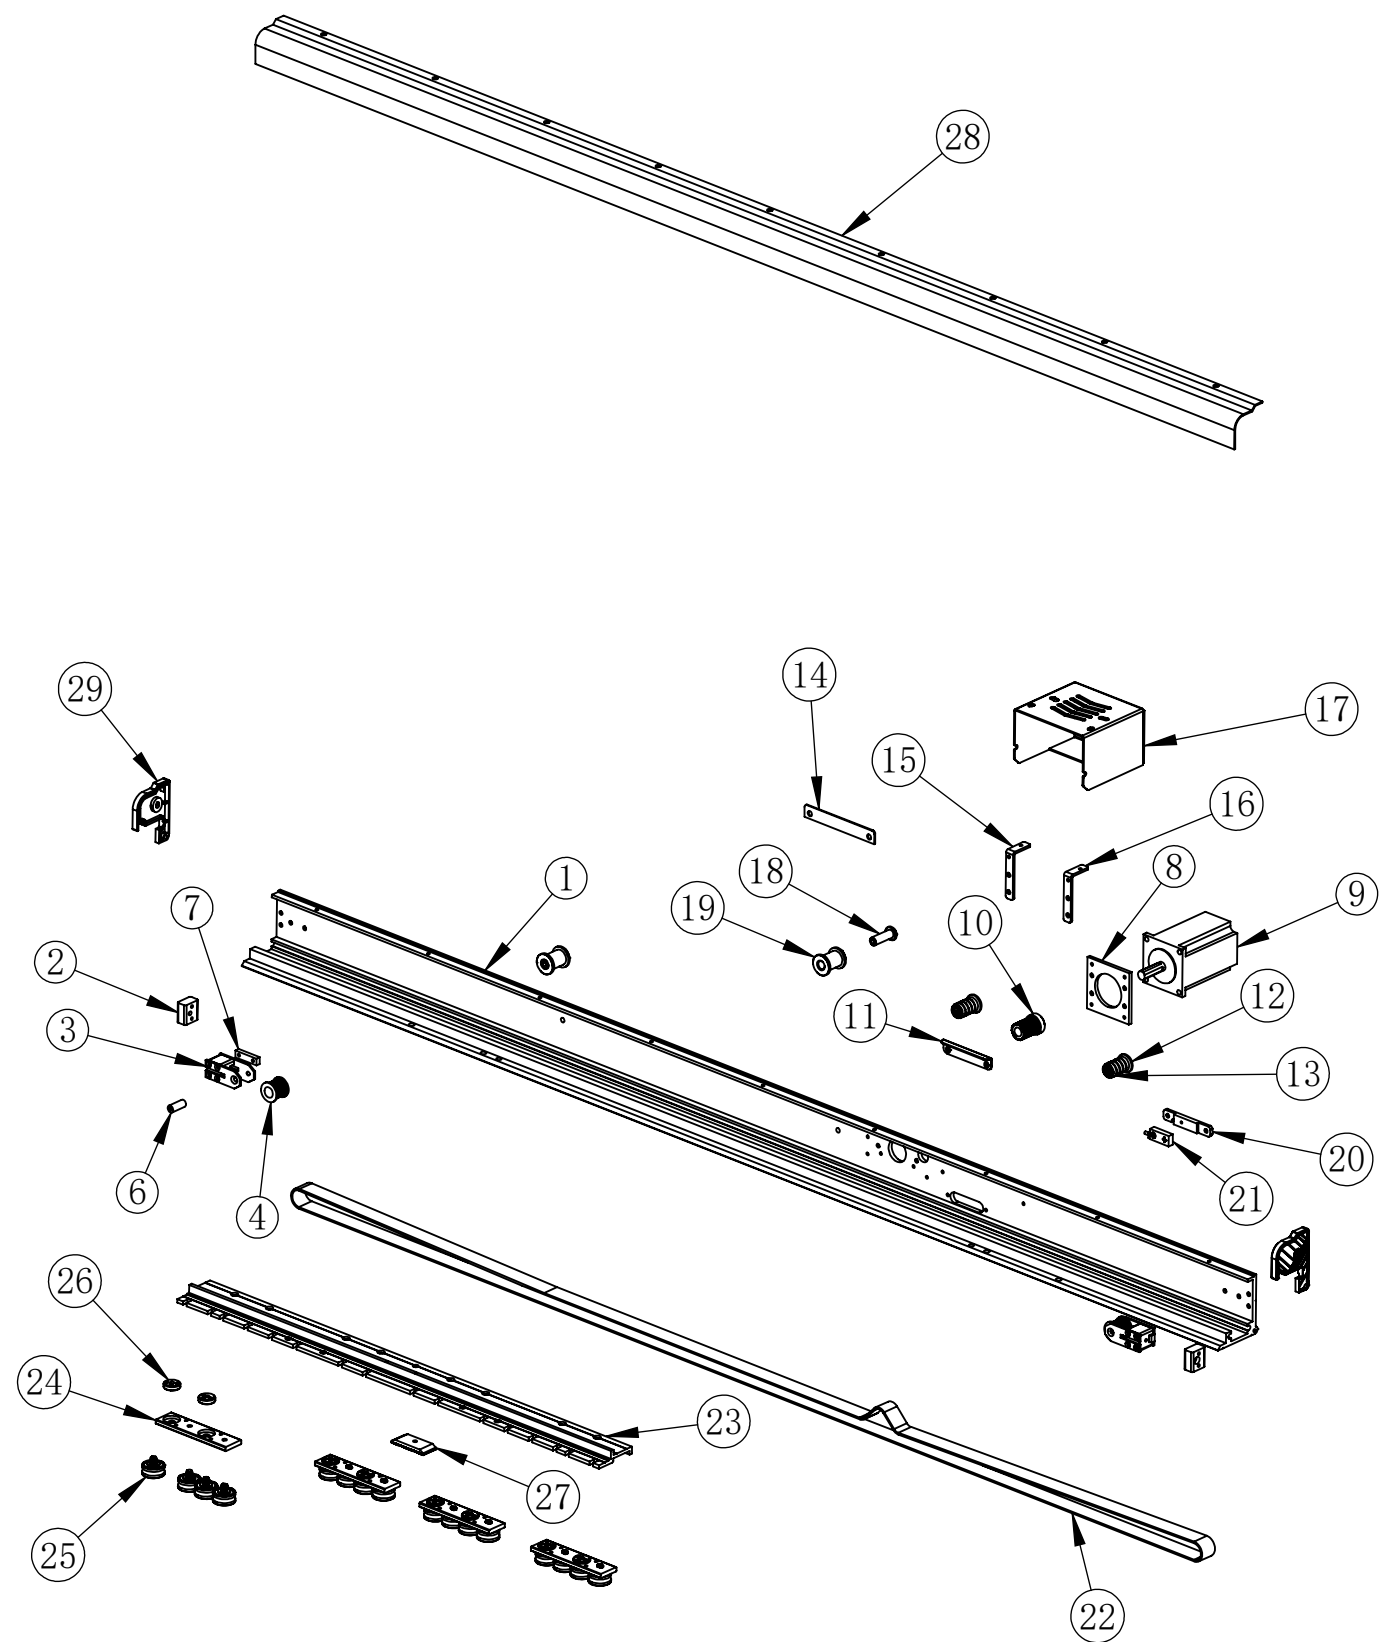

4 X Axis Duide Rail X向导轨

No.	Chinese Description	Description	Part No.	Qty
1	X驱动座	X Frame	0105150004	1
2	X被动轮调节座	Side Cover Support	0105150062	2
3	X被动轮张紧座	Bracket Block	0105150051	2
4	X被动轮S3M20TW20	Timing Pulley	0105150040	2
6	X被动轮轴H20	Shaft	0105150057	2
7	X被动轮调节滑块	Adjust Block	0105150063	2
8	电机板	Motor Plate	0105150082	1
9	57步进电机	Step Motor	0206030004	1
10	X主动轮S3M20TW23	Timing Pulley	0105150039	1
11	张紧轴承固定板-钣金	Bearing Bracket Plate	0105150085	1
12	台阶轴承轴D20d8h25	Shaft	0105150084	2
13	轴承688 D16d8H5	Bearing 688	0202010039	10
14	中置马达罩前片	Plate	0105150081	1
15	支架 - 左 - 中装电机	Cover Bracket L	0105150079	1
16	支架 - 右 - 中装电机	Cover Bracket R	0105150080	1
17	马头X电机罩 - 加长铁	Motor Cover	0105150065	1
18	张紧尼龙轮轴-20皮带用	Pin	0105150087	2
19	张紧尼龙轮-20皮带用	Nylon Wheel	0105150086	2
20	马头横框接近感应器底座	Sensor Base	0105150095	1
21	接近感应器	Limit Sensor	0207030006	1
22	开口皮带S3M	Timing Belt	0204010002	1
23	马头驱动动板	Moving Plate	0105150031	1
24	动板轴承组底板	Bearing Plate	0105150034	4
25	U型槽轴承D24H11M6	U Bearing	0202140002	16
26	调节偏心螺母M6	Eccentric Nut	0110150003	8
27	X向皮带压板3MW20	Press Block Up	0105150089	1
28	横档盖子	Cover	0105150023	1
29	塑料侧盖板-圆弧左	Side Cover	0105150069	1
30	塑料侧盖板-圆弧右	Side Cover	0105150070	1

5-1 Y-Axis Guide Rail Y向导轨

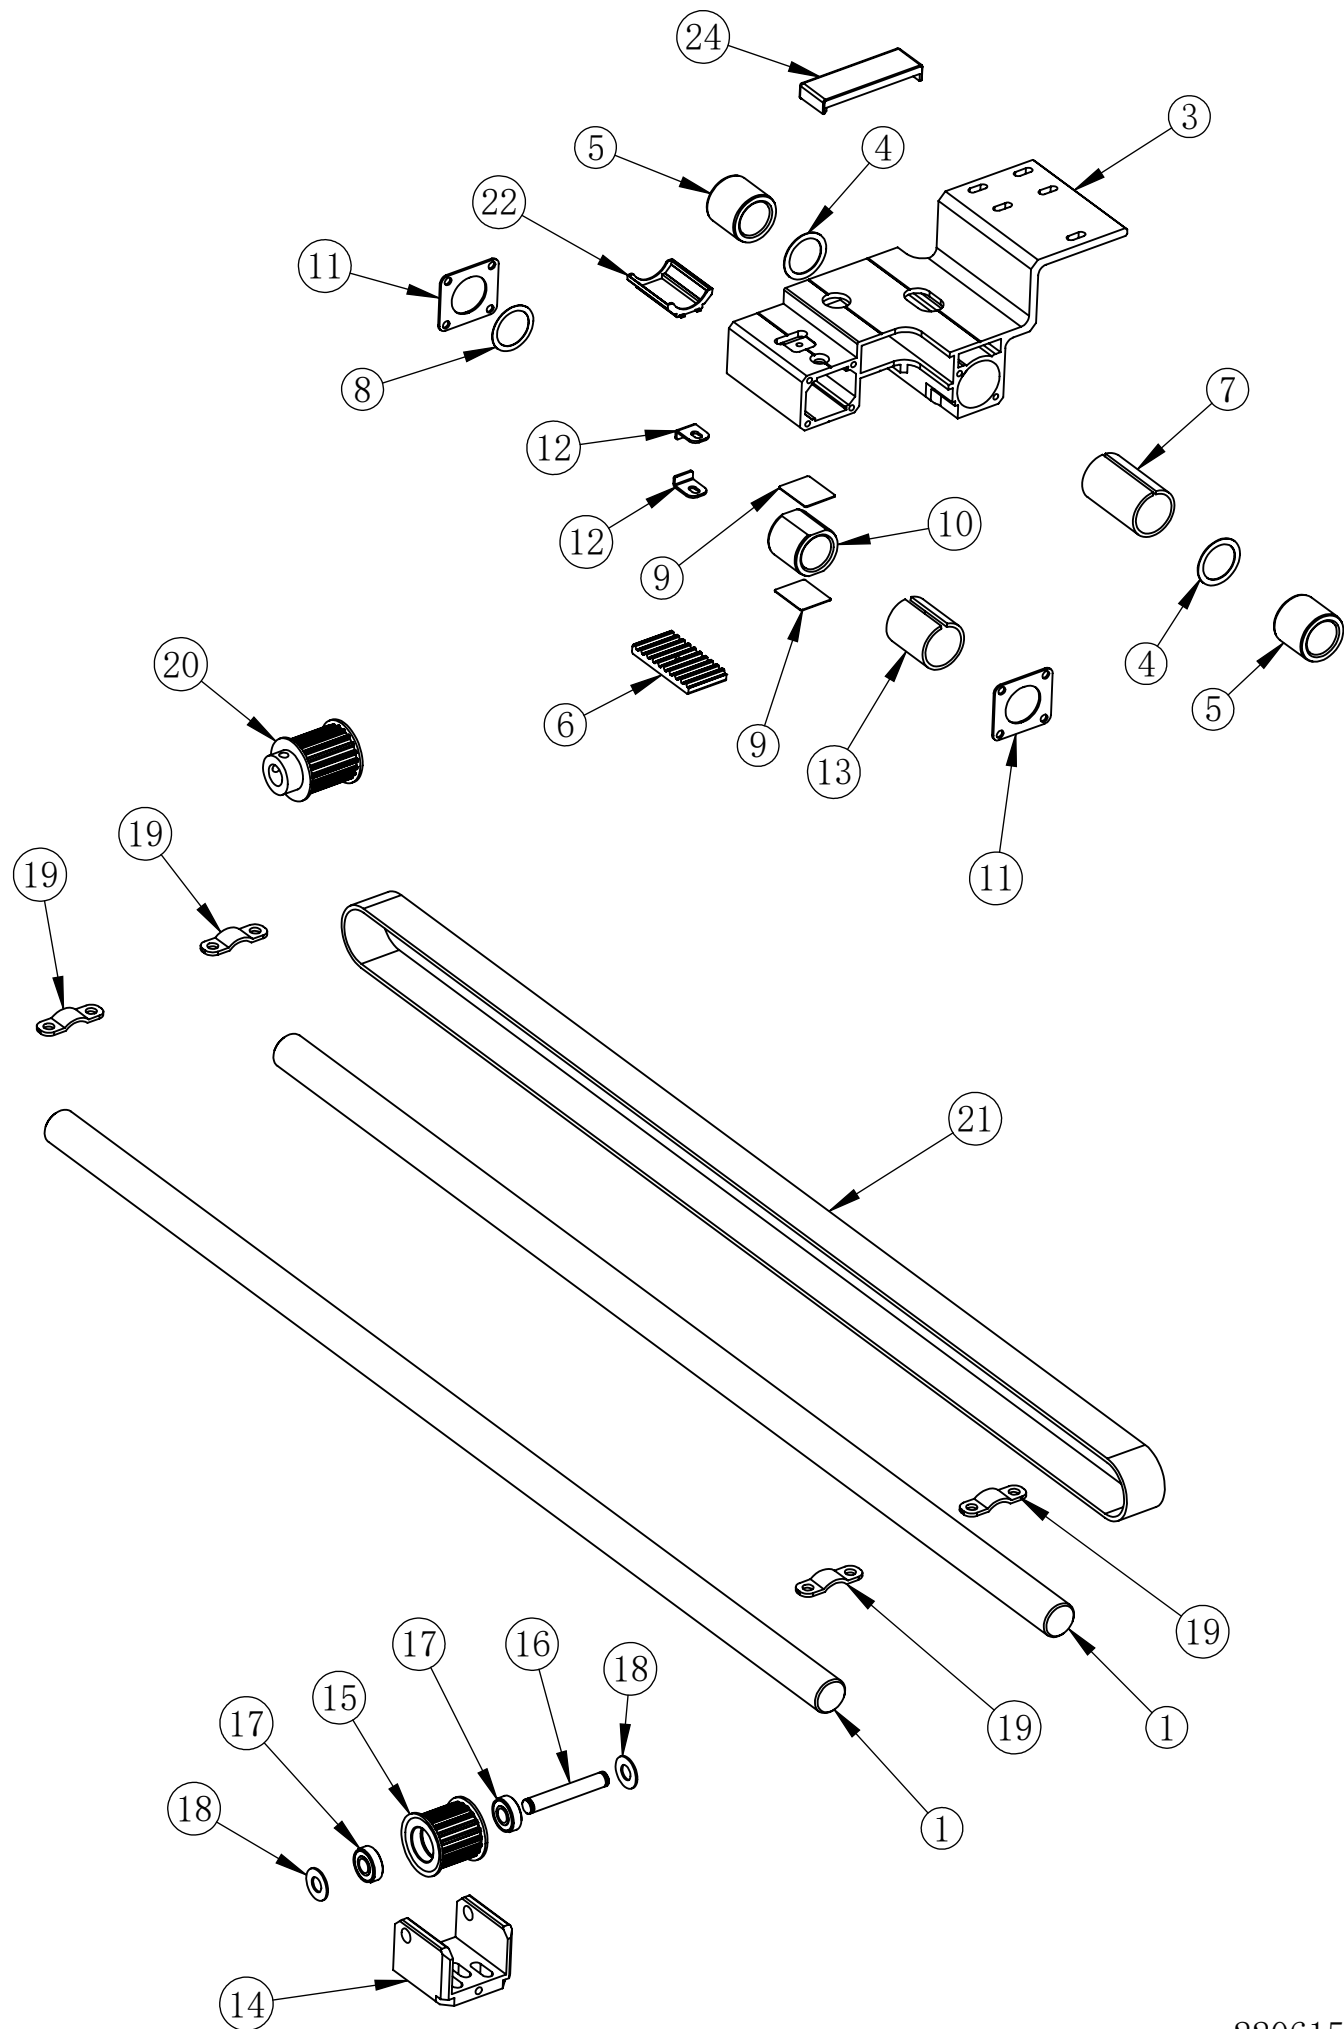


220615

5-1 Y-Axis Guide Rail Y向导轨

No.	Chinese Description	Description	Part No.	Qty
1	导轨D20 - Y500	Shaft d20	0105160083	2
2	双轴d20Y驱动扶手L	Feed Plate	0105160085	
3	双轴d20Y驱动扶手R	Feed Plate	0105160084	1
4	垫圈D21d27T0点5	Ring	0105160086	2
5	铜套D28d20L25	Copper Sleeve	0105160087	2
6	Y向皮带压板5MW25	Press Block Up	0105160029	1
7	长方毛毡	Felt	0105160089	1
8	波形垫圈d21D27	Corrugated Washer		1
9	不锈钢垫片W20T0.5	Spacer	0105160091	2
10	铜套D28d20L25 - 平面	Copper Sleeve	0105160088	1
11	垫片端盖板	End Cover	0105160092	2
12	直角挡片	Stop	0105160093	2
13	短方毛毡	Felt	0105160090	1
14	被动轮座	Pulley Base	0105160094	1
15	Y向被动轮5M20TW25	Pulley	0105160017	1
16	双轴Y向被动轮轴-W25	Pulley Shaft	0105160096	1
17	轴承698	Bearing	0202010016	2
18	尼龙垫片d8	Nylon Gasket		2
19	20轴压片	Tablet Press	0105160097	4
20	Y向主动轮5M20TW30	Pulley	0105160018	1
21	5MW25开口皮带	Belt 5M W25	0204010012	1
22	轴用油杯	Oil Cup	0105160102	1
23	扶手后侧盖L	Back Side Cover	0105160109	
24	扶手后侧盖R	Back Side Cover	0105160110	1


5-2 Y Drive System Y导轨驱动系统

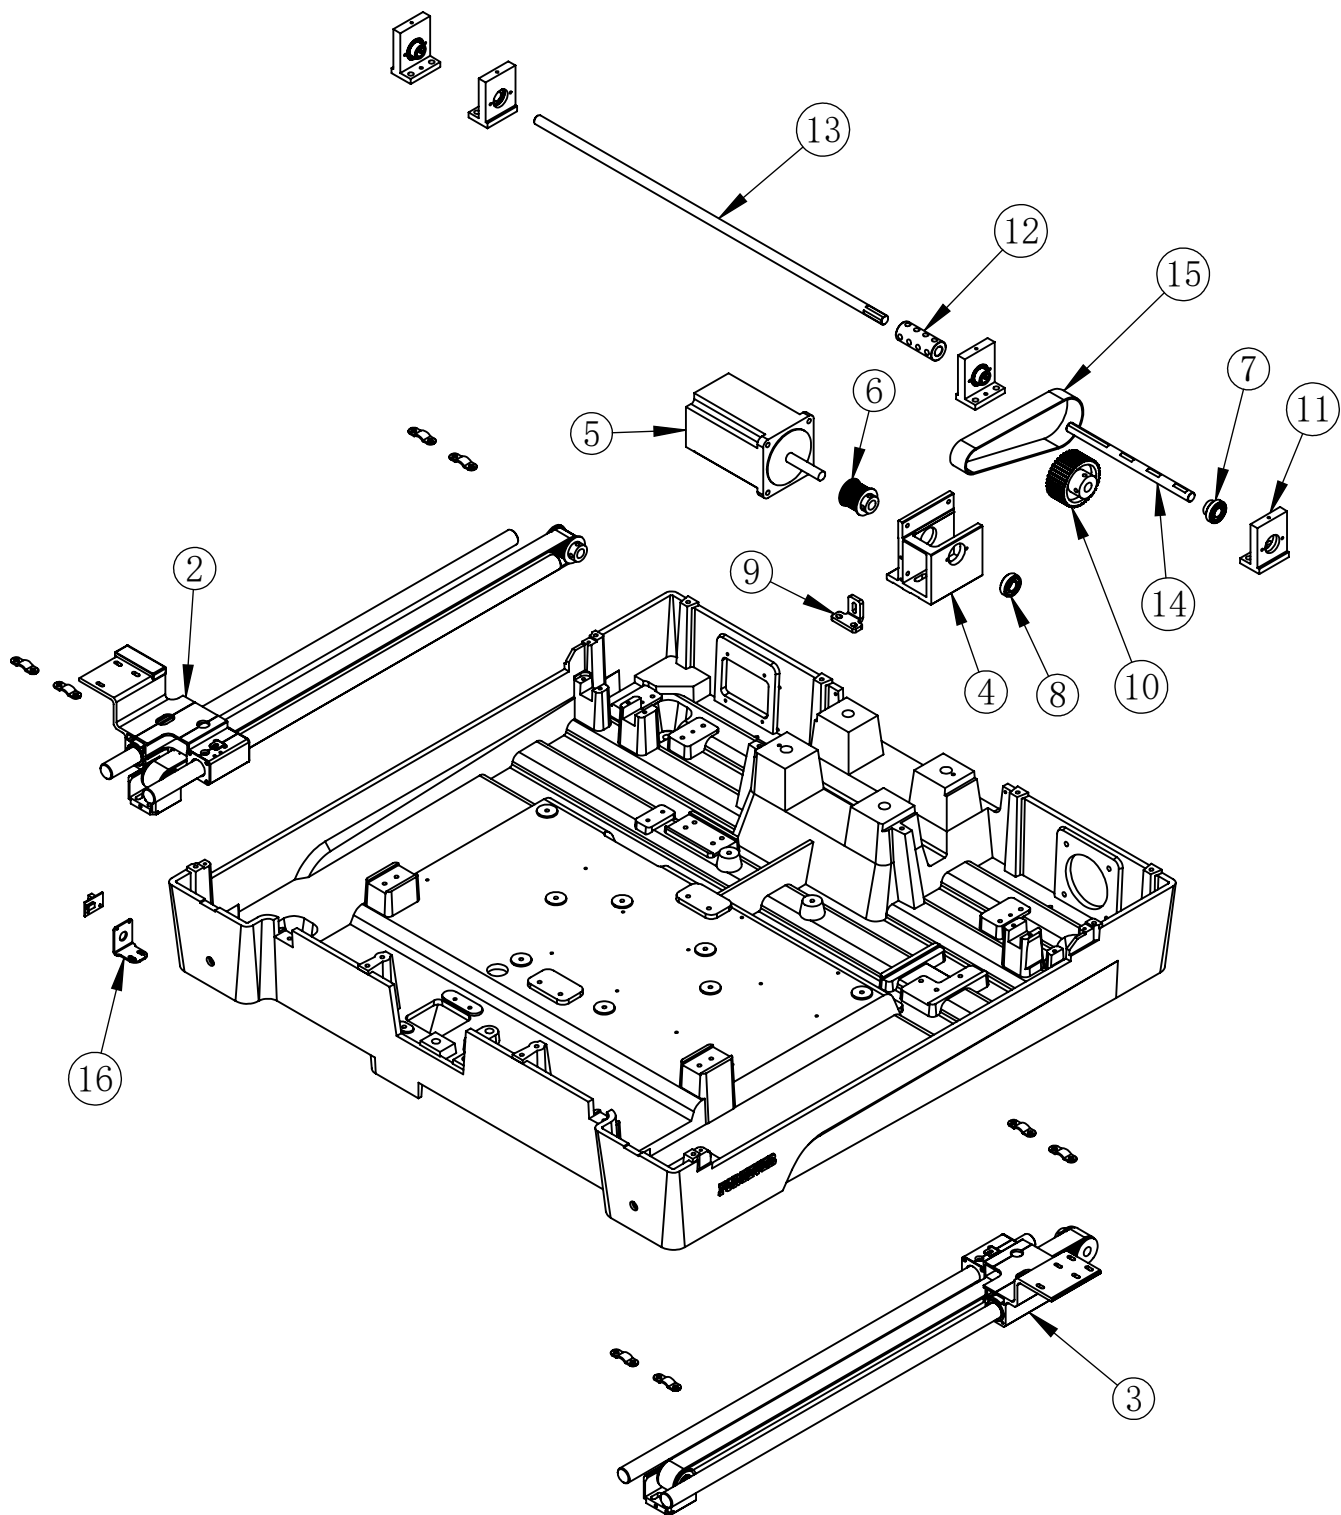

5-2 Y Drive System Y导轨驱动系统

No.	Chinese Cescription	Description	Part No.	Qty
1	马头铝盆Y500D	Base	0105110093	1
2	双轴d20Y驱动扶手L	Feed Plate	0105150105	1
3	双轴d20Y驱动扶手	Feed Plate	0105150104	1
4	Y86电机座	Motor Base	0108160012	1
5	86步进电机	Step Motor	0206018028	1
6	Y向主动轮5M20TW25	Pulley	0105150056	1
7	联体轴承6902 d12D28	Bearing	0202010022	4
8	轴承6001 D28d12H8	Bearing 6001	0202010001	1
9	Y电机座调节块	Adjust Plate	0108160011	1
10	皮带轮5MW28d12 40T	Pulley	0105150057	1
11	轴承座 - h30	Bearing Base	0105150064	4
12	联轴器 d12	Cushing d12	0105150007	1
13	Y驱动轴	Y Shaft	0105150101	1
14	Y向主动轮轴 - 双轴	Pulley Shaft	0105150017	1
15	同步带 5M-450-25	Belt	0204030062	1
16	Y限位光耦支架	Sensor Support	0105150121	1


6-1 Arm Motor 机头跳跃勾线面夹压脚电机

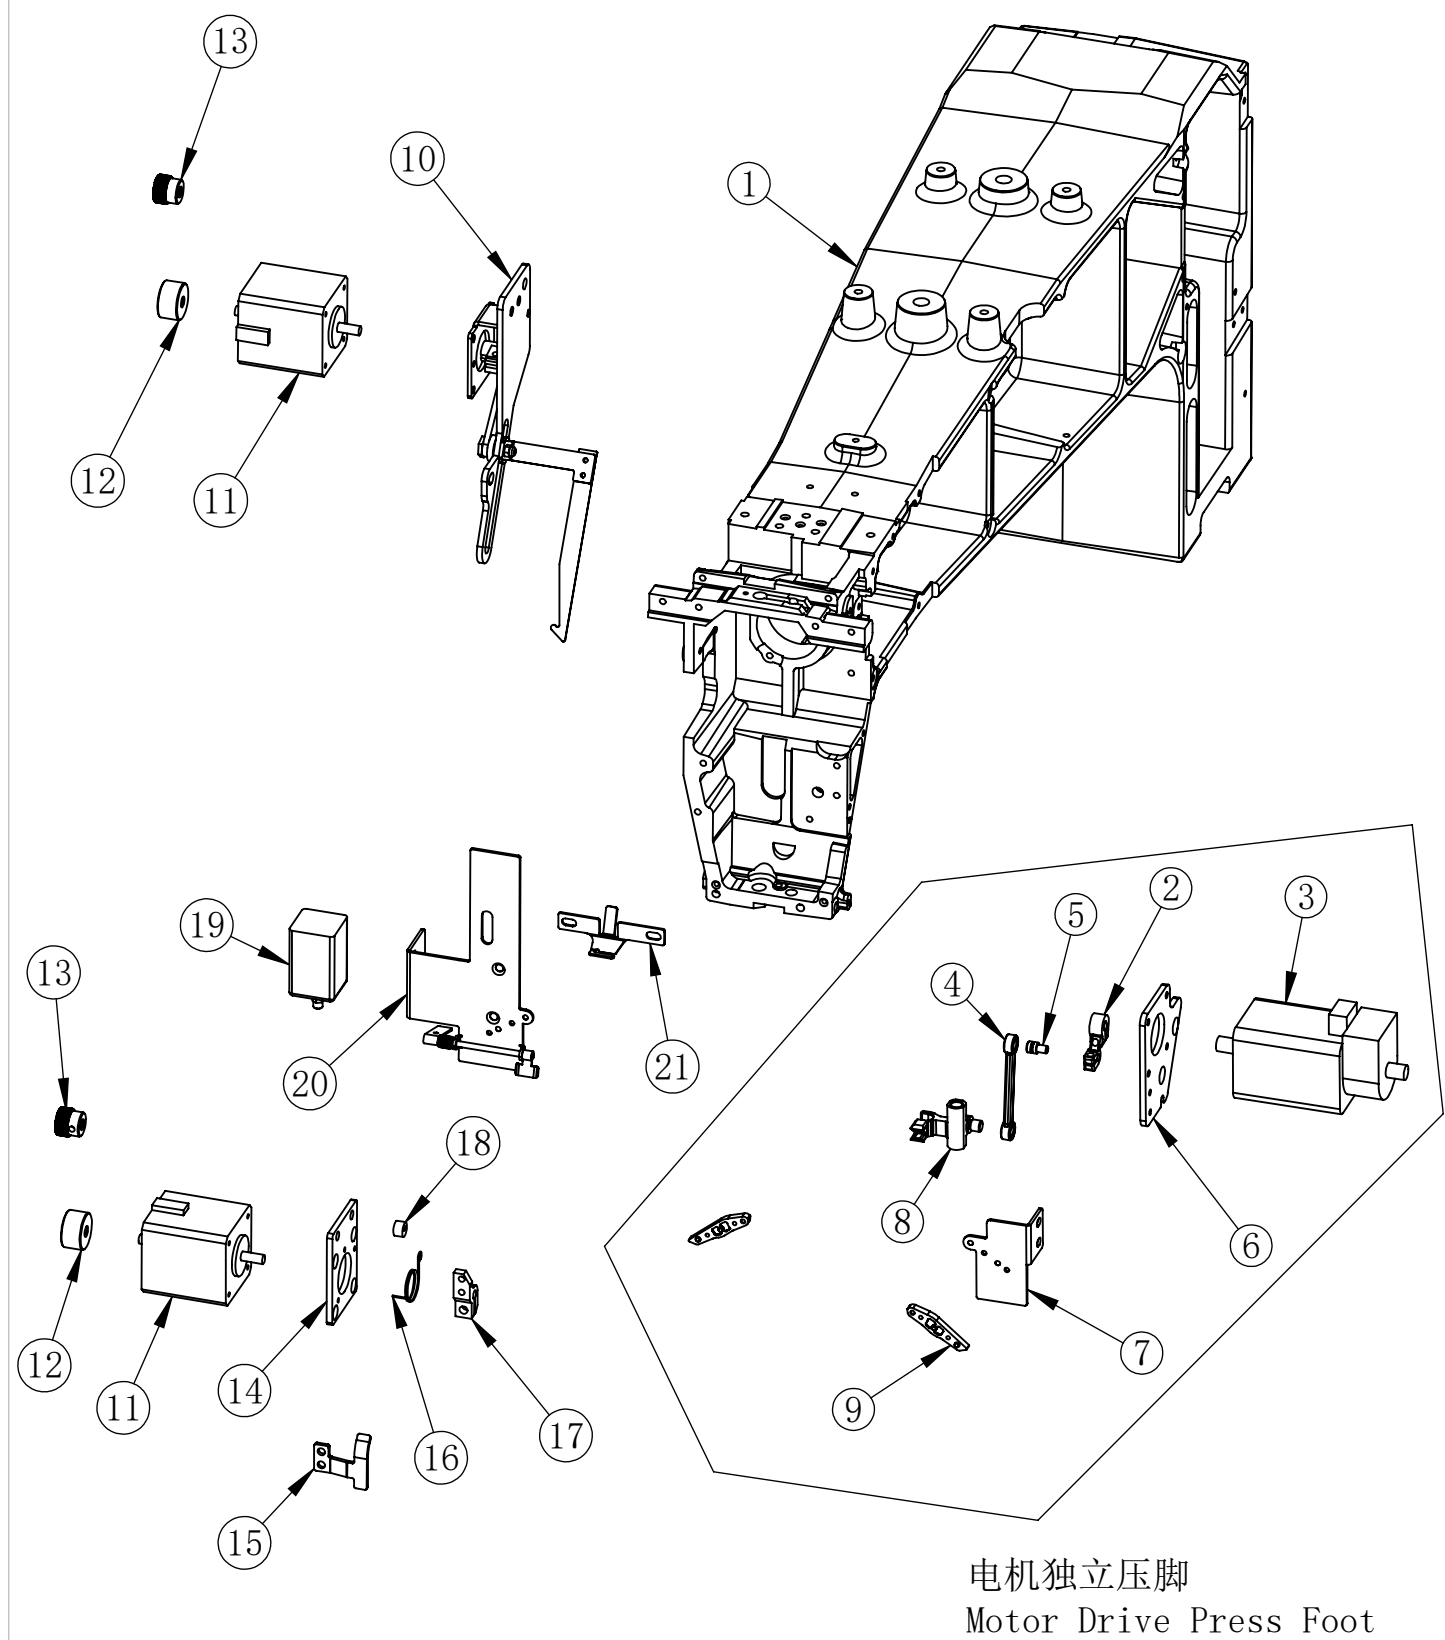

6-1 Arm Motor 机头跳跃勾线面夹压脚电机

No.	Chinese Description	Description	Part No.	Qty
1	M式机头臂 - Y400	Arm	0105010075	1
2	马头电机连杆	Motor Drive Lever	0105100001	1
3	42闭环电机	Motor	0206010016	1
4	马头提压脚小连杆	Lever	0105100002	1
5	电机连杆销	Pin	0105100005	1
6	马头独压电机安装板	Motor Bracket	0105100003	1
7	马头前右盖板 - Y400	Cover	0105010081	1
8	马头电独压脚驱动块	Motor Presser Foot Drive Set	0105100006	1
9	导向块	Guide Block	0105100007	1
10	马头勾线器组件	Thread Hook Set	0302010028	1
11	42电机 42H47	Step Motor	0206010006	2
12	电机手动旋钮	Manual Knob	0105040001	2
13	电机旋钮 - 家用机	Handle	0110080004	2
14	马头跳跃电机板	Motor Base	0105040005	1
15	跳跃杆支架	Jumping Plate	0105040008	1
16	马头跳跃弹簧	Spring	0105040006	1
17	跳跃夹紧块	Jumping Lever	0105040007	1
18	橡胶缓冲套	DAMPER RING	0102090013	1
19	压线电磁铁-自保持式	SOLENOID	0206150002	1
20	锁线装置组件 (M式左置)	Open Frame Driven Set	0302010047	1
21	勾刀导向板	Hook Guide	0105040004	1


6-2 马头针杆驱动 挑线驱动 Needle Bar Driving Cam Set

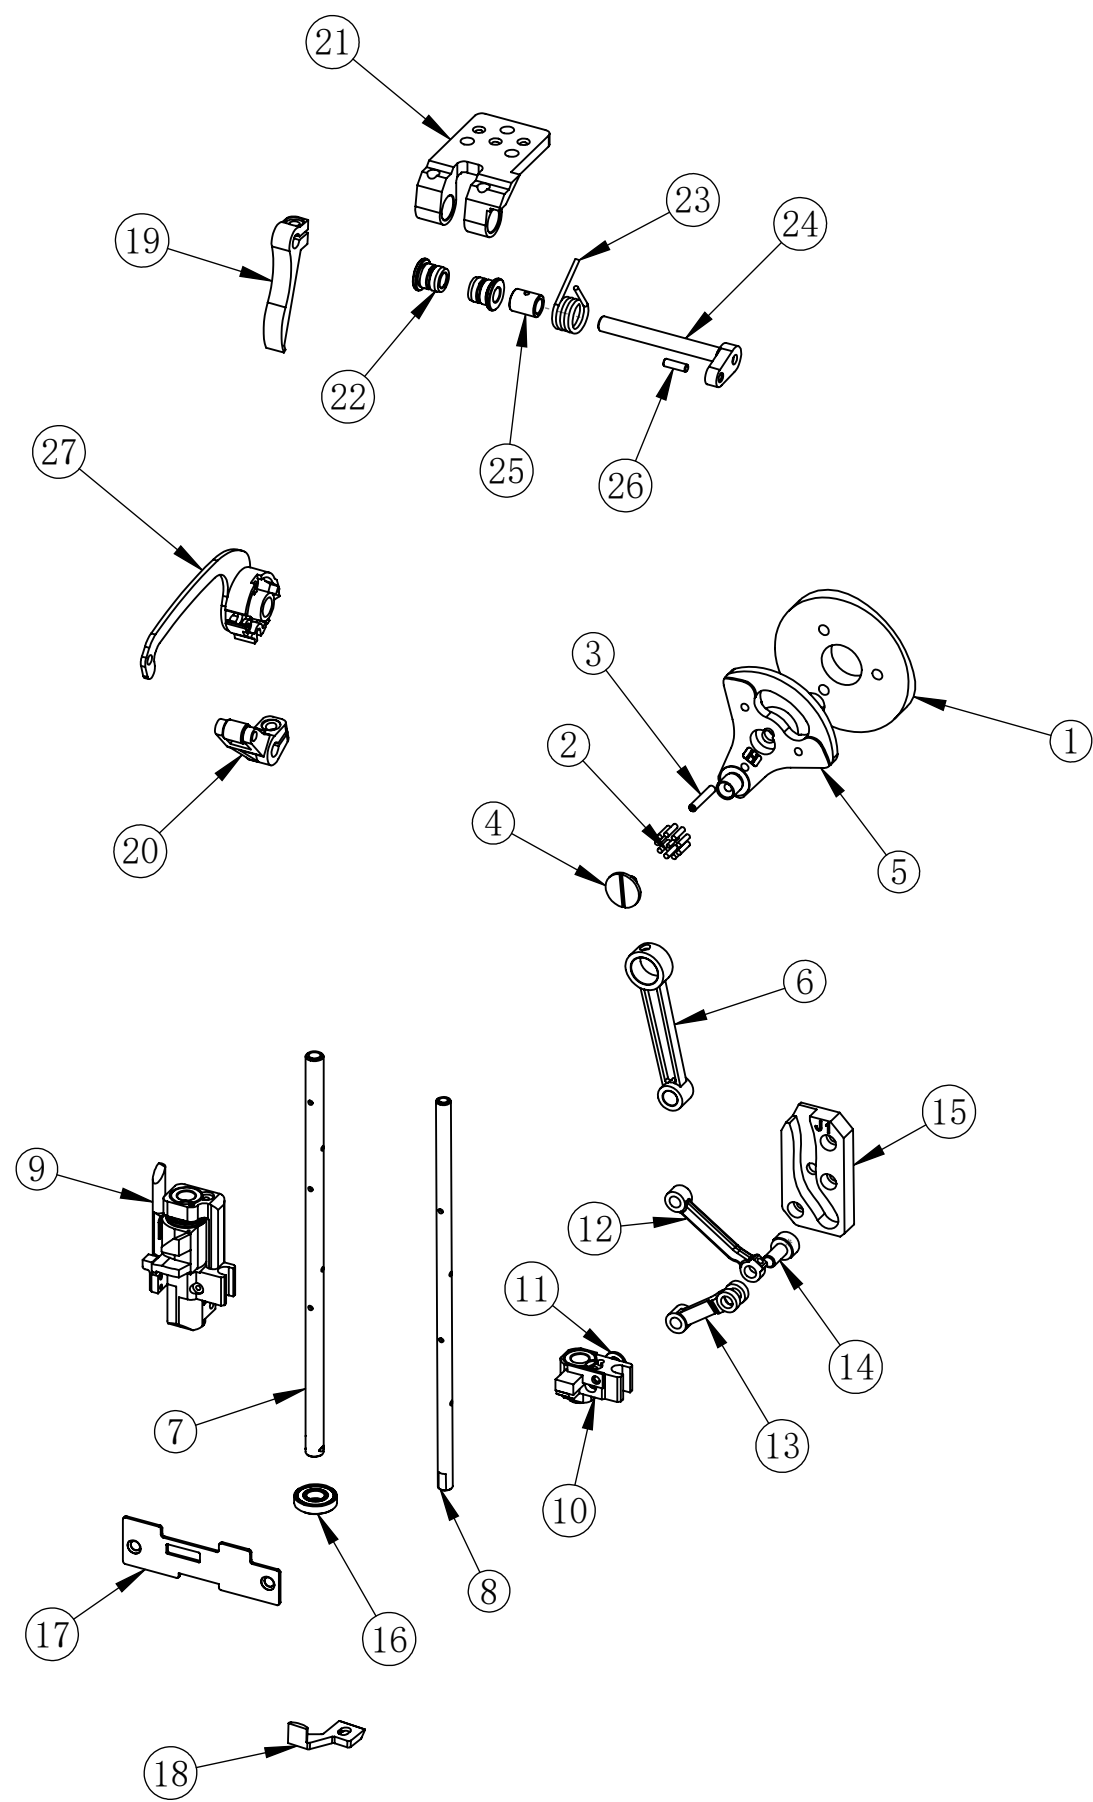

6-2 马头针杆驱动 挑线驱动 Needle Bar Driving Cam Set

No.	Chinese Description	Description	Part No.	Qty
1	马头压簧挑线凸轮	Take-Up Cam	0110010021	1
2	保持架滚针轴承 D12d8H7.8	Bearing	0202070002	1
3	齿形开口销D3	Pin	0110010022	1
4	曲轴M4螺丝	Screw	0105010065	1
5	针杆驱动半圆偏心块 - 带销	Arm Cam	0110010018	1
6	马头机大连杆	Big Rod	0110010028	1
7	针杆驱动轴 - M式	Drive Shaft	0105010063	1
8	压脚轴 - M式	Shaft	0105010064	1
9	驱动块 - 侧槽式	Needle Bar Reciprocator	0110010024	1
10	压脚驱动块本体 -侧槽式	Presser Foot Block	0110010025	1
11	压脚块挡边销d5	Pin	0110010026	1
12	侧槽压脚连杆 - 上	Connecting Rod Up	0110010027	1
13	侧槽压脚连杆 - 下	Connecting Rod Do	0110010029	1
14	带销轴承D10d5	Bearing	0110010039	1
15	机头压脚弧槽	PressFoot Cam	0110010040	1
16	轴承D17d7点24	Bearing	0202010004	1
17	机头前下盖板-M式马头	Guide Plate	0105010066	1
18	独立压脚定位勾	Positioning Hook	0105010067	1
19	压簧挑线弧槽驱动臂	Drive Rod	0110010030	1
20	马头压簧挑线杆B	Spring Trestle Rod	0110010031	1
21	挑线臂支点座	Take-up Bar Base	0110010032	1
22	支点轴铜套A	Copper	0110010033	2
23	挑线扭簧	Spring	0110010034	1
24	马头压簧支点轴臂	Thread Trimming Lever	0110010035	1
25	压簧套圈	Spring Collar	0110010036	1
26	销D3	Pin	0110010037	1
27	挑线杆片	TAKE-UP LEVER	0110010038	1


7-1 Needle Bar Case 1 针架1

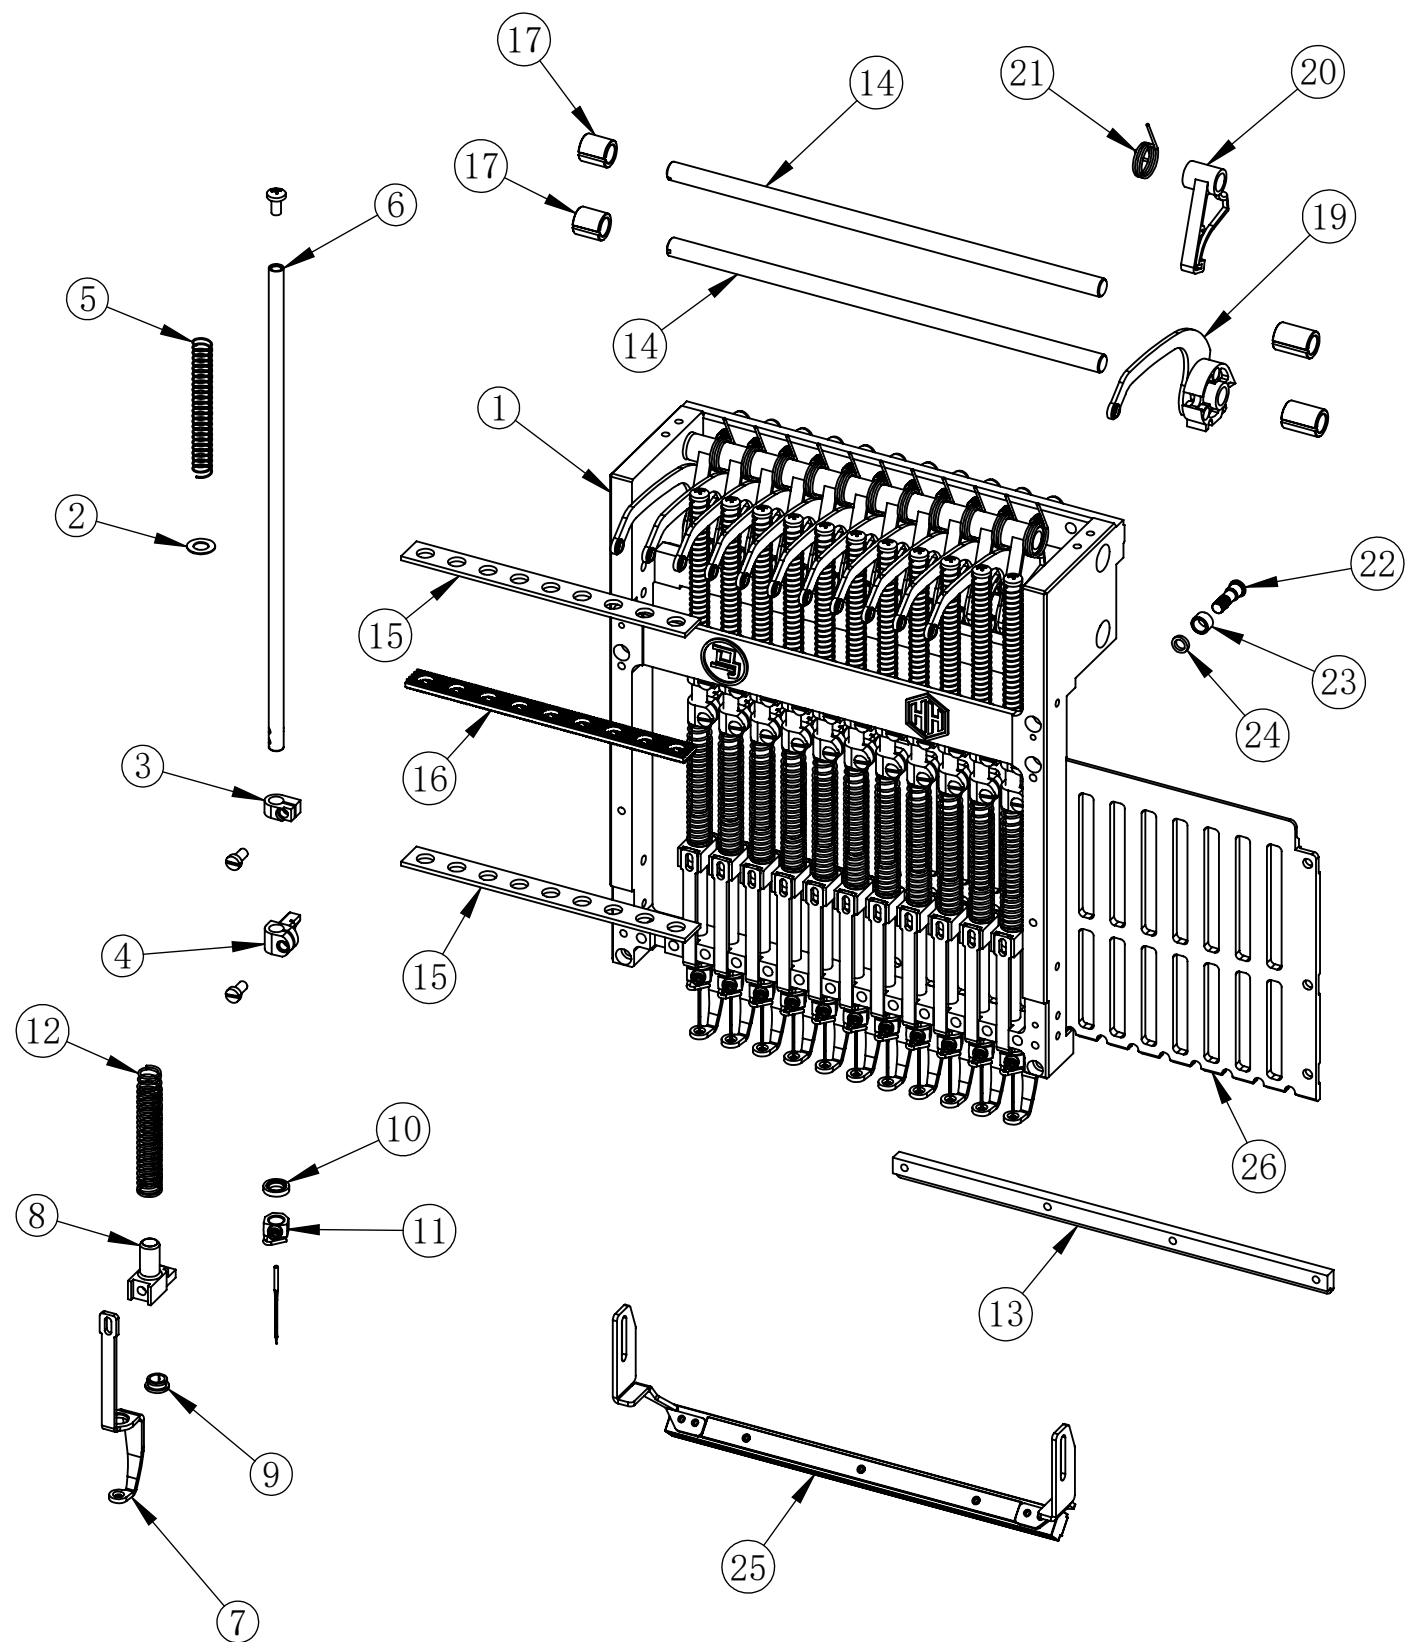

7-1 Needle Bar Case 1 针架1

No.	Chinese Description	Description	Part No.	Qty
1	马头12针针杆架	Needle Case	0105020027	1
1	马头15针针杆架	Needle Case	0105020033	
2	上弹簧垫片	Washer		12
3	上死点制动件	Stopper Upper Poin	0102020008	12
4	针杆连接销	Connecting Pin	0102020009	12
5	针杆上弹簧	Needle Bar Upper Spring	0102020005	12
6	针杆6. 35*237	Needle Bar	0105020006	12
7	压脚 56	PRESSER FOOT	0102020014	12
8	压脚调节套	Presser Foot Set Clamp	0102020013	12
9	压脚中塑料套	Presser Foot Bushing	0102020012	12
10	压脚下弹圈	Washer	0102020057	12
11	针夹（连螺钉）	Needle Clamp	0102020016	12
12	加大档马头压脚下弹簧	Press Foot Spring	0105020026	12
13	下导轨条（12针M马头）	Needle Bar Low Guide Rail	0203030028	1
13	下导轨条（15针M马头）	Needle Bar Low Guide Rail	0203030029	
14	挑线杆导向轴12N	Guide Shaft	0102020035	2
14	挑线杆导向轴15N	Guide Shaft	0102020040	
15	下毛毡垫 9N	Felt Packing	0102020015	2
16	麻垫	Damper Ring	0102020007	1
17	针架开口轴衬L12	Split Collar	0102020017	2
18	针架开口轴衬L16	Split Collar	0102020022	2
18	针架开口轴衬L19	Split Collar	0102020019	
19	挑线杆片	Take-Up Lever	0110010038	12
20	自扣	Lever Stopper	0102020032	12
21	自扣弹簧 - 马头	Spring	0105200022	12
22	分段销	Pin	0105080017	12
23	换色滚珠	Collar	0105080016	12
24	垫片	Bushing	0105080018	12
25	下毛刷组件12N	Thread Holder	0302010042	1
25	下毛刷组件15N	Thread Holder	0302010043	
26	12针针杆导板 - 2节	Baffle	0105020029	1
26	15针针杆导板 - 2节	Baffle	0105020030	


7-2 Needle Bar Case 2 针架2
(Motor drive pressure foot)

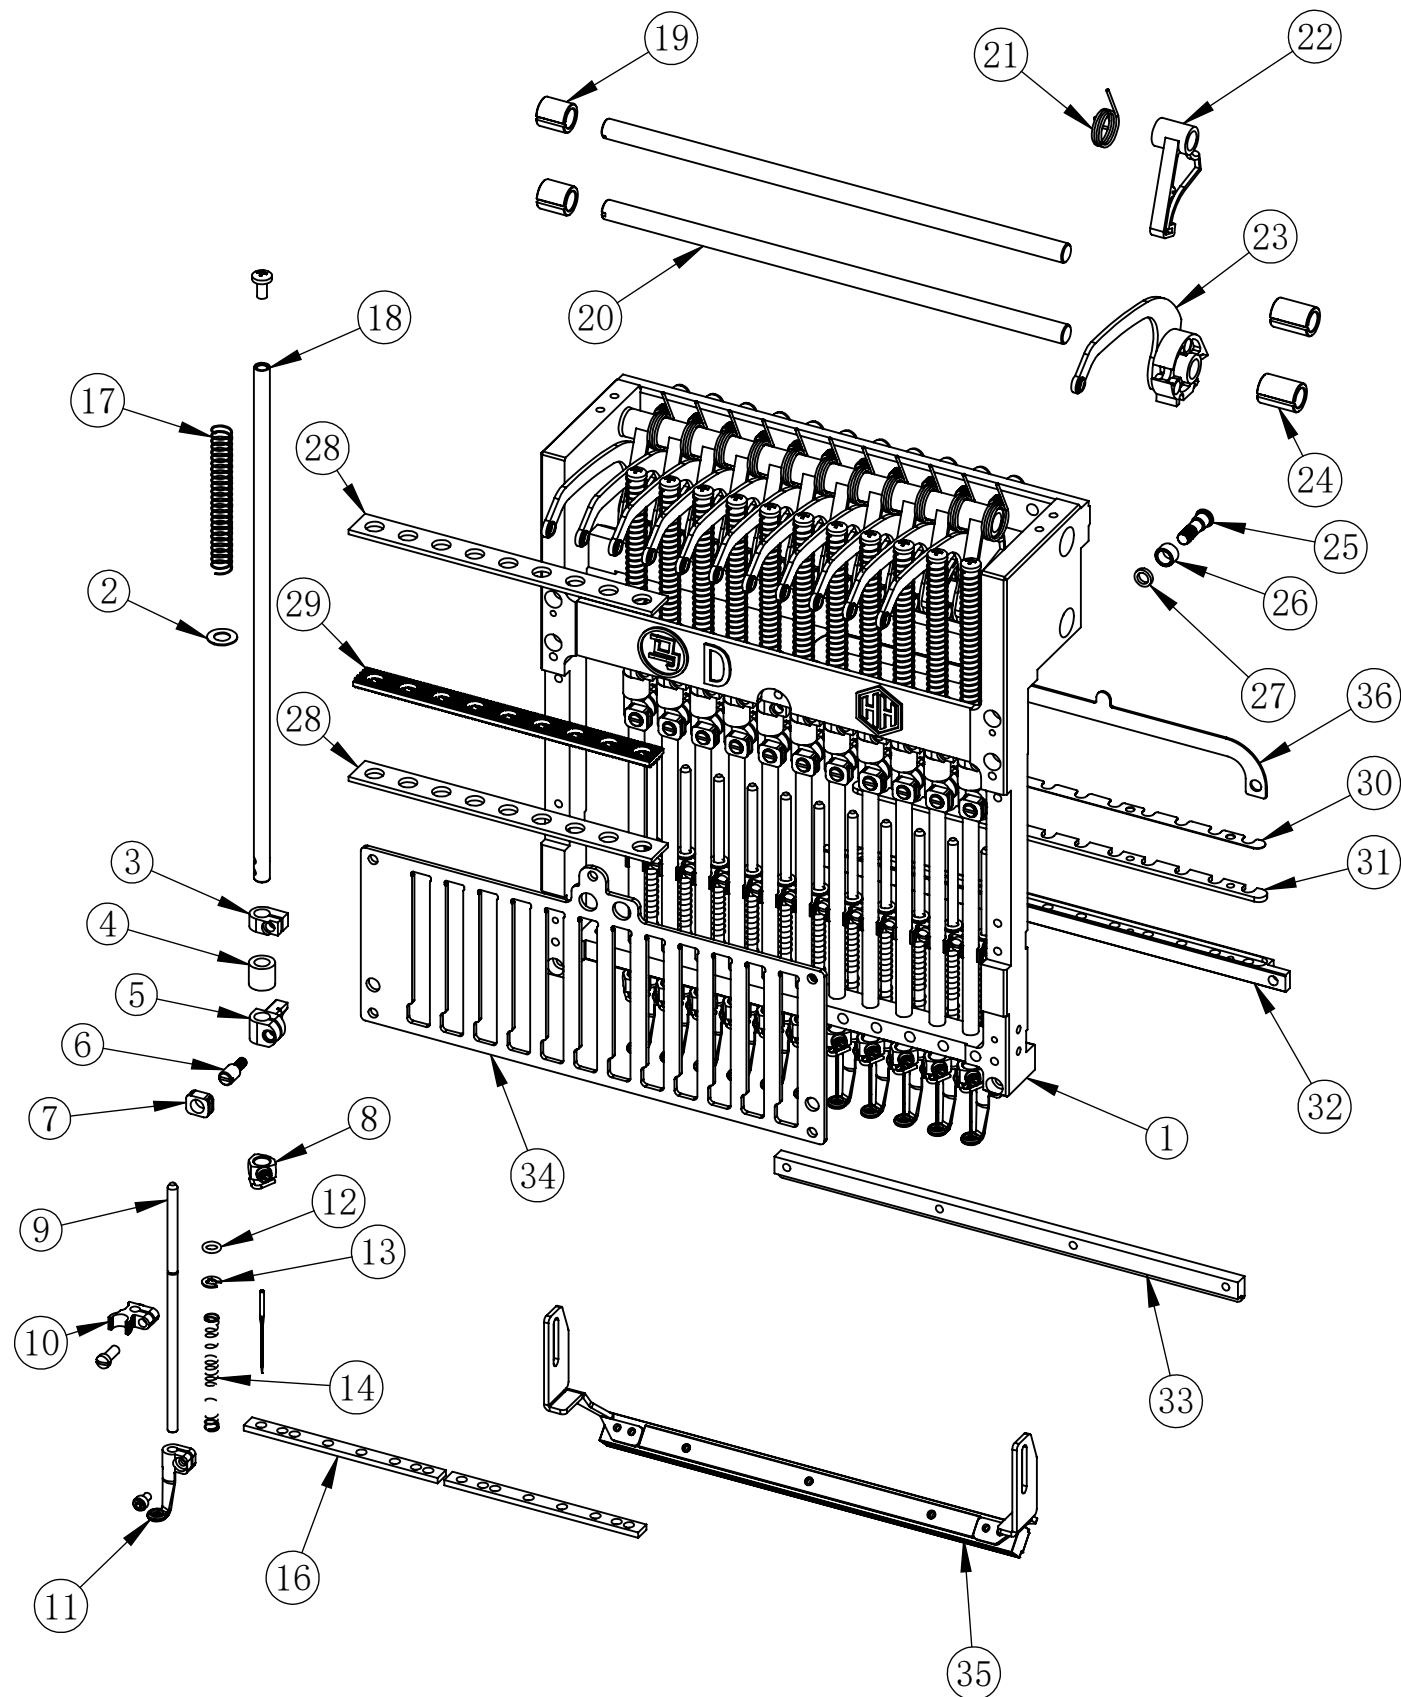

7-2 Needle Bar Case 2 针架2(电机压脚)

No.	Chinese Description	Description	Part No.	Qty
1	马头12针针杆架-电独压	Needle Case	0105100007	1
2	上弹簧垫片	Washer		12
3	上死点制动件	Stopper Upper Poin	0102020008	12
4	针杆毛毡圈	Ring	0105100009	12
5	针杆连接销	Connecting Pin	0102020009	12
6	销前防转螺丝	Guide Screw	0105100010	12
7	前挡板滑块	Sliding Block	0105100011	12
8	独压针夹（连螺钉）	Needle Clamp	0105100025	12
9	马头电独压压脚杆 - 上卡	Presser Foot Pole	0105100012	12
10	42电独压压脚连接块	Connecting Block	0105100013	12
11	独压压脚	Presser Foot	0105100014	12
12	橡胶圈D6d1.5	Washer	0102020057	12
13	卡簧d3.5	Snap Spring		12
14	压脚复位弹簧	Spring	0105100015	12
16	独压下毛毡	Felt	0105100017	2
17	针杆上弹簧	Needle Bar Upper Spring	0102020005	12
18	针杆6.35*237	Needle Bar	0105020006	12
19	针架开口轴衬L12	Split Collar	0102020017	2
20	挑线杆导向轴12N	Guide Shaft	0102020035	2
21	自扣弹簧 - 马头	Spring	0105200022	12
22	自扣	Lever Stopper	0102020032	12
23	挑线杆片	Take-Up Lever	0110010038	12
24	针架开口轴衬L16	Split Collar	0102020022	2
25	分段销	Pin	0105080017	12
26	换色滚珠	Collar	0105080016	12
27	垫片	Bushing	0105080018	12
28	下毛毡垫 9N	Felt Packing	0102020015	2
29	麻垫	Damper Ring	0102020007	1
30	压脚杆上毛毡压板 -12针	Felt Pressure Plate	0105100019	1
31	压脚杆上毛毡 -12针	Felt	0105100016	1
32	压脚杆上定位条-12针	Positioning Bar	0105100020	1
33	下导轨条（12针M马头）	Needle Bar Low Guide Rail	0203030028	1
34	12针前防转挡板 - 马头	Needle Bar Guide	0105020025	1
35	下毛刷组件12N	Thread Holder	0302010042	1
36	上死点后挡板	Back	0105100022	1


7-3 Needle Bar Case 3 针架3

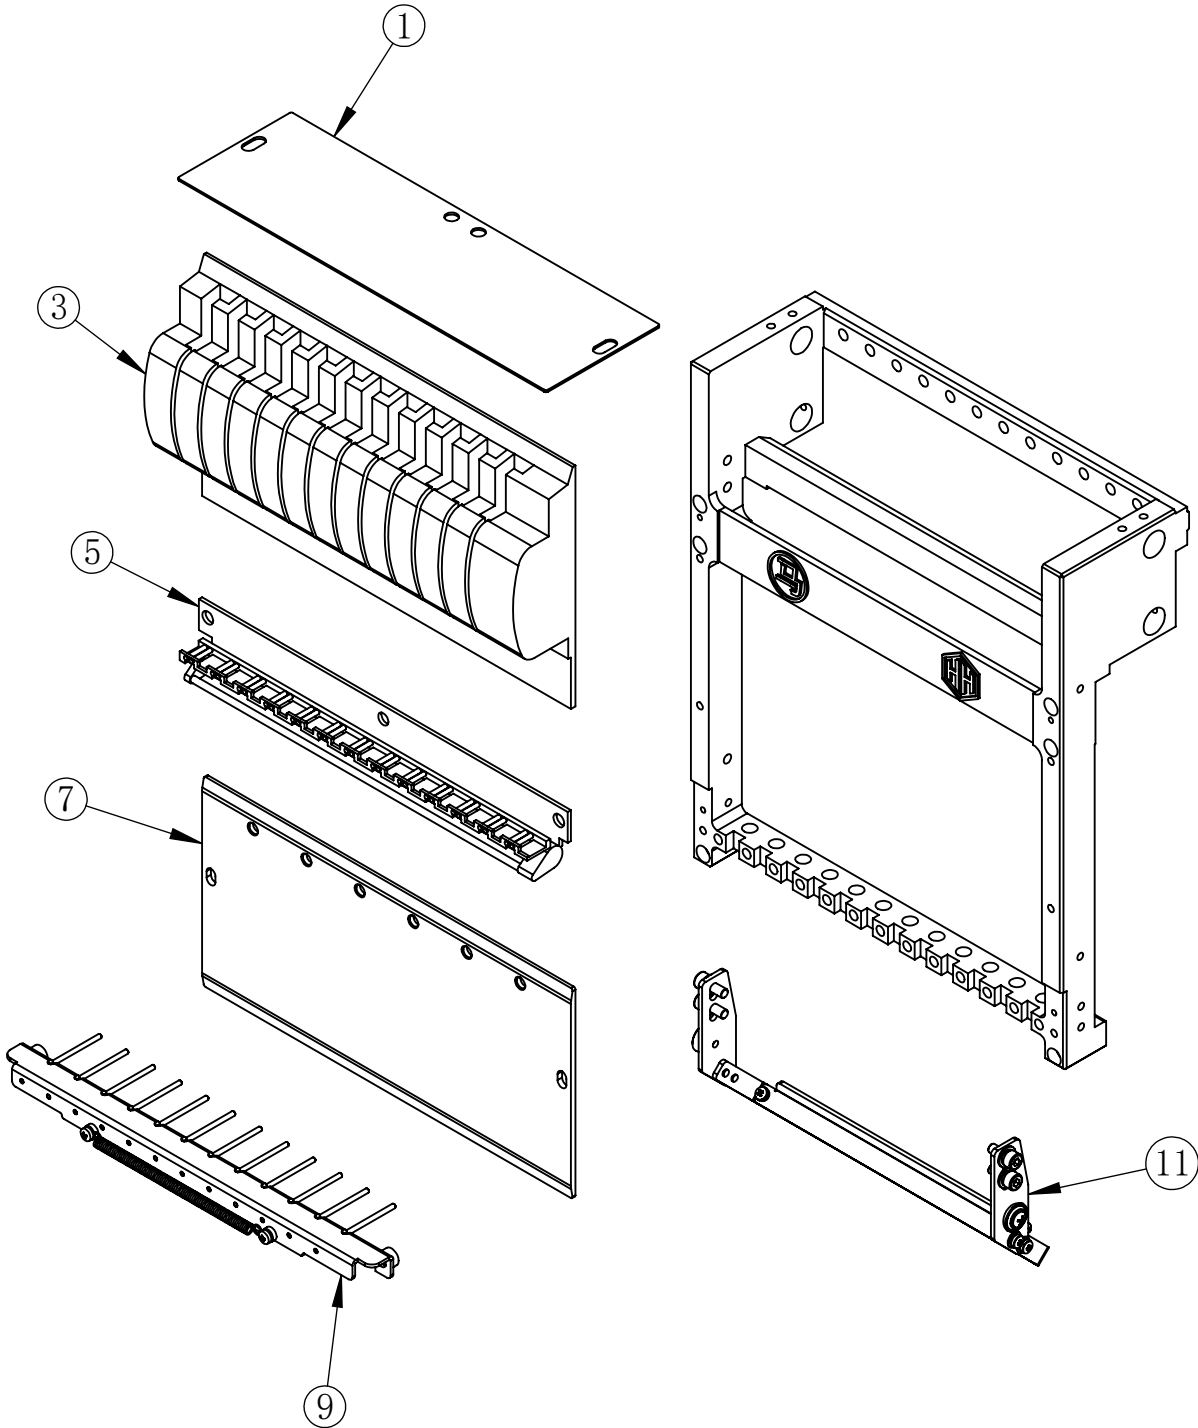

7-3 Needle Bar Case 3 针架3

No.	Chinese Description	Description	Part No.	Qty
1	针架上隔板 12N	Top Cover 12N	0102020055	1
2	针架上隔板 15N	Top CoverR 15N	0102020056	1
3	针架上面板 12N	Take-up Lever Cover 12N	0102020046	1
4	针架上面板 15N	Take-up Lever Cover 15N	0102020047	1
5	中过线组件 12N带簧式	Middle Thead Guide 12N	0302020003	1
6	中过线组件 15N带簧式	Middle Thead Guide 15N	0302020004	1
7	针架下面板 12N	Under Cover 12N	0105020031	1
8	针架下面板 15N	Under Cover 15N	0105020032	1
9	面线架组件 12针 左置	Upper Thread Lock 12N L	0302010053	1
10	面线架组件 15针 左置	Upper Thread Lock 15N L	0302010055	1
11	下毛刷组件 12N	Baseupper Thread Holder 12N	0302010042	1
12	下毛刷组件 15N	Baseupper Thread Holder 15N	0302010043	1


8 Thread Stand 线架

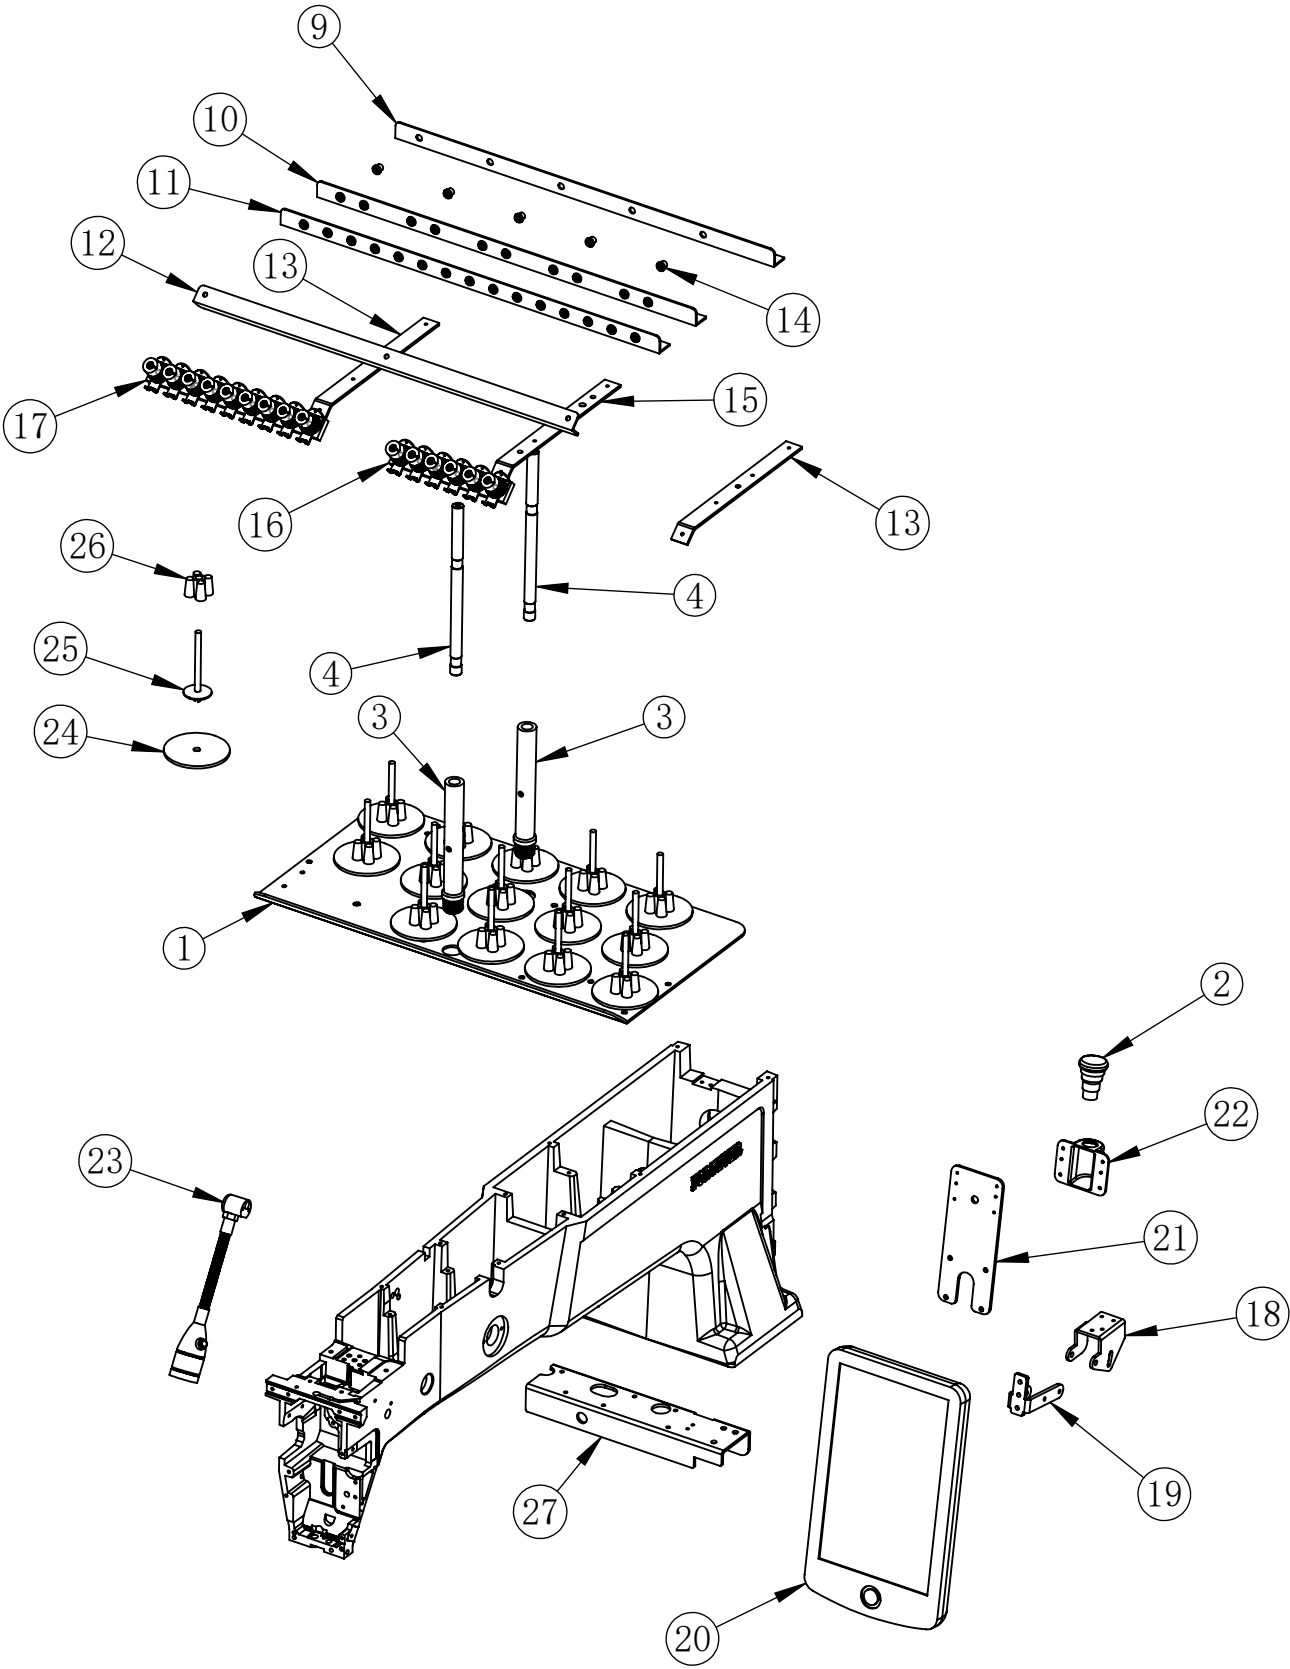

8 Thread Stand 线架

No.	Chinese Description	Description	Part No.	Qty
1	大马头15针线盘	Thread Stand Plate	0105210003	1
2	小急停开关	Emergency Stop Switch	0207060001	1
3	马头机线架立柱-座	Thread Stand Column	0105210005	2
4	马头机线架立柱-杆	Thread Stand Column	0105210004	2
5	过线道角铝 - 后12N	Aluminum Strip 1	0105210008	
6	过线道角铝 - 中后12N	Aluminum Strip 2	0105210012	
7	过线道角铝 - 中前12N	Aluminum Strip 3	0105210016	
8	过线道角铝 - 前12N	Aluminum Strip 4	0105210020	
9	过线道角铝 - 后15N	Aluminum Strip 1	0105210009	1
10	过线道角铝 - 中后15N	Aluminum Strip 2	0105210013	1
11	过线道角铝 - 中前15N	Aluminum Strip 3	0105210017	1
12	过线道角铝 - 前15N	Aluminum Strip 4	0105210021	1
13	线架横档 - 两边	Thread Lead Plate	0105210025	2
14	线架瓷眼	Porcelain Sleeve	0105210001	30
15	线架横档	hread Lead Plate	0105210024	1
16	过线钮组件6N	Thread Tension Set	0105210027	1
17	过线钮组件9N	Thread Tension Set	0105210026	1
18	操作头支架B	Face Plate Stand B	0105090003	1
19	操作头支架A	Face Plate Stand A	0105090001	1
20	电脑操作头	RCM Operation Panel		1
21	急停支架板	Plate	0105090002	1
22	急停开关盒	Box	0105090020	1
23	LED灯	Led Lamp	0207050001	1
24	线盘毛毡垫D70	Felt	0105210030	15
25	塑料线钉	Pin	0105210028	15
26	线钉张紧塑料块	Block	0105210029	15
27	显示器支架 - 新马头Y500	Face Plate Bracket Base	0105090008	1


10 Color Change Parts 换色

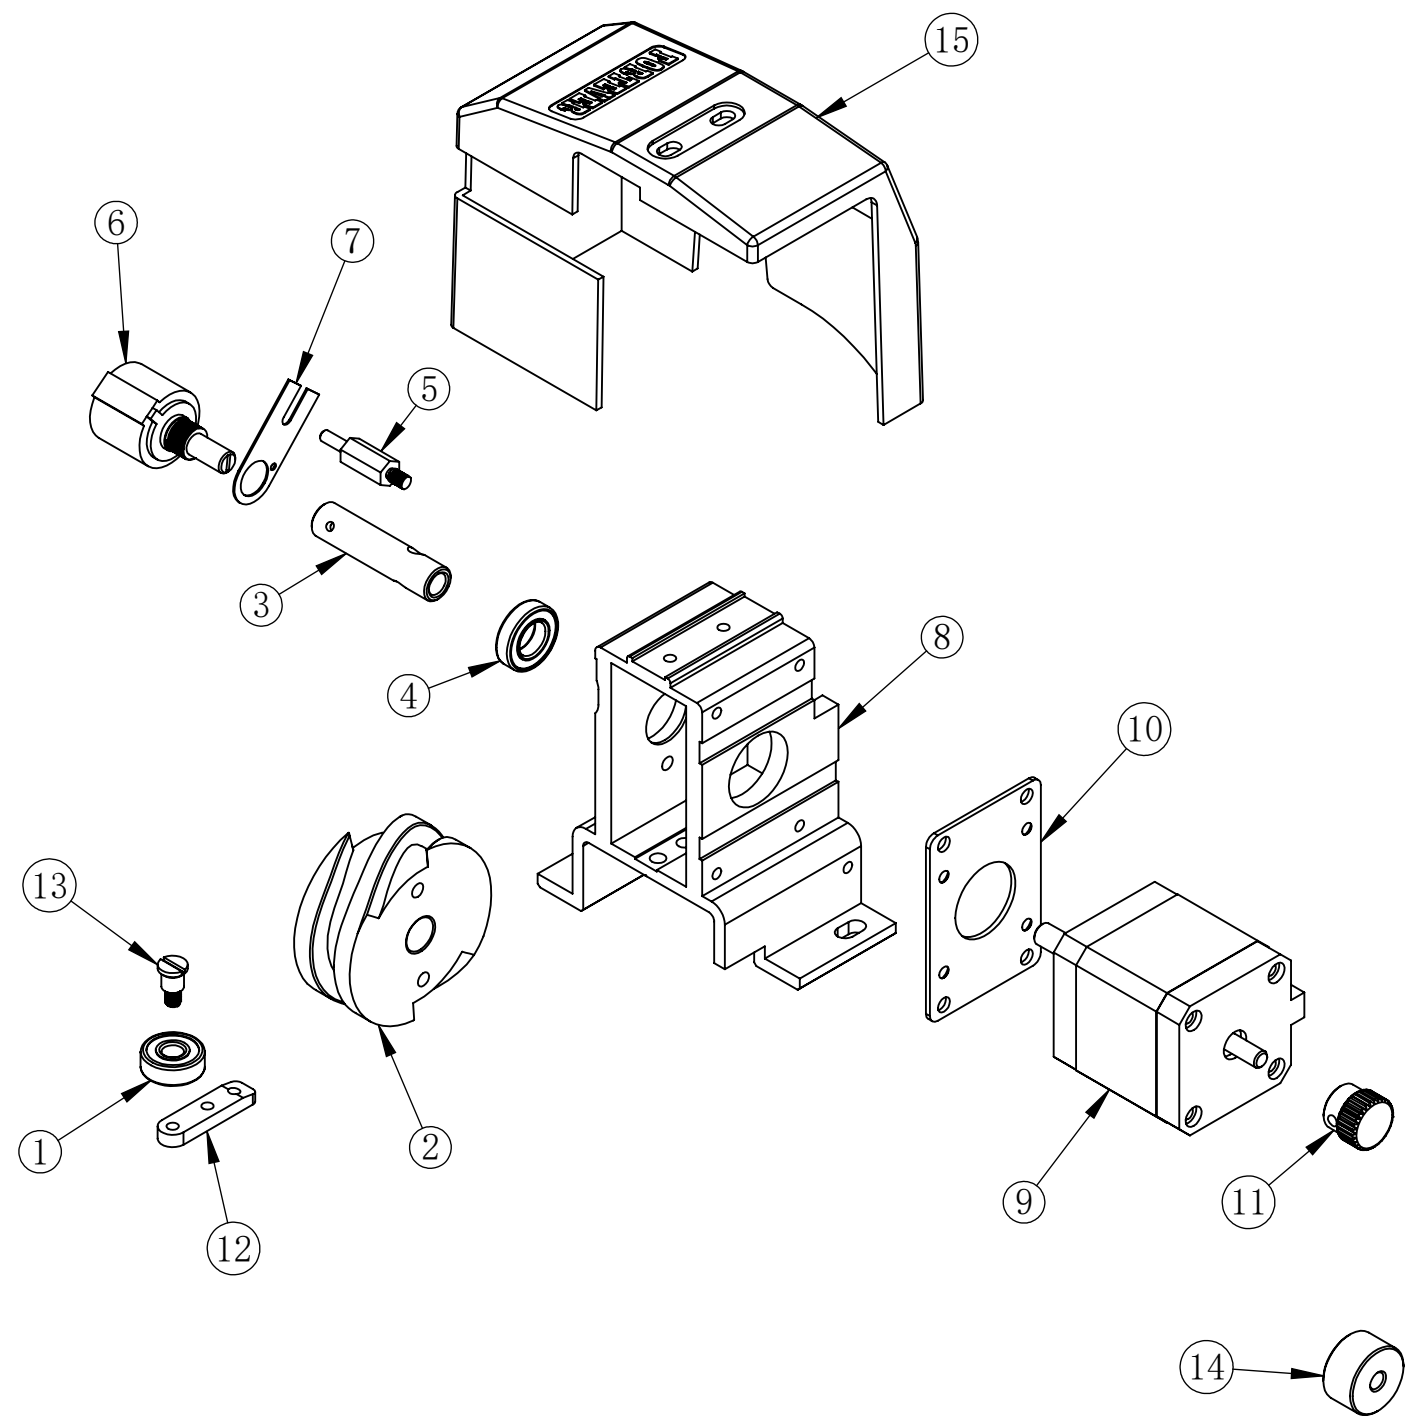

10 Color Change Parts 换色

No.	Chinese Description	Description	Part No.	Qty
1	轴承606z	Bearing	0202010012	1
2	换色 凸轮	Cam	0105080001	1
3	换色凸轮轴套 - 家用机	Bushing	0110080002	1
4	轴承6800z	Bearing	0202010011	1
5	电位器螺栓	Fixed Bolt	0105080004	1
6	电位器	Potentiometer	0207020001	1
7	电位器支撑板	Potentiometer Sopport	0105080010	1
8	换色底座 - 铝型材	Color Change Base	0110080001	1
9	电机 42H47	Motor	0206010004	1
10	42换色电机板	Motor Plate	0110080003	1
11	电机旋钮 - 家用机	Handle	0110080004	1
12	自扣轴承板	Bearing Plate	0110080005	1
13	换色轴承台阶销d6L12	Pin	0105080005	1
14	电机手动旋钮	Manual Knob	0105040001	2
15	马头换色罩盖	Cover	0105080019	1


11 Table 台板

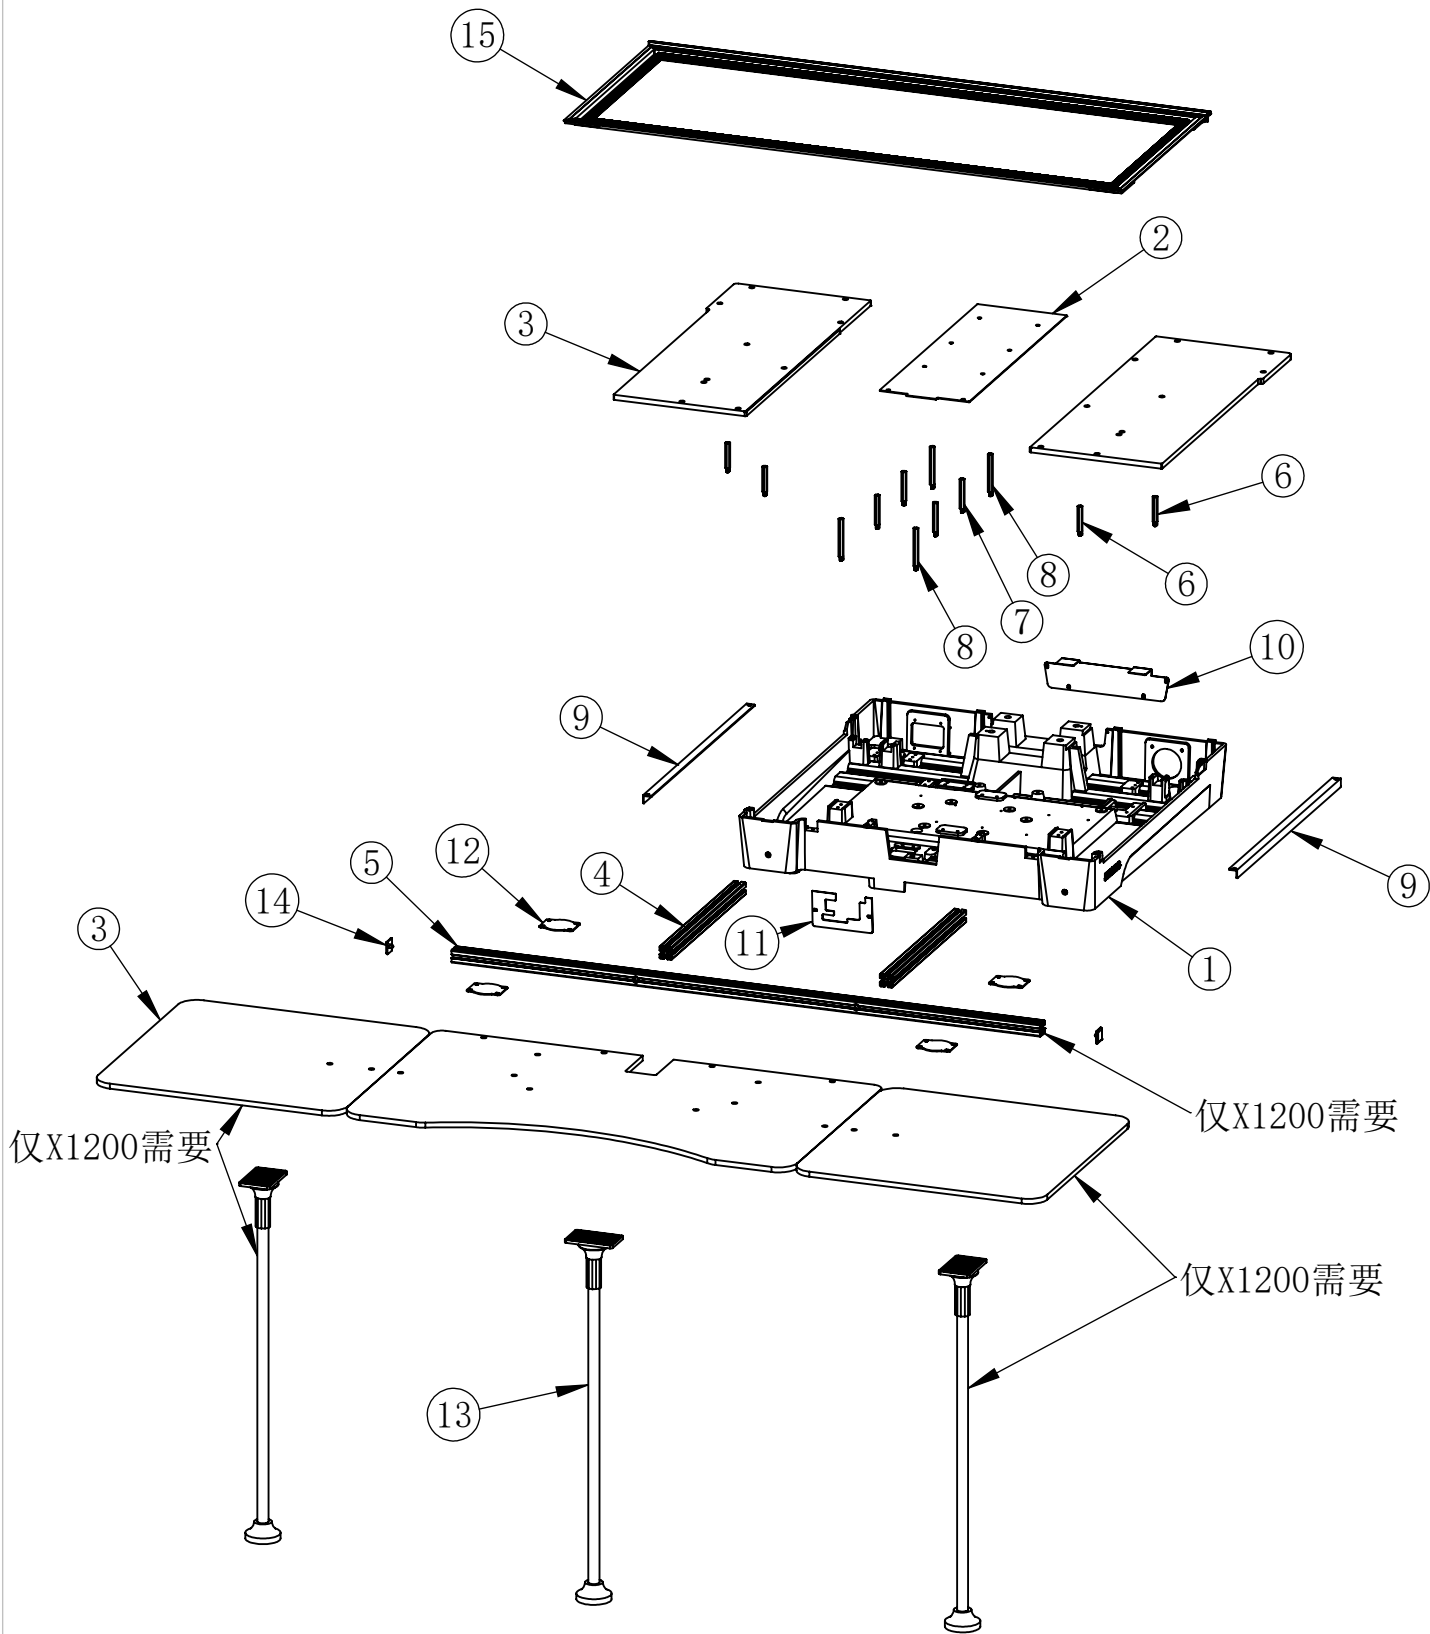

11 Table 台板

No.	Chinese Description	Description	Part No.	Qty
1	马头铝盆Y500D	Base	0105110093	1
2	Y500盆不锈钢盖板 - 中	Cover	0105110094	1
3	4#Y500台板	Table	0105130026	1
4	30工业方管L470	Aluminium Pipe	0105110095	2
5	30工业方管L1415	Aluminium Pipe	0105110073	1
6	台板螺柱 - H60	Table Studs	0105110090	4
7	盖板螺柱 - H70	Cover Support H70	0105110047	4
8	盖板螺柱 - H90	Cover Support H90	0105110096	4
9	盆侧护板 - 角铝	Side Cover	0105110097	2
10	盆后侧盖板	Back Side Cover	0105110098	1
11	Y600盆梭床前盖板	Front Cover	0105110075	1
12	桌面拼接件	Table Connecting Piece	0105110074	4
13	台板前支撑柱组件	Table Support Set		3
14	30铝管堵头	Covering	0105110078	2
15	大框架	Sash Frame		1

12. Thread Tension Base 夹线器组件

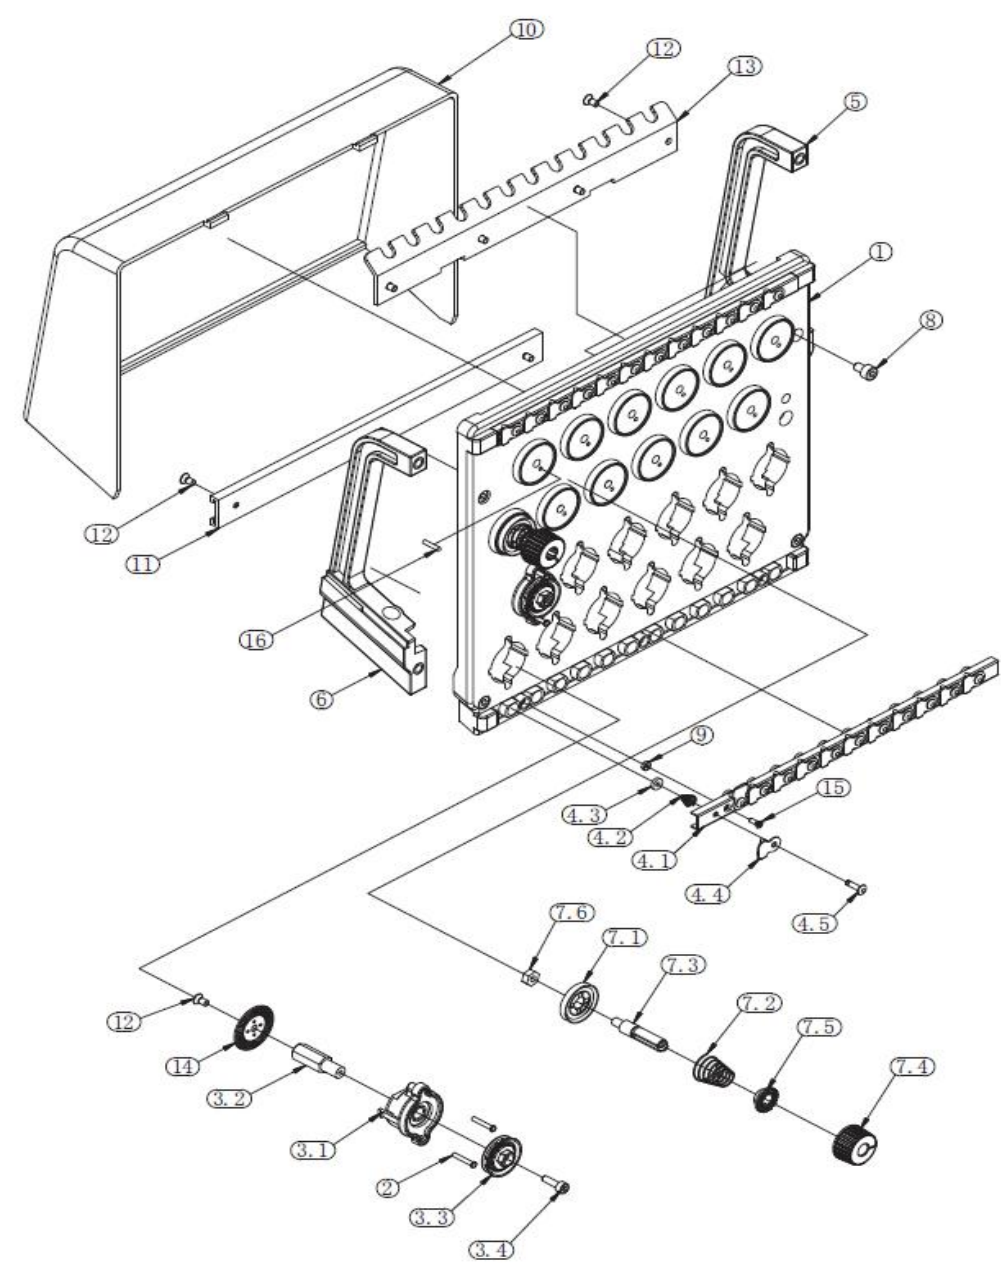

12. Thread Tension Base 夹线器组件

No.	Chinese Description	Description	Part No.	Qty
12. 1	夹线器总成-余美真6针	Thread lead plate-06 For 06-Needle	305060005	1SET/H
	夹线器总成-余美真9针	Thread lead plate-06 For 09-Needle	305060006	
	夹线器总成-余美真12针	Thread lead plate-12 For 12-Needle	305060007	
	夹线器总成-余美真15针	Thread lead plate-15 For 15-Needle	305060008	
12. 1	夹线器总成-集美6针	Thread lead plate-06 For 06-Needle	305060001	1SET/H
	夹线器总成-集美9针	Thread lead plate-09 For 09-Needle	305060002	
	夹线器总成-集美12针	Thread lead plate-12 For 12-Needle	305060003	
	夹线器总成-集美15针	Thread lead plate-15 For 15-Needle	305060004	
	夹线器总成-金龙鼎6针	Thread lead plate-06 For 06-Needle	305060005	
	夹线器总成-金龙鼎9针	Thread lead plate-09 For 09-Needle	305060006	
	夹线器总成-金龙鼎12针	Thread lead plate-12 For 12-Needle	305060007	
	夹线器总成-金龙鼎15针	Thread lead plate-15 For 15-Needle	305060008	
	夹线器总成-丹阳6针	Thread lead plate-06 For 06-Needle	305060009	
	夹线器总成-丹阳9针	Thread lead plate-09 For 09-Needle	305060010	
	夹线器总成-丹阳12针	Thread lead plate-12 For 12-Needle	305060011	
	夹线器总成-丹阳15针	Thread lead plate-15 For 15-Needle	305060012	

13 Stand 底架

13 Stand 底架

No.	Chinese Description	Description	Part No.	Qty
1	马头Y500可叠下架子			1
2	机脚调节垫螺丝	Adjust Bolt	0305110001	4
3	脚轮	Casor	0210010007	4

