

MODEL : LBH-1796A (搬送補助クランプ装置)

List No : 1663-00


PARTS LIST

Published:02/15/2019

CONTENTS

AUXILIARY CLAMP DEVICE	1
HOW TO MAKE USE OF THIS PARTS LIST	5

AUXILIARY CLAMP DEVICE

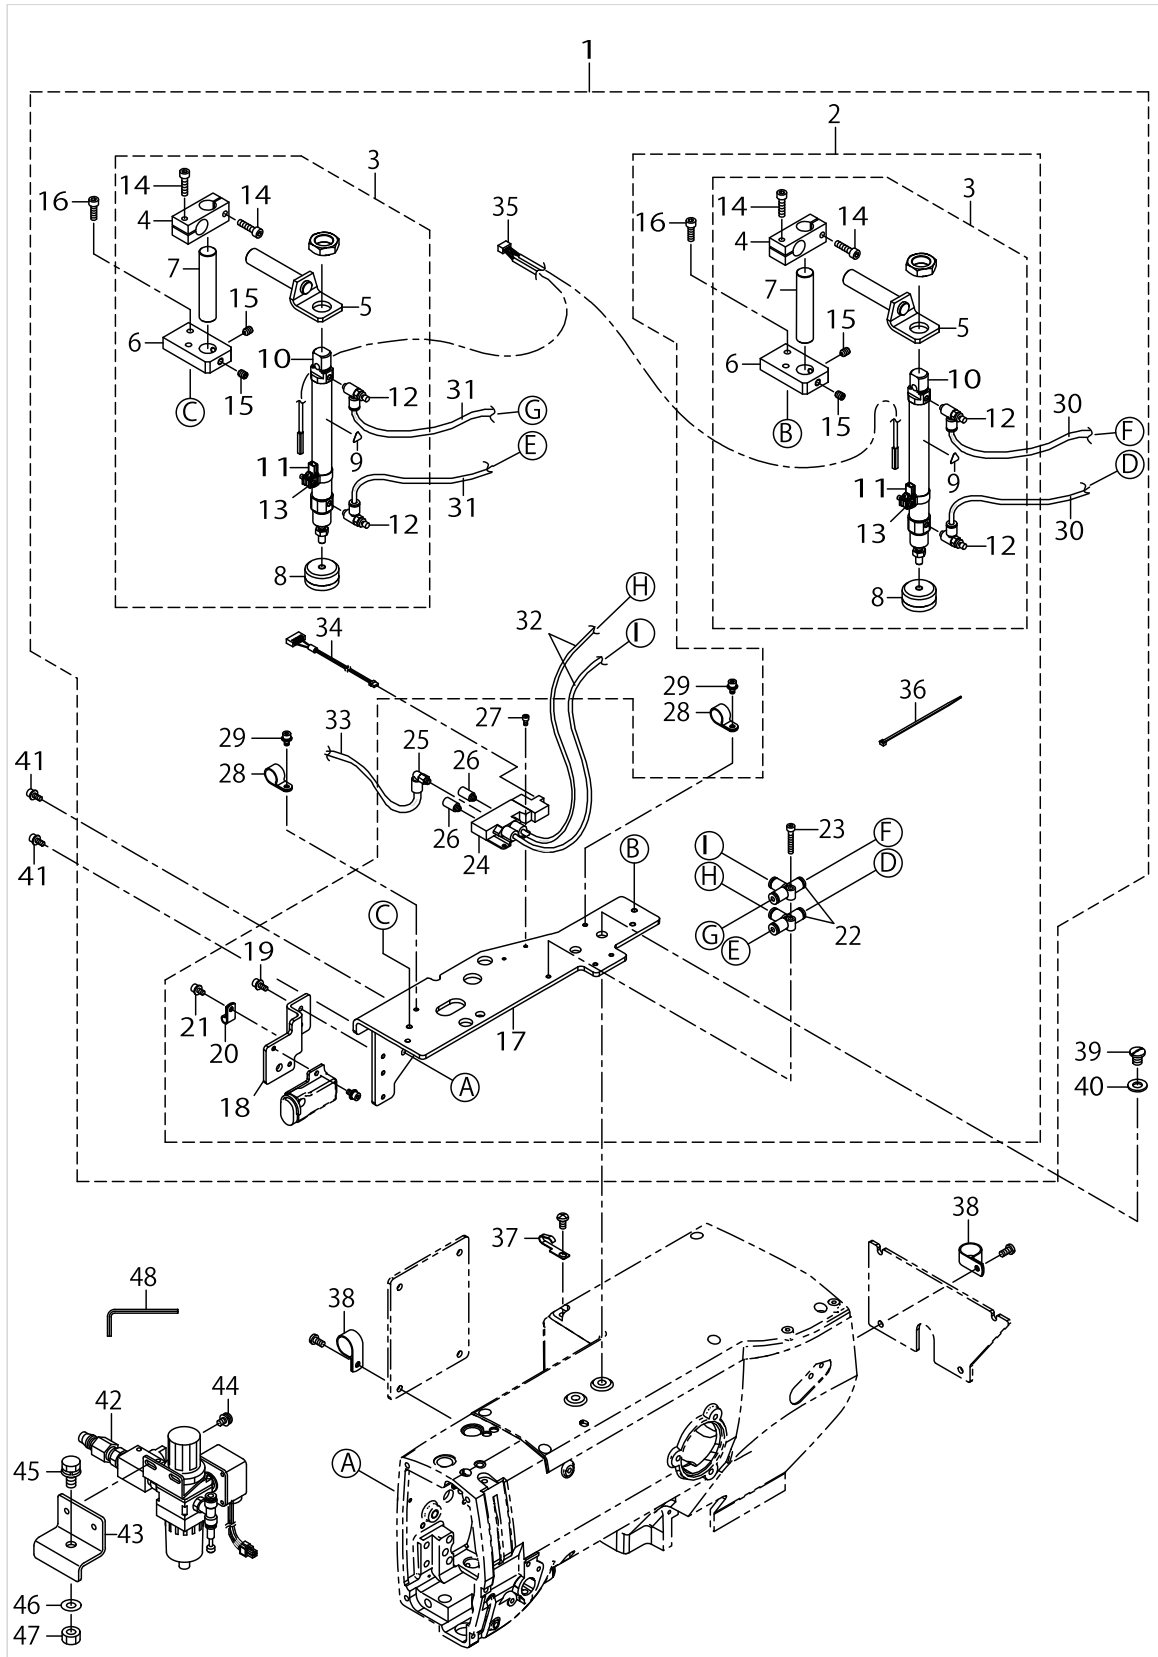

AUXILIARY CLAMP DEVICE

No.	Parts No.	Parts name	Remarks	Level	Cons	Qty
1	40155454	AUXILIARY CLAMP DEVICE ASSY				1
2	40154437	AUXILIARY CLAMP ASSY		*		1
3	40154132	AUXILIARY CLAMP ASSY		*		2
4	40039743	CLOTH_LENGTHEN_BRACKET_D		*		1
5	40039744	CLOTH_LENGTHEN_BKT_ASSY		*		1
6	40154428	SHAFT_BASE		*		1
7	40154429	SHAFT		*		1
8	40154432	PAD HOLDER_ASSY		*		1
9	CM300200001	ATTENTION SEAL		*		1
10	PA1609502A0	AIR CYLINDER		*		1
11	PA900080000	HOLDER SET		*		1
12	PC010508000	SPEED CONTROLLER		*		2
13	PX5000480A0	SWITCH FITTING METAL		*		1
14	SM6052002TN	BOLT		*		2
15	SM8060802TP	SCREW M6 L=8		*		2
16	SM6051602TN	BOLT		*		4
17	40154425	BASE_PLATE		*		1
18	40154426	SWITCH_BRACKET		*		1
19	SL6041092TN	SCREW		*		2
20	HX00150000B	CABLE CLIP		*		1
21	SL6040892TN	BOLT		*		1
22	PJ305040001	TEE		*		2
23	SM6042502TN	SCREW M4X0.7 L=25		*		1
24	PV1502060B0	5-PORT SOLENOID VALVE		*		1
25	PJ304060502	ELBOW UNION 6XM5		*		1
26	PX050501000	SILENCER		*		2
27	SM6030602TP	SCREW M3X0.5 L=6		*		2
28	HX00150000G	CABLE CLIP		*		2
29	SL6040892TN	BOLT		*		2
30	BT0400251EB	URETHANE HOSE, BLACK		*		0.32
31	BT0400251EB	URETHANE HOSE, BLACK		*		0.4
32	BT0400251EB	URETHANE HOSE, BLACK		*		0.05
33	BT0600401EB	TUBE		*		2
34	40154433	AIR VALVE CORD ASM		*		1
35	40154435	CLAMP CYLINDER SENSOR ASM		*		1
36	EA9500B0100	CABLE BAND		*		18
37	26230409	LUBRICATING OIL WICK STOPPER				1
38	HX00150000K	CABLE CLIP				2
39	SS7701010SP	SCREW 5/16-24 L=10				2
40	WP0841601SE	WASHER				2
41	SL6041092TN	SCREW				2
42	40030951	FILTER_REGULATOR_ASM.				1
43	40023662	FILTER INSTALLING PLATE				1
44	SL4051091SC	SCREW M5X0.8 L=10				2
45	SL9082093SE	SCREW				1
46	WP0871602SE	WASHER 8.7X18X1.6				1
47	NM6080721SE	NUT M8				1

AUXILIARY CLAMP DEVICE

No.	Parts No.	Parts name	Remarks	Level	Cons	Qty
48	B9140372000	HEXAGONAL WRENCH, SMALL				1

HOW TO MAKE USE OF THIS PARTS LIST

1.As to "#01" and "#02" refer to the "Note" given at the bottom of the respective pages.

2.Codes on the "Qty" column

- Each numeral indicates the number of parts required.
- "0.1" and "2.5" indicate the length (in meters) of the respective parts.

3.Parentheses mean that the corresponding part is a subpart that constructs an assembly part.

4.Dotted lines on the Figures indicate assembly parts.

1. リストページの# 0 1、# 0 2の印は、ページ下の"注記"の説明を参照下さい。
2. 数量欄の数字は、個数を表し、0. 1、2. 5等の数値は、長さ（単位メートル）を表します。
3. 数量欄の（ ）は、組部品を構成している子部品であることを意味します。
4. イラストページの-----枠は、組構成であることを意味します。

NUMERICAL INDEX OF PARTS

PART NO	PAGE	REF NO.
26230409	2	37
40023662	2	43
40030951	2	42
40039743	2	4
40039744	2	5
40154132	2	3
40154425	2	17
40154426	2	18
40154428	2	6
40154429	2	7
40154432	2	8
40154433	2	34
40154435	2	35
40154437	2	2
40155454	2	1
B9140372000	4	48
BT0400251EB	2	32
BT0600401EB	2	33
CM300200001	2	9
EA9500B0100	2	36
HX00150000B	2	20
HX00150000G	2	28
HX00150000K	2	38
NM6080721SE	2	47
PA1609502A0	2	10
PA900080000	2	11
PC010508000	2	12
PJ304060502	2	25
PJ305040001	2	22
PV1502060B0	2	24
PX050501000	2	26
PX5000480A0	2	13
SL4051091SC	2	44
SL6040892TN	2	29
SL6041092TN	2	41
SL9082093SE	2	45
SM6030602TP	2	27
SM6042502TN	2	23
SM6051602TN	2	16
SM6052002TN	2	14
SM8060802TP	2	15
SS7701010SP	2	39
WP0841601SE	2	40
WP0871602SE	2	46