

PARTS BOOK

Small-Head E-Series

E-WD904-75

PME-110725

Notice

1. 본 책자는Parts Book으로 제작되었으므로 매뉴얼로 사용 불가합니다.
2. 조에 속한 파트는 개별 조립 시 제품의 파손 또는 자수 불량일 수 있어 해당 파트에 대한 주문 시에는 조 품목으로만 구입이 가능합니다.
3. 당사의 Part Book은 다음과 같은 순서로 분류되어 있으니 제품을 구입한 소비자께서는 다음과 같은 순서로 제품을 검색하여 주십시오.

- 1) Machine Layout
- 2) Section
- 3) Part List

※소모성 부품은 자수 기계의 보증 기간과 상관 없음.

1. This is a parts book. It cannot be used as a manual.
2. The parts classified as ass'y items may cause damage to the machine or bad embroidery when they are separately assembled.
Hence, when they are ordered, they can be purchased as ass'y items only.
3. The Part Book is classified as below and users could search products in the following order.

 
- 1) Machine Layout
- 2) Section
- 3) Part List

※Consumable parts shall not be guaranteed even in warranty period.

Information

A. Structure of Part Book

1. Machine Layout

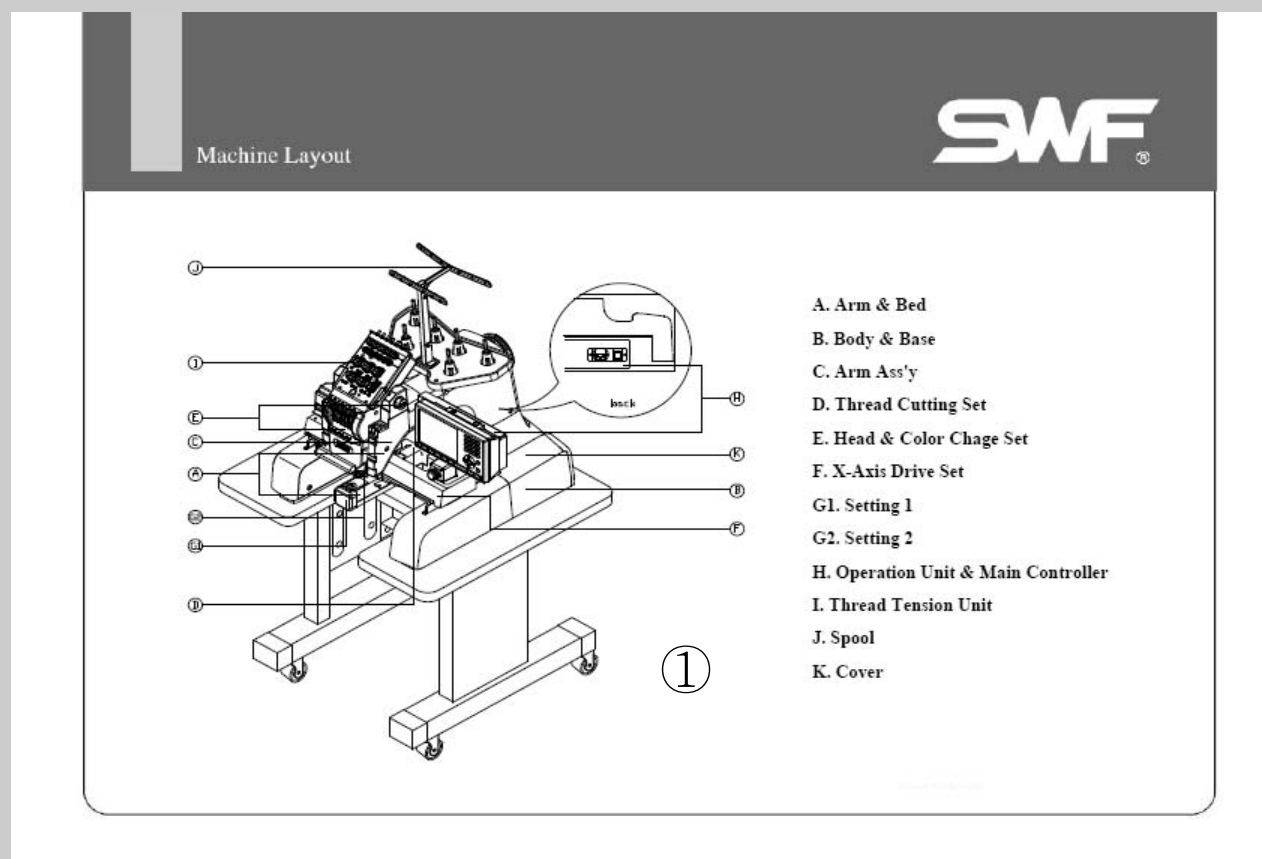


Information

A. Structure of Part Book

2. Section

 - ① : Index Number
 - ② : Index Group
 - ③ : Related Parts
- Ex) A-1, A-2, A-3...

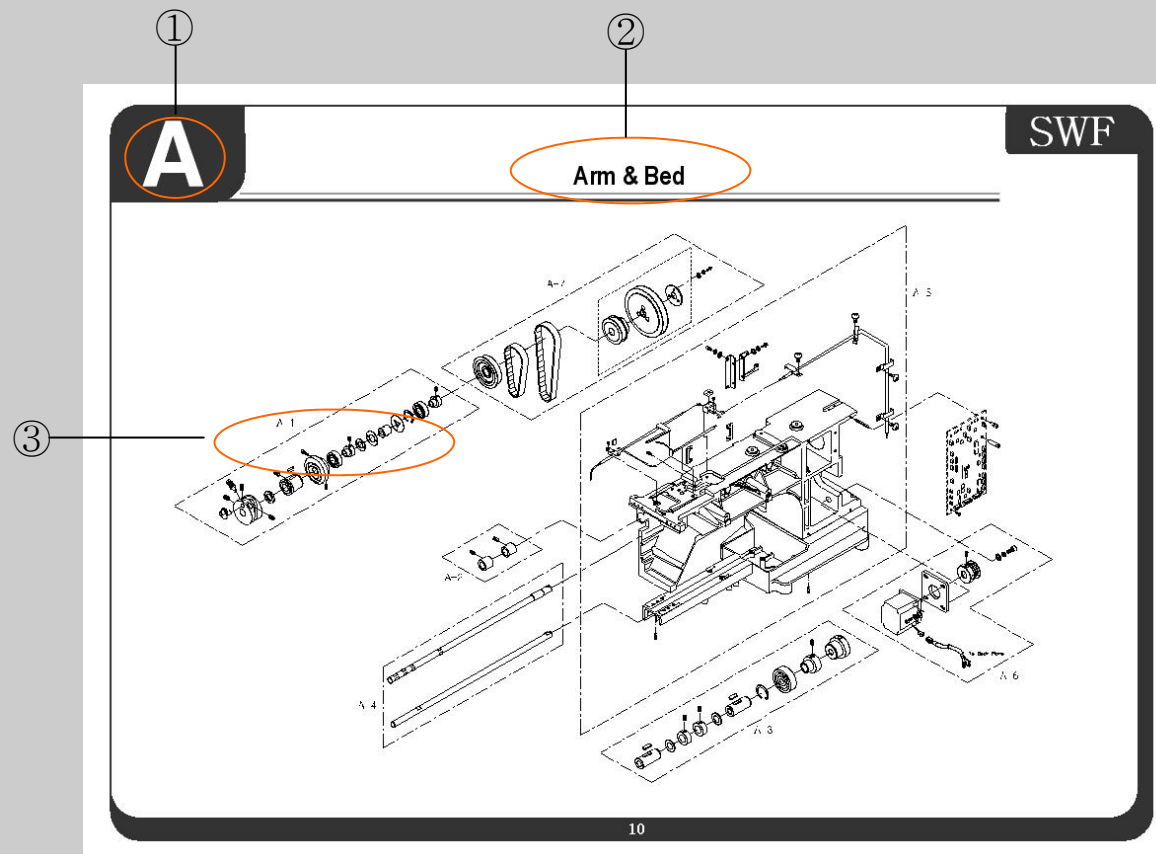

Information

A. Structure of Part Book

3. Part List

①

A-1

Note

③ Ref No	④ Part No	⑤ Part Name	⑥ Applied Period	⑦ Interchangeability	⑧ Hardware	⑨ Qty	⑩ Remark
A-1-1	0101SCM-T900	Two-up Lever Driving Cam	Oct-08-07 ~ Oct-08-07			1	
A-1-2	02-033421-00	Two-up Lever Driving Cam		X		1	
A-1-3	01017CW-T121	Cam Screw (8/32x20L=17)				1	
A-1-4	01016SC-4313	Screw (1/8x3/8x20 L=7.5)			O	1	
A-1-5	01016SC-4313	Hex. Socket Set Screw (1/4" 20x40 L=4.5)				1	
A-1-6	01020RR-A001	Washer				2	
A-1-7	01020RR-A001	Washer				1	
A-1-8	01020RR-T900	Needle Bar Crank				1	
A-1-9	01012MP-T121	Upper Shaft Bushing (H)				1	
A-1-10	01004SC-4317	Screw (1/8x3/8x20 L=14)			O	3	
A-1-11	01014SP-T121	Pelt				1	
A-1-12	01013CM-CT01	Presser Foot Driving Cam				1	
A-1-13	04012AP-A001	Screw (1/8x3/8x20)			O	3	
A-1-14	11098SC-4313	Screw (M4xL20)			O	1	
A-1-15	01020RR-A001	Washer (600422)				1	
A-1-16	010000001000	Rearizer Collar				2	
A-1-17	04012AP-A001	Screw (1/8x3/8x20)			O	3	
A-1-18	WS-00018R-00	Washer				1	
A-1-19	CL-000097-00	Code Wheel				1	
A-1-20	CL-000097-00	Collar				1	
A-1-21	01016SC-4313	Screw (1/8x3/8x20)			O	1	
A-1-22	01016SC-4313	C-Roller (H477)			O	1	
A-1-23	01016SC-4313	Rearizer (600422)				1	

Note) * : Checks the timing of application.

① Index Number
Ex) A-1, A-2...

② Part View

Information

A. Structure of Part Book

③ Ref. No

④ Part No

Ex)

Category	CODE	Remark
Old part	16009SC-4113	
New part	AS -000000-00	Set parts (Set 구성품)
	GP -000000-00	Instrumental parts (기구적 파트)
	EP -000000-00	Electrical parts (전기적 파트)

⑤ Parts Name : 파트들의 고유 품명을 표기 : Refers to unique names of parts

⑥ Applied Period

Ex1) 2007년2월10일 적용, 2008년7월10일 폐기
-> Feb.10.07 ~ Jul.10.08

Ex1) Applied from Feb. 10, 2007, To on July 10, 2008
-> Feb.10.07 ~ Jul.10.08

Ex2) 2007년 2월 10일 부터 파트북 발행일 까지 적용
-> Feb.10.07 ~

Ex2) Applied from Feb. 10, 2007
-> Feb.10.07 ~

Information

A. Structure of Part Book

⑦ Interchangeability

O : 구 부품을 신 부품으로 교환 가능

신 부품을 구 부품으로 교환 가능

: It is interchangeable between old and new part.

X : 구 부품을 신 부품으로 교환 불가능

신 부품을 구 부품으로 교환 불가능

: It is not interchangeable between old and new part.

△ : 구 부품을 신 부품으로 교환 가능

신 부품을 구 부품으로 교환 불가능

: It is interchangeable by new part only.

Interchangeability		
O	X	△
Old -> New: OK New -> Old : OK	Old -> New: NO New -> Old : No	Old -> New: OK New -> Old : No

⑧ Hardware : 시중에서 구매 할 수 있는 부품

: Parts that can be purchased in the market

⑨ Q'ty : 사용 파트의 수량을 표기

: Quantity of part

 
⑩ Remark

⑪ Index Number

⑫ 조 및 프레스폼 ...

Set & Press Part ...

Machine Layout

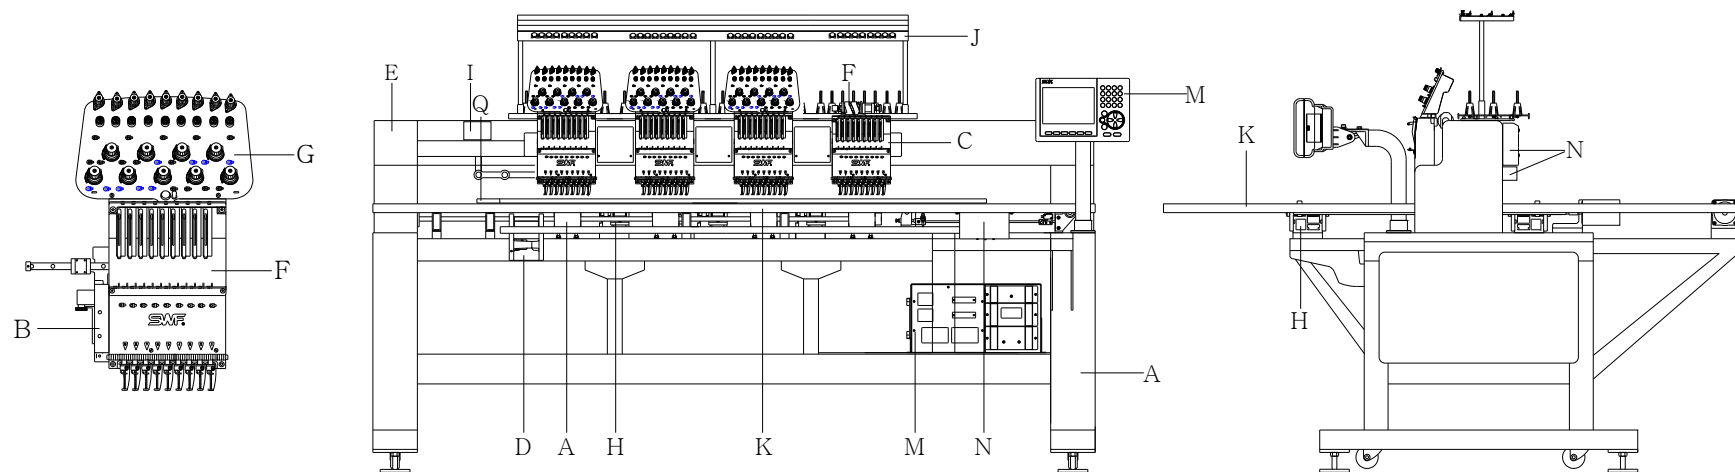

A. Beam Body & Bed

B. Arm1

C. Arm 2

D. Thread Cutting Drive System

E. Main Drive System

F. Head

G. Thread Tension Unit

H. XY-Axis Drive System

I. Setting

J. Thread Stand

K. Work-Table

L. Cable

M. Con box & OP box

N. Lamp & Switch

O. Bobin Winder

P. Cover

Q. Frame

R. Option (Laser)




CONTENT


A	Beam Body & Bed	10
B	Arm 1	13
C	Arm 2	20
D	Thread Cutting Set	24
E	Main Drive System	30
F	Head & Color Change	35
G	Thread Tension Unit	42
H	X-Y Drive	46
I	Setting	56

J	Spool	62
K	Table	65
L	Cable	68
M	Con Box & O/P Box	71
N	Lamp & Switch	78
O	Bobbin Winder	81
P	Cover	84
Q	Frame	87
R	Option (Laser)	91
S	Index	93

 Beam Body & Bed

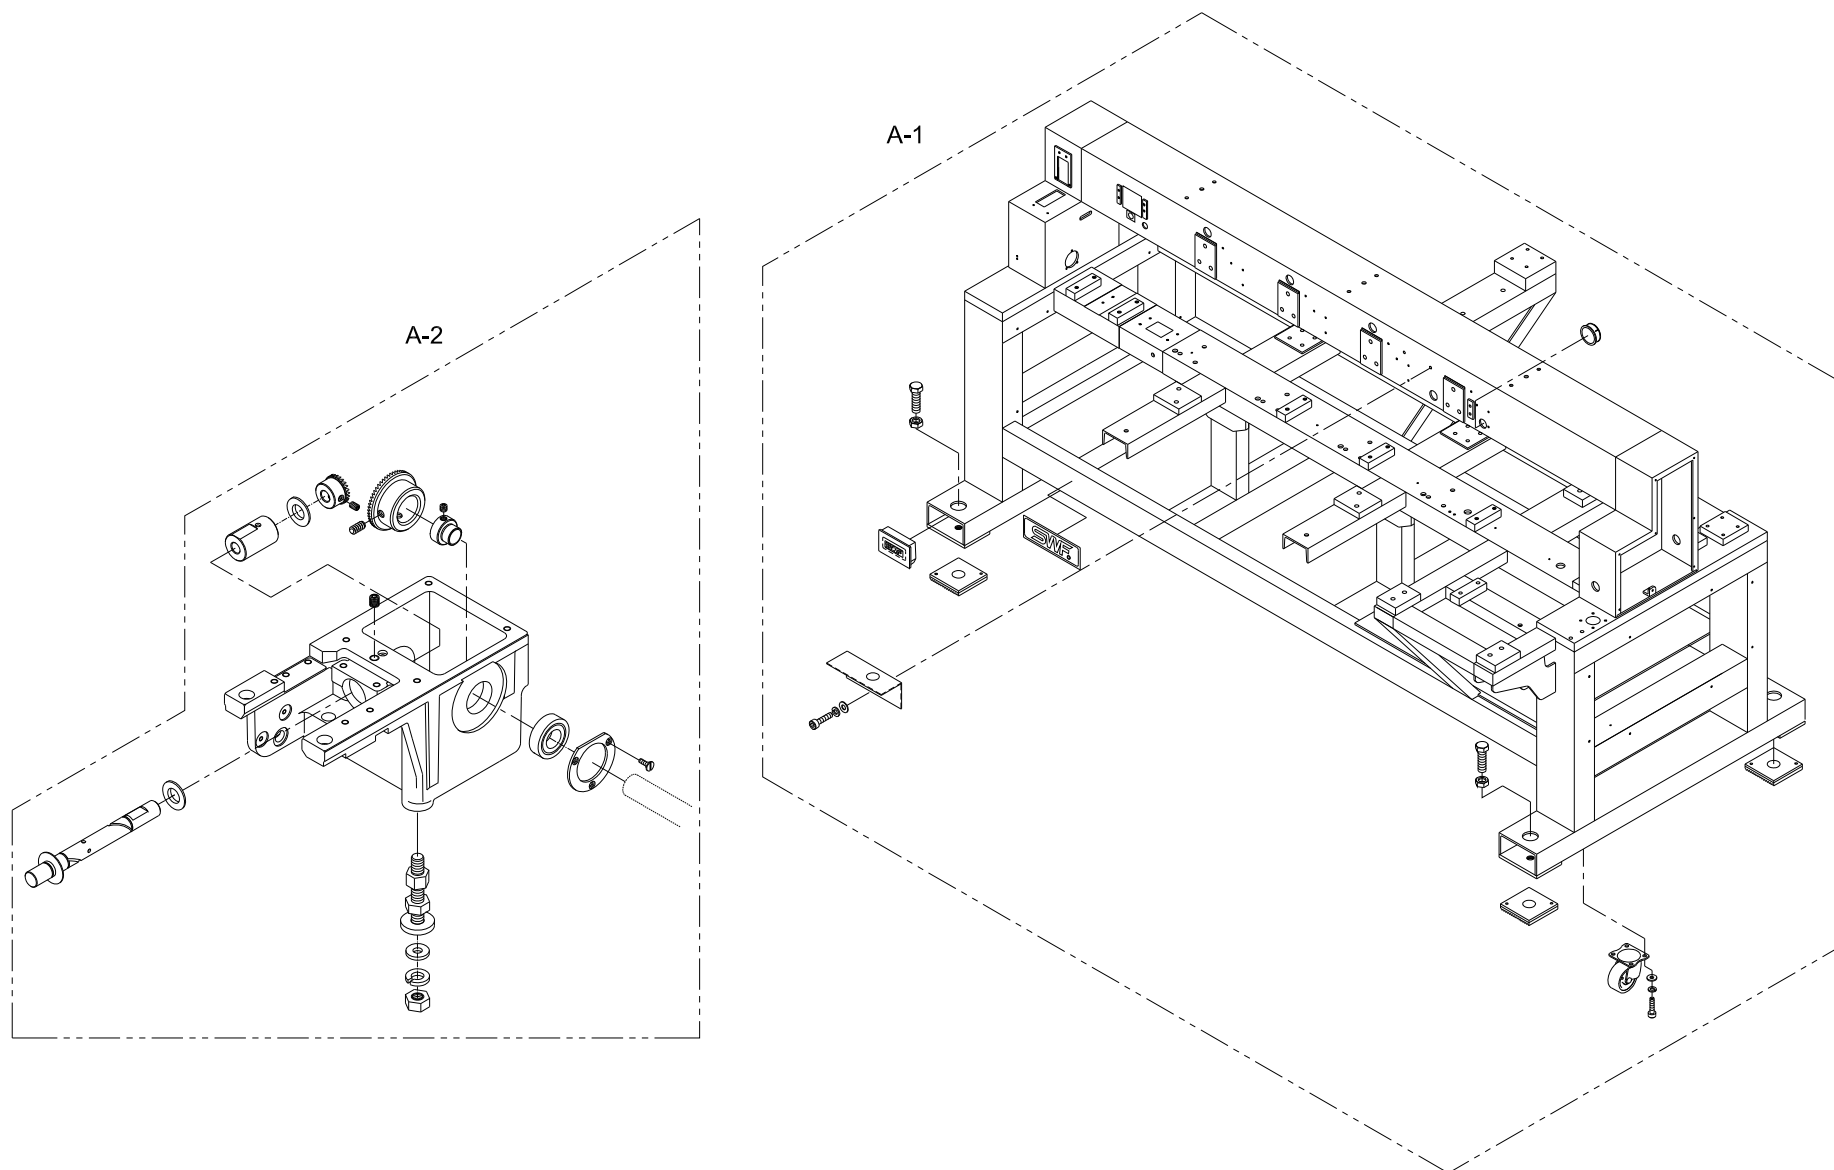


A

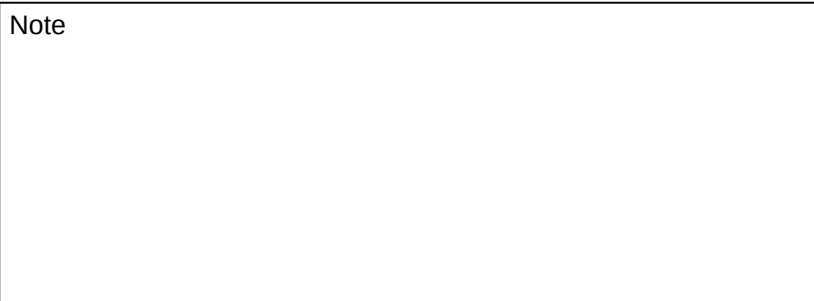 [illegible]

A

[illegible]

 Arm 1

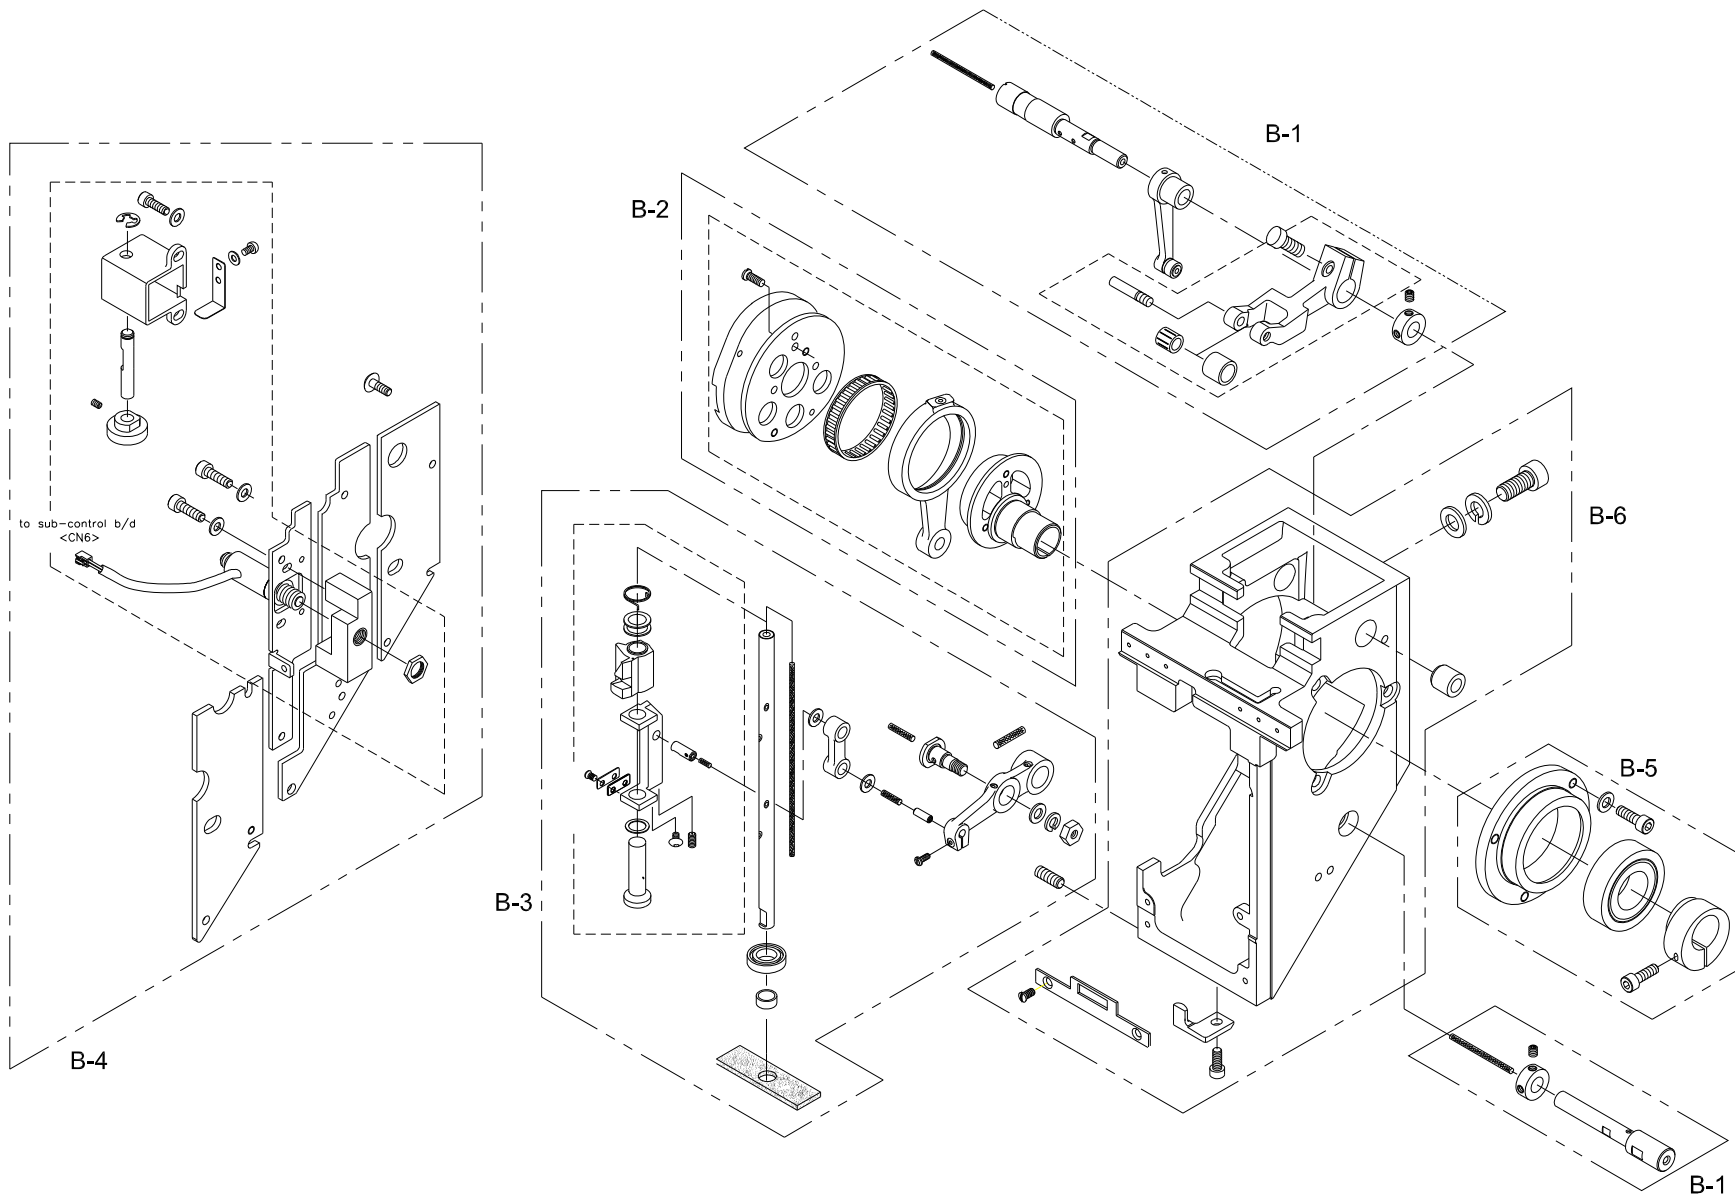

B-1

This exploded view diagram illustrates the assembly of a mechanical component, likely a door latch or handle. The parts are labeled as follows:

- B-1-1**: A long cylindrical shaft or handle.
- B-1-2**: A small pin or screw.
- B-1-3**: A small washer or spacer.
- B-1-4**: A small pin or screw.
- B-1-5**: A small pin or screw.
- B-1-6**: A small pin or screw.
- B-1-7**: A small pin or screw.
- B-1-8**: A small pin or screw.
- B-1-9**: A small pin or screw.
- B-1-10**: A small pin or screw.
- B-1-11**: A small pin or screw.
- B-1-12**: A small pin or screw.
- B-1-13**: A small pin or screw.
- B-1-14**: A small pin or screw.
- B-1-15**: A small pin or screw.
- B-1-16**: A small pin or screw.
- B-1-17**: A small pin or screw.

The diagram shows the assembly of the handle (B-1-1) into the main body (B-1-2) using various pins and screws (B-1-3 through B-1-17). The main body is shown in a dashed outline, indicating its internal structure and the location of the handle.

Note

B

B-2

B-2-8

This diagram illustrates the exploded view of the B-2-8 assembly. The components are labeled as follows:


- B-2-1**: The main rectangular housing or frame.
- B-2-2**: A cylindrical component, likely a motor or actuator, positioned at the bottom right.
- B-2-3**: A small, circular component, possibly a bearing or seal, located near the base of the cylindrical component.
- B-2-4**: A ring-shaped component, likely a gasket or O-ring, positioned above the cylindrical component.
- B-2-5**: A larger, circular component with multiple mounting holes, positioned at the top left.
- B-2-6**: A small, circular component, likely a cap or cover, positioned above the larger circular component.
- B-2-7**: A small, cylindrical component, likely a pin or screw, positioned at the top left.

The diagram shows the relative positions and assembly sequence of these components, with dashed lines indicating the alignment and fit of the parts.

Note

B

 B-3

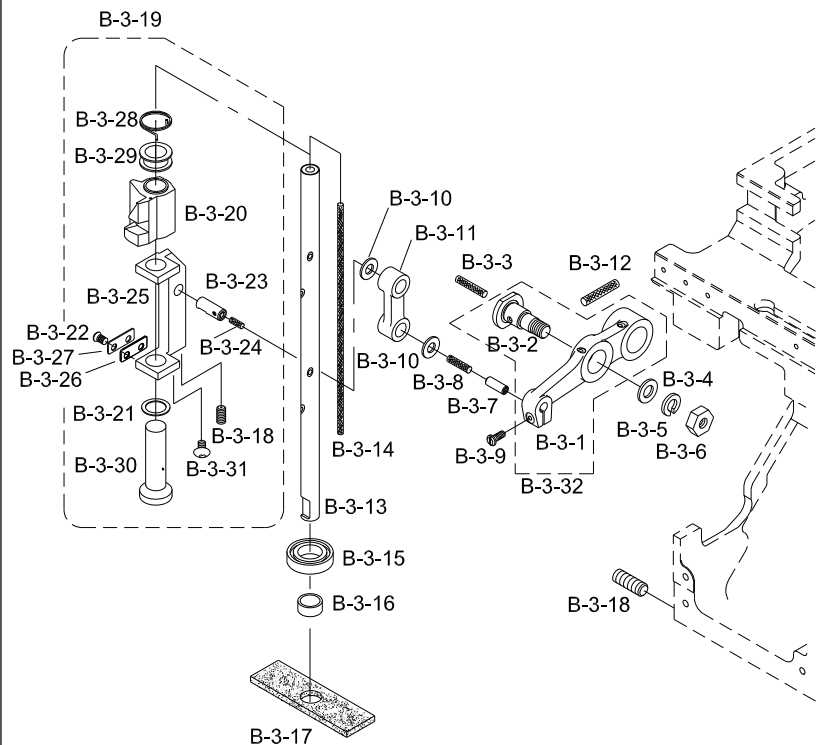

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
B-3-1	GP-020913-00	Needle Bar Drive Lever	Aug,26,06 ~ Nov,14,06	X		4	
	GP-020913-01		Nov,14,06 ~	△			
B-3-2	03023SC-A001	Connecting Rod Stud				4	
B-3-3	-	Wick				4	
B-3-4	03025SW-1211	Washer (@6)			O	4	
B-3-5	03026SW-9115	Spring Washer (@6)			O	4	
B-3-6	03027SN-A001	Stud Nut			O	4	
B-3-7	03303300H000	Lever Pin				4	
B-3-8	-	Wick				4	
B-3-9	02015SC-7113	Driving Lever Pin Screw				4	
B-3-10	03034SW-A001	Reciprocator Washer				8	
B-3-11	03003200A000	Needle Bar Drive Rink				4	
B-3-12	-	Wick				4	
B-3-13	GP-013117-00	NEEDLE BAR DRIVING SHAFT	Nov,07,05 ~	X		4	
B-3-14	-	Wick				4	
B-3-15	03008000H000	Ball Bearing 689 (Ntn)				4	
B-3-16	03008100K000	Needle Bar Drive Bearing Bush				4	
B-3-17	03053SF-A001	Felt "B"				4	
B-3-18	03020SC-A001	Drive Pin Screw 11/64,N40,L8			O	20	
B-3-19	03005BM-B001	Needle Bar Reciprocator Set				4	
B-3-20	GP-013756-00	Needle Bar Reciprocator	Dec,14,05 ~	X		4	
B-3-21	03048SW-A001	Reciprocator Washer				4	
B-3-22	03040SC-A001	Stopper Bracket Screw				8	
B-3-23	03033CW-A001	Driver Pin				4	
B-3-24	-	Wick				4	
B-3-25	GP-013762-00	Needle Driving Shaft Driver	Dec,14,05 ~ Jul,25,08	X		4	
	GP-013762-01		Jul,25,08 ~ Dec,03,08	△			
	GP-013762-02		Dec,03,08 ~ Feb,20,09	△			
	GP-013762-03		Feb,20,09 ~	△			
B-3-26	03041PR-B001	Reciprocator Stopper				4	
B-3-27	03039PR-B001	Stopper Bracket				4	
B-3-28	03045SP-B001	Jump Spring				4	
B-3-29	03046CW-B001	Jump Spring Guide				4	
B-3-30	GP-013587-00	Needle Bar Driving Shaft Bush	Dec,05,05 ~ Feb,20,09	X		4	
	GP-013587-01		Feb,20,09 ~	△			
B-3-31	03006MC-3123	Truss Screw (M3*L6)			O	4	
B-3-32	AS-005257-00	Needle Bar Drive Lever Ass' Y				4	

B

This diagram illustrates the exploded view of the B-4 control unit assembly. The components are labeled as follows:

- B-4-1**: Main control unit housing.
- B-4-2**: Mounting bracket.
- B-4-3**: Mounting plate.
- B-4-4**: Mounting screw.
- B-4-5**: Mounting screw.
- B-4-6**: Mounting screw.
- B-4-7**: Mounting bracket.
- B-4-8**: Mounting bracket.
- B-4-9**: Mounting screw.
- B-4-10**: Mounting screw.
- B-4-11**: Mounting screw.
- B-4-12**: Mounting screw.
- B-4-13**: Mounting screw.
- B-4-14**: Mounting bracket.
- B-4-15**: Mounting screw.
- B-4-16**: Mounting screw.
- B-4-17**: Mounting screw.
- B-4-18**: Mounting screw.
- B-4-19**: Mounting screw.
- B-4-20**: Mounting screw.
- B-4-21**: Mounting screw.
- B-4-22**: Mounting screw.

The diagram also includes a label for the sub-control unit: **to sub-control b/d <CN6>**.

Note

B

Note

[illegible]**B**


B-6

This exploded view diagram illustrates the assembly of the B-6 unit. The main component, B-6-1, is a large rectangular panel with a circular cutout on the right side. A horizontal bracket, B-6-5, is shown being attached to the bottom of B-6-1 using a screw, B-6-6. A vertical support, B-6-7, is positioned to the left of B-6-1, with a small pin, B-6-8, shown near its base. A horizontal rod, B-6-4, is shown passing through a circular opening in B-6-1, secured by a washer, B-6-3, and a nut, B-6-2.

Note

B

 Arm 2

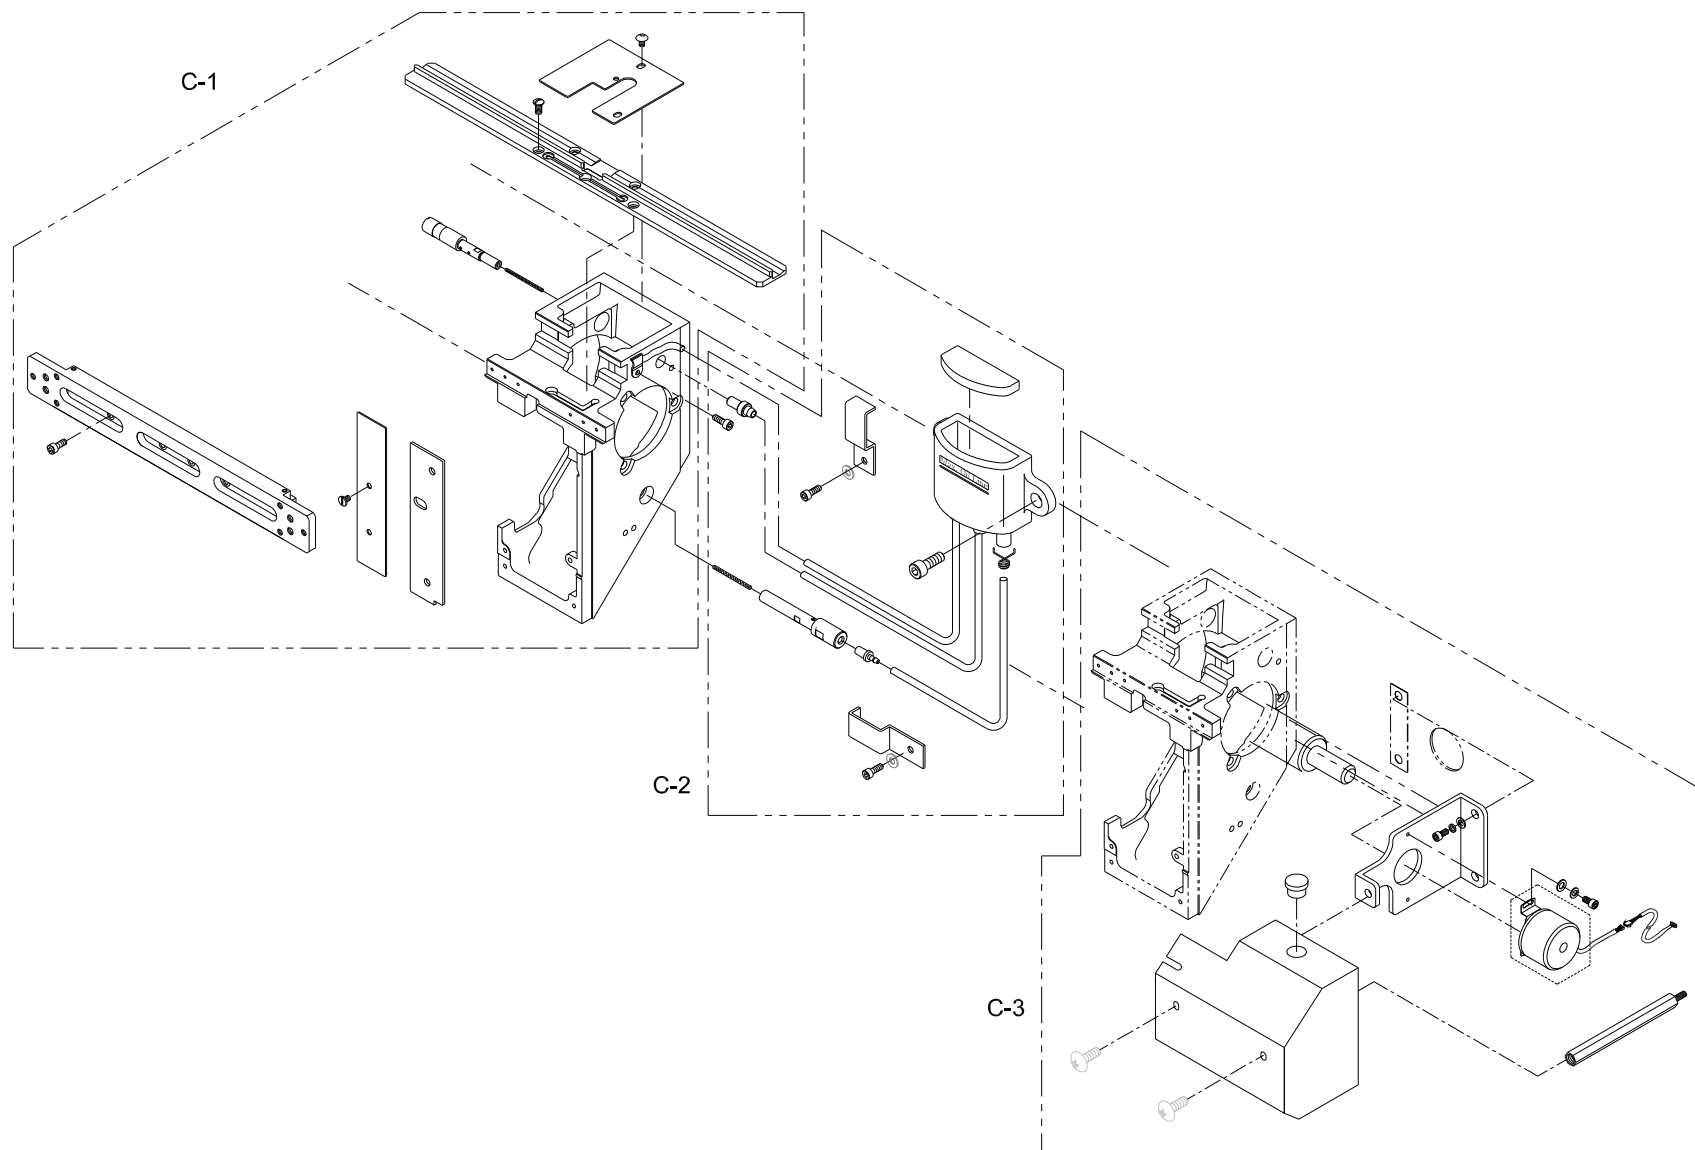

C-1

This diagram illustrates the exploded view of the C-1 assembly. The components are labeled as follows:

- C-1-1**: A long, narrow base plate with multiple mounting holes and a central slot.
- C-1-2**: A small screw used to secure the base plate.
- C-1-3**: A long, narrow rail or track component.
- C-1-4**: A small screw used to secure the rail.
- C-1-5**: A small screw used to secure the rail.
- C-1-6**: A small screw used to secure the rail.
- C-1-7**: A vertical plate with a central slot.
- C-1-8**: A vertical plate with a central slot.
- C-1-9**: A small screw used to secure the vertical plates.

The diagram shows the assembly of these components into a larger structure, which is represented by a dashed outline of a cabinet or enclosure. The components are shown in their relative positions, indicating how they fit together.

Note

[illegible]

This exploded view diagram illustrates the assembly of the C-2-1 unit. The main components shown include:

- C-2-1:** The central rectangular unit with a handle on top.
- C-2-2:** A curved handle or cap that fits onto the top of the C-2-1 unit.
- C-2-3:** A small cylindrical component, likely a pin or bolt, used for securing the unit.
- C-2-4:** A long, thin rod or tube that passes through the unit.
- C-2-5:** A small cylindrical component, likely a pin or bolt, used for securing the unit.
- C-2-6:** A small cylindrical component, likely a pin or bolt, used for securing the unit.
- C-2-7:** A small rectangular component, likely a bracket or plate, used for securing the unit.
- C-2-8:** A small cylindrical component, likely a pin or bolt, used for securing the unit.

The diagram shows the relative positions and assembly sequence of these components, with dashed lines indicating the paths of the rods and the locations where the pins and bolts are inserted.


Note

[illegible]


This exploded view diagram illustrates the assembly of the C-3-12 component. The main assembly, C-3-12, is shown at the bottom. It consists of a base plate (C-3-5) and a top plate (C-3-11). The base plate has two mounting holes for screws C-3-9. The top plate has a central circular opening. A cylindrical component (C-3-10) is shown being inserted into the top plate. A cable (C-3-13) is connected to the base plate. The cable has a connector (C-3-4) and a plug (C-3-2). The cable is also connected to a component (C-3-1) which has a circular opening. The cable is secured by a screw (C-3-3). A bracket (C-3-6) is shown being attached to the base plate with screws C-3-7 and C-3-8. A small rectangular plate (C-3-8) is also shown being attached to the base plate with a screw C-3-7.

C

 Thread Cutting Set

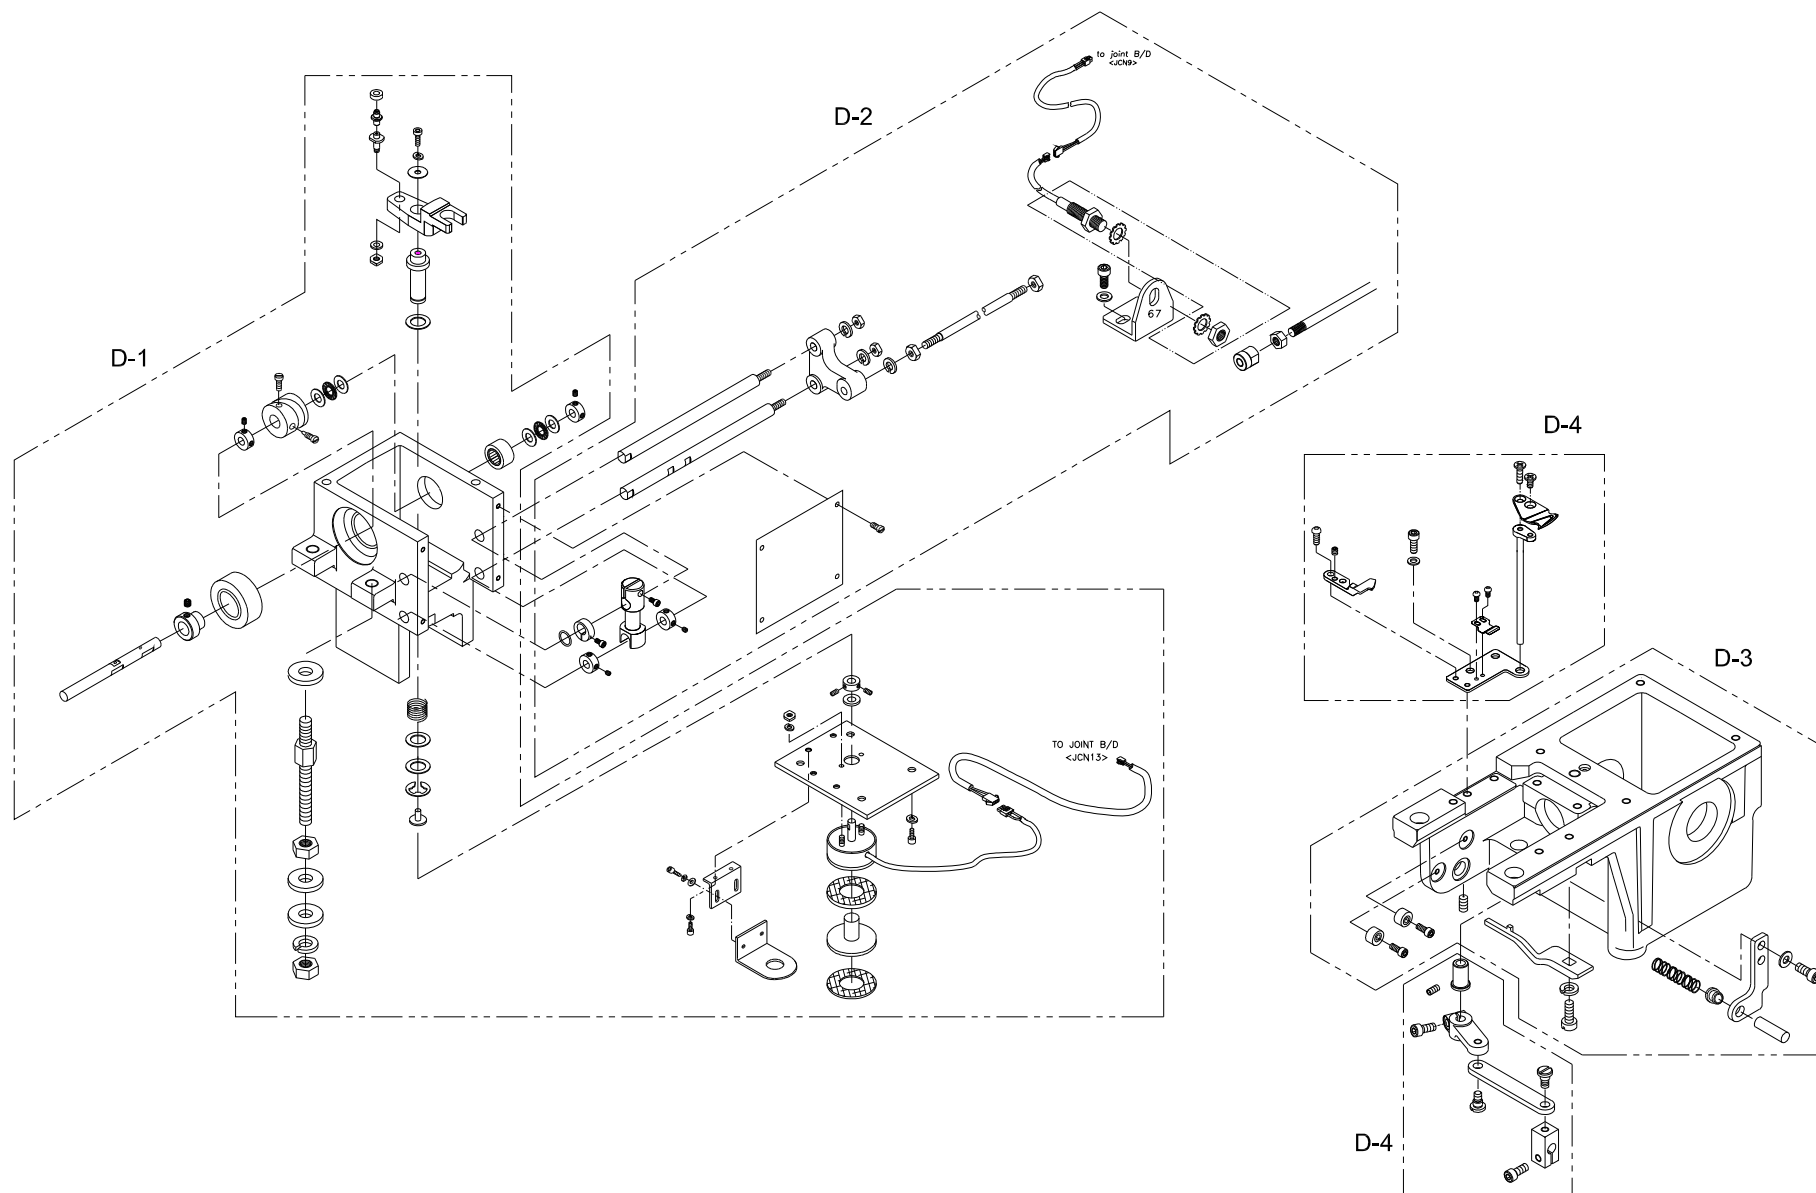

D-1

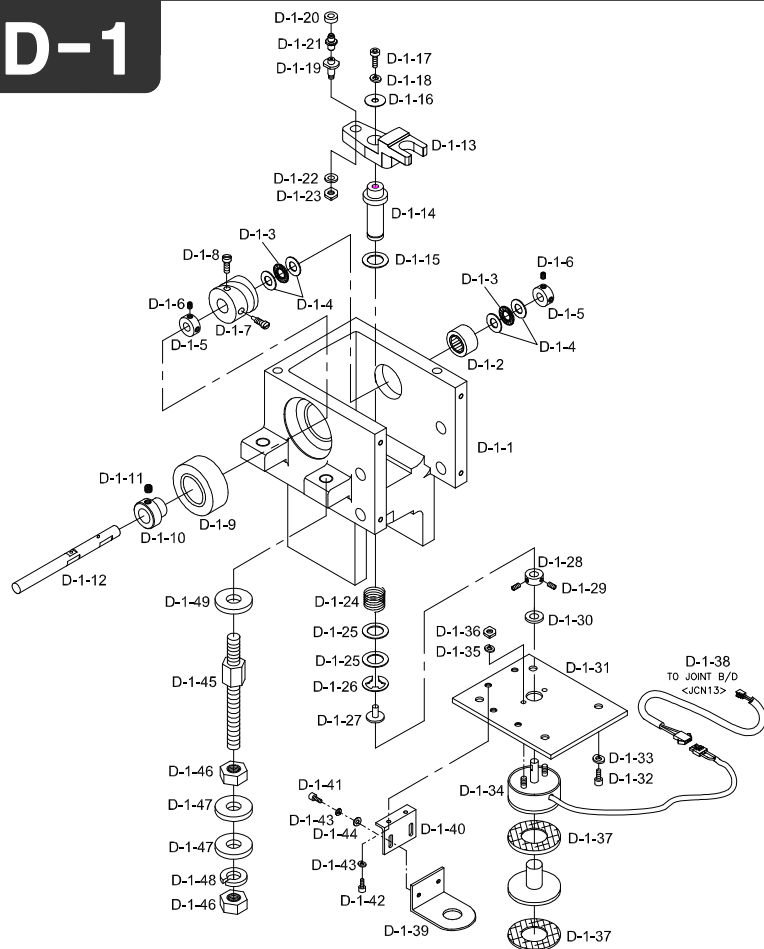 

Note

D-1,D-2 : AS-004647-00 (Mes Cam Driving Box Ass'Y)

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
D-1-1	03700100E000	Mes Cam Driving Box				1	
D-1-2	04027BR-A001	Needle Bearing (Hmk1515)			O	1	
D-1-3	08027BR-A001	Thrust Bearing (Ntb 1528)			O	2	
D-1-4	08028BR-A001	Thrust Washer (As 1528)				4	
D-1-5	03704900A000	Cam Shaft Collar				2	
D-1-6	04016AF-A001	Cam Collar Screw				4	
D-1-7	GP-007345-00	MES CAM	Jan,27,05 ~	X		1	
D-1-8	08038SC-UI12	Hex.Socket Set Screw				3	
D-1-9	01029BR-A001	Ball Bearing (6004Zz)			O	1	
D-1-10	14058CW-A001	Collar "A"				1	
D-1-11	04012AF-A001	Hook Shaft Bush Screw				2	
D-1-12	08036SF-B001	Mes Cam Shaft				1	
D-1-13	GP-012734-00	Mes Cam Lever	Jan,27,05 ~	X		1	
D-1-14	08047CW-A001	Lever Support Pin				1	
D-1-15	08044RB-B001	Cushion Washer (T2)				2	
D-1-16	WS-000127-00	Lever Washer	Jan,27,05 ~	X		1	
D-1-17	02015SC-7113	Hex.Socket Bolt (M4*L10)			O	1	
D-1-18	02028SW-9115	Spring Washer (@4)			O	1	
D-1-19	PN-000722-00	CAM COLLAR PIN (L=19)	Jan,18,09 ~	X		1	
D-1-20	07030AF-UK01	Roller				1	
D-1-21	07026CW-UK01	Mes Cam Roller Shaft				1	
D-1-22	08057SW-1111	Washer (@6)			O	1	
D-1-23	13042SN-1111	Hex.Nut (M6*T5-R)			O	1	
D-1-24	08048SP-A001	Lever Return Spring				1	
D-1-25	08050SW-A001	Lever Stopper Pin Washer				2	
D-1-26	08051SR-4013	E-Ring (@12)			O	1	
D-1-27	08052RB-A001	Lever Support Pin Cushion				1	
D-1-28	03707300A000	Solenoid Collar				1	
D-1-29	08113SC-A001	Collar Screw				2	
D-1-30	08072RB-A001	Cushion Rubber				1	
D-1-31	08072PR-B001	Solenoid Base Plate				1	
D-1-32	03016SC-4113	Hex. Socket Bolt (M5*L15)			O	4	
D-1-33	18048SW-3115	Spring Washer (5@)			O	4	
D-1-34	08068EL-A001	Thread Trimming Solenoid Ass'				1	
D-1-35	12010SN-1211	Hex. Nut (M5-No3)			O	2	
D-1-36	18048SW-3115	Spring Washer (5@)			O	2	
D-1-37	08071SF-A001	Solenoid Cushion				3	

D-1

D-1-20
D-1-21
D-1-19
D-1-17
D-1-18
D-1-16
D-1-13
D-1-22
D-1-23
D-1-14
D-1-3
D-1-8
D-1-6
D-1-5
D-1-7
D-1-4
D-1-15
D-1-3
D-1-6
D-1-5
D-1-4
D-1-2
D-1-1
D-1-11
D-1-10
D-1-9
D-1-12
D-1-49
D-1-24
D-1-25
D-1-25
D-1-26
D-1-27
D-1-36
D-1-35
D-1-28
D-1-29
D-1-30
D-1-31
D-1-38
TO JOINT B/D
<JCN13>
D-1-46
D-1-47
D-1-47
D-1-48
D-1-46
D-1-41
D-1-43
D-1-44
D-1-43
D-1-42
D-1-39
D-1-34
D-1-33
D-1-32
D-1-37
D-1-37

D-1,D-2 : AS-004647-00 (Mes Cam Driving Box Ass'Y)

D

D-2

to joint B/D
<CH9>

D-2-23

D-2-17

D-2-19

D-2-20

D-2-18

D-2-21

D-2-22

D-2-11

D-2-10

D-2-12

D-2-15

D-2-14

D-2-16

D-2-13

D-2-15

D-2-14

D-2-9

D-2-8

D-2-7

D-2-6

D-2-5

D-2-4

D-2-3

D-2-2

D-2-1

D-1,D-2 : AS-004647-00 (Mes Cam Driving Box Ass'Y)

D

This diagram illustrates the assembly of the rear chassis components. The main structure is a rectangular frame with various mounting points. The components and their assembly locations are as follows:

- D-3-1**: A U-shaped bracket that fits into the rear of the main frame.
- D-3-2**: A long threaded bolt that passes through the U-shaped bracket (D-3-1) and is secured with a nut.
- D-3-3**: A shorter threaded bolt that passes through the bottom of the main frame and is secured with a nut.
- D-3-4**: A coiled spring that is positioned behind the main frame.
- D-3-5** and **D-3-6**: Two small cylindrical components, likely bushings or spacers, located on the left side of the frame.
- D-3-7**: A small cylindrical component located on the right side of the frame.
- D-3-8**: A short cylindrical component located on the right side of the frame.
- D-3-9** and **D-3-10**: A bracket and a long threaded bolt, respectively, located on the right side of the frame.

 
Note

[illegible]

Note

[illegible]

Main Drive System

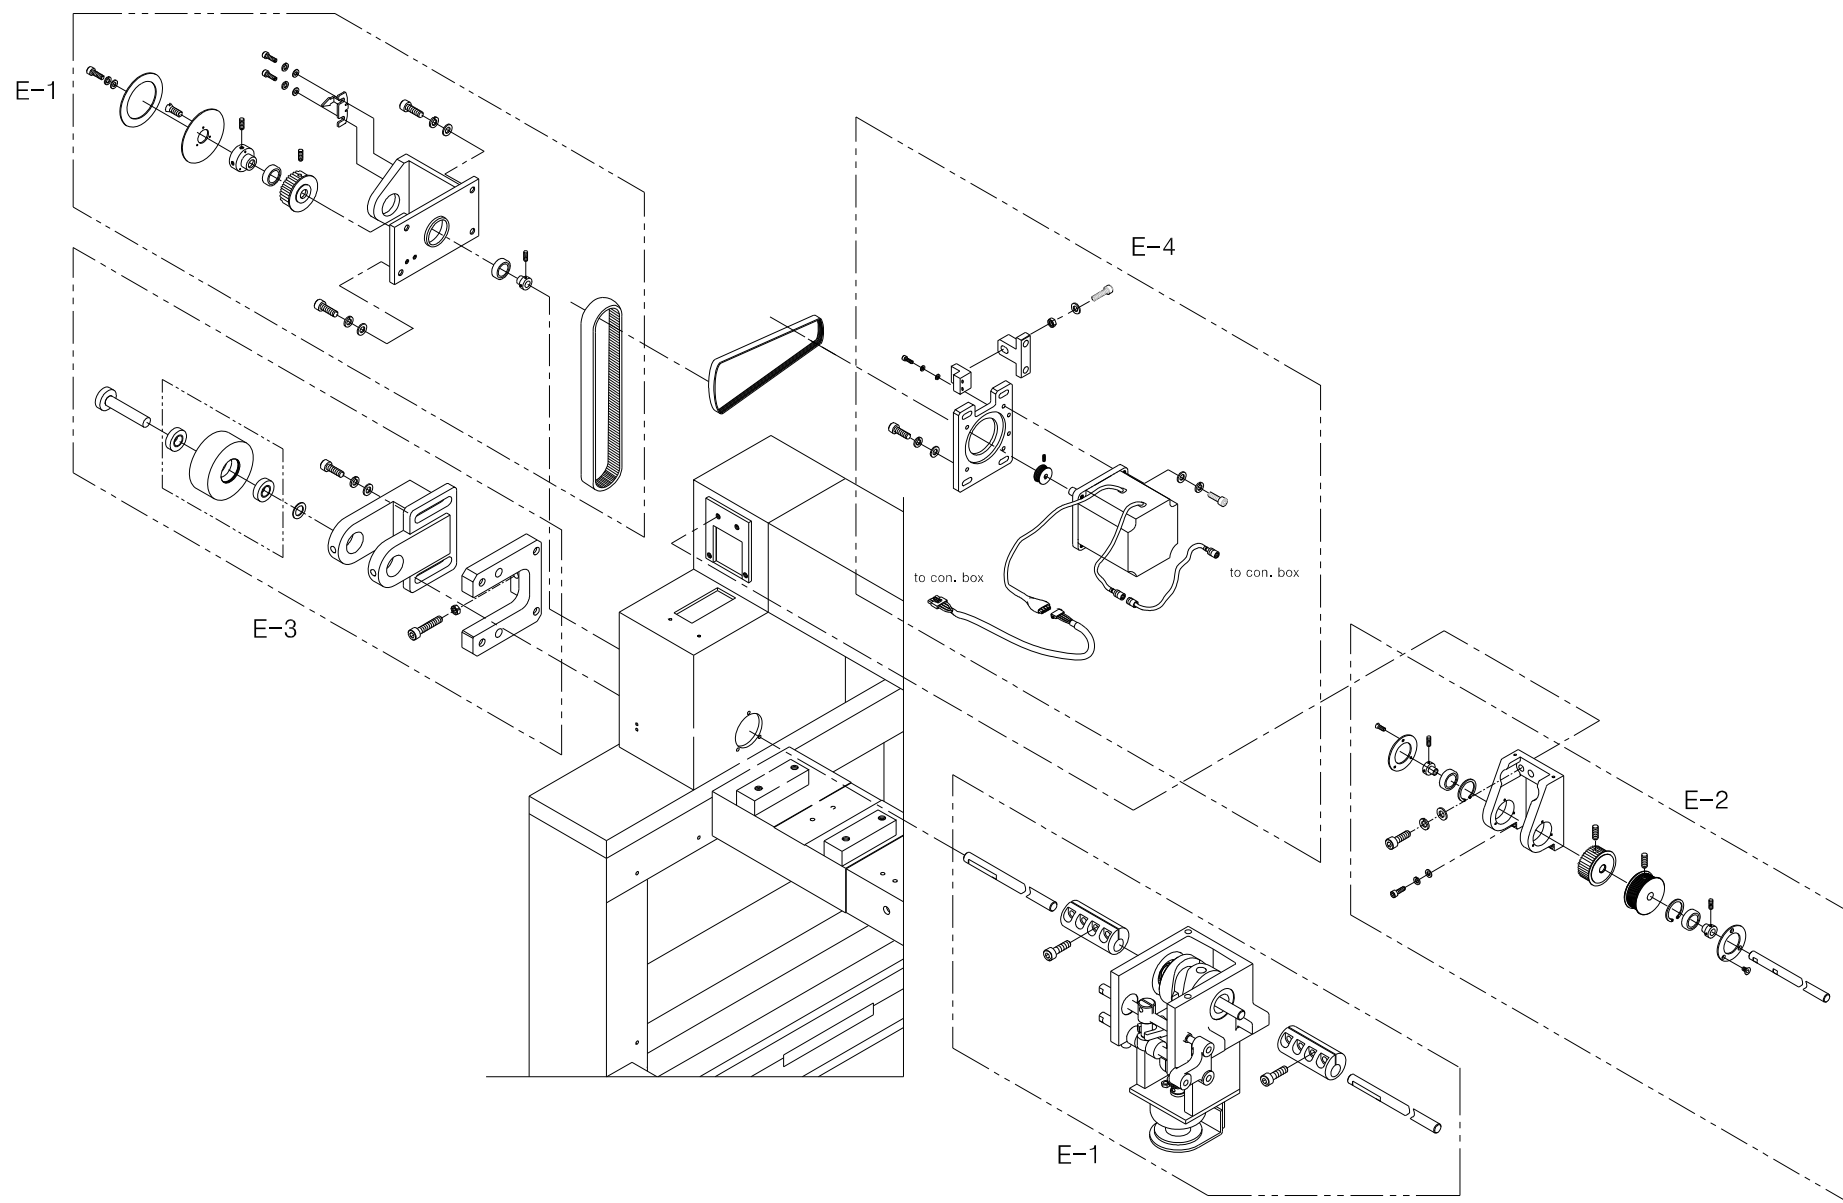

E-1

This exploded view diagram illustrates the assembly of the E-1 engine. The components are labeled as follows:

- E-1-15**, **E-1-16**, **E-1-17**: Piston and connecting rod assembly.
- E-1-13**, **E-1-14**: Crankshaft and flywheel.
- E-1-10**, **E-1-11**, **E-1-12**: Camshaft and timing components.
- E-1-18**, **E-1-19**, **E-1-20**, **E-1-21**: Valve train components.
- E-1-5**, **E-1-3**, **E-1-4**: Valve adjustment components.
- E-1-6**, **E-1-8**: Timing belt and pulley.
- E-1-7**: Timing belt cover.
- E-1-2**, **E-1-3**, **E-1-4**: Timing belt tensioner components.
- E-1-1**, **E-1-8**, **E-1-9**, **E-1-10**: Timing belt guide components.
- E-1-22**, **E-1-24**, **E-1-25**: Timing belt and tensioner components.
- E-1-23**: Timing belt guide component.

The diagram shows the engine block, cylinder head, and timing belt assembly. The components are shown in their relative positions and assembly sequence.

[illegible]

This diagram illustrates the exploded view of the E-2 component assembly. The main unit is a rectangular box with a top panel and a side panel. The top panel features a rectangular slot and a small square opening. The side panel has a circular opening. The exploded view shows the following components and their assembly sequence:

- E-2-1**: The main housing or frame.
- E-2-2**: A long screw or bolt.
- E-2-3**: A small washer or spacer.
- E-2-4**: A small nut or washer.
- E-2-5**: A small screw or bolt.
- E-2-6**: A small washer or spacer.
- E-2-7**: A small screw or bolt.
- E-2-8**: A small screw or bolt.
- E-2-9**: A small screw or bolt.
- E-2-10**: A large pulley or wheel.
- E-2-11**: A small screw or bolt.
- E-2-12**: A small washer or spacer.
- E-2-13**: A small washer or spacer.
- E-2-14**: A small washer or spacer.
- E-2-15**: A small screw or bolt.
- E-2-16**: A small screw or bolt.
- E-2-17**: A long screw or bolt.
- E-2-18**: A rectangular plate or cover.

Note



Note




E-4

This exploded view diagram illustrates the assembly of the E-4 component. The central part is a rectangular box (E-4-1) with two cables extending from it: a long cable (E-4-19) with a multi-pin connector, and a shorter cable (E-4-20) with a different connector. The box is mounted onto a larger frame (E-4-7) which has a circular opening. Various screws and washers are used to secure the assembly: E-4-2, E-4-3, E-4-4, E-4-5, E-4-6, E-4-8, E-4-9, E-4-10, E-4-11, E-4-12, E-4-13, E-4-14, E-4-15, E-4-16, E-4-17, and E-4-18. The frame is further supported by a bracket (E-4-19) and a plate (E-4-20). The diagram is labeled with 'to con. box' on both sides, indicating the connection points for the control box.


Note



 Head & Color Change

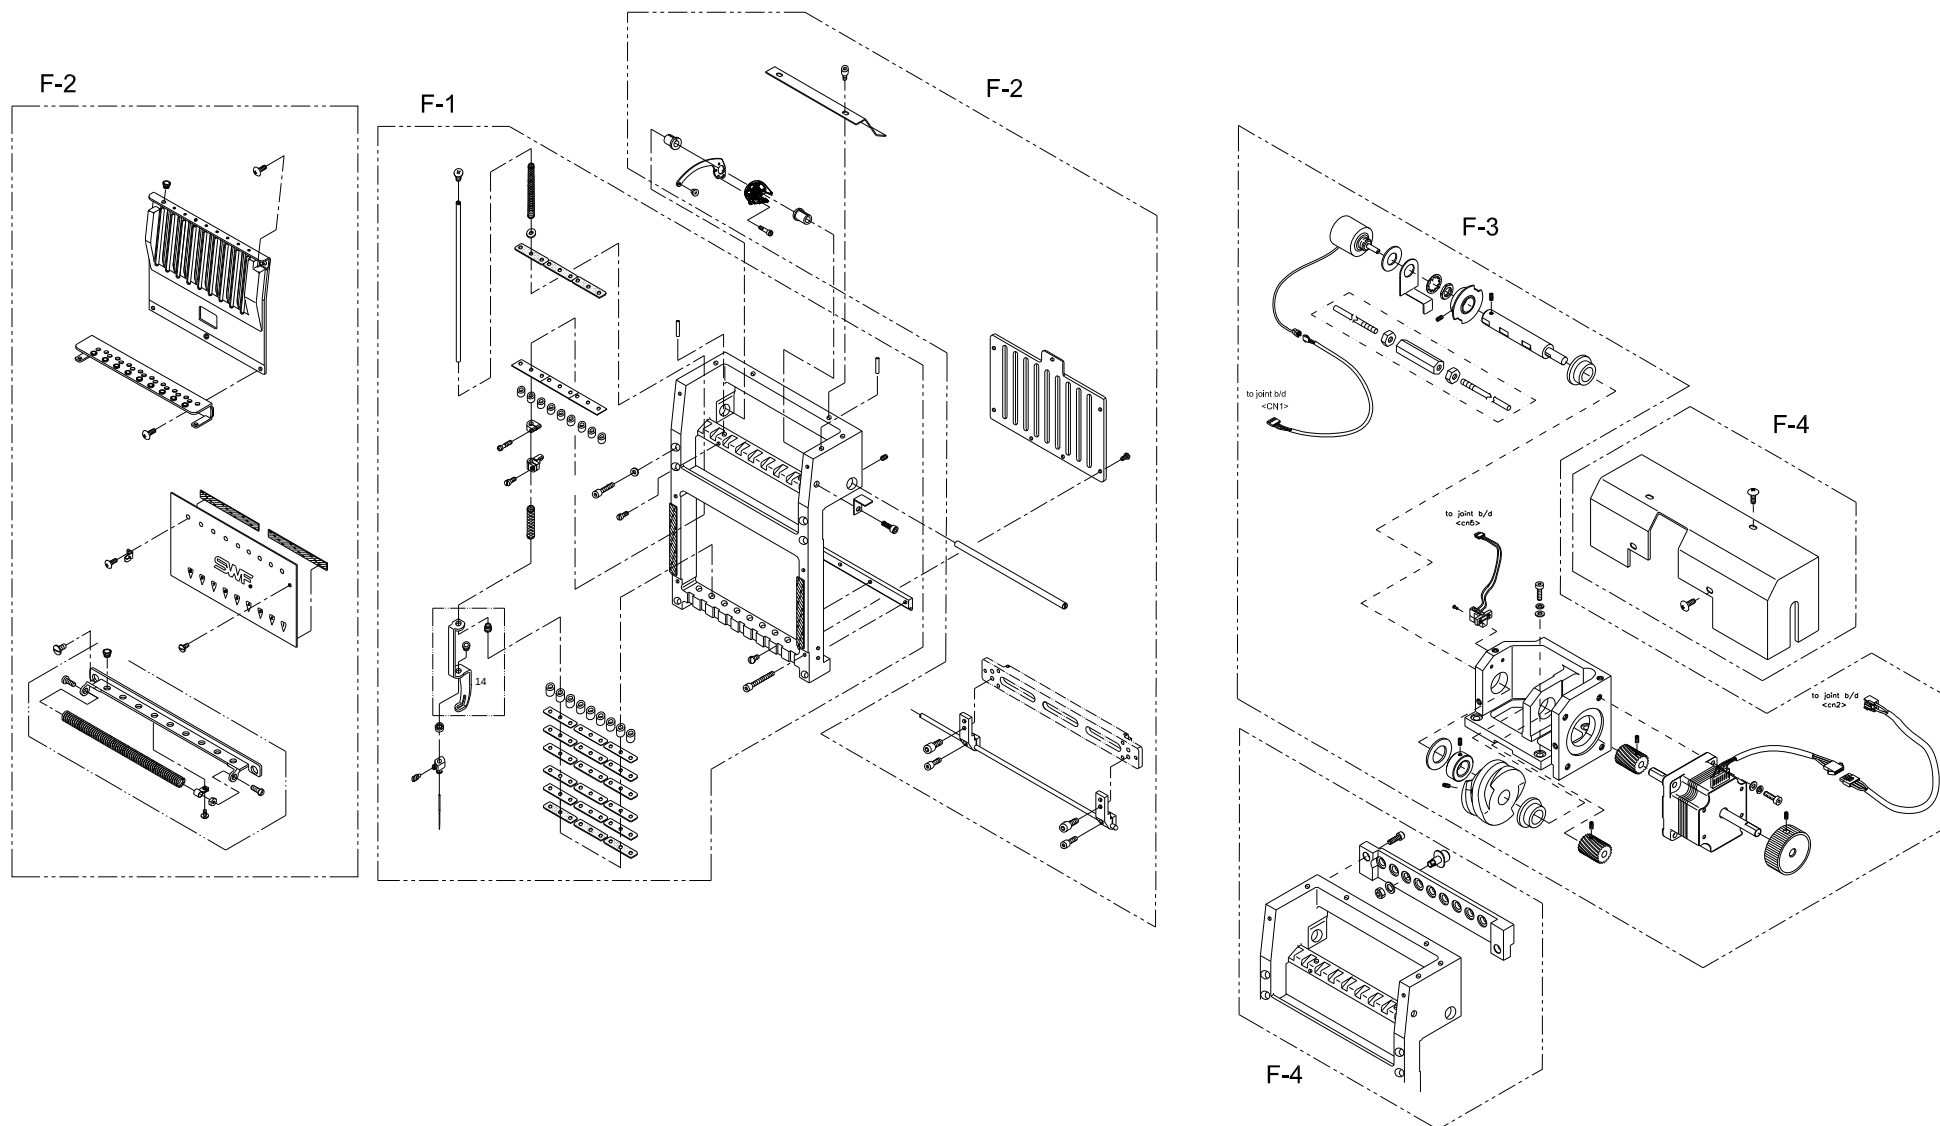

F-1

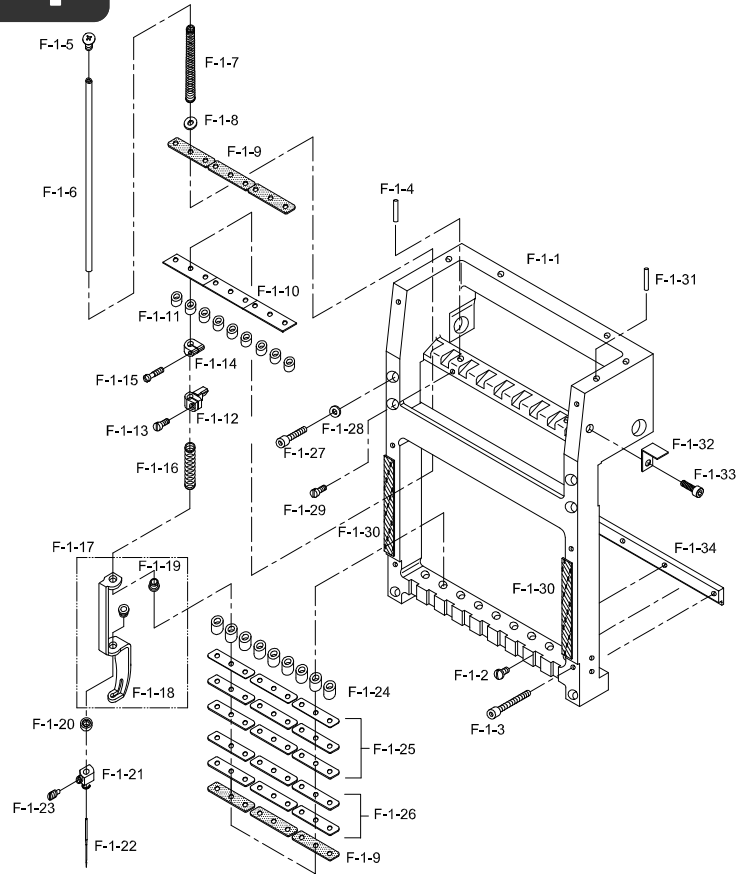 

Note

F-1,F-2 : AS-005641-00 HEAD Ass'Y

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
F-1-1	GP-014941-00	Head	Feb,01,06 ~ Nov,14,06	X		4	
	GP-014941-01		Nov,14,06 ~ Mar,26,07	△			
	GP-014941-02		Mar,26,07 ~ Dec,14,07	△			
	GP-014941-03		Dec,14,07 ~	△			
F-1-2	SC-000417-00	Head Rail Screw	Sep,14,05 ~	X		8	
F-1-3	05014SC-7113	Hex. Socket Bolt (M4*L25)			O	8	
F-1-4	05015CW-A001	Head Base Pin(@5*L15)			O	4	
F-1-5	05019SC-A001	Needle Bar Cover Screw (M5*L6)			O	36	
F-1-6	GP-011929-00	Needle Bar	Sep,14,05 ~	X		36	
F-1-7	GP-007216-00	Needle Bar Return Spring	Jan,21,05 ~ Sep,02,05	X		36	
	GP-007216-01		Sep,02,05 ~	△			
F-1-8	05022SW-A001	Spring Shoe Washer				36	
F-1-9	05021SF-A001	Felt				24	
F-1-10	05023RB-A001	Needle Bar Cushion Rubber "A"				12	
F-1-11	05024RB-A001	Needle Bar Cushion Rubber "B"				36	
F-1-12	GP-044776-00	Needle Bar Holder	Jan,13,09 ~	X		36	
F-1-13	05028SC-4113	Holder Screw (9/64-L8)				36	
F-1-14	11101200T000	Upper Dead Point Stopper				36	
F-1-15	05026SC-4113	Stopper Screw (9/64-11.5)				36	
F-1-16	GP-020915-00	Presser Foot Pressure Spring	Aug,26,06 ~ May,03,07	X		36	
	GP-020915-01		May,03,07 ~	△			
F-1-17	05029BM-A001	Presser Foot Set				36	
F-1-18	GP-013763-00	Presser Foot	Dec,14,05 ~	X		36	
F-1-19	05031AF-A001	Presser Foot Guide Bush				72	
F-1-20	05035RB-A001	Presser Foot Cushion Rubber "A"				36	
F-1-21	05036AF-A001	Needle Fixed Holder				36	
F-1-22	05037DB-A001	Needle (Db-K5, #11)			O	36	
F-1-23	05363SC-A001	Needle Fixed Screw (A/S)				36	
F-1-24	05032RB-A001	Presser Foot Cushion Rubber "B"				36	
F-1-25	05033RB-A001	Presser Foot Adjusting Rubber				36	
F-1-26	05034RB-A001	Presser Foot Adjusting Rubber				24	
F-1-27	05008SC-4113	Hex.Socket Bolt (M4*L16)			O	16	
F-1-28	06003SW-2111	Washer (@4)			O	16	
F-1-29	03022SC-4517	Hex. Socket Set Screw(M4*L5)				4	
F-1-30	05063RB-A001	Magnetic Rubber "A"				8	
F-1-31	01303700H000	Tension Plate Pin				16	
F-1-32	02022PR-UK01	Upper Shaft Cover "B" Bracket				6	


F-1

Exploded view diagram of a mechanical assembly, likely a shredder, showing various components and their assembly sequence. The diagram includes a main frame assembly (F-1-1, F-1-2, F-1-3, F-1-4, F-1-30, F-1-31, F-1-32, F-1-33, F-1-34) and a separate assembly of rollers (F-1-9, F-1-10, F-1-11, F-1-12, F-1-13, F-1-14, F-1-15, F-1-16, F-1-17, F-1-18, F-1-19, F-1-20, F-1-21, F-1-22, F-1-23, F-1-24, F-1-25, F-1-26). The rollers are shown in a stack, with F-1-9 at the top and F-1-26 at the bottom. The main frame assembly is shown in a perspective view, with the rollers being inserted into it. The diagram uses dashed lines to indicate the assembly path and the relative positions of the components. The components are labeled with part numbers F-1-1 through F-1-34.

F-1,F-2 : AS-005641-00 HEAD Ass'Y

F

 F-2

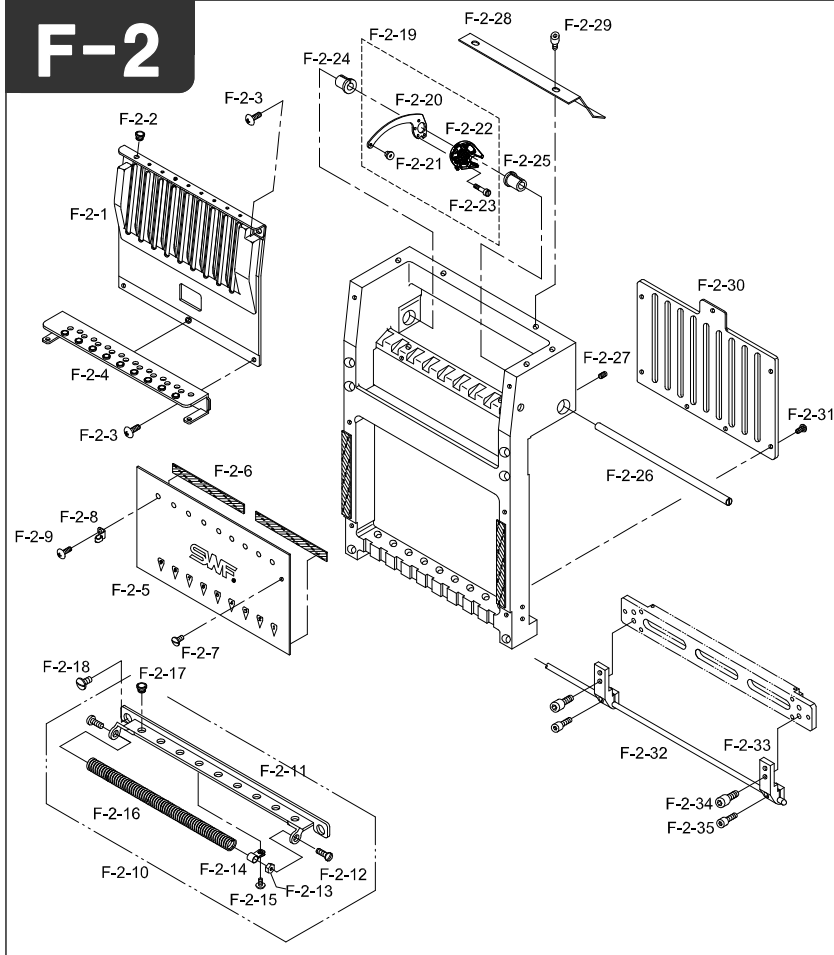

Note

F-1,F-2 : AS-005641-00 HEAD Ass'Y


Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
F-2-1	10200103B000	Head Face Plate (U) 9C				4	
F-2-2	05452CM-A001	Eyelet "A"				36	
F-2-3	SC-001625-00	Thread Guide (M) Screw (9/64 n=40)	Jan,19,09 ~ Feb,17,09			16	
	SC-001625-01		Feb,17,09 ~				
F-2-4	AS-000484-00	Thread Guide (M) Set (9C)	Jun,23,04 ~ May,10,07	X		4	
	AS-000484-01		May,10,07 ~ Jun,18,07	△			
	AS-000484-02		Jun,18,07 ~ Aug,29,07	△			
	AS-000484-03		Aug,29,07 ~ Dec,11,08	△			
	AS-000484-04		Dec,11,08 ~ Dec,11,08	△			
	AS-000484-05		Dec,11,08 ~ Jan,14,09	△			
	AS-000484-06		Jan,14,09 ~ Jan,30,09	△			
	AS-000484-07		Jan,30,09 ~ Feb,17,09	△			
	AS-000484-08		Feb,17,09 ~ Jan,26,10	△			
	AS-000484-09		Jan,26,10 ~ Aug,13,10	△			
	AS-000484-10		Aug,13,10 ~	△			
F-2-5	12001703I000	Head Face Plate (L) (9C)				4	
F-2-6	05642RB-A001	Magnetic Rubber "B"				8	
F-2-7	05070SC-3123	Thread Guide (L) Screw				4	
F-2-8	11012PR-B001	Thread Guide				16	
F-2-9	09005SC-3123	Hex.Socket Bolt(M4*L10)			O	8	
F-2-10	10400003B000	Thread Guide (L) Set				4	
F-2-11	GP-010764-00	Thread Guide (L) 9C	Jul,20,05 ~	X		4	
F-2-12	096440C-8119	Spring Adjusting Screw				8	
F-2-13	096440N-3211	Spring Adjusting Nut (9/64,N40)				8	
F-2-14	10400304B000	Spring Holder				4	
F-2-15	05060SC-8118	Screw (M3*L3)			O	4	
F-2-16	GP-010772-00	Thread Hook Spring (9C)	Jul,21,05 ~	X		4	
F-2-17	05452CM-A001	Eyelet "A"				36	
F-2-18	05070SC-3123	Thread Guide (L) Screw				8	
F-2-19	07005BM-T121	Take-Up Lever Set				36	
F-2-20	05033PR-T121	Take-Up Lever				36	
F-2-21	07102CM-A001	Eyelet "C"				36	
F-2-22	05035PM-T121	Take-Up Lever Boss				36	
F-2-23	07003SC-A001	Take-Up Lever Screw				72	
F-2-24	08203000A000	Take-Up Lever Shaft Bush(L)				4	
F-2-25	08200800A000	Take-Up Lever Shaft Bush(R)				4	
F-2-26	08200503A000	Take-Up Lever Shaft (9C)				4	
F-2-27	07009SC-4517	Hex.Socket Set Screw (M5*L6)				4	

[illegible]

F-1,F-2 : AS-005641-00 HEAD Ass'Y

[illegible]

 F-3

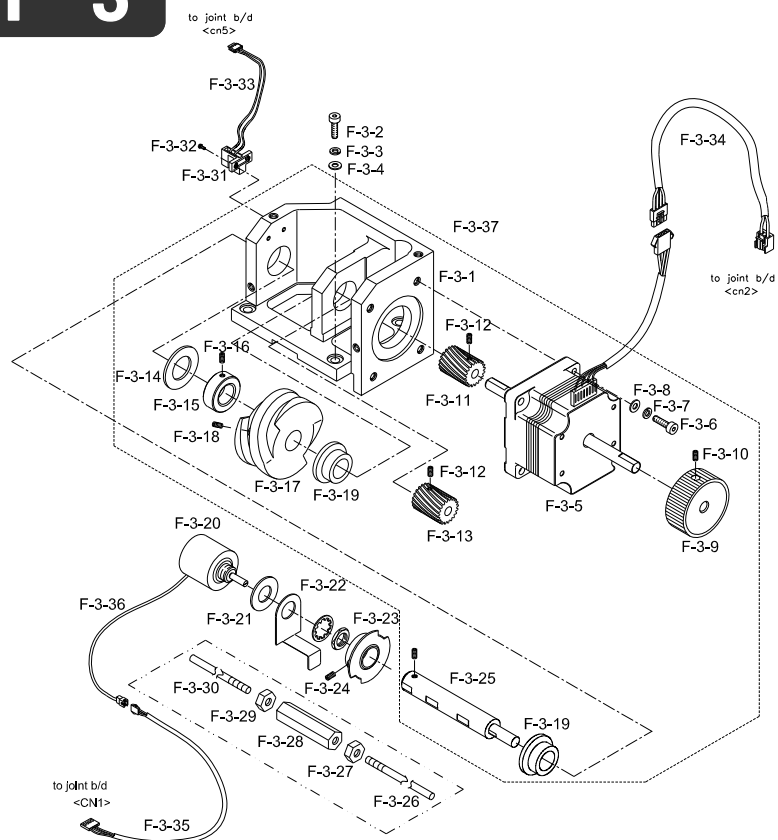

Note


Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
F-3-1	13001CA-UK06	Color Change Base				1	
F-3-2	05008SC-4113	Hex.Socket Bolt (M4*L16)			O	4	
F-3-3	02028SW-9115	Spring Washer (@4)			O	4	
F-3-4	05009SW-1111	Washer (@4-L)			O	4	
F-3-5	13016MT-UK06	Color Change Motor (4 Head)				1	
	13027MT-UK06	Color Change Motor (6 Head)				1	
F-3-6	05008SC-4113	Hex.Socket Bolt (M4*L16)			O	4	
F-3-7	02028SW-9115	Spring Washer (@4)			O	4	
F-3-8	05009SW-1111	Washer (@4-L)			O	4	
F-3-9	13022AD-UK06	Color Change Passivity Handle				1	
F-3-10	03020SC-A001	Drive Pin Screw 11/64,N40,L8			O	2	
F-3-11	13020GA-UK06	Color Change Gear (L)				1	
F-3-12	03020SC-A001	Drive Pin Screw 11/64,N40,L8			O	4	
F-3-13	13021GA-UK06	Color Change Gear (R)				4	
F-3-14	13010BR-T121	Washer (@12*@26*1T)				1	
F-3-15	13010CW-UK06	Color Change Collar				1	
F-3-16	03020SC-A001	Drive Pin Screw 11/64,N40,L8			O	2	
F-3-17	13005CM-UK06	Color Change Cam				1	
F-3-18	04012AF-A001	Hook Shaft Bush Screw				3	
F-3-19	GP-006252-00	Cam Bushing	Dec,15,04 ~	X		2	
F-3-20	15012MT-T121	Potentiometer (7824 R1K L25)				1	
F-3-21	15014PR-T121	Potentiometer Washer				1	
F-3-22	13015PR-UK06	Potentiometer Bracket				1	
F-3-23	13032AD-UK06	Color Change Film Set				1	
F-3-24	03020SC-A001	Drive Pin Screw 11/64,N40,L8			O	3	
F-3-25	13007CW-UK06	Color Change Shaft				1	
F-3-26	23012SH-UK06	Color Change Shaft "A"				1	
F-3-27	17053SN-1111	Hex. Nut(L) (M6*T5-L)			O	1	
F-3-28	17051SN-A001	Mes Priving Shaft Joint				1	
F-3-29	13042SN-1111	Hex.Nut (M6*T5-R)			O	1	
F-3-30	23013SH-UK06	Color Change Shaft "B"				1	
F-3-31	08102300B000	Half Turn Sensor (Gp1S51V)				1	
F-3-32	08006SC-8118	Plus Screw (M3*L5)			O	2	
F-3-33	25033EL-E121	Cable (25-31)				1	
F-3-34	25025EL-E121	Cable (25-25)				1	
F-3-35	25033EL-E131	Cable (25-33)				1	
F-3-36	25036EL-UK01	Cc Potentiometer Cable(4Ht-36)				1	
F-3-37	AS-004640-00	Color Change Motor Ass' Y				1	

This diagram illustrates the exploded view of the F-4-1 chassis assembly. The main chassis (F-4-1) is shown at the bottom left. A central component, likely a terminal block or connector (F-4-2), is shown in the middle, with several screws (F-4-3, F-4-4, F-4-5) used to secure it. A top cover (F-4-7) is shown at the top right, with screws (F-4-6, F-4-8) used to attach it. A side panel (F-4-9) is shown on the right, with a screw (F-4-8) used to attach it. The diagram uses dashed lines to indicate the assembly path and alignment of the components.

Note

F

 Thread Tension Unit

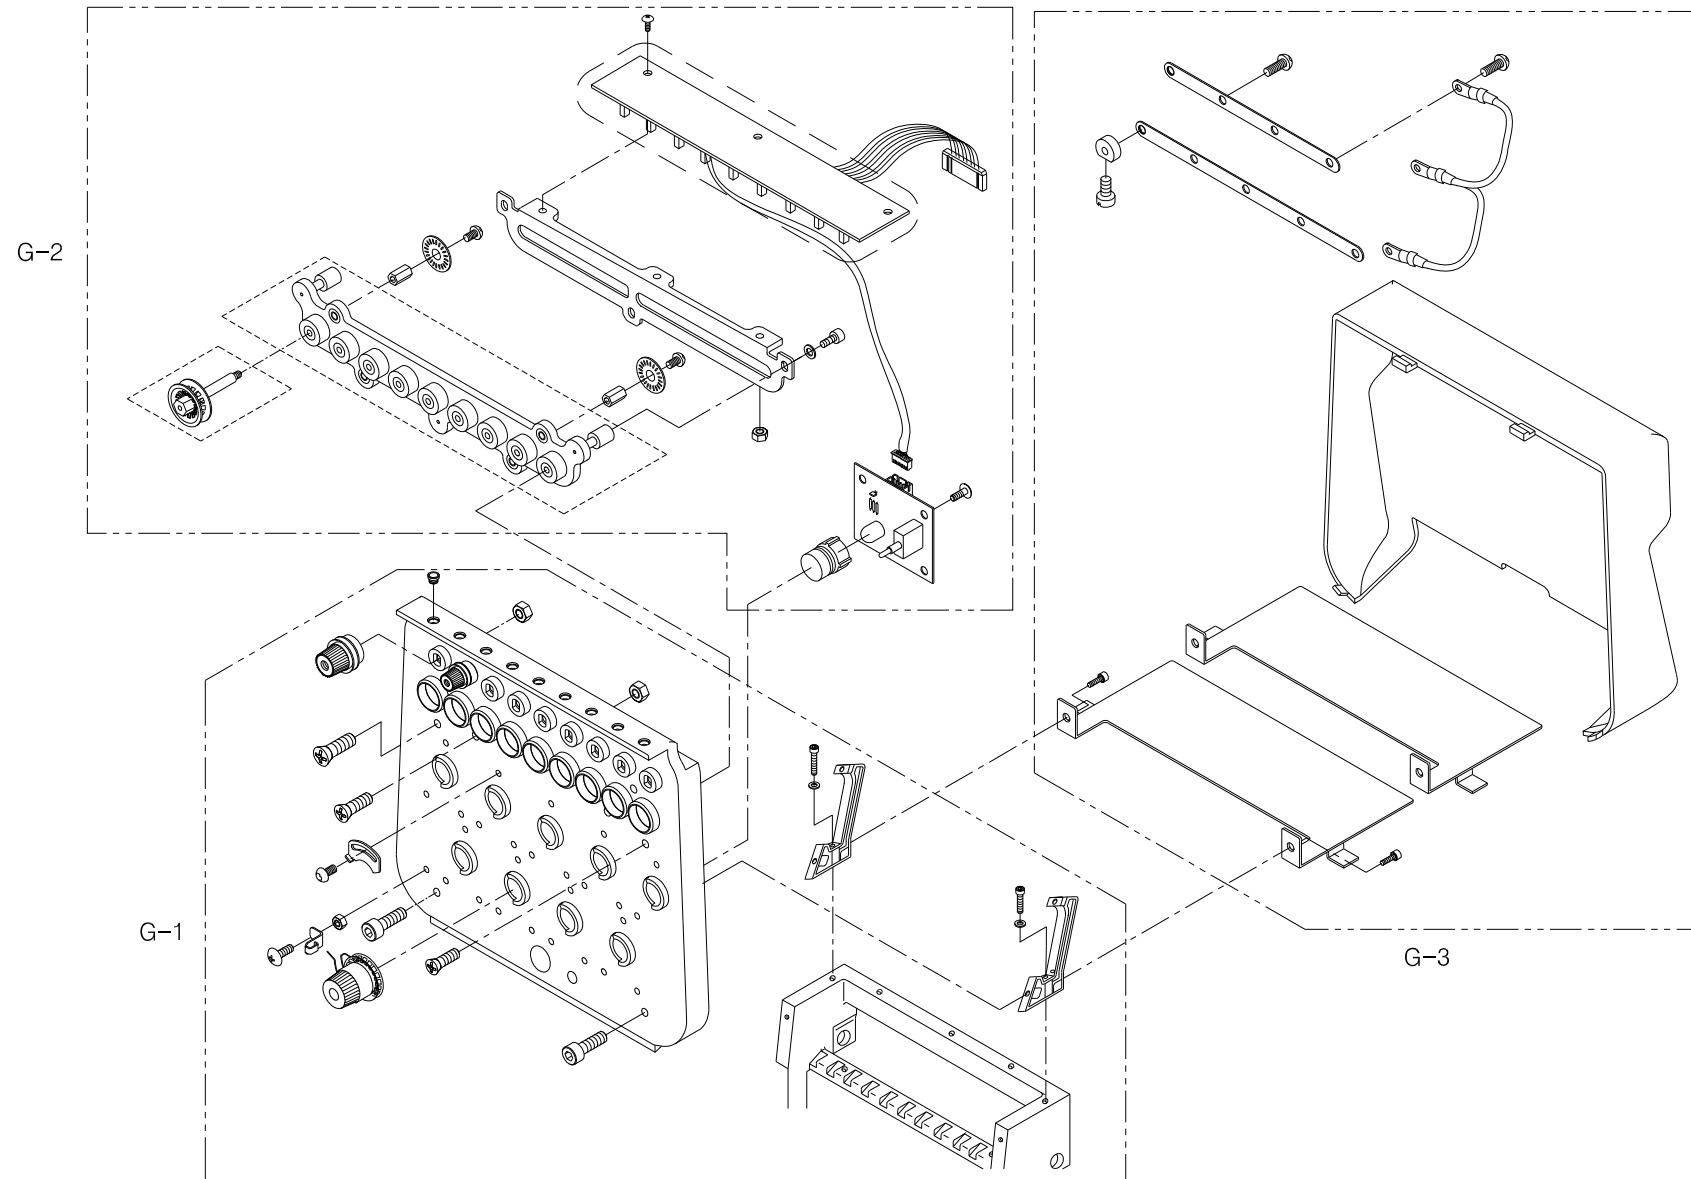

G-1,G-2 : 08300003I000 Thread Tension Unit Ass'Y

G

This exploded view diagram illustrates the assembly of the G-2000 instrument panel. The components are labeled as follows:

- G-2-1:** A circular gauge or indicator.
- G-2-2:** The main instrument panel housing with multiple gauge cutouts.
- G-2-3:** A small circular component, likely a lens or seal.
- G-2-4:** A small circular component, likely a lens or seal.
- G-2-5:** A small cylindrical component, likely a pin or spacer.
- G-2-6:** A long, thin rectangular component, likely a display or indicator strip.
- G-2-7:** A small circular component, likely a lens or seal.
- G-2-8:** A small cylindrical component, likely a pin or spacer.
- G-2-9:** A long, thin rectangular component, likely a display or indicator strip.
- G-2-10:** A small cylindrical component, likely a pin or spacer.
- G-2-11:** A small cylindrical component, likely a pin or spacer.
- G-2-12:** A cable or wire harness.
- G-2-13:** A small rectangular component, likely a switch or connector.
- G-2-14:** A small cylindrical component, likely a pin or spacer.
- G-2-15:** A small cylindrical component, likely a pin or spacer.

The diagram shows the relative positions and assembly points for these components, with dashed lines indicating the alignment and fit of each part.

G-1,G-2 : 08300003I000 Thread Tension Unit Ass'Y

The logo of the German Society for Quality Management (DGQ) is a black square with a white letter 'G' inside.

G-3


This exploded view diagram illustrates the assembly of the G-3 unit. The components are labeled as follows:

- G-3-1**: A large rectangular base plate with mounting tabs on its sides.
- G-3-2**: Two screws used to secure the base plate to the underlying structure.
- G-3-3**: A small rectangular component that fits into a slot on the side of the base plate.
- G-3-4**: A long, thin metal bar with four circular mounting points.
- G-3-5**: Two screws used to attach the bar to the base plate.
- G-3-6**: A small circular component with a threaded base, likely a cap or spacer.
- G-3-7**: A cable with two connectors, one of which is shown being inserted into a port on the bar.
- G-3-8**: A large, curved metal frame or housing that surrounds the base plate.


The diagram uses dashed lines to show the alignment and assembly sequence of the parts. A circular symbol with the number 1 is located at the bottom center of the diagram.

Note

 X-Y Axis Drive System

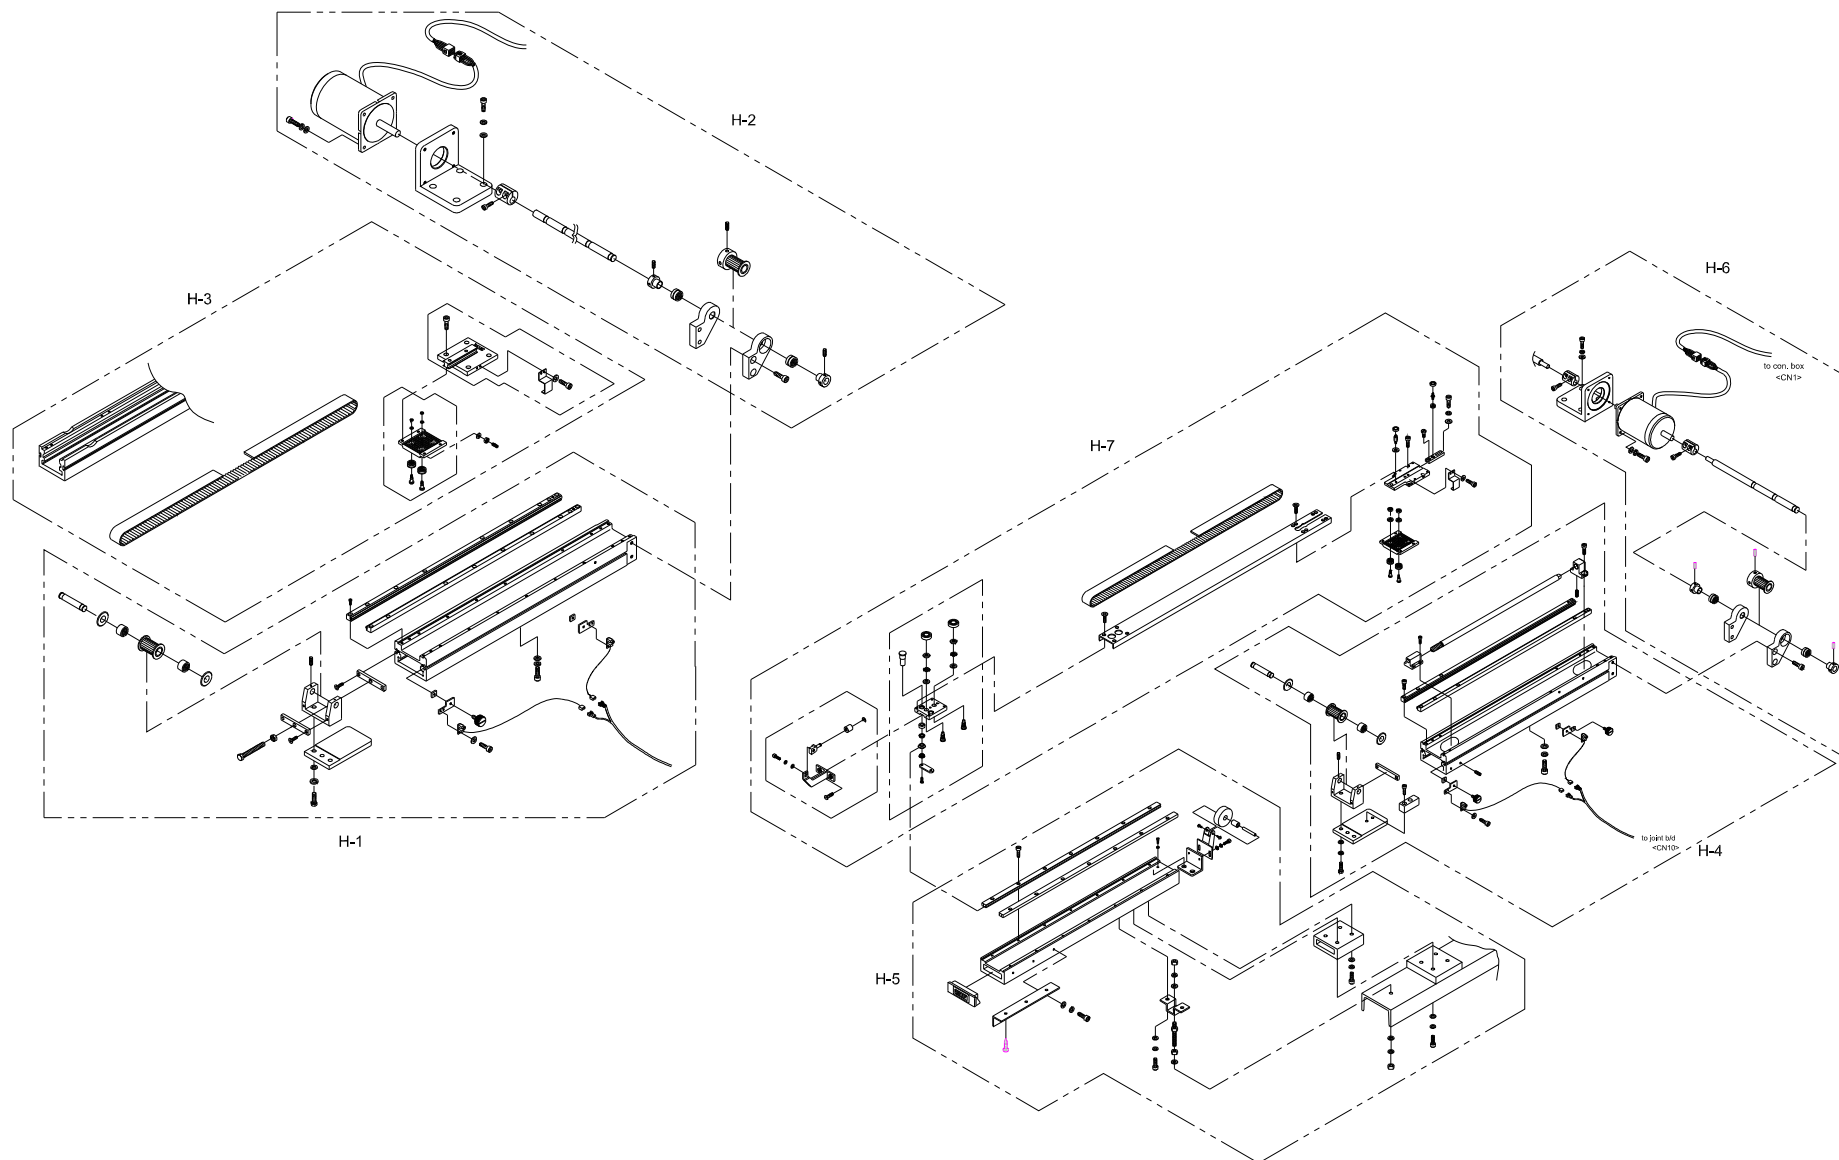

H-1

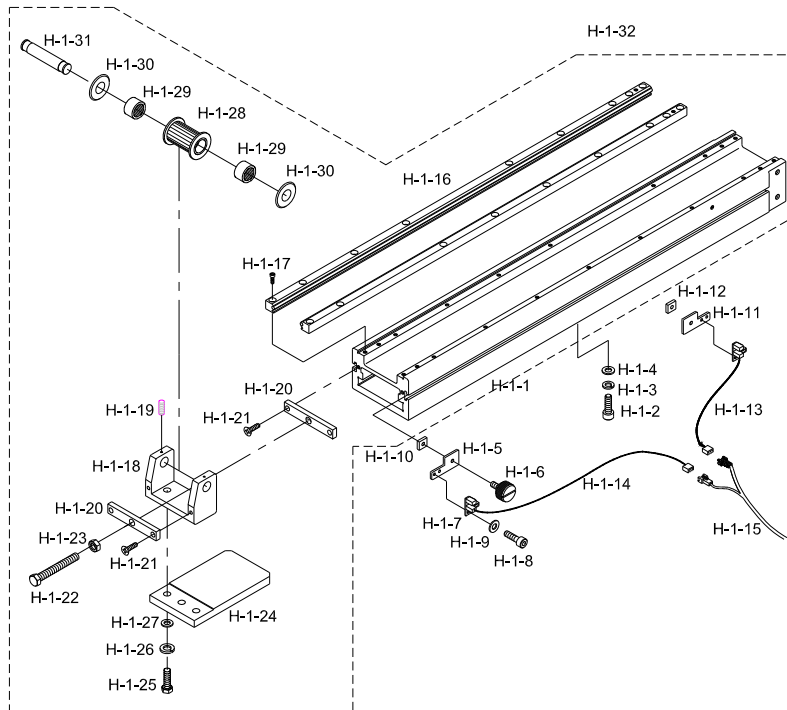 

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
H-1-1	15010AD-E121	X Cam Roller Guide Frame				1	
H-1-2	15017SC-4113	Hex. Socket Bolt (M8*L45)			O	8	
H-1-3	15095SW-3115	SPRING WASHER (@8)			O	8	
H-1-4	04029SW-A001	Stud Bolt Washer(S) (@8)			O	8	
H-1-5	16078PR-W121	Sensor Bracket (L)				2	
H-1-6	15120SC-A001	Position Adjusting Screw				2	
H-1-7	16062EL-T121	Sensor Set				2	
H-1-8	08006SC-8118	Plus Screw (M3*L5)			O	4	
H-1-9	06011SW-2111	Washer (@3)			O	4	
H-1-10	15121PR-A001	Square Washer				2	
H-1-11	16079PR-W121	Sensor Bracket (R)				1	
H-1-12	15121PR-A001	Square Washer				2	
H-1-13	25046EL-E121	Cable (25-46)				1	
H-1-14	25047EL-E121	Cable (25-47)				1	
H-1-15	25045EL-E121	Cable (25-45)				1	
H-1-16	15037AD-BE01	Cam Roller Guide Rail (L=494)				2	
H-1-17	04016MC-4113	CAM ROLLER GUIDE FIXED SCREW				4	
H-1-18	15027DC-A001	Timing Pulley Bracket (C)				2	
H-1-19	03022SC-4517	Hex. Socket Set Screw(M4*L5)			O	4	
H-1-20	15056PR-A001	Tension Plate (W) (Belt:48)				2	
H-1-21	15089SC-7119	C.S Screw (M4*L12)			O	4	
H-1-22	15058SC-1211	Hex. Bolt (M6*L58)			O	2	
H-1-23	14064SN-7311	Hex.Nut (M6-No3)			O	2	
H-1-24	15024CW-A001	Timing Pulley Tension Base(N)				2	
H-1-25	15028SC-1111	Hex. Bolt (M6*L20)			O	6	
H-1-26	16014SW-4115	Spring Washer (@6)			O	6	
H-1-27	08057SW-1111	Washer (@6)			O	6	
H-1-28	04002600H000	TIMING PULLEY(16-S5M-32F)				1	
H-1-29	15042BR-A001	Needle Bearing (1210Zz)			O	4	
H-1-30	15046RB-A001	Driving Pin Washer (Tw1225)				4	
H-1-31	04104400B000	Timing Pulley Driving Pin				2	
H-1-32	15024BM-E121	Bracket Fixed Plat Ass' Y				2	

This exploded view diagram illustrates the assembly of the H-2000 Series Motor. The components are labeled as follows:

- H-2-1**: Motor housing
- H-2-20**: Power cord
- H-2-4**, **H-2-3**, **H-2-2**: Mounting hardware for the motor housing
- H-2-5**: Motor base plate
- H-2-6**, **H-2-7**, **H-2-8**: Mounting hardware for the base plate
- H-2-9**: Motor shaft
- H-2-10**: Motor coupling
- H-2-11**: Motor shaft extension
- H-2-12**: Motor coupling
- H-2-13**: Motor coupling
- H-2-14**: Motor coupling
- H-2-15**: Motor coupling
- H-2-16**: Motor coupling
- H-2-17**: Motor coupling
- H-2-18**: Motor coupling
- H-2-19**: Motor coupling
- H-2-21**: Motor coupling

Note




This diagram illustrates the assembly of the H-3-1 component. The main assembly is shown in an exploded view, with the H-3-1 component at the center. The assembly includes the following parts:

- H-3-1**: The main component, a long, narrow, rectangular piece with a textured surface.
- H-3-2**: A small, rectangular component with a textured surface, located below the main assembly.
- H-3-3**: A small, rectangular component with a textured surface, located to the left of the main assembly.
- H-3-4**: A small, rectangular component with a textured surface, located to the right of the main assembly.
- H-3-5**: A small, rectangular component with a textured surface, located below the main assembly.
- H-3-6**: A small, rectangular component with a textured surface, located to the left of the main assembly.
- H-3-7**: A small, rectangular component with a textured surface, located to the right of the main assembly.
- H-3-8**: A small, rectangular component with a textured surface, located to the left of the main assembly.
- H-3-9**: A small, rectangular component with a textured surface, located to the right of the main assembly.
- H-3-10**: A small, rectangular component with a textured surface, located to the left of the main assembly.
- H-3-11**: A small, rectangular component with a textured surface, located to the right of the main assembly.
- H-3-12**: A small, rectangular component with a textured surface, located to the left of the main assembly.
- H-3-13**: A small, rectangular component with a textured surface, located to the right of the main assembly.
- H-3-14**: A small, rectangular component with a textured surface, located to the left of the main assembly.

Note

[illegible]

 
H-4

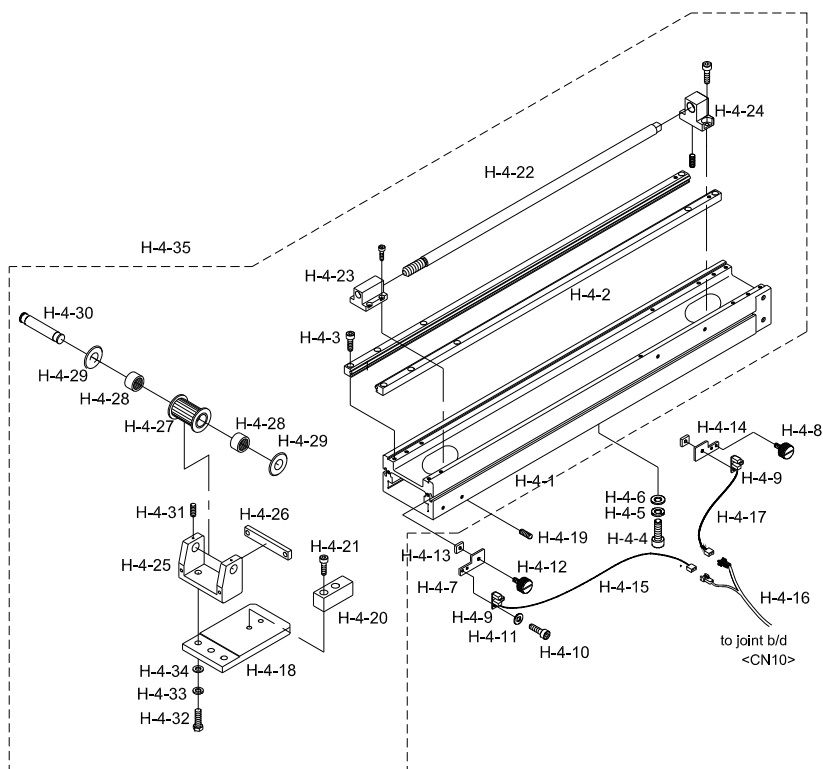

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
H-4-1	GP-019796-00	Y Cam Roller Guide Bracket A	Jul,28,06 ~	X		2	
H-4-2	15030AD-B001	Y Cam Roller Guide Rail L=633				4	
H-4-3	04016MC-4113	CAM ROLLER GUIDE FIXED SCREW				16	
H-4-4	15017SC-4113	Hex. Socket Bolt (M8*L45)			O	16	
H-4-5	15095SW-3115	Spring Washer (@8)			O	16	
H-4-6	04029SW-A001	Stud Bolt Washer(S) (@8)			O	16	
H-4-7	16078PR-W121	Sensor Bracket (L)				2	
H-4-8	15120SC-A001	Position Adjusting Screw				2	
H-4-9	16062EL-T121	Sensor Set				2	
H-4-10	08006SC-8118	Plus Screw (M3*L5)			O	4	
H-4-11	06011SW-2111	Washer (@3)			O	4	
H-4-12	08037AF-4517	Hex. Socket Set Screw M6*L10			O	4	
H-4-13	15056PR-B001	Square Washer				2	
H-4-14	16079PR-W121	Sensor Bracket (R)				1	
H-4-15	25055EL-W121	Cable (25-55)				1	
H-4-16	25048EL-E121	Cable (25-48)				1	
H-4-17	25056EL-W121	Cable (25-56)				2	
H-4-18	04302300B000	Timing Pulley Tension Base(W)				2	
H-4-19	15090SC-B001	Hex.Socket Set Screw (M6*L10)			O	6	
H-4-20	04200600B000	Adjusting Shaft Stopper				2	
H-4-21	14006SC-7113	Hex.Socket Set Screw(M8*L15)			O	4	
H-4-22	15033CW-B001	Y-Adjusting Shaft				2	
H-4-23	04200400B000	Y Adjusting Shaft Guide (A)				2	
H-4-24	04200500B000	Y Adjusting Shaft Guide (B)				2	
H-4-25	15026DC-A001	Timing Pulley Bracket (N)				2	
H-4-26	15055PR-A001	Tension Rivet Plate (W) W:48				2	
H-4-27	04500100E000	TIMMING PULLEY(16-S5M-32F)				2	
H-4-28	15042BR-A001	Needle Bearing (1210Zz)			O	2	
H-4-29	15046RB-A001	Driving Pin Washer (Tw1225)				4	
H-4-30	04104300B000	Timing Pulley Driving Pin "A"				2	
H-4-31	03022SC-4517	Hex. Socket Set Screw(M4*L5)			O	4	
H-4-32	15028SC-1111	Hex. Bolt (M6*L20)			O	6	
H-4-33	03026SW-9115	Spring Washer (@6)			O	6	
H-4-34	08057SW-1111	Washer (@6)			O	6	
H-4-35	15023BM-E121	Bracket Fixed Plat Ass' Y				2	

 H-5

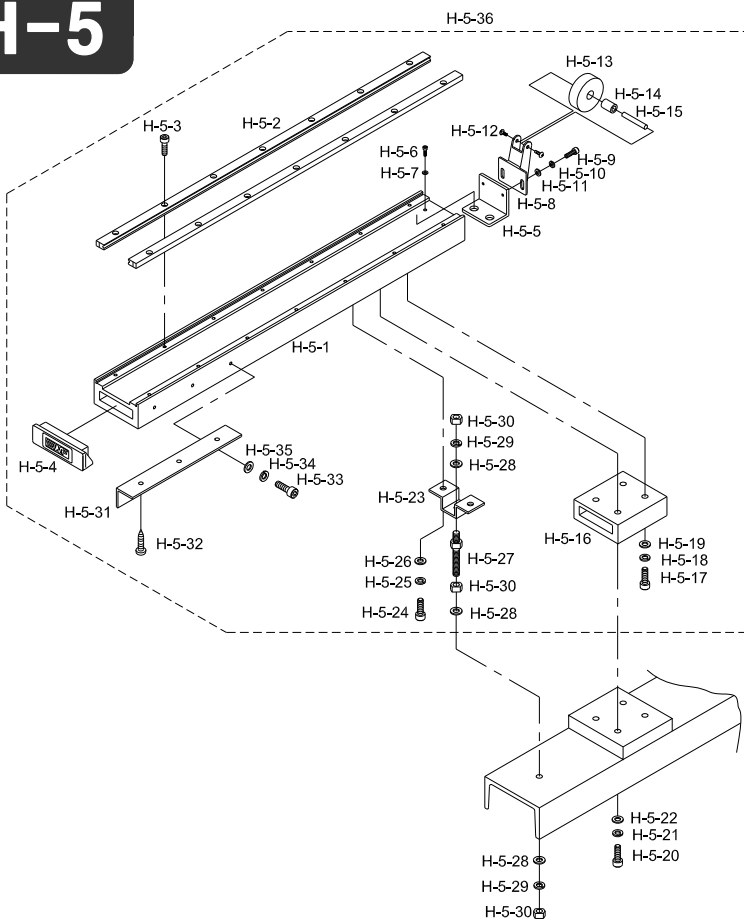

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
H-5-1	15090AD-B001	V-Rail Bracket				2	
H-5-2	15085AF-A001	Y-Axis Rail Guide				4	
H-5-3	04016MC-4113	CAM ROLLER GUIDE FIXED SCREW				4	
H-5-4	15092RB-B001	V-RAIL SUPPORT RUBBER CAP				2	
H-5-5	GP-013196-00	Supprot Bracket	Nov,10,05 ~	X		2	
H-5-6	14006SC-4113	Hex.Socket Bolt(M8*L15)			O	4	
H-5-7	15077SW-2111	Washer (@8)			O	4	
H-5-8	GP-006914-00	Roller Bracket	Jan,12,05 ~ Jun,02,05	X		2	
	GP-006914-01		Jun,02,05 ~ May,03,06	△			
	GP-006914-02		May,03,06 ~	△			
H-5-9	02015SC-7113	Hex.Socket Bolt(M4*L10)			O	4	
H-5-10	18014SW-3115	Spring Washer (@4)			O	4	
H-5-11	18015SW-3111	Washer (@4)			O	4	
H-5-12	09005SC-3123	Truss Screw(M3*L6)			O	4	
H-5-13	GP-006917-00	Guide Roller	Jan,12,05 ~ Jun,02,05	X		2	
	GP-006917-01		Jun,02,05 ~	△			
H-5-14	GP-006918-00	Guide Roller Bushing	Jan,12,05 ~ Jun,02,05	X		4	
	GP-006918-01		Jun,02,05 ~	△			
H-5-15	PN-000133-00	Roller Pin	Jan,12,05 ~	X		2	
H-5-16	15095AD-B001	Spacer				2	
H-5-17	14027SC-4113	Hex.Socket Bolt (M8*L30)			O	4	
H-5-18	15095SW-3115	Spring Washer (@8)			O	4	
H-5-19	08041SW-1111	Washer (@8-S)			O	4	
H-5-20	14006SC-7113	Hex.Socket Set Screw(M8*L15)			O	4	
H-5-21	15095SW-3115	Spring Washer (@8)			O	4	
H-5-22	08041SW-1111	Washer (@8-S)			O	4	
H-5-23	15097PR-B001	Stud Bracket				2	
H-5-24	14006SC-7113	Hex.Socket Set Screw(M8*L15)			O	4	
H-5-25	15095SW-3115	Spring Washer (@8)			O	4	
H-5-26	08041SW-1111	Washer (@8-S)			O	4	
H-5-27	15096CW-B001	Stud Bolt (M8*L90)				2	
H-5-28	08041SW-1111	Washer (@8-S)			O	6	
H-5-29	15095SW-3115	Spring Washer (@8)			O	6	
H-5-30	04032SN-A001	Hex. Nut (M8-No2)			O	6	
H-5-31	15093AD-B001	Table Support				8	

Note



H-6

The diagram illustrates the assembly of the H-6 unit. Key components and their assembly sequence are as follows:

 
- Motor and Mounting:** The motor (H-6-1) is mounted onto the square base plate (H-6-5) using the mounting bracket (H-6-4), screws (H-6-3), and washers (H-6-2).
- Wiring:** The power cord (H-6-21) is connected to the motor's terminal block (H-6-9) and the control box (CN1).
- Control Rod:** The control rod (H-6-12) is inserted into the motor's shaft (H-6-10) and secured with the nut (H-6-9).
- Bracket Assembly:** The bracket (H-6-13) is attached to the control rod using the pin (H-6-16), washers (H-6-17), and nut (H-6-18).
- Final Assembly:** The bracket assembly is mounted onto the main frame (H-6-14) using the pin (H-6-15).

Additional components shown include the control box (CN1), the control rod (H-6-12), and the bracket (H-6-13).

Note



H-7

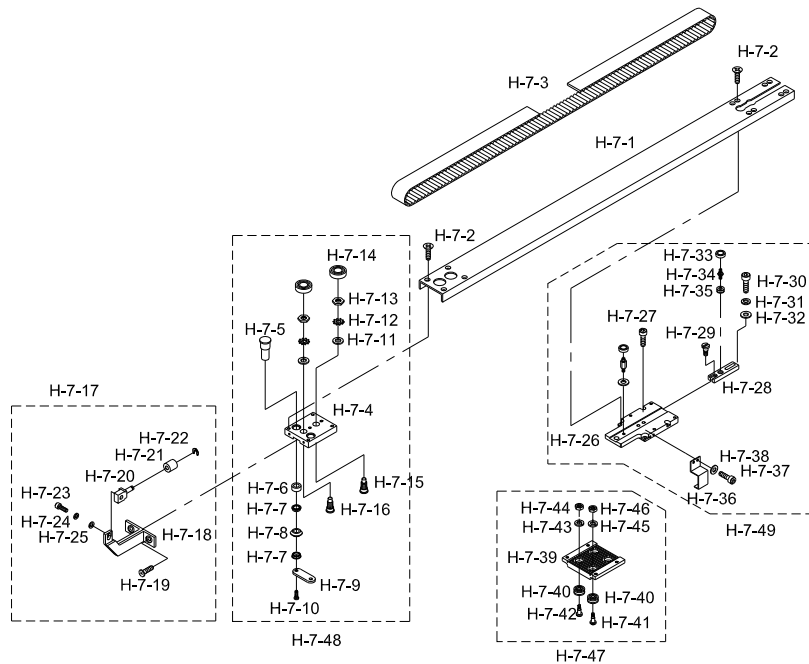


Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
H-7-1	GP-021803-00	Connection Cover "C"	Sep,25,06 ~	X		2	
H-7-2	15084SC-7119	C.S Screw (M4*L6)			O	16	
H-7-3	15051BT-A001	Y-Drive Timing Belt (W:35)				2	
H-7-4	08407100B000	Y-Axis Feed Plate "D"				2	
H-7-5	15076CW-A031	Rail Guide Pin "C"				4	
H-7-6	15092CW-A031	Stopper Washer				4	
H-7-7	15106BR-A001	Flange Bearing (1280Zz)			O	8	
H-7-8	15130AF-A001	Roller Guide				4	
H-7-9	15137PR-A001	Rail Guide Shaft Bracket				2	
H-7-10	05028SC-A001	Holder Screw				4	
H-7-11	15077SW-2111	Washer (8@-S)			O	4	
H-7-12	15078SW-8113	Toothed Lock Washer (@8)			O	4	
H-7-13	15079SN-2311	Rail Guide Shaft Nut				4	
H-7-14	15077BR-B001	Ball Bearing (Lr606Nppu)			O	4	
H-7-15	15075CW-B001	Rail Guide Pin "B"				2	
H-7-16	15074CW-B001	Rail Guide Pin "A"				2	
H-7-17	15134BM-B001	Roller Bracket Ass'Y				2	
H-7-18	08000700B000	Bracket				2	
H-7-19	02002SC-7119	Plus Screw (M4*L8)			O	4	
H-7-20	10507400B000	Roller Position Adjusting Pin				2	
H-7-21	15133CW-B001	Roller				2	
H-7-22	15159SR-4013	E-Ring (3@)			O	2	
H-7-23	02023SC-7113	Hex. Socket Bolt (M4*L8)			O	2	
H-7-24	18014SW-3115	Spring Washer (@4-No2)			O	2	
H-7-25	18015SW-3111	Washer (4@)			O	2	
H-7-26	GP-019795-00	Bearing Block (C)	Jul,28,06 ~	X		2	
H-7-27	15067SC-A001	Hex.Socket Bolt (M4*L7)			O	8	
H-7-28	GP-006299-00	ADJUSTING BLOCK FOR BEARING	Dec,18,04 ~	X		2	
H-7-29	15074SC-A001	Stopper Stud				2	
H-7-30	02031SC-7113	Hex. Socket Screw (M5*L10)			O	4	
H-7-31	18048SW-3115	Spring Washer (@5)			O	4	
H-7-32	WS-000083-00	@5 - Washer	Dec,20,04 ~	X	O	4	
H-7-33	15077BR-B001	Ball Bearing (Lr606Nppu)			O	4	
H-7-34	15098CW-A001	Rail Guide Pin "B"				2	
H-7-35	18111CW-B001	Frame 'E' Roller				2	
H-7-36	15122PR-E121	Zero Point Sensor Plate				1	
H-7-37	07035SC-7113	Bracket Screw (M3*L6)			O	2	


Note

[illegible]

 Setting

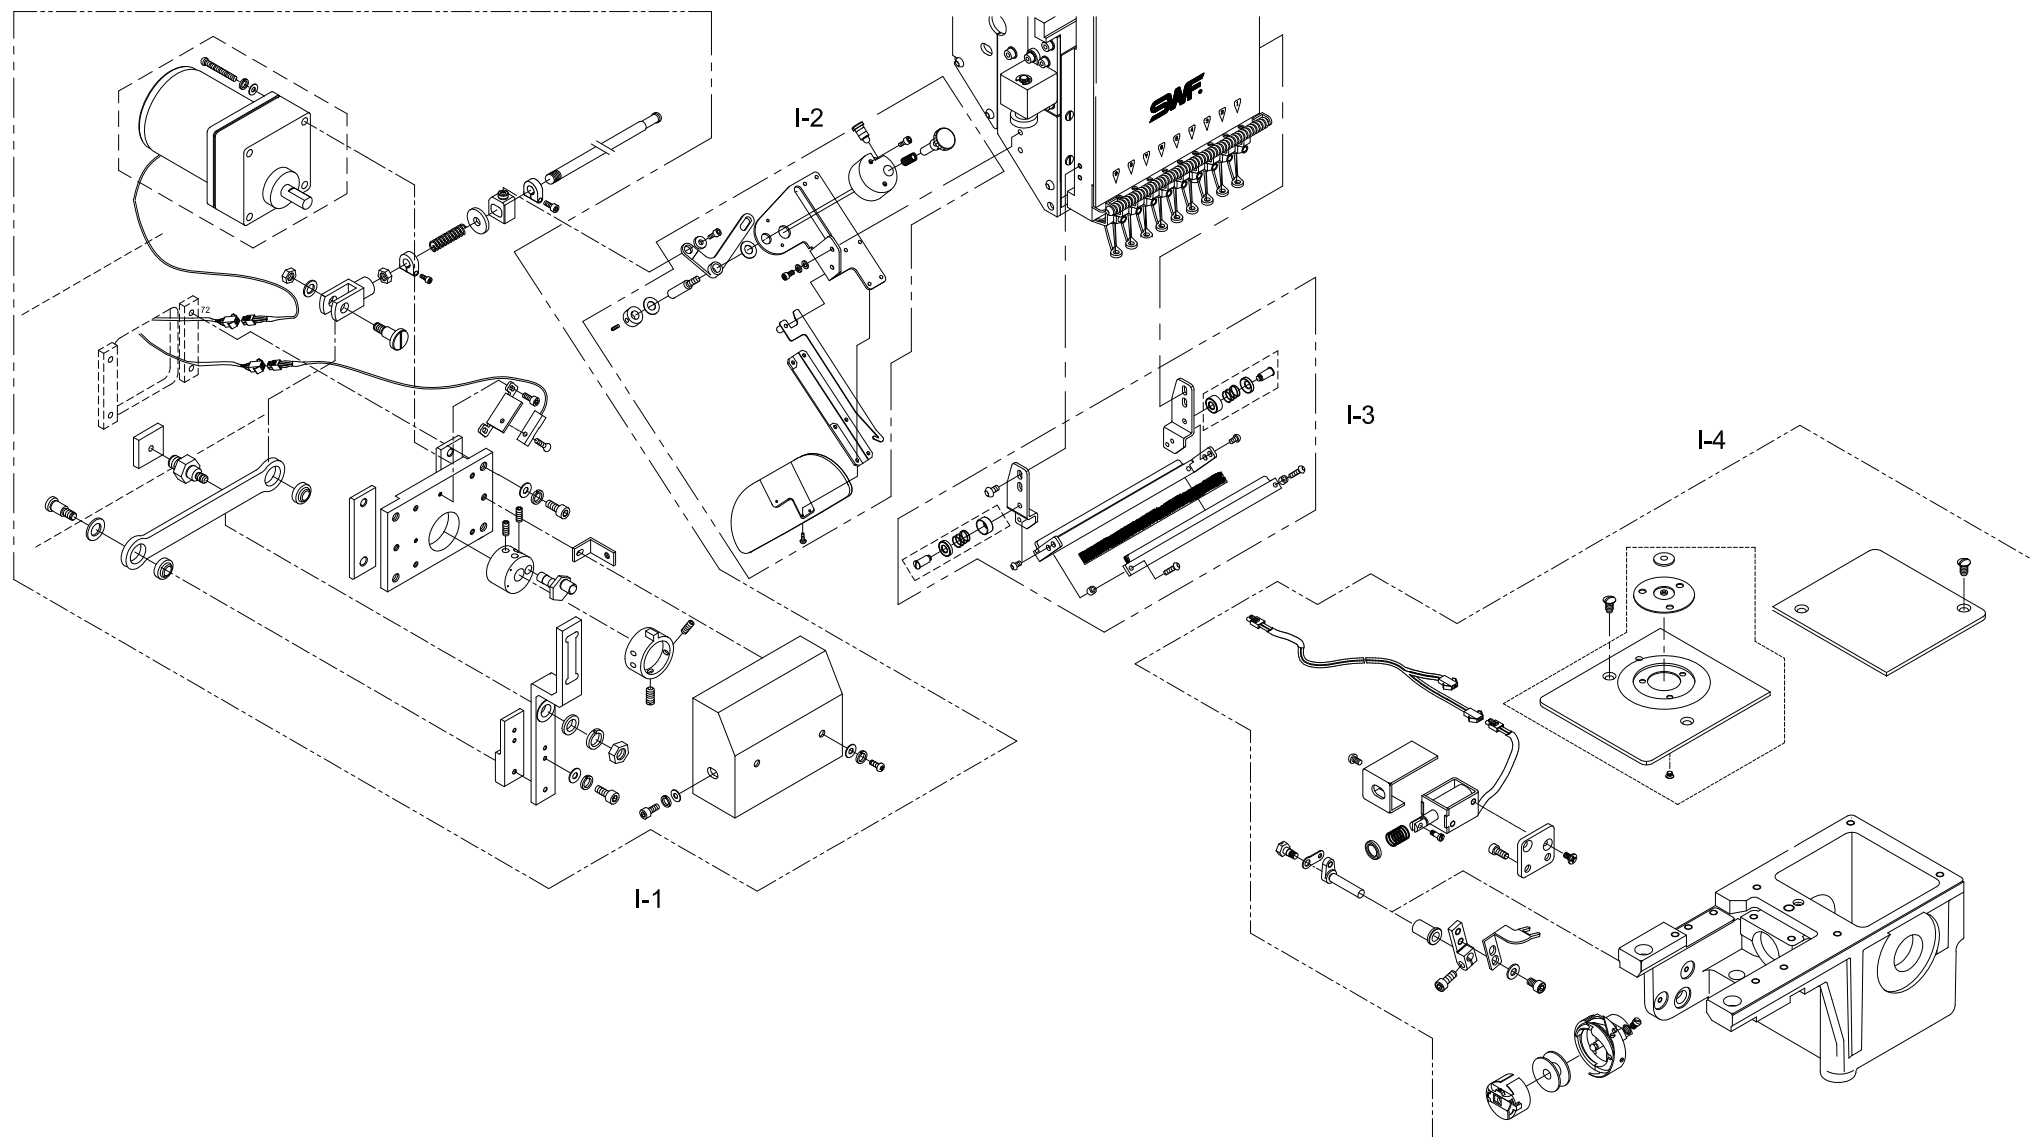

I-1

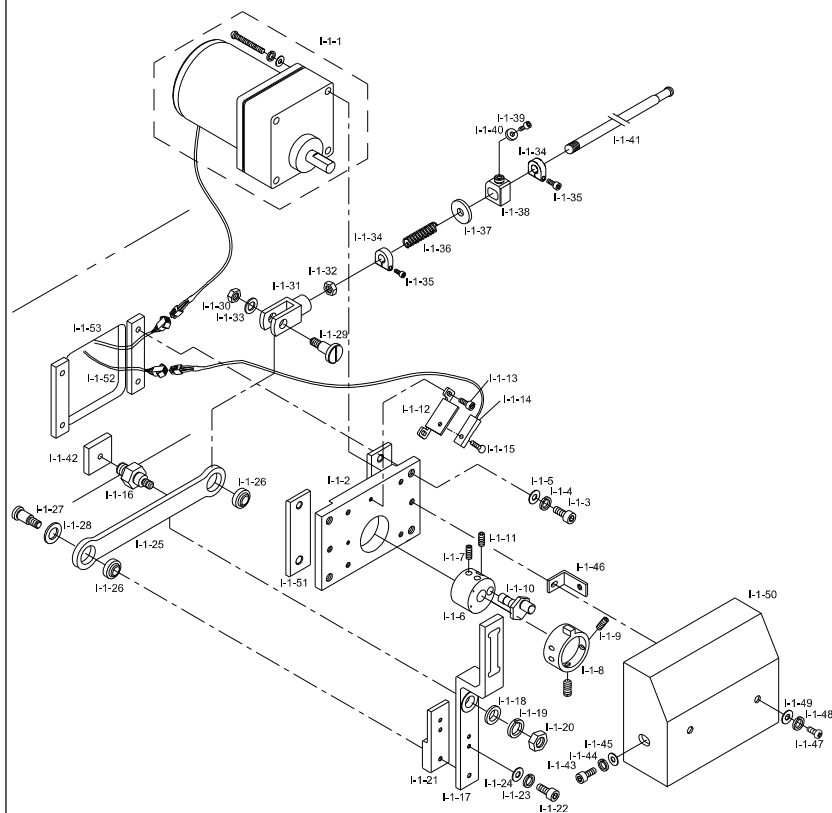 

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
I-1-1	EP-000141-00	Upper Thread Hook Motor Unit	Mar,22,06 ~	X		1	
I-1-2	03003210H000	MOTOR BASE				1	
I-1-3	06025MC-7113	Hex.Socket Bolt(M6*L25)			O	4	
I-1-4	16014SW-4115	Spring Washer (@6)			O	4	
I-1-5	08057SW-1111	Washer (@6)			O	4	
I-1-6	03003300H000	Cam Shaft Fixing Block				1	
I-1-7	05008MC-4517	Hex.Socket Bolt(M5*L8)			O	2	
I-1-8	GP-005184-00	SENSOR SENSING ADJUSTING RING	Oct,14,04 ~ May,19,05	X		1	
	GP-005184-01		May,19,05 ~	△			
I-1-9	04014SC-4517	Hex.Socket Set Screw(M5*L5)			O	2	
I-1-10	03003500H000	Motor Driving Cam Shaft				1	
I-1-11	04014SC-4517	Hex.Socket Set Screw(M5*L5)			O	1	
I-1-12	GP-005180-00	UPPER THREAD HOOK SENSOR BASE	Oct,13,04 ~	X		1	
I-1-13	07035SC-7113	Bracket Screw (M3*L6)			O	2	
I-1-14	15-027A-2070	SENSOR				1	
I-1-15	13061SC-8119	Plus Screw (M3*L10)			O	1	
I-1-16	03003810H000	Stud Bolt For Driving Plate				1	
I-1-17	03003910H000	Upper Thread Driving Plate				1	
I-1-18	WS-000549-00	Stud Bolt Washer	Feb,20,09 ~ Jun,24,09	X		1	
	WS-000549-01		Jun,24,09 ~	△			
I-1-19	15095SW-3115	Spring Washer (@8)			O	1	
I-1-20	04032SN-A001	Hex. Nut (M8-No2)			O	1	
I-1-21	GP-021754-00	Driving Plate Block"C"	Sep,21,06 ~	X		1	
I-1-22	18047SC-7113	Hex.Socket Bolt (M5*L15)			O	2	
I-1-23	18048SW-3115	Spring Washer (5@)			O	2	
I-1-24	18049SW-3111	Washer (@5)			O	2	
I-1-25	03004200HH00	MOTOR DRIVING CONNECT PLATE				1	
I-1-26	03004400H000	Motor Driving Connect Bearing				2	
I-1-27	03008300H000	Connecting Plate Stud Screw A				1	
I-1-28	03004500H000	Connecting Plate Pin Washer				1	
I-1-29	03004700H000	Connecting Plate Stud Screw				1	
I-1-30	13042SN-1111	Hex.Nut (M6*T5-R)			O	1	
I-1-31	03004800H000	Connecting Plate Knuckle				1	
I-1-32	04032SN-A001	Hex. Nut (M8-No2)			O	1	
I-1-33	16014SW-4115	SPRING WASHER (@6)			O	1	
I-1-34	LWP-BK0003-00	Return Spring Stopper	Dec,28,10 ~	X		8	
	LWP-BK0003-01		Jul,01,11 ~	△			
I-1-35	05008SC-4113	Hex.Socket Bolt (M4*L16)			O	8	
I-1-36	03002700H000	Return Spring				4	

This diagram illustrates the exploded view of the front panel assembly. The components are labeled with part numbers and assembly sequence indicators (I-1-1 through I-1-50). The assembly process involves mounting the front panel (I-1-2) onto a base structure, securing it with screws (I-1-3, I-1-4, I-1-5, I-1-6, I-1-7, I-1-8, I-1-9, I-1-10, I-1-11, I-1-12, I-1-13, I-1-14, I-1-15, I-1-16, I-1-17, I-1-18, I-1-19, I-1-20, I-1-21, I-1-22, I-1-23, I-1-24, I-1-25, I-1-26, I-1-27, I-1-28, I-1-29, I-1-30, I-1-31, I-1-32, I-1-33, I-1-34, I-1-35, I-1-36, I-1-37, I-1-38, I-1-39, I-1-40, I-1-41, I-1-42, I-1-43, I-1-44, I-1-45, I-1-46, I-1-47, I-1-48, I-1-49, I-1-50). The front panel (I-1-2) features a central circular opening and a rectangular cutout. The base structure includes a mounting bracket (I-1-1) and a control panel (I-1-50) with a handle (I-1-49) and a lock (I-1-47). The assembly is shown in a perspective view, with dashed lines indicating the alignment and sequence of parts.

Note

O


I-2

The diagram illustrates the assembly of the I-2 component. It shows a main assembly area enclosed in a dashed line, with a separate view of a component being installed into a larger structure. The main assembly includes a base plate (I-2-1) with various mounting points. A long, thin component (I-2-8) is shown being inserted into a slot. A bracket (I-2-9) is attached to the side. A series of small, round components (I-2-10, I-2-11, I-2-12) are shown being inserted into a row of holes. A small, rectangular component (I-2-5) is shown being inserted into a slot. A small, rectangular component (I-2-6) is shown being inserted into a slot. A small, rectangular component (I-2-7) is shown being inserted into a slot. A small, rectangular component (I-2-13) is shown being inserted into a slot. A small, rectangular component (I-2-14) is shown being inserted into a slot. A small, rectangular component (I-2-15) is shown being inserted into a slot. A small, rectangular component (I-2-16) is shown being inserted into a slot. A small, rectangular component (I-2-17) is shown being inserted into a slot. A small, rectangular component (I-2-18) is shown being inserted into a slot. A small, rectangular component (I-2-19) is shown being inserted into a slot. The diagram also shows a component being installed into a larger structure, which is labeled with the 'SMF' logo.

Note

O

 
I-4

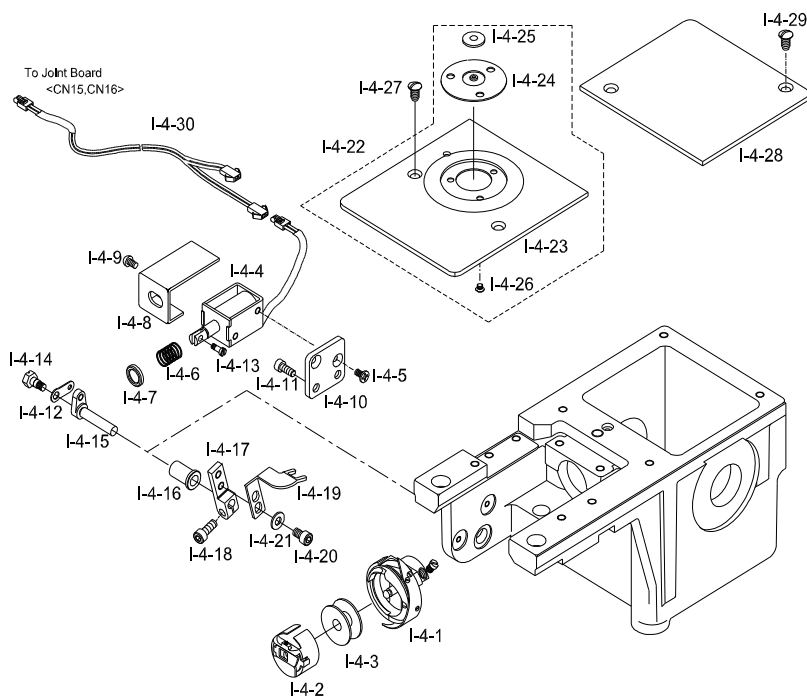

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
I-4-1	04033AF-D002	Rotary Hook				4	
I-4-2	04034AF-A001	Bobbin Case Set				4	
I-4-3	04035AF-A001	Bobbin				4	
I-4-4	AS-003234-00	Picker Sol. Set	Aug,18,05 ~ Jul,06,06	X		4	
	AS-003234-01		Jul,06,06 ~ Sep,22,06	△			
	AS-003234-02		Sep,22,06 ~	△			
I-4-5	10010SC-8119	Plus Screw (M3*L5)			O	4	
I-4-6	10011SP-A001	Sol. Spring				4	
I-4-7	10012RB-A001	Cushion Washer				4	
I-4-8	10013PM-A001	Picker Sol. Cover				4	
I-4-9	06010AF-8118	Plus Screw(M3*L4)			O	8	
I-4-10	10015PR-A001	Picker Sol. Base				4	
I-4-11	02023SC-7113	Hex. Socket Bolt (M4*L8)			O	8	
I-4-12	10019PR-A001	Connecting Link				4	
I-4-13	10010SC-8119	Plus Screw (M3*L5)				4	
I-4-14	10020SC-A001	Connecting Link Stud Screw				4	
I-4-15	10006FU-A001	Picker Connecting Crank				4	
I-4-16	08015PM-A001	Bushing				4	
I-4-17	10004CW-A001	Picker Holder				4	
I-4-18	02023SC-7113	Hex. Socket Bolt (M4*L8)			O	4	
I-4-19	10001AF-A001	Picker				4	
I-4-20	02014SC-7113	Hex. Socket Bolt (M4*L5)			O	8	
I-4-21	06003SW-2111	Washer (@4)			O	8	
I-4-22	12000110B000	NEEDEL PLATE SET				4	
I-4-23	12000300B000	NEEDLE PLATE				4	
I-4-24	12000400B000	NEEDLE PLATE ATTACHMENT				4	
I-4-25	04043RB-B001	Needle Plate Cushion Rubber				4	
I-4-26	04007SC-A001	Cushion Cover Screw (M3*L2.3)				12	
I-4-27	04004AF-A001	Needle Plate Screw				8	
I-4-28	04008PR-A001	Hook Base Cover				4	
I-4-29	04004AF-A001	Needle Plate Screw				8	
I-4-30	02102000HDK2	Picker Sol.Connet From J/B				1	

 Spool

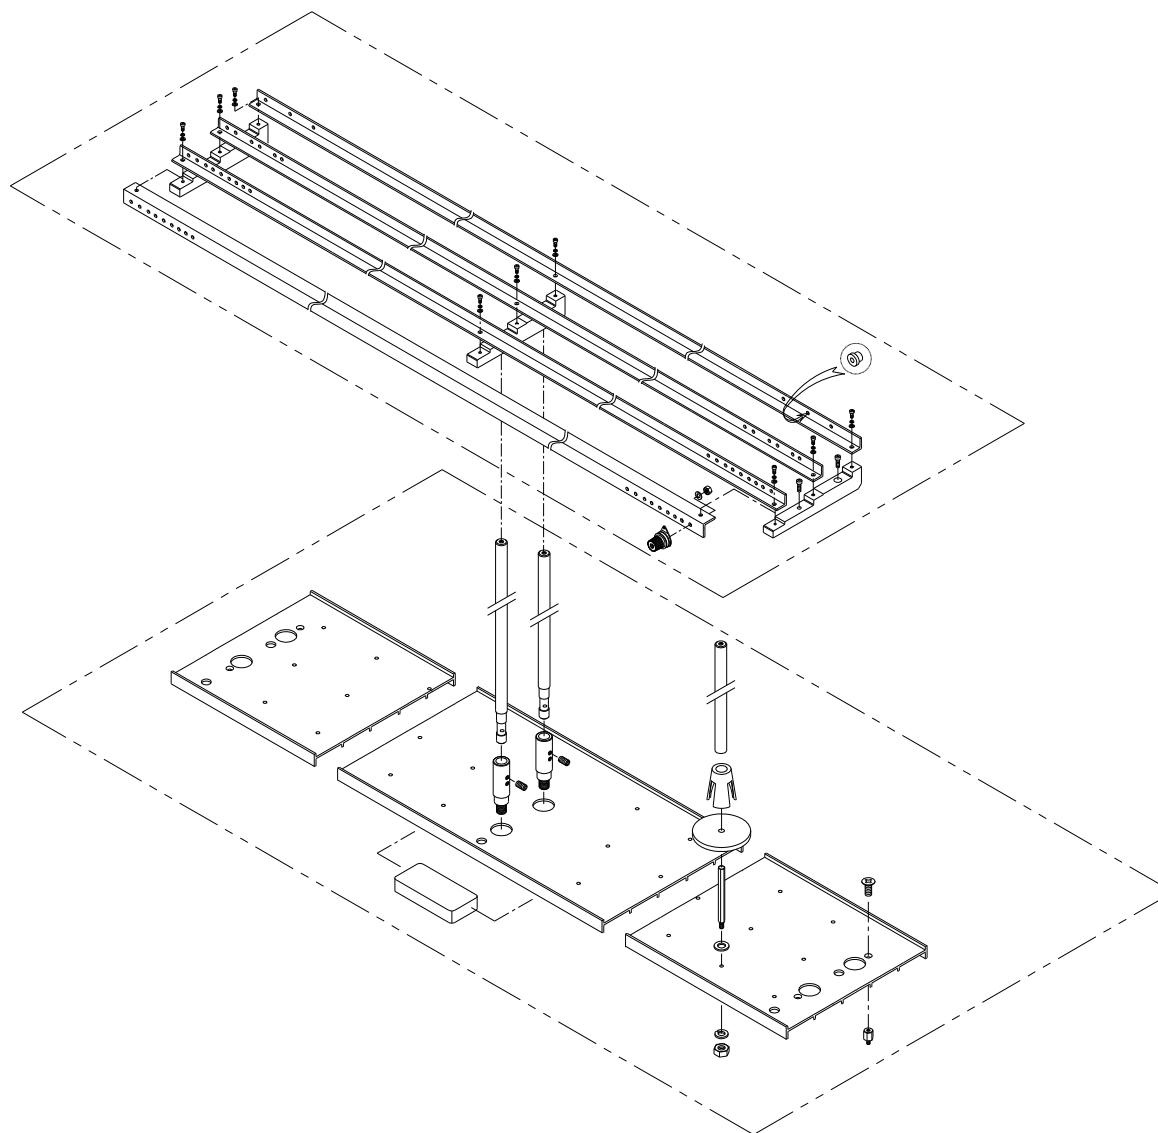

[illegible]

Note	
------	--

[illegible]

This diagram illustrates the exploded view of the J-2-14 assembly. The main components are labeled as follows:


- J-2-1**: The top horizontal rail.
- J-2-2**: The middle horizontal rail.
- J-2-3**: The bottom horizontal rail.
- J-2-4**: The base rail.
- J-2-5**: A small vertical support component.
- J-2-6**: A small vertical support component.
- J-2-7**: A small vertical support component.
- J-2-8**: A small vertical support component.
- J-2-9**: A small vertical support component.
- J-2-10**: A large cylindrical component.
- J-2-11**: A small cylindrical component.
- J-2-12**: A small cylindrical component.
- J-2-13**: A small cylindrical component.
- J-2-14**: The main assembly unit.

The diagram shows the relative positions and assembly points for these components, with dashed lines indicating the alignment and fit of the parts.



Note	
------	--

 Work Table

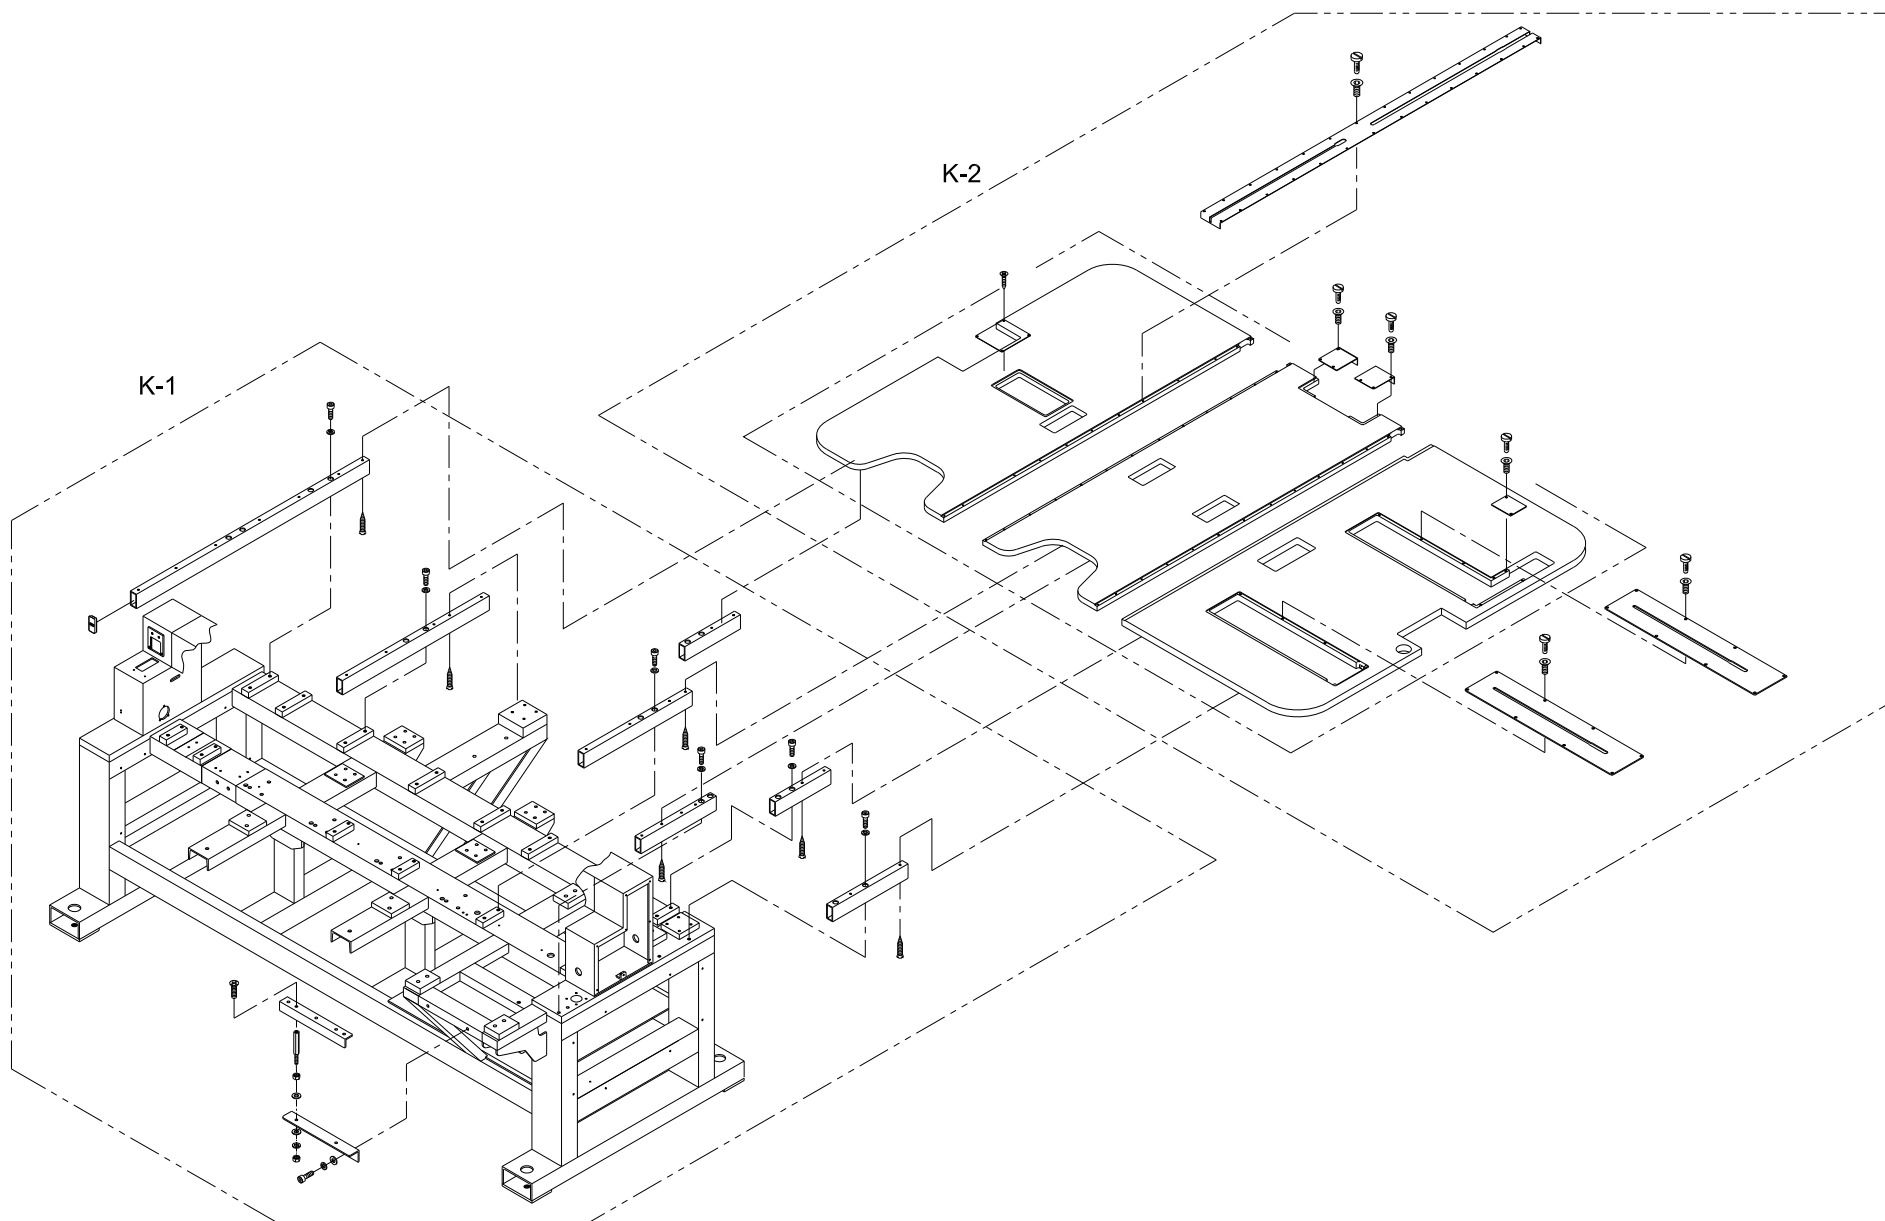

This exploded view diagram illustrates the assembly of the K-111 machine frame. The main frame structure is shown in the center, with various components and fasteners labeled around it. Key components include:

- K-1-1**: A long horizontal beam at the top left.
- K-1-2**: A small vertical pin or screw.
- K-1-3**: A small vertical pin or screw.
- K-1-4**: A small vertical pin or screw.
- K-1-5**: A small vertical pin or screw.
- K-1-6**: A long horizontal beam at the top right.
- K-1-7**: A small vertical pin or screw.
- K-1-8**: A small vertical pin or screw.
- K-1-9**: A small vertical pin or screw.
- K-1-10**: A small vertical pin or screw.
- K-1-11**: A small vertical pin or screw.
- K-1-12**: A small vertical pin or screw.
- K-1-13**: A small vertical pin or screw.
- K-1-14**: A small vertical pin or screw.
- K-1-15**: A small vertical pin or screw.
- K-1-16**: A small vertical pin or screw.
- K-1-17**: A small vertical pin or screw.
- K-1-18**: A small vertical pin or screw.
- K-1-19**: A small vertical pin or screw.
- K-1-20**: A small vertical pin or screw.
- K-1-21**: A small vertical pin or screw.

The diagram shows the relative positions of these components and the fasteners used to assemble them, providing a clear guide for the construction of the machine frame.

[illegible]


This diagram illustrates the exploded view of the K-2 assembly. The main components and their assembly points are labeled as follows:

- K-2-1**: The main base plate.
- K-2-2**: A small rectangular component attached to the top left of the base plate.
- K-2-3**: A small rectangular component attached to the top left of the base plate.
- K-2-4**: A small rectangular component attached to the top right of the base plate.
- K-2-5**: A small rectangular component attached to the top right of the base plate.
- K-2-6**: A small rectangular component attached to the top right of the base plate.
- K-2-7**: A small rectangular component attached to the top right of the base plate.
- K-2-8**: A long, narrow rectangular component attached to the top right of the base plate.
- K-2-9**: A long, narrow rectangular component attached to the top right of the base plate.
- K-2-10**: A small rectangular component attached to the bottom right of the base plate.
- K-2-11**: A long, narrow rectangular component attached to the top left of the base plate.

Note

[illegible]

 Cable

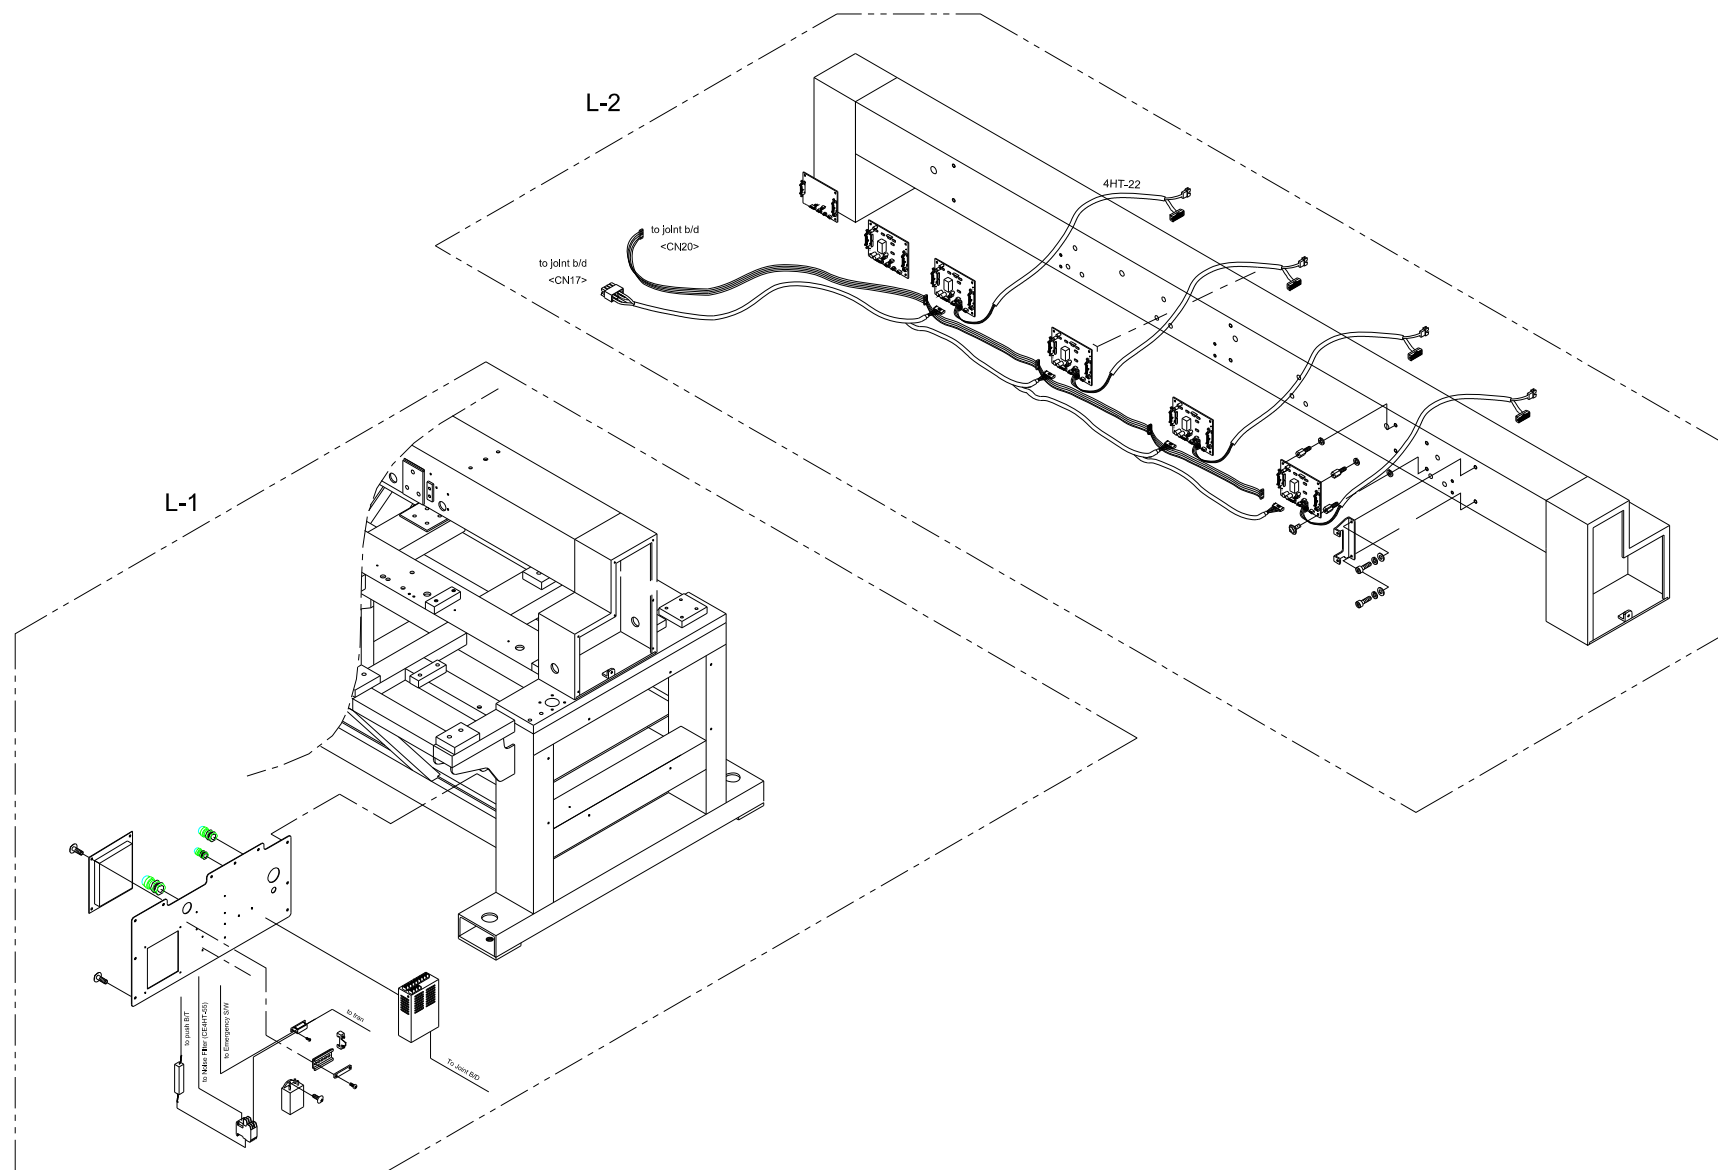





Note	
------	--



 Con Box & OP Box

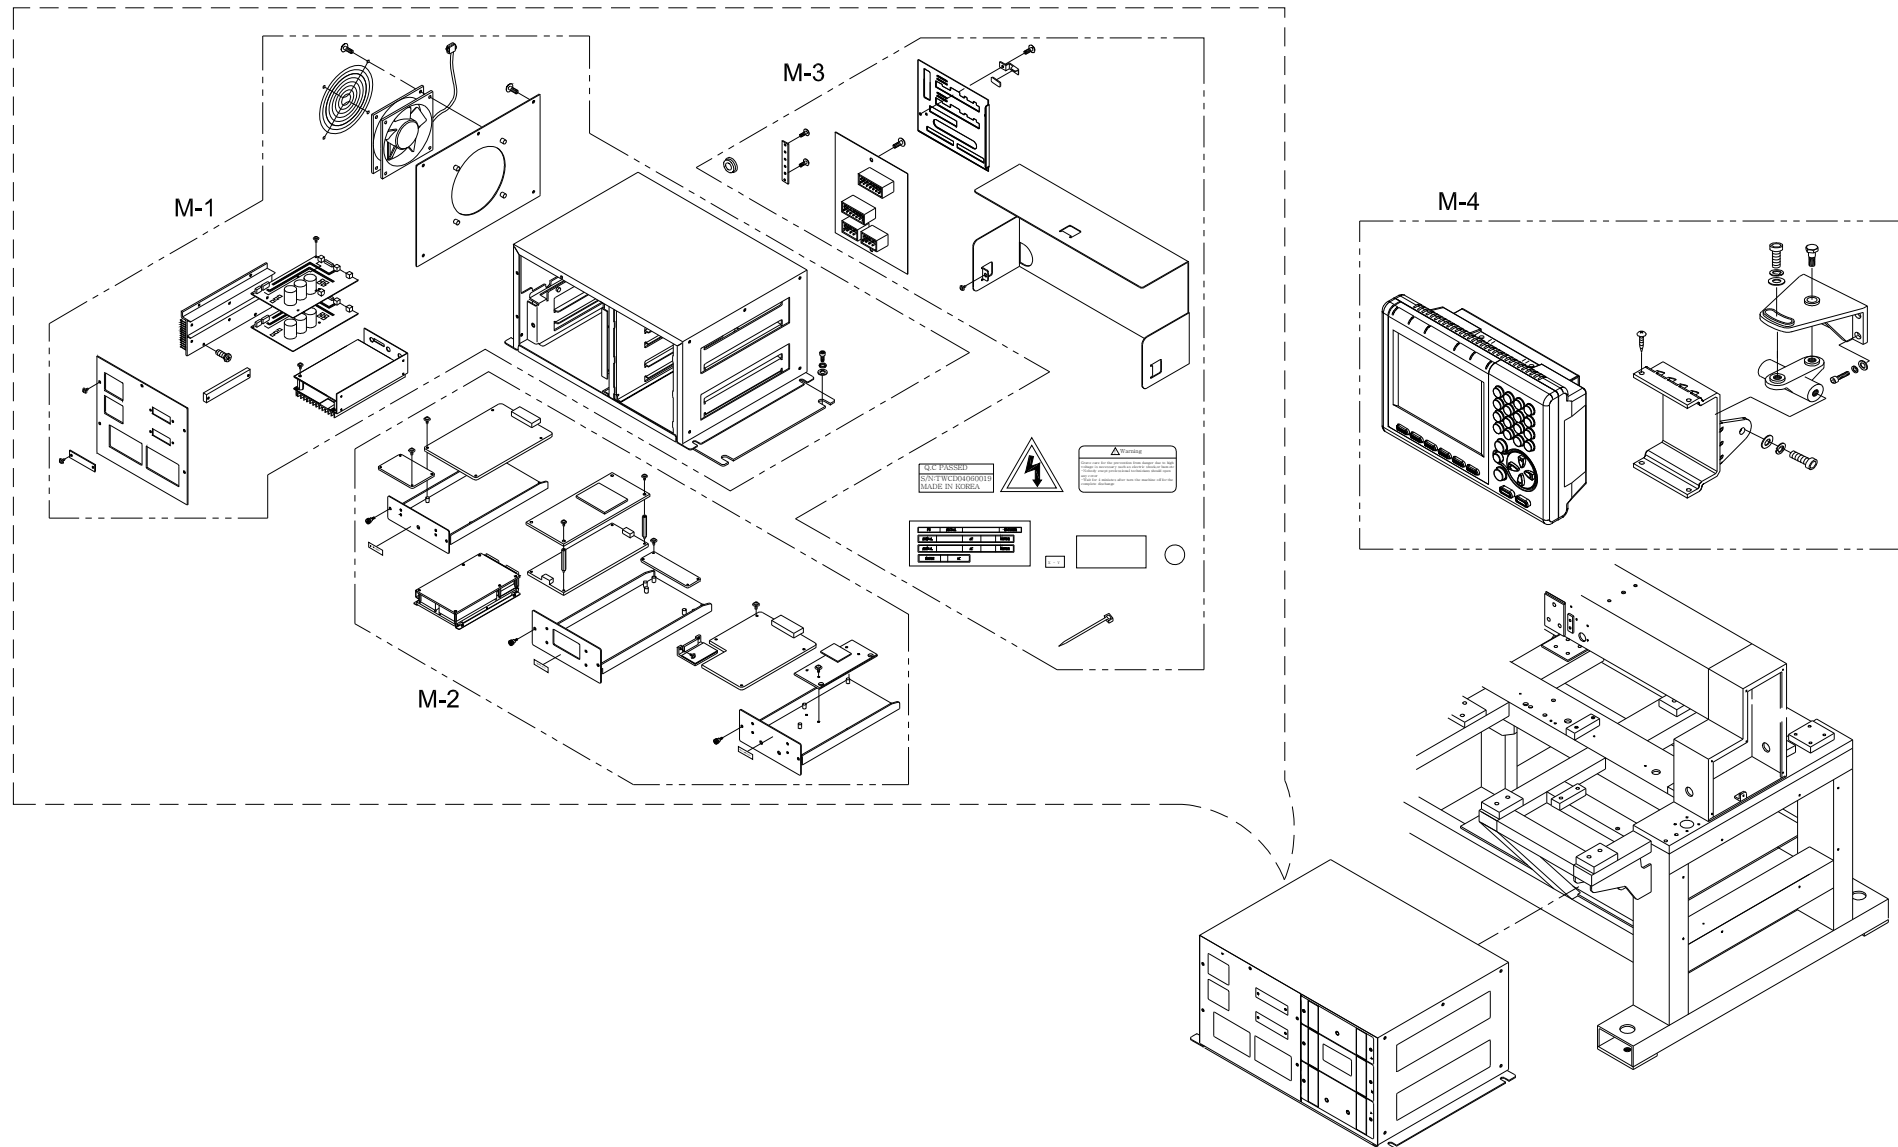

M-1

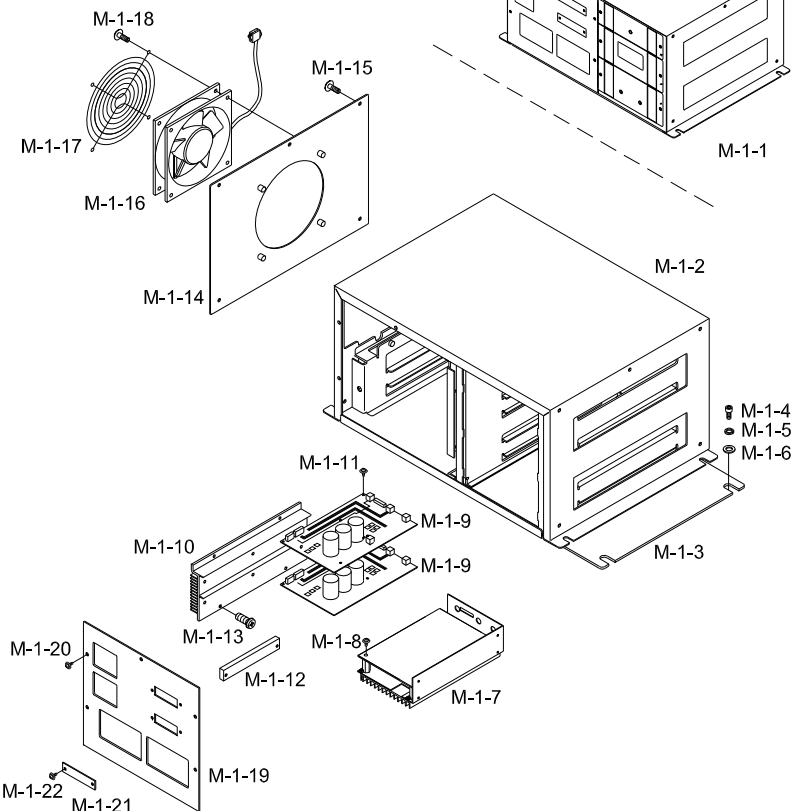 

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
M-1-1	SWF-00000457	Control Box Assy(BD-000542-00 , 110V/2.0A)				1	
	SWF-00000461	Control Box Assy(BD-000543-00 , 220V/2.0A)				1	
	SWF-00000484	Control Box Assy(BD-000544-00 , 110V/2.5A)				1	
	SWF-00000485	Control Box Assy(BD-000545-00 , 220V/2.5A)				1	
	SWF-00000486	Control Box Assy(BD-000146-03 , 110V/3.5A)				1	
	SWF-00000487	Control Box Assy(BD-000044-03 , 220V/3.5A)				1	
M-1-2	GP-016016-00	Control Box	Mar,02,06 ~ Jun,23,06	X		1	
	GP-016016-01		Jun,23,06 ~ Sep,01,06	△			
	GP-016016-02		Sep,01,06 ~ Feb,02,07	△			
	GP-016016-03		Feb,02,07 ~ May,11,07	△			
	GP-016016-04		May,11,07 ~	△			
M-1-3	GP-017171-00	Rubber	Apr,14,06 ~	X		2	
M-1-4	18047SC-7113	Control Box Screw (M5xL15)			O	4	
M-1-5	16019SW-4115	Control Box Spring Washer				4	
M-1-6	16018SW-1111	Control Box Washer				4	
M-1-7	BD-000311-00	Main Drive (ASSY)(220V)//BD-000312-00(110V)	Dec,06,05 ~ Feb,24,06	X		1	
	BD-000311-01		Feb,24,06 ~ May,09,06	△			
	BD-000311-02		May,09,06 ~ Nov,30,06	△			
	BD-000311-03		Nov,30,06 ~ Dec,20,06	△			
	BD-000311-04		Dec,20,06 ~ Aug,20,07	△			
	BD-000311-05		Aug,20,07 ~ Mar,11,08	△			
	BD-000311-06		Mar,11,08 ~	△			
M-1-8	07-004S-SM5S	Main Drive Assy Screw (set) (M4xL10)			O	2	
M-1-9	BD-000044-00	X-Y Driver Board(220V)//BD-000146-00(110V)	Jun,24,04 ~ Jul,25,06	X		2	
	BD-000044-01		Jul,25,06 ~ Aug,31,06	△			
	BD-000044-02		Aug,31,06 ~ Mar,15,07	△			
	BD-000044-03		Mar,15,07 ~	△			
M-1-10	GP-015921-00	Driver Radiator	Feb,28,06 ~	X		1	
M-1-11	05008AF-4113	X-Y Driver Board Screw (set) (M4xL16)			O	6	
M-1-12	05-002S-SW70	PCB Guide (TRCG-3300)				4	
M-1-13	07-004S-SM5S	Driver Radiator Screw(set) (M4xL10)			O	4	
M-1-14	GP-016015-00	Side Cover	Mar,02,06 ~	X		1	
M-1-15	10-003M-PT01	Side Cover Screw(M4xL8)			O	5	
M-1-16	01-002A-AT01	COOLING FAN				1	
M-1-17	01-002B-AU12	FAN Cover				1	
M-1-18	01-002M-AU12	FAN Screw (M4xL35)			O	4	
M-1-19	GP-016011-00	Front Cover (L)	Mar,02,06 ~	X		1	

M-1


This exploded view diagram illustrates the assembly of the M-1 chassis. The components are labeled as follows:

- M-1-1**: The main chassis unit, shown in a perspective view at the top right.
- M-1-2**: The front panel of the chassis, shown in a perspective view below the main unit.
- M-1-3**: The front panel mounting bracket, shown below the front panel.
- M-1-4**: A screw used to secure the front panel bracket.
- M-1-5**: A screw used to secure the front panel.
- M-1-6**: A screw used to secure the front panel.
- M-1-7**: A component, likely a power supply or fan, shown below the front panel.
- M-1-8**: A component, likely a power supply or fan, shown below the front panel.
- M-1-9**: A component, likely a power supply or fan, shown below the front panel.
- M-1-10**: A component, likely a power supply or fan, shown below the front panel.
- M-1-11**: A component, likely a power supply or fan, shown below the front panel.
- M-1-12**: A component, likely a power supply or fan, shown below the front panel.
- M-1-13**: A component, likely a power supply or fan, shown below the front panel.
- M-1-14**: A component, likely a power supply or fan, shown below the front panel.
- M-1-15**: A component, likely a power supply or fan, shown below the front panel.
- M-1-16**: A component, likely a power supply or fan, shown below the front panel.
- M-1-17**: A component, likely a power supply or fan, shown below the front panel.
- M-1-18**: A component, likely a power supply or fan, shown below the front panel.
- M-1-19**: A component, likely a power supply or fan, shown below the front panel.
- M-1-20**: A component, likely a power supply or fan, shown below the front panel.
- M-1-21**: A component, likely a power supply or fan, shown below the front panel.
- M-1-22**: A component, likely a power supply or fan, shown below the front panel.

Note

M

 M-2

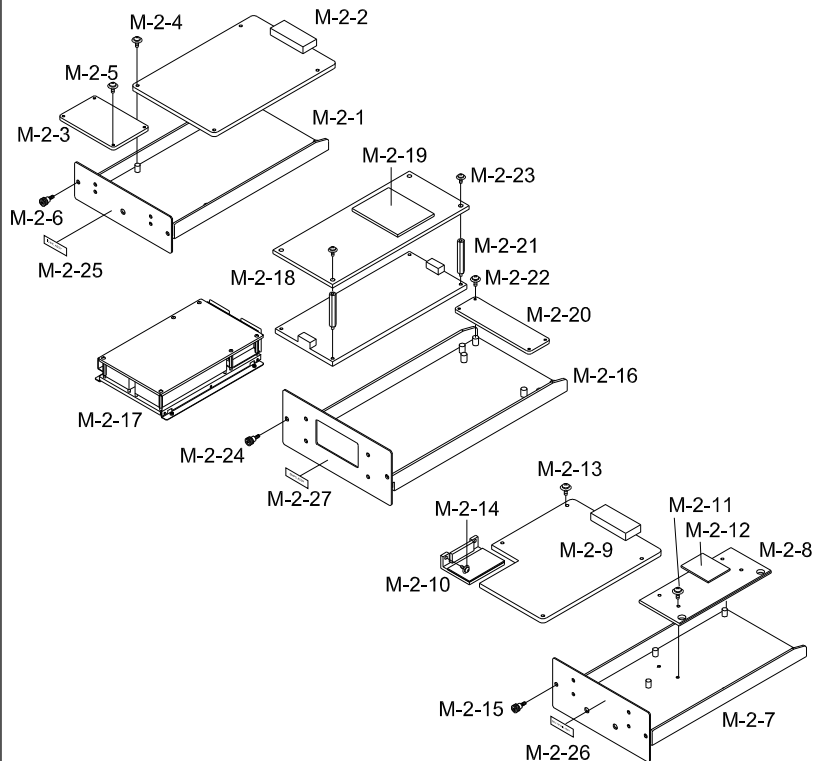


Note


Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
M-2-1	GP-016008-00	IO MC Bracket	Mar,02,06 ~ Jun,19,06	X		1	
	GP-016008-01		Jun,19,06 ~	△			
M-2-2	BD-000306-00	IO MC Board	Dec,05,05 ~ Apr,26,06	X		1	
	BD-000306-01		Apr,26,06 ~ May,15,06	△			
	BD-000306-02		May,15,06 ~ Aug,25,06	△			
	BD-000306-03		Aug,25,06 ~ Feb,14,07	△			
	BD-000306-04		Feb,14,07 ~ May,08,07	△			
	BD-000306-05		May,08,07 ~ Nov,01,07	△			
	BD-000306-06		Nov,01,07 ~ Dec,04,07	△			
	BD-000306-07		Dec,04,07 ~ Aug,09,19	△			
	BD-000306-08		Aug,09,19 ~	△			
M-2-3	BD-000423-00	IO LED Board	Apr,22,06 ~ Jun,15,06	X		1	
	BD-000423-01		Jun,15,06 ~	△			
M-2-4	10-028S-SC53	IO MC Board Screw				4	
M-2-5	10-028S-SC53	IO LED Board Screw(set) (M3xL7)			O	4	
M-2-6	SC-000406-00	IO MC Bracket Screw(캠티브) (M3xL7)	Aug,18,05 ~	X	O	2	
M-2-7	GP-016007-00	DDC Bracket	Mar,02,06 ~ Jun,19,06	X		1	
	GP-016007-01		Jun,19,06 ~	△			
M-2-8	GP-017703-00	DDC Radiator	May,15,06 ~ Jun,19,06	X		1	
	GP-017703-01		Jun,19,06 ~	△			
M-2-9	BD-000387-00	DDC Board	Feb,23,06 ~ Aug,25,06	X		1	
	BD-000387-01		Aug,25,06 ~ Feb,01,07	△			
	BD-000387-02		Feb,01,07 ~ Sep,18,08	△			
	BD-000387-03		Sep,18,08 ~	△			
M-2-10	EP-000149-00	Wiper Motor Driver				1	
M-2-11	10-028S-SC53	DDC Radiator Screw(set) (M3xL7)			O	4	
M-2-12	GP-015654-00	DDC Radiator Sheet	Feb,22,06 ~	X		1	
M-2-13	10-028S-SC53	DDC Board Screw(set) (M3xL7)			O	4	
M-2-14	10-028S-SC53	Wiper Motor Drive Screw(set) (M3xL7)			O	2	
M-2-15	SC-000406-00	DDC Bracket Screw(캠티브)	Aug,18,05 ~	X		2	
M-2-16	GP-016009-00	SMPS Bracket	Mar,02,06 ~	X		1	
M-2-17	EP-000029-00	SMPS	Jul,15,05 ~	X		1	
M-2-18	GP-015653-00	SMPS Radiator	Feb,22,06 ~	X		1	
M-2-19	GP-012118-00	SMPS Radiator Sheet	Sep,22,05 ~	X		1	
M-2-20	BD-000392-00	UNIT Board	Mar,02,06 ~ Jun,15,06	X		1	
	BD-000392-01		Jun,15,06 ~ Sep,01,06	△			
	BD-000392-02		Sep,01,06 ~ Sep,10,08	△			
	BD-000392-03		Sep,10,08 ~	△			

M

 75

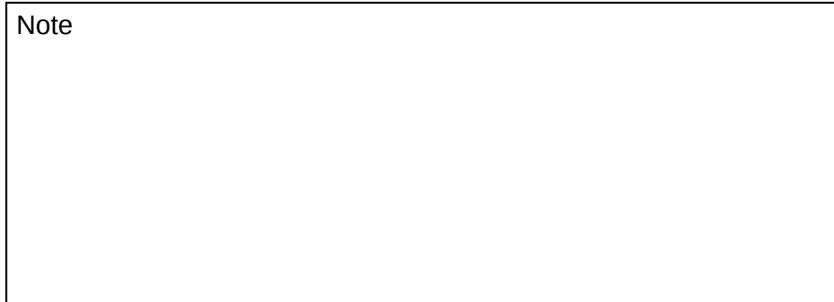76

 
Lamp & Switch

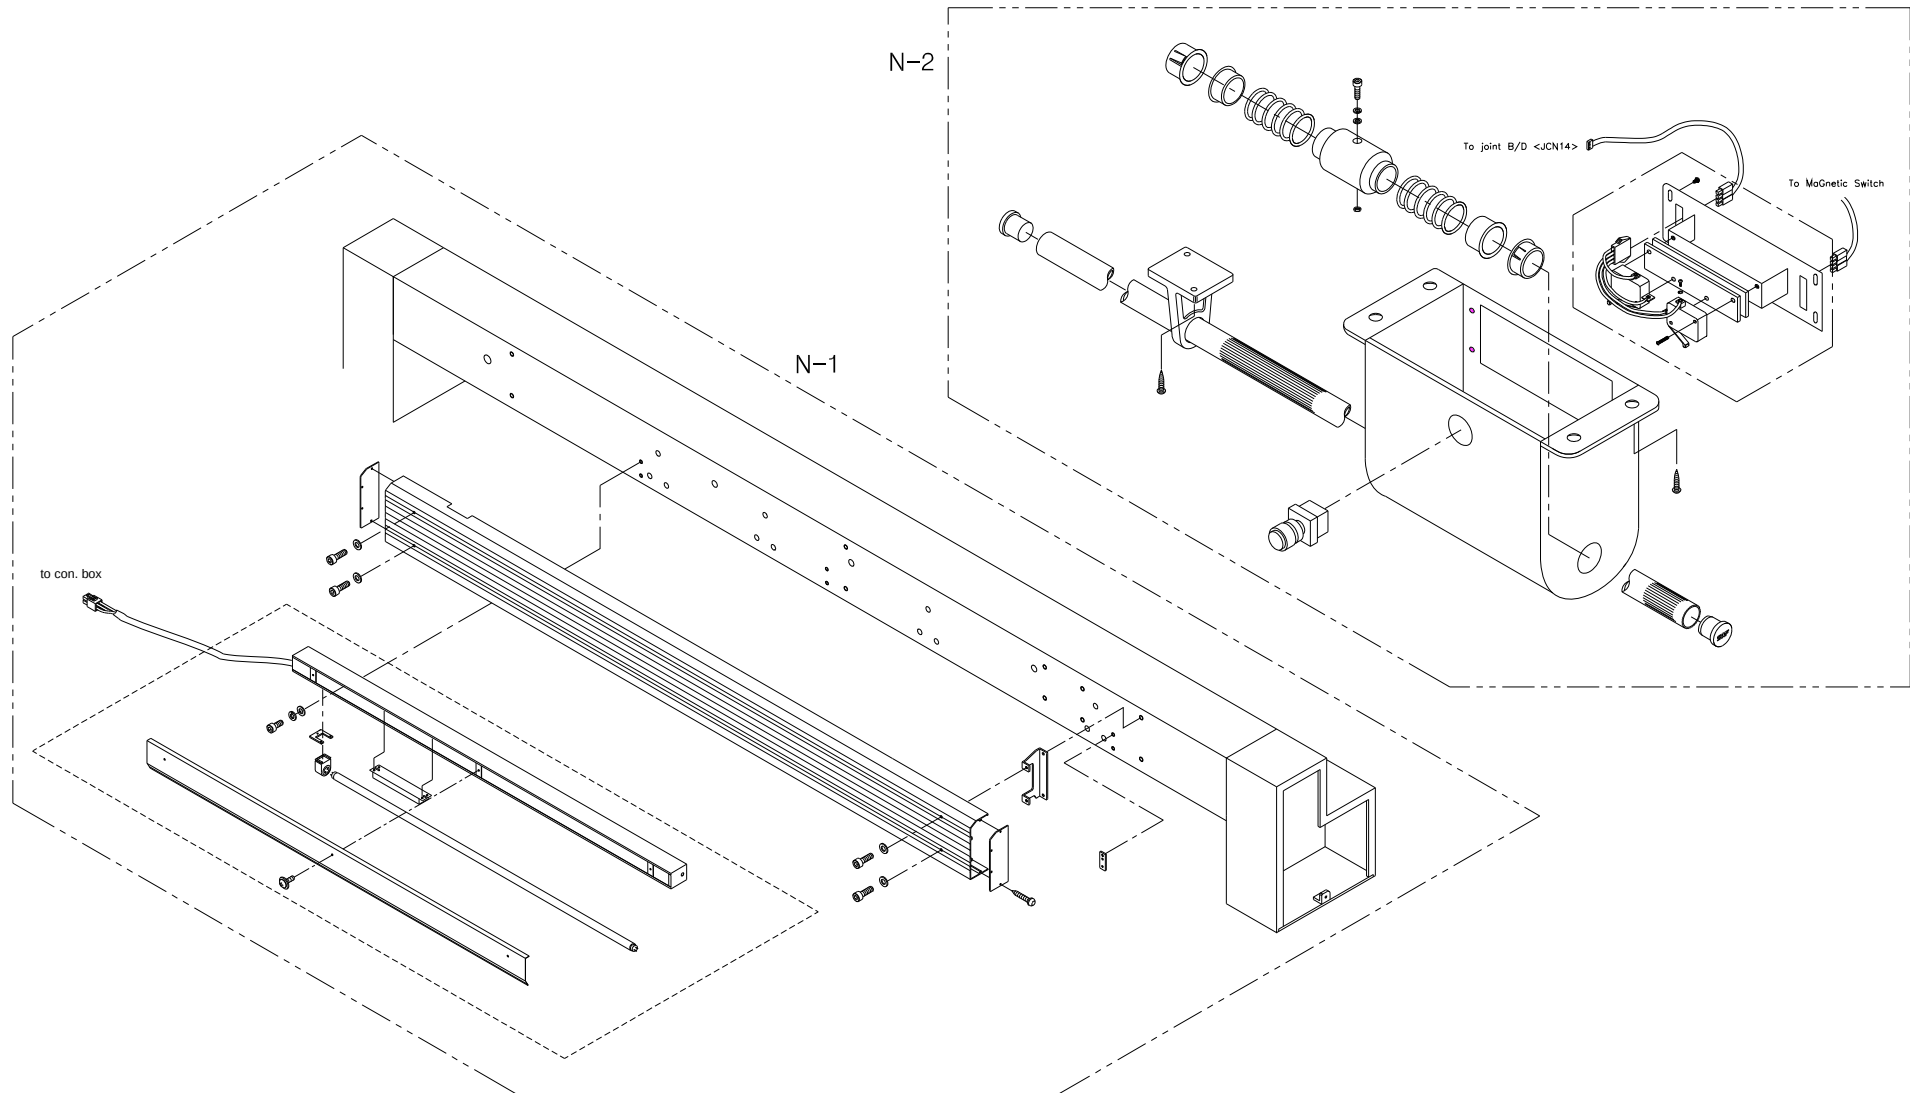

[illegible][illegible]

[illegible]

 Bobbin Winder

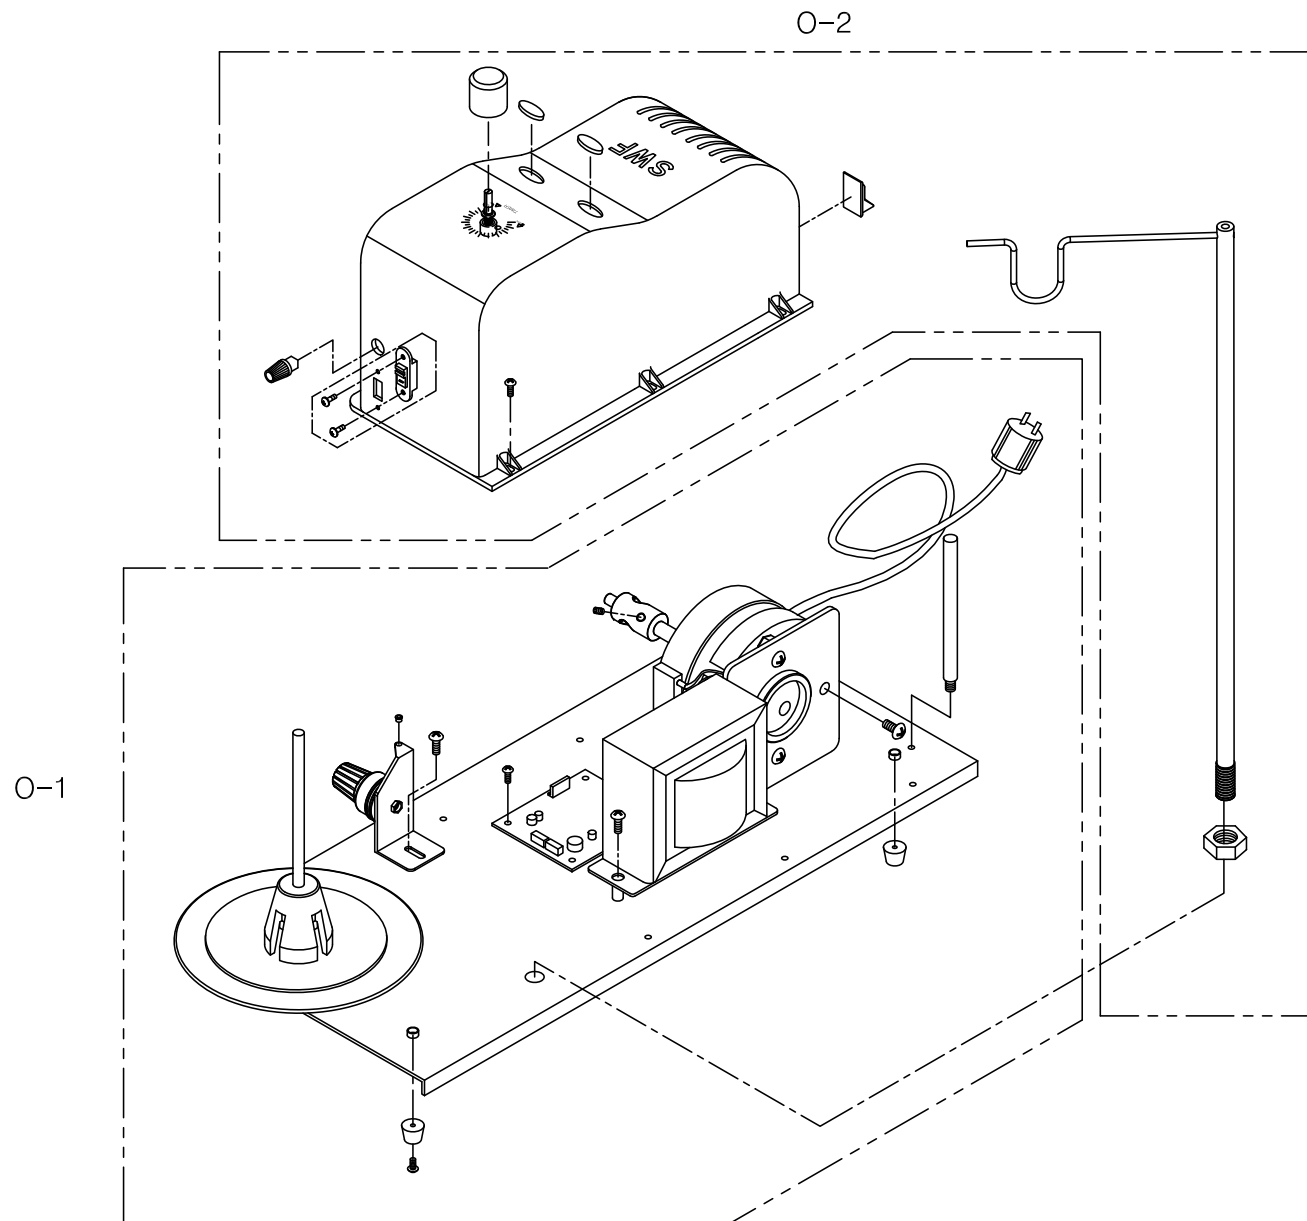

O-1

This exploded view diagram illustrates the assembly of a mechanical device. The components are numbered as follows:

- O-1-1: Main rectangular base plate.
- O-1-2: A vertical rod passing through a circular flange (O-1-3) and a conical component (O-1-4).
- O-1-3: A circular flange or washer.
- O-1-4: A conical component, possibly a bush or a part of a bearing.
- O-1-5: A small cylindrical component, likely a pin or a small bush.
- O-1-6: A small rectangular component, possibly a switch or a sensor.
- O-1-7: A small cylindrical component, likely a pin or a small bush.
- O-1-8: A small rectangular component, possibly a switch or a sensor.
- O-1-9: A small cylindrical component, likely a pin or a small bush.
- O-1-10: A small rectangular component, possibly a switch or a sensor.
- O-1-11: A small cylindrical component, likely a pin or a small bush.
- O-1-12: A small cylindrical component, likely a pin or a small bush.
- O-1-13: A large cylindrical component, possibly a motor or a pump.
- O-1-14: A small cylindrical component, likely a pin or a small bush.
- O-1-15: A small cylindrical component, likely a pin or a small bush.
- O-1-16: A small cylindrical component, likely a pin or a small bush.
- O-1-17: A long vertical rod or pin.
- O-1-18: A small cylindrical component, likely a pin or a small bush.
- O-1-19: A small cylindrical component, likely a pin or a small bush.

O-1,O-2 : 12210000T000 Bobbin Winder Ass'Y

0

O-2


This diagram illustrates the assembly of a mechanical device, likely a pump or motor, with various components labeled O-2-1 through O-2-11. The main body is a rectangular block with a curved top and a base. The top surface features a circular dial with a needle and a scale, and a rectangular label with the text "SWF". The base has a long, narrow slot and a small rectangular protrusion. The components are shown in their relative positions, with dashed lines indicating the assembly path. The components are labeled as follows:

- O-2-1: A long, thin metal rod or shaft.
- O-2-2: A small screw or bolt.
- O-2-3: A small rectangular plate or bracket.
- O-2-4: A small cylindrical component, possibly a cap or plug.
- O-2-5: A small rectangular component, possibly a switch or sensor.
- O-2-6: A small cylindrical component, possibly a cap or plug.
- O-2-7: A small cylindrical component, possibly a cap or plug.
- O-2-8: A small rectangular component, possibly a switch or sensor.
- O-2-9: A small cylindrical component, possibly a cap or plug.
- O-2-10: A small cylindrical component, possibly a cap or plug.
- O-2-11: A small rectangular component, possibly a switch or sensor.

O-1,O-2 : 12210000T000 Bobbin Winder Ass'Y

0

 Cover

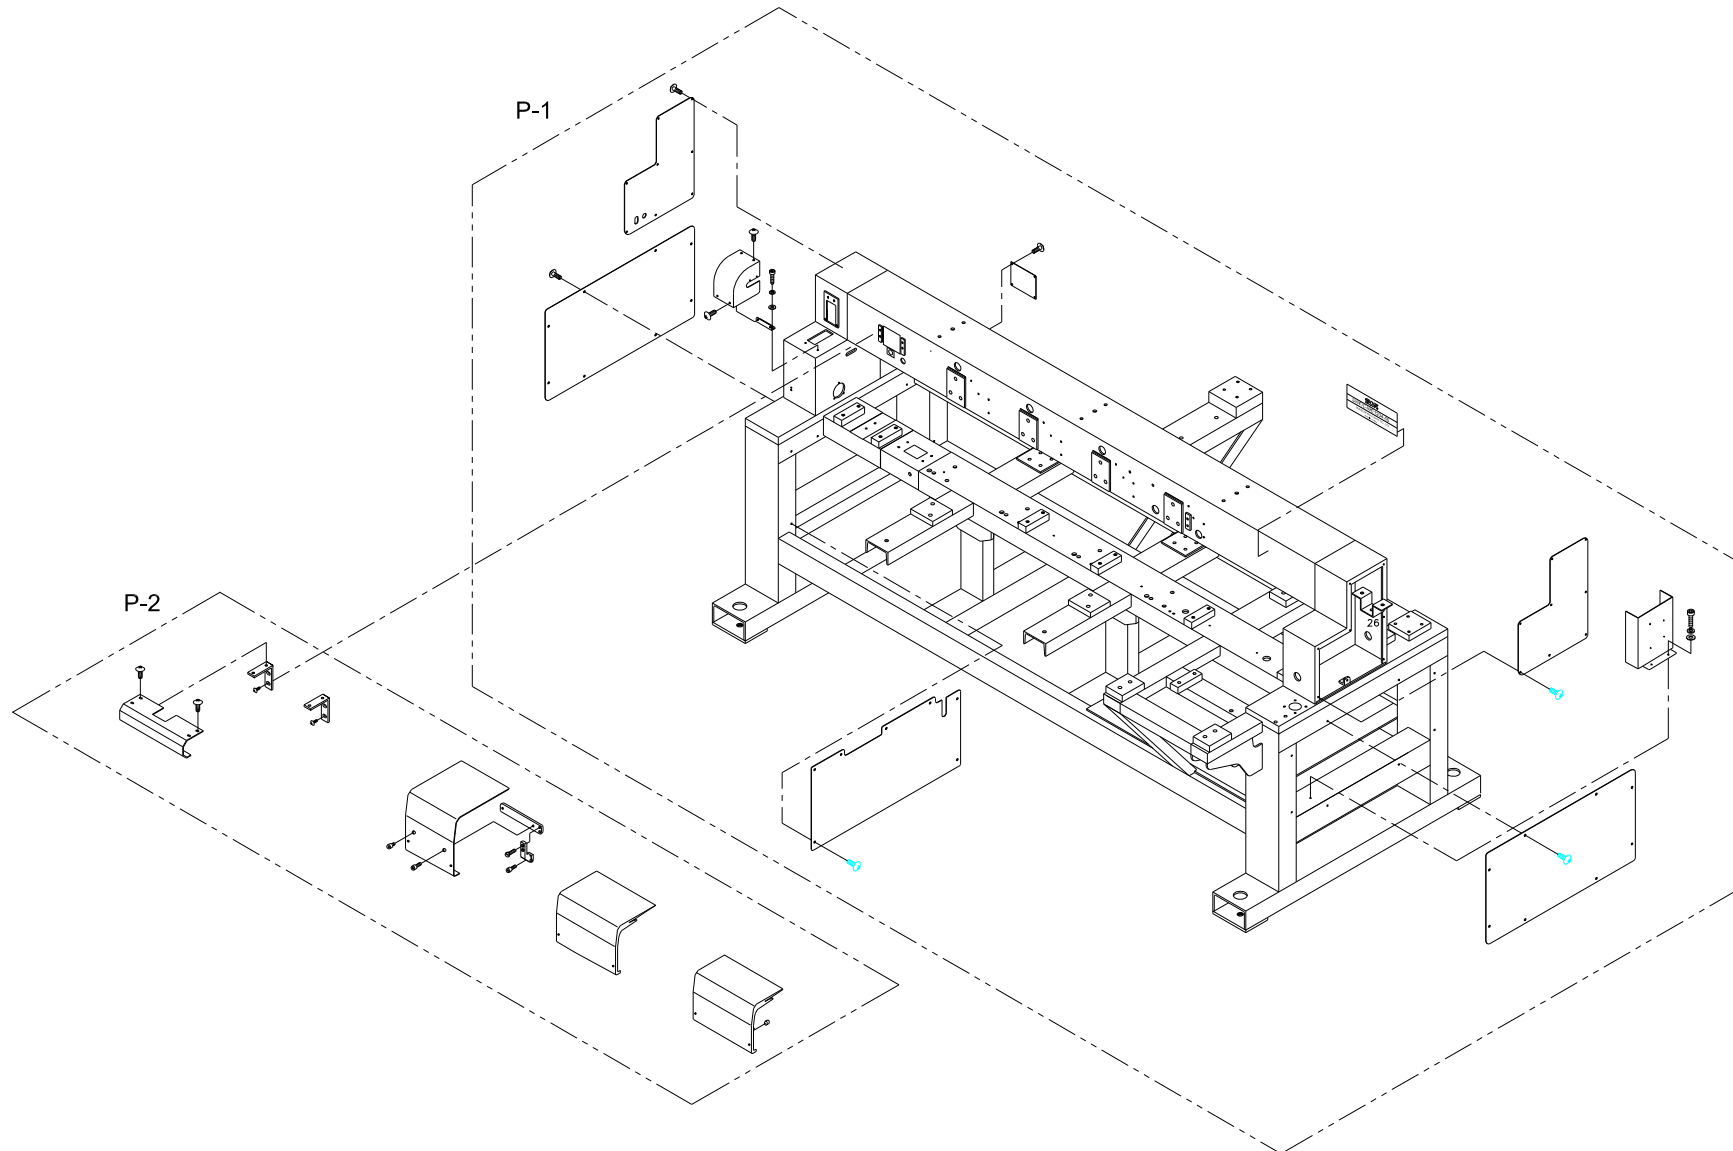

This diagram illustrates the exploded view of the P-1 assembly. The main structure is a rectangular frame with a central horizontal beam. Various components are shown being attached to this frame:

- P-1-1**: A small rectangular plate at the top left.
- P-1-3**: A larger rectangular plate on the left side.
- P-1-5**: A rectangular plate at the bottom left.
- P-1-6**: A rectangular plate at the bottom center.
- P-1-7**: A small component at the bottom left, indicated by a red arrow.
- P-1-8**: A small component at the bottom left, indicated by a red arrow.
- P-1-9**, **P-1-10**, and **P-1-11**: Small components near the bottom left, indicated by red arrows.
- P-1-12**: A circular component near the bottom left, indicated by a red arrow.
- P-1-13**: A small component near the bottom left, indicated by a red arrow.
- P-1-14**: A small component on the top right, indicated by a red arrow.
- P-1-15**: A small component on the top right, indicated by a red arrow.
- P-1-16**: A rectangular plate on the right side.
- P-1-17**: A small component at the bottom right, indicated by a red arrow.
- P-1-18**, **P-1-19**, and **P-1-20**: Small components at the bottom right, indicated by red arrows.
- P-1-2**: A small component on the right side, indicated by a red arrow.
- P-1-4**: A small component on the right side, indicated by a red arrow.
- P-1-4**: A small component on the right side, indicated by a red arrow.


Note	
------	--

[illegible]


Note

[illegible]

 Frame

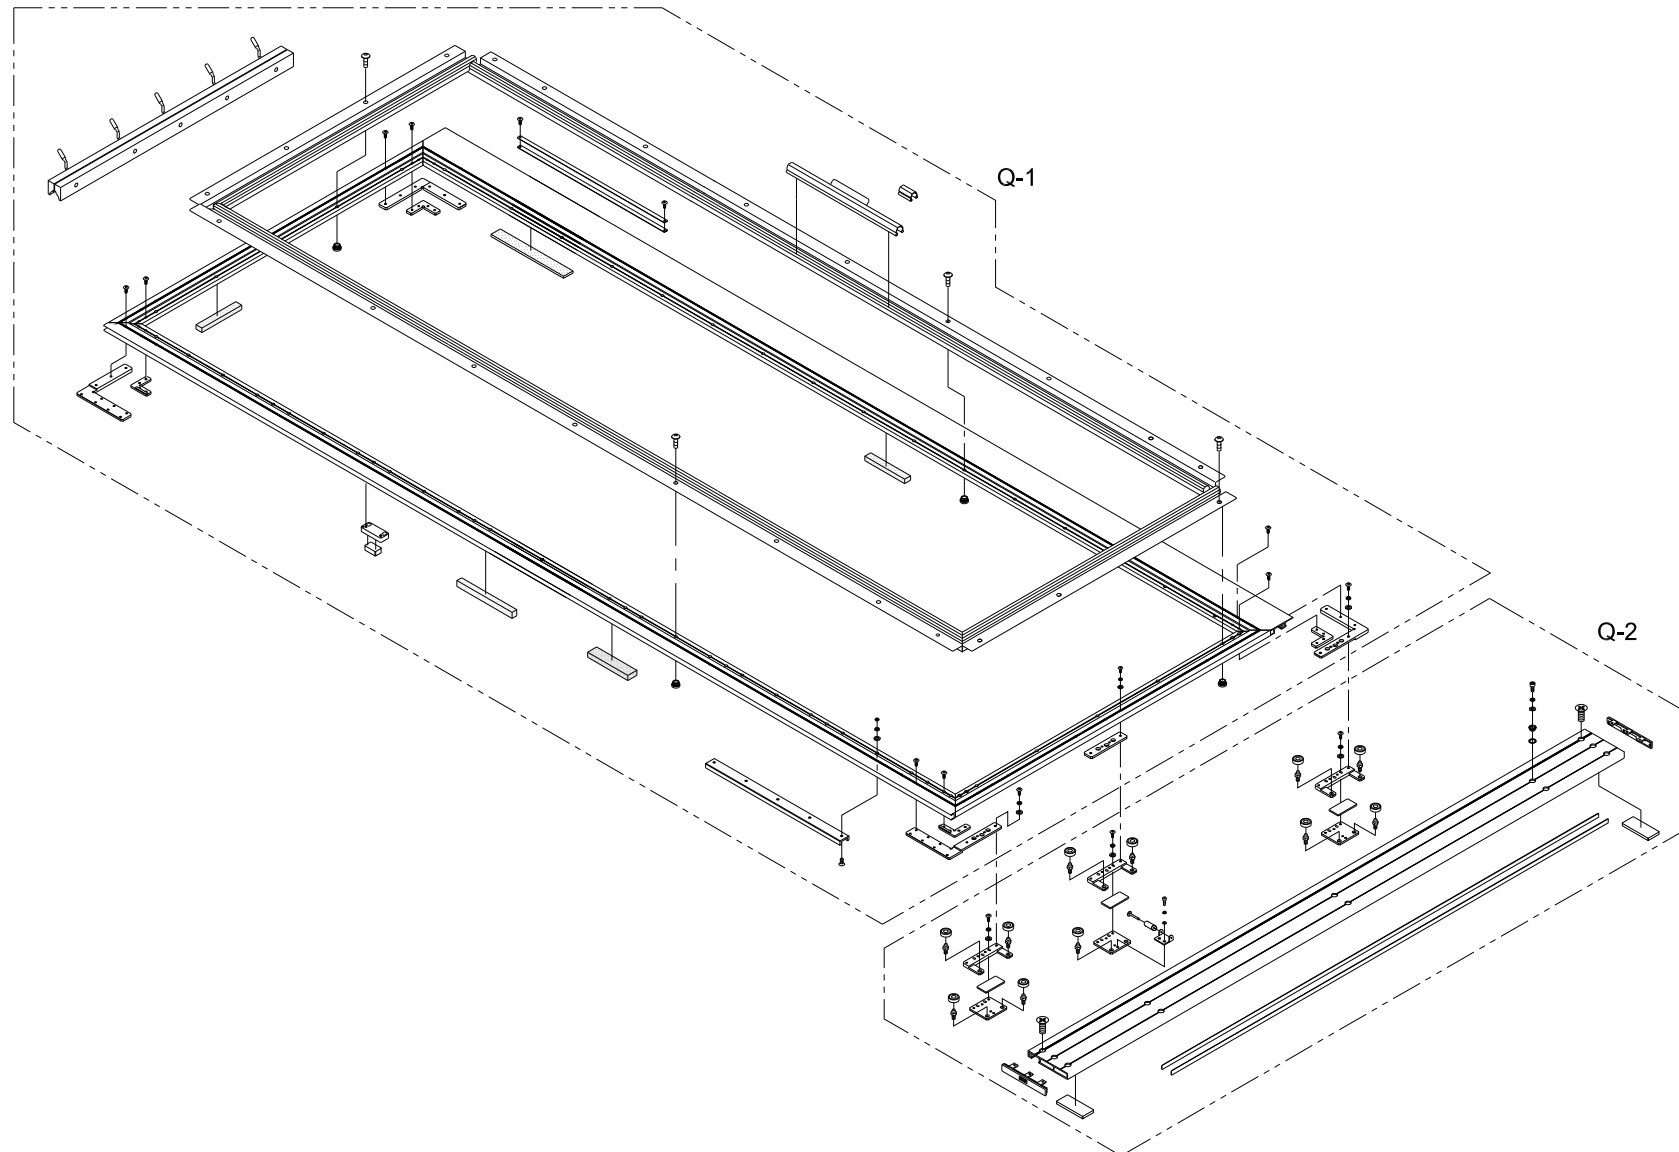

Q-1

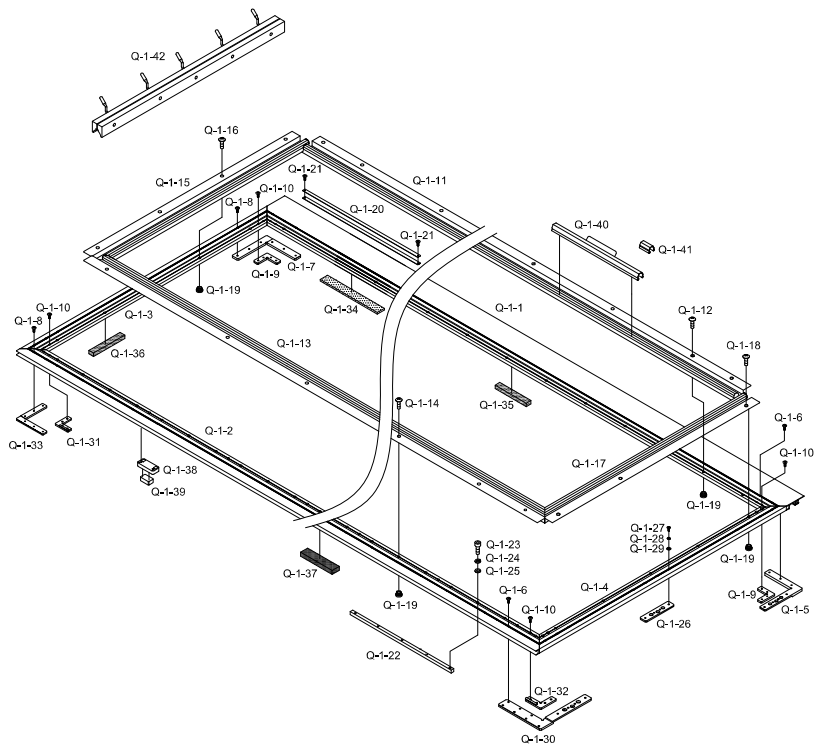 

Note


Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
Q-1-1	GP-018280-00	Frame (A) [L=6276]	Jun,13,06 ~	X		1	
Q-1-2	GP-018281-00	Frame (B) [L=6276]	Jun,13,06 ~	X		1	
Q-1-3	10500900I004	Frame (D) [L=939]				1	
Q-1-4	GP-037798-00	Frame (G) [L=939]	Mar,26,08 ~	X		1	
Q-1-5	GP-030400-00	Corner Guide (A)	May,16,07 ~ Mar,26,08	X		2	
	GP-030400-01		Mar,26,08 ~	△			
Q-1-6	18014SC-7113	Hex.Socket Bolt(M4*L10)			O	12	
Q-1-7	GP-037803-00	Corner Guide (B)	Mar,26,08 ~	X		2	
Q-1-8	18014SC-7113	Hex.Socket Bolt(M4*L10)			O	12	
Q-1-9	GP-037737-00	Corner Guide (C)	Mar,24,08 ~	X		4	
Q-1-10	18014SC-7113	Hex.Socket Bolt(M4*L10)			O	16	
Q-1-11	GP-018282-00	Frame (C-1) [L=6121]	Jun,13,06 ~	X		1	
Q-1-12	SC-001903-00	Truss Screw (M4*L8)			O	9	
Q-1-13	GP-018283-00	Frame (C-2) [L=6176]	Jun,13,06 ~	X		1	
Q-1-14	SC-001903-00	Truss Screw (M4*L8)			O	17	
Q-1-15	10501610I004	Frame (C-3) [L=838.5]				1	
Q-1-16	SC-001903-00	Truss Screw (M4*L8)			O	5	
Q-1-17	10501710I004	Frame (C-4) [L=838.5]				1	
Q-1-18	SC-001903-00	Truss Screw (M4*L8)			O	5	
Q-1-19	GP-010409-00	Bushing Nut(C)	Jul,04,05 ~	X		88	
Q-1-20	10501800ID00	Frame Guide Rail Plate A [L=439]				8	
Q-1-21	18014SC-7113	Truss Screw (M4*L9)				16	
Q-1-22	18050AF-A001	X-Axis Guide Rail				2	
Q-1-23	04010MC-7113	Hex.Socket Bolt(M4*L10)			O	10	
Q-1-24	18014SW-3115	Spring Washer(@4)			O	10	
Q-1-25	18015SW-3111	Washer(@4)			O	10	
Q-1-26	GP-037813-00	Fixing Block (C) for Bearing	Mar,27,08 ~	X		1	
Q-1-27	SC-000334-00	SCREW M4*L15	May,10,05 ~	X	O	4	
Q-1-28	18014SW-3115	Spring Washer (@4-No2)			O	4	
Q-1-29	18015SW-3111	Washer (4@)			O	4	
Q-1-30	GP-009112-00	Corner Guide(DR)	May,10,05 ~ Mar,25,08	X		1	
	GP-009112-01		Mar,25,08 ~ Jun,05,08	△			
	GP-009112-02		Jun,05,08 ~	△			
Q-1-31	GP-009113-00	Left Corner Guide(EL)	May,10,05 ~	X		1	
Q-1-32	GP-009114-00	Left Corner Guide(ER)	May,10,05 ~	X		1	
Q-1-33	GP-009111-00	Corner Guide(DL)	May,10,05 ~ Jun,05,08	X		1	
	GP-009111-01		Jun,05,08 ~	△			

[illegible]

Note	
------	--

[illegible]

 Q-2

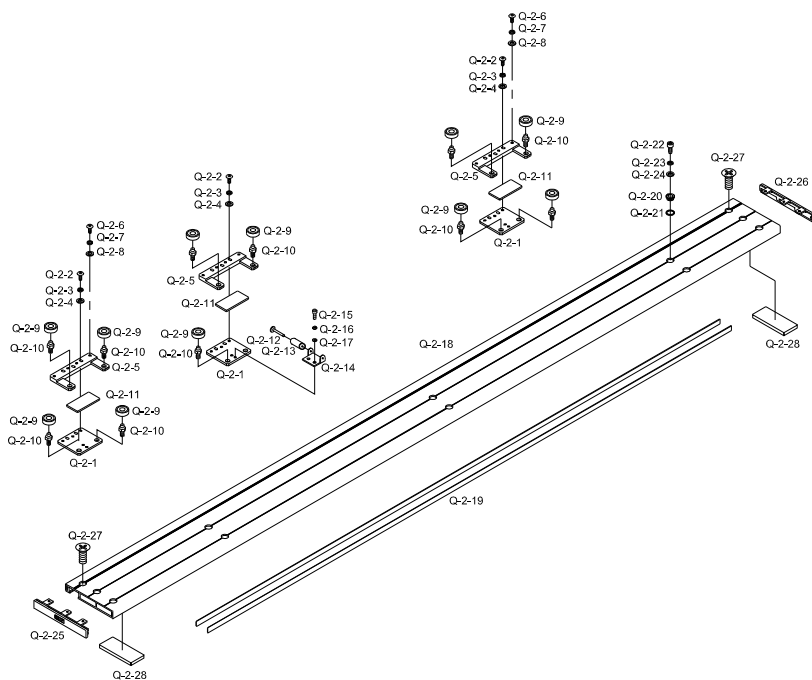


Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
Q-2-1	GP-007190-00	BEARING CONNECTING BLOCK B	Jan,20,05 ~ Apr,07,05	X		3	
	GP-007190-01		Apr,07,05 ~ Mar,26,08	△			
	GP-007190-02		Mar,26,08 ~	△			
Q-2-2	02023SC-7113	Hex.Socket Bolt(M4*L8)			O	9	
Q-2-3	18014SW-3115	Spring Washer (@4-No2)			O	9	
Q-2-4	18015SW-3111	Washer (4@)				9	
Q-2-5	GP-037776-00	Fixing Block (A) for Bearing	Mar,25,08 ~ Apr,14,08	X		3	
	GP-037776-01		Apr,14,08 ~ May,26,08	△			
	GP-037776-02		May,26,08 ~	△			
Q-2-6	07016SC-7113	Hex.Socket Bolt(M4*L12)			O	8	
Q-2-7	18014SW-3115	Spring Washer (@4-No2)			O	8	
Q-2-8	18015SW-3111	Washer (4@)			O	8	
Q-2-9	15077BR-B001	Ball Bearing (LR606NPPU)				12	
Q-2-10	18062CW-A021	Rail Guide Pin (B)				12	
Q-2-11	GP-006546-00	FELT W	Dec,21,04 ~	X		3	
Q-2-12	10510800B000	ROLLER PIN				3	
Q-2-13	18107CW-B001	ROLLER				3	
Q-2-14	18106PR-B001	ROLLER BRACKET				3	
Q-2-15	02023SC-7113	HEX.SOCKET BOLT (M4*L8)			O	6	
Q-2-16	18014SW-3115	SPRING WASHER (@4-NO2)			O	6	
Q-2-17	18015SW-3111	WASHER (4@)			O	6	
Q-2-18	GP-018284-00	Frame E [L=1659]	Jun,13,06 ~	X		1	
Q-2-19	10000600I004	Frame Guide Rail Plate				2	
Q-2-20	10000700I000	Insert Bushing				6	
Q-2-21	10000800I000	Insert Bushing Washer				6	
Q-2-22	18014SC-7113	Truss Screw (M4*L9)			O	6	
Q-2-23	16014SW-4115	Spring Washer (@6)			O	6	
Q-2-24	08057SW-1111	Washer (@6)			O	6	
Q-2-25	AS-001418-00	FRAME E ENDCAP(A)SET	Oct,26,04 ~ Apr,01,05	X		1	
	AS-001418-01		Apr,01,05 ~ Feb,20,07	△			
	AS-001418-02		Feb,20,07 ~ May,23,07	△			
	AS-001418-03		May,23,07 ~	△			
Q-2-26	AS-001419-00	FRAME E ENDCAP B SET	Oct,26,04 ~ Apr,01,05	X		1	
	AS-001419-01		Apr,01,05 ~ Feb,20,07	△			
	AS-001419-02		Feb,20,07 ~ May,23,07	△			
	AS-001419-03		May,23,07 ~	△			
Q-2-27	10011SC-8119	PLUS SCREW (M3*L6)			O	6	
Q-2-28	GP-006545-00	FELT V				2	

Q

 Option (Laser)

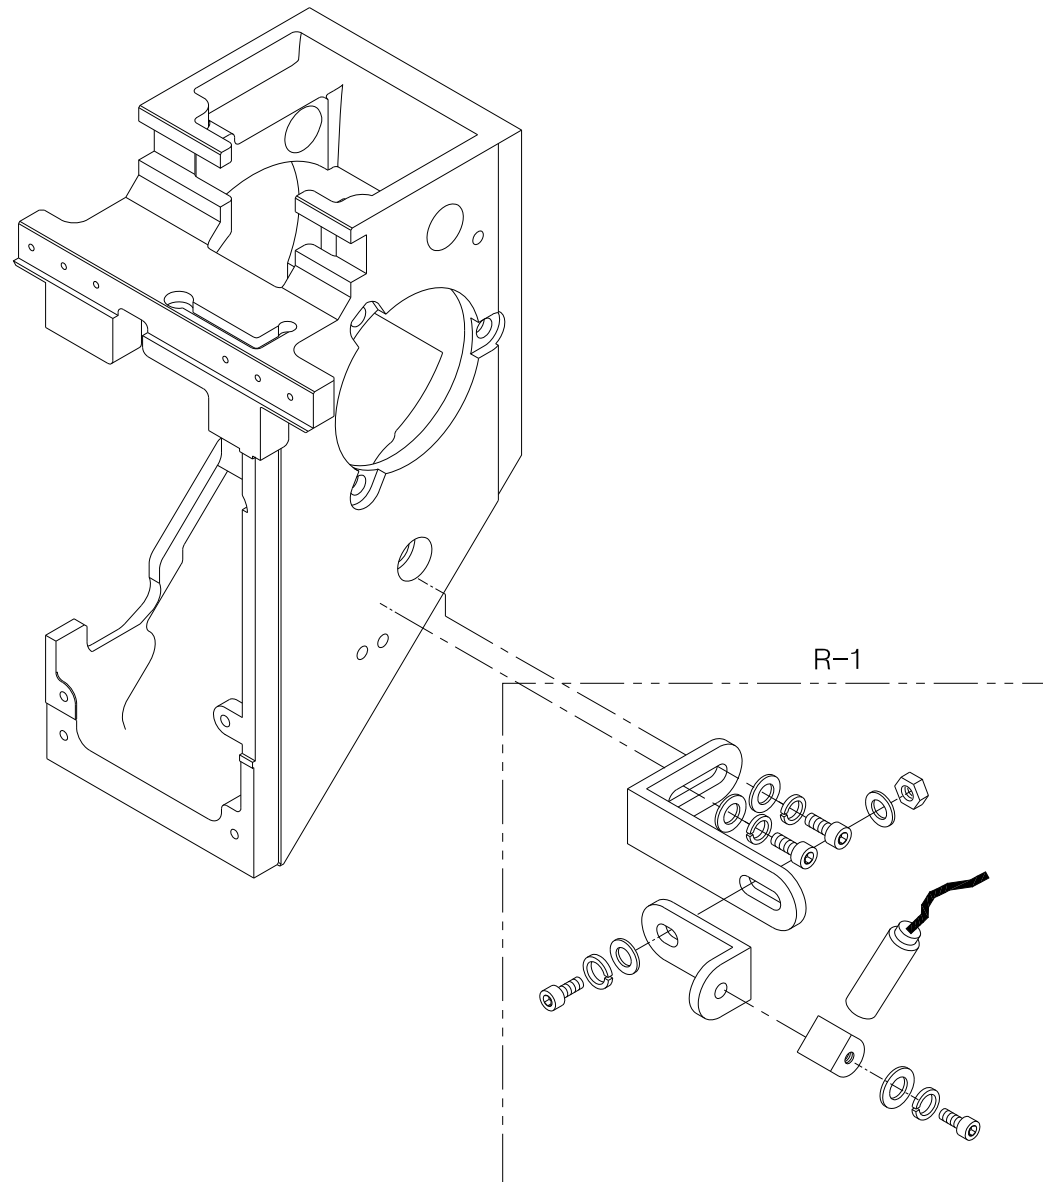

R-1

This diagram illustrates the exploded view of the R-1 assembly. The main structure is a rectangular frame with a central vertical support and a horizontal base. The assembly includes various components labeled with part numbers:

- R-1-1**: A large rectangular frame component.
- R-1-2**: A small cylindrical component, likely a pin or spacer.
- R-1-3**: A small cylindrical component, likely a pin or spacer.
- R-1-4**: A small cylindrical component, likely a pin or spacer.
- R-1-5**: A small cylindrical component, likely a pin or spacer.
- R-1-6**: A small cylindrical component, likely a pin or spacer.
- R-1-7**: A small cylindrical component, likely a pin or spacer.
- R-1-8**: A small cylindrical component, likely a pin or spacer.
- R-1-9**: A small cylindrical component, likely a pin or spacer.
- R-1-10**: A small cylindrical component, likely a pin or spacer.
- R-1-11**: A small cylindrical component, likely a pin or spacer.

The diagram shows the relative positions and assembly sequence of these components, with dashed lines indicating the alignment and fit of the parts.

Note

[illegible]

S. Index

Part No.	Part Name	Page	Ref.No
02001000E000	Idle Support Bracket	33	E-3-1
02001100E000	Idle Plate	33	E-3-5
10000210E000	Body Inside Cover (L)	85	P-1-6
01000100UH80	HAMMER CASTER SET (URETHANE)	11	A-1-6
01000500ED40	Cable Cover	79	N-1-1
01001100H00	Ball Bearing (6004Zz)	18	B-5-2
01001100H000	Ball Bearing (6005Zz)	32	E-2-13
01-002A-AT01	COOLING FAN	72	M-1-16
01-002B-AU12	FAN Cover	72	M-1-17
01-002M-AU12	FAN Screw (M4xL35)	72	M-1-18
01004SC-UK01	Hex. Bolt (M20*L60)	11	A-1-3
01007SW-1111	Washer (10@)	26	D-1-49
01008SW-9115	Spring Washer (@10)	26	D-1-48
01022RB-UK01	Body Base Cover	11	A-1-2
01029BR-A001	Ball Bearing (6004Zz)	25	D-1-9
01029BR-A001	Ball Bearing (6004Zz)	31	E-1-8
01-037S-2070	Earth Screw (M4xL8)	76	M-3-9
01100210B000	Hook Shaft	12	A-2-7
01100400H000	Bearing Cover	12	A-2-18
01101300A000	Hook Shaft Collar	14	B-1-4
01101700U000	Low Shaft Gear	12	A-2-13
01101800B000	Mes Adjusting Bushing	29	D-4-13
01101900U000	Hook Shaft Gear	12	A-2-11
01102000B000	Bearing Bushing	12	A-2-15
01300000B000	Mes Driving Crank Ass' Y	29	D-4-22
01303700H000	Tension Plate Pin	36	F-1-31
01303800U000	Cover Rubber Cap	23	C-3-11
02-0000-EMB1	Head On/Off S/W Board 9C,15C	44	G-2-13
02000100T000	Magnetic Switch Set	69	L-1-13
02000110ED40	Top Shaft	32	E-2-17
02000210ED40	Low Shaft A	31	E-1-22
02000300ED40	Low Shaft B	31	E-1-23
02000400B000	CABLE COVER HOLDER	70	L-2-5
02000400T000	Cable Grand (Dacl-11)	69	L-1-5
02000500T000	Cable Grand (Dapg-29)	69	L-1-6
02000600T000	Cable Grand (Dapg-36)	69	L-1-7
02000700T000	Push B/T Switch	80	N-2-27
02000910T000	Magnetic S/W Fixed Bracket	69	L-1-10
02001200T000	Resister 5/20W (Ce)	69	L-1-14
02001300T000	Bracket Stopper (Ce)	69	L-1-11
02001500U000	Jump Smpls(Mrk0R4-H)	69	L-1-20
02-001B-SW67	Switch Cover	73	M-1-21
02002PM-D092	Top Shaft Cover "B"	86	P-2-14
02002SC-7119	Plus Screw (M4*L8)	54	H-7-19
02002SC-7119	Plus Screw (M4*L8)	63	J-1-2
02003MC-8118	UNDER THREAD PRESSER SCREW	29	D-4-8
02003PR-D092	Surface Cover	11	A-1-10
02004BR-T121	Hook Shaft Bearing Washer	12	A-2-8
02009SC-A001	Side Cover Screw	17	B-4-5
02009SC-A001	Side Cover Screw	21	C-1-6
02009SC-A001	Side Cover Screw	60	I-3-9
02009SC-A001	Side Cover Screw	86	P-2-4

Part No.	Part Name	Page	Ref.No
02010SC-3123	Truss Screw (M4*L8)	41	F-4-8
02010SC-3123	Truss Screw (M4*L8)	44	G-2-7
02010SC-3123	Truss Screw (M4*L8)	69	L-1-4
02010SC-3123	Truss Screw (M4*L8)	69	L-1-9
02010SC-3123	Truss Screw (M4*L8)	80	N-2-23
02010SC-3123	Truss Screw (M4*L8)	85	P-1-13
02010SC-3123	Truss Screw (M4*L8)	86	P-2-5
02014PR-E121	Body Outside Cover (L)	85	P-1-5
02014SC-7113	Hex. Socket Bolt (M4*L5)	37	F-1-33
02014SC-7113	Hex. Socket Bolt (M4*L5)	61	I-4-20
02014SC-7113	Hex. Socket Bolt (M4*L5)	86	P-2-8
02015SC-7113	Hex.Socket Bolt (M4*L10)	11	A-1-11
02015SC-7113	Hex.Socket Bolt (M4*L10)	14	B-1-11
02015SC-7113	Driving Lever Pin Screw	16	B-3-9
02015SC-7113	Hex.Socket Bolt (M4*L10)	17	B-4-8
02015SC-7113	Hex.Socket Bolt (M4*L10)	25	D-1-17
02015SC-7113	Hex.Socket Bolt (M4*L10)	29	D-4-16
02015SC-7113	Hex.Socket Bolt (M4*L10)	29	D-4-20
02015SC-7113	HEX.SOCKET BOLT (M4*L10)	31	E-1-19
02015SC-7113	Hex. Socket Bolt (M4*L10)	39	F-2-35
02015SC-7113	C.S Screw (M4*L10)	43	G-1-4
02015SC-7113	Hex.Socket Bolt (M4*L10)	49	H-3-10
02015SC-7113	Hex.Socket Bolt (M4*L10)	51	H-5-9
02015SC-7113	Hex.Socket Bolt (M4*L10)	58	I-1-39
02015SC-7113	Hex.Socket Bolt (M4*L10)	64	J-2-5
02015SC-7113	Hex.Socket Bolt (M4*L10)	85	P-1-18
02015SC-7113	Hex. Socket Bolt (M4*L10)	86	P-2-9
02015SC-7113	Hex. Socket Bolt (M4*L10)	86	P-2-11
02017PM-A001	CABLE RING	11	A-1-15
02020PR-E121	Beam Front Cover Bracket (L)	85	P-1-8
02021PM-AC00	Top Shaft Cover "A"	86	P-2-13
02022PR-UK01	Upper Shaft Cover "B" Bracket	36	F-1-32
02023ET-A001	Top Shaft Cover Magnet	86	P-2-15
02023SC-7113	Hex. Socket Bolt (M4*L8)	17	B-4-19
02023SC-7113	Hex. Socket Bolt (M4*L8)	22	C-2-3
02023SC-7113	Hex. Socket Bolt (M4*L8)	26	D-1-41
02023SC-7113	Hex. Socket Bolt (M4*L8)	27	D-2-9
02023SC-7113	Hex. Socket Bolt (M4*L8)	28	D-3-9
02023SC-7113	Hex. Socket Bolt (M4*L8)	39	F-2-29
02023SC-7113	Hex.Socket Bolt (M4*L8)	44	G-2-10
02023SC-7113	Hex. Socket Bolt (M4*L8)	45	G-3-2
02023SC-7113	Hex. Socket Bolt (M4*L8)	54	H-7-23
02023SC-7113	Hex.Socket Bolt (M4*L8)	58	I-1-43
02023SC-7113	Hex. Socket Bolt (M4*L8)	58	I-1-47
02023SC-7113	Hex.Socket Bolt (M4*L8)	59	I-2-2
02023SC-7113	Hex. Socket Bolt (M4*L8)	61	I-4-11
02023SC-7113	Hex. Socket Bolt (M4*L8)	61	I-4-18
02023SC-7113	Hex. Socket Bolt (M4*L8)	85	P-1-9
02023SC-7113	Hex.Socket Bolt (M4*L8)	90	Q-2-2

Part No.	Part Name	Page	Ref.No
02023SC-7113	HEX.SOCKET BOLT (M4*L8)	90	Q-2-15
02023SC-7113	Hex.Socket Bolt (M4 x L8)	92	R-1-2
02026SC-A001	Stand	82	O-1-17
02028SW-9115	Spring Washer (@4)	11	A-1-12
02028SW-9115	Spring Washer (@4)	25	D-1-18
02028SW-9115	Spring Washer (@4)	26	D-1-43
02028SW-9115	SPRING WASHER (@4)	31	E-1-20
02028SW-9115	Spring Washer (@4)	40	F-3-3
02028SW-9115	Spring Washer (@4)	40	F-3-7
02028SW-9115	Spring Washer (@4)	64	J-2-6
02028SW-9115	Spring Washer (@4)	85	P-1-10
02028SW-9115	Spring Washer (@4)	85	P-1-19
02028SW-9115	Spring Washer (@4)	92	R-1-9
02029SN-9311	Hex. Nut (M4-No2)	80	N-2-11
02030SW-B001	Bearing Case Washer	18	B-5-4
02031SC-7113	Hex. Socket Screw (M5*L10)	18	B-5-3
02031SC-7113	Hex. Socket Screw (M5*L10)	26	D-1-42
02031SC-7113	Hex. Socket Screw (M5*L10)	53	H-6-2
02031SC-7113	Hex. Socket Screw (M5*L10)	54	H-7-30
02031SC-7113	Hex. Socket Screw (M5*L10)	79	N-1-2
02036SN-1211	Hex. Nut (M20-No2)	11	A-1-4
02044SC-3123	Truss Screw (M5*L8)	23	C-3-9
02044SC-3123	Truss Screw (M5*L8)	69	L-1-2
02044SC-3123	Truss Screw (M5*L8)	85	P-1-3
02044SC-3123	Truss Screw (M5*L8)	85	P-1-4
02044SC-3123	Truss Screw (M5*L8)	85	P-1-7
02065SC-3328	Tapping Screw (M3*L10)	79	N-1-5
02086PR-U112	Top Shaft Cover (L)	86	P-2-7
02088PR-UK01	Power Switch Cover	69	L-1-3
02097ET-B001	Model Name Plate	85	P-1-14
02101800B000	Plate Led S/W Board Cable	44	G-2-12
02101ET-UK01	Brand Mark	11	A-1-14
02102000HDK2	Picker Sol.Connet From J/B	61	I-4-30
02103903H000	Wheel Earth 6,9,12C	45	G-3-7
02105000E040	Cable	70	L-2-11
02105600U040	I/O S/W - Magnetic Contactor	69	L-1-15
02105700U020	I/O Switch Connect Cable	80	N-2-26
02105800E040	Magnetic - Emt24 Trans	69	L-1-16
02105900E040	Emt24 Trans Output - Emergency	69	L-1-17
02106300U000	Sh-63	69	L-1-21
02106500U040	Sh-65-2	34	E-4-19
02106600U040	Sh-66-2	58	I-1-52
02106700U040	Sh-67-2	58	I-1-53
02205400ED40	Cable	70	L-2-10
02205500ED40	Cable	70	L-2-9
03-0000-EMB1	Head On/Off S/W Board 6C,12C	44	G-2-13
03000110H000	Upper Shaft Bearing Collar	18	B-5-5
03000500U000	Oil Tube Pin	22	C-2-5
03000900U000	Tension Adjusting Block	34	E-4-11
03000900U060	TENSION ADJUSTING BLOCK	34	E-4-18
03002700H000	Return Spring	57	I-1-36

S. Index

Part No.	Part Name	Page	Ref.No
03002800H000	Return Spring Stopper Washer	58	I-1-37
03002900H000	Return Spring Fix Pin Washer	58	I-1-40
03003000H000	Return Spring Fix Pin	58	I-1-38
03003200A000	Needle Bar Drive Rink	16	B-3-11
03003210H000	MOTOR BASE	57	I-1-2
03003300H000	Cam Shaft Fixing Block	57	I-1-6
03003500H000	Motor Driving Cam Shaft	57	I-1-10
03003800B000	Low Shaft Coupling	31	E-1-24
03003800B000	Coupling	53	H-6-9
03003810H000	Stud Bolt For Driving Plate	57	I-1-16
03003910H000	Upper Thread Driving Plate	57	I-1-17
03004200HH00	MOTOR DRIVING CONNECT PLATE	57	I-1-25
03004400H000	Motor Driving Connect Bearing	57	I-1-26
03004500H000	Connecting Plate Pin Washer	57	I-1-28
03004700H000	Connecting Plate Stud Screw	57	I-1-29
03004800H000	Connecting Plate Knuckle	57	I-1-31
03005100U000	Coupling "A"	48	H-2-9
03005210H000	Collar "A"	32	E-2-14
03005BM-B001	Needle Bar Reciprocator Set	16	B-3-19
03005MC-3123	TRUSS SCREW (M3*L5)	59	I-2-7
03006MC-3123	Truss Screw (M3*L6)	16	B-3-31
03007000UK40	Upper Thread Driving Shaft	58	I-1-41
03007SC-A001	Cam Base Screw	15	B-2-7
03008000H000	Ball Bearing 689 (Ntn)	16	B-3-15
03008100K000	Needle Bar Drive Bearing Bush	16	B-3-16
03008300H000	Connecting Plate Stud Screw A	57	I-1-27
03008600H000	Motor Cover Fixing Bracket	58	I-1-46
03010800UH80	Pulley (Tubular)	32	E-2-10
03010800UH80	MAIN MOTOR PULLEY	34	E-4-5
03010SR-4013	C-Ring (@47)	32	E-2-12
03012100U000	Low Shaft Support Bracket	31	E-1-1
03012200U000	Indicator	31	E-1-18
03013EL-T121	Encoder	23	C-3-1
03016SC-4113	Hex. Socket Bolt (M5*L15)	25	D-1-32
03016SC-4113	Hex. Socket Bolt (M5*L15)	27	D-2-4
03016SC-4113	Hex. Socket Bolt (M5*L15)	48	H-2-10
03016SC-4113	Hex. Socket Bolt (M5*L15)	53	H-6-10
03016SC-4113	Hex. Socket Bolt (M5*L15)	64	J-2-9
03020SC-A001	Drive Pin Screw 11/64,N40,L8	14	B-1-3
03020SC-A001	Drive Pin Screw 11/64,N40,L8	16	B-3-18
03020SC-A001	Drive Pin Screw 11/64,N40,L8	28	D-3-4
03020SC-A001	Drive Pin Screw 11/64,N40,L8	40	F-3-10
03020SC-A001	Drive Pin Screw 11/64,N40,L8	40	F-3-12
03020SC-A001	Drive Pin Screw 11/64,N40,L8	40	F-3-16
03020SC-A001	Drive Pin Screw 11/64,N40,L8	40	F-3-24
03022SC-4517	Hex. Socket Set Screw(M4*L5)	14	B-1-13
03022SC-4517	Hex. Socket Set Screw(M4*L5)	36	F-1-29
03022SC-4517	Hex. Socket Set Screw(M4*L5)	47	H-1-19
03022SC-4517	Hex. Socket Set Screw(M4*L5)	50	H-4-31
03023SC-A001	Connecting Rod Stud	16	B-3-2
03025SW-1211	Washer (@6)	16	B-3-4
03026SW-9115	Spring Washer (@6)	16	B-3-5

Part No.	Part Name	Page	Ref.No
03026SW-9115	Spring Washer (@6)	27	D-2-14
03026SW-9115	Spring Washer (@6)	32	E-2-6
03026SW-9115	Spring Washer (@6)	50	H-4-33
03027SN-A001	Stud Nut	16	B-3-6
03031SN-A001	Pin. Nut (11/64,N=40)	43	G-1-6
03031SN-A001	Pin. Nut (11/64,N=40)	43	G-1-10
03031SN-A001	Pin. Nut (11/64,N=40)	64	J-2-12
03033CW-A001	Driver Pin	16	B-3-23
03034SW-A001	Reciprocator Washer	16	B-3-10
03039PR-B001	Stopper Bracket	16	B-3-27
03040SC-A001	Stopper Bracket Screw	16	B-3-22
03041PR-B001	Reciprocator Stopper	16	B-3-26
03045SP-B001	Jump Spring	16	B-3-28
03046CW-B001	Jump Spring Guide	16	B-3-29
03048SW-A001	Reciprocator Washer	16	B-3-21
03050SC-4517	Hex. Socket Set Screw (M3*L3)	17	B-4-13
03050SC-4517	Hex. Socket Set Screw (M3*L3)	29	D-4-6
03053SF-A001	Felt "B"	16	B-3-17
03056CL-B001	Head Rail Holder	19	B-6-5
03057SC-A001	Head Rail Holder Screw	17	B-4-17
03057SC-A001	Head Rail Holder Screw	19	B-6-6
03057SC-A001	Head Rail Holder Screw	29	D-4-2
03062PR-UK01	Side Cover "B3"	17	B-4-1
03065SC-A001	Guard Plate Screw	21	C-1-9
03068LM-BB00	Lm Guide Block Set 12C	21	C-1-1
03069LM-B002	Lm Guide Block Set 9C	21	C-1-1
03071SC-7113	Hex. Socket Bolt (M3*L10)	28	D-3-6
03071SC-A001	Hex.Socket Bolt (M3*L15)	21	C-1-2
03072MC-4113	Hex. Socket Bolt (M8*L28)	19	B-6-2
03100700UH80	MAIN DRIVING BELT 200J	32	E-2-18
03101300UH80	Upper Shaft Support Bracket	32	E-2-1
03200100EJ64	X Driving Shaft (L=1083.5)	48	H-2-11
03300604U000	Take-Up Guide Rail 12C L=339	21	C-1-3
03301200A000	Bushing	14	B-1-17
03301800U000	Needle Bar Drive Pin	14	B-1-1
03302100A000	Pin Collar	14	B-1-12
03302600I000	Arm Guide Plate	19	B-6-7
03302900H000	Needle Case (38419)	15	B-2-4
03303000H000	Connecting Rod	15	B-2-3
03303300H000	Lever Pin	16	B-3-7
03320010B000	NEEDLE DRIVING CAM SET	15	B-2-1
03500210H000	Upper Thread Hook Base Cover	59	I-2-5
03500500H000	Upper Catcher Driving Lever	59	I-2-9
03500600H000	Driving Lever Pin	59	I-2-10
03500700H000	Driving Lever Pin Collar	59	I-2-11
03500800H000	Driving Lever Pin Washer	59	I-2-13
03500900H000	Clutch Block	59	I-2-14
03501000H000	Clutch Stud Screw	59	I-2-15
03501100H000	Clutch Spring	59	I-2-16
03501200H000	Clutch Dial	59	I-2-17
03700100E000	Mes Cam Driving Box	25	D-1-1
03700200H000	Mes Driving Crank	29	D-4-15
03704900A000	Cam Shaft Collar	25	D-1-5

Part No.	Part Name	Page	Ref.No
03707300A000	Solenoid Collar	25	D-1-28
038A0000I000	Take-Up Driving Lever A,B Assy	14	B-1-18
04001000E000	TIMMING PULLEY(16-S5M-32F)	53	H-6-19
04-001S-AU10	X,Y Sticker	76	M-3-15
04002200H000	Mes Shaft Bracket	28	D-3-8
04002600H000	TIMING PULLEY(16-S5M-32F)	47	H-1-28
04002700H000	TIMING PULLEY(16-S5M-32F)	48	H-2-15
04-002S-AU10	Current Setting Sticker	76	M-3-16
04003500B000	Needle Bearing Collar	48	H-2-13
04003500B000	Needle Bearing Collar	53	H-6-17
04-003S-AU10	Warning Sticker	76	M-3-13
04004AF-A001	Needle Plate Screw	61	I-4-27
04004AF-A001	Needle Plate Screw	61	I-4-29
04-004S-AU10	Warning Sticker	76	M-3-14
04007SC-A001	Cushion Cover Screw (M3*L2.3)	61	I-4-26
04008PR-A001	Hook Base Cover	61	I-4-28
04010MC-7113	Hex.Socket Bolt (M4*L10)	43	G-1-2
04010MC-7113	Hex.Socket Bolt(M4*L10)	88	Q-1-23
04012AF-A001	Hook Shaft Bush Screw	12	A-2-10
04012AF-A001	Hook Shaft Bush Screw	14	B-1-5
04012AF-A001	Hook Shaft Bush Screw	25	D-1-11
04012AF-A001	Hook Shaft Bush Screw	40	F-3-18
04013PR-B001	Washer (3.2T,@10)	26	D-1-47
04014SC-4517	Hex.Socket Set Screw(M5*L5)	34	E-4-6
04014SC-4517	Hex.Socket Set Screw(M5*L5)	48	H-2-14
04014SC-4517	Hex.Socket Set Screw(M5*L5)	53	H-6-18
04014SC-4517	Hex.Socket Set Screw(M5*L5)	57	I-1-9
04014SC-4517	Hex.Socket Set Screw(M5*L5)	57	I-1-11
04014SC-4517	Hex.Socket Set Screw(M5*L5)	59	I-2-12
04014SC-4517	Hex.Socket Set Screw(M5*L5)	63	J-1-13
04016AF-A001	Cam Collar Screw	12	A-2-12
04016AF-A001	Cam Collar Screw	12	A-2-14
04016AF-A001	Cam Collar Screw	12	A-2-16
04016AF-A001	Cam Collar Screw	25	D-1-6
04016MC-4113	CAM ROLLER GUIDE FIXED SCREW	47	H-1-17
04016MC-4113	CAM ROLLER GUIDE FIXED SCREW	50	H-4-3
04016MC-4113	CAM ROLLER GUIDE FIXED SCREW	51	H-5-3
04017BM-UK01	Take-Up Driving Lever(B) Set	14	B-1-6
04019CW-T121	Pin Stud Screw	14	B-1-10
04020AF-T121	Roller For Take-Up Gear-B	14	B-1-9
04021BR-T121	Needle Bearing Kt367N (Iko)	14	B-1-8
04026BR-A001	Ball Bearing 6003Z	12	A-2-17
04027BR-A001	Needle Bearing (Hmk1515)	25	D-1-2
04028SC-A001	Stud Bolt (M10*L69)	12	A-2-2
04028SC-UK01	Stud Bolt (M10*P1.25*L69)	26	D-1-45
04029SW-A001	Stud Bolt Washer(S) (@8)	12	A-2-3
04029SW-A001	Stud Bolt Washer(S) (@8)	19	B-6-3
04029SW-A001	STUD BOLT WASHER(S) (@8)	31	E-1-17
04029SW-A001	Stud Bolt Washer(S) (@8)	47	H-1-4
04029SW-A001	Stud Bolt Washer(S) (@8)	50	H-4-6
04030SW-A001	Stud Bolt Washer(L) (@8)	12	A-2-4
04030SW-A001	Stud Bolt Washer(L) (@8)	66	K-1-19
04032SN-A001	Hex. Nut (M8-No2)	12	A-2-6

S. Index

Part No.	Part Name	Page	Ref.No
04032SN-A001	Hex. Nut (M8-No2)	51	H-5-30
04032SN-A001	Hex. Nut (M8-No2)	57	I-1-20
04032SN-A001	Hex. Nut (M8-No2)	57	I-1-32
04032SN-A001	Hex. Nut (M8-No2)	66	K-1-18
04032SN-UK01	Hex. Nut (M10*P1.25)	26	D-1-46
04033AF-D002	Rotary Hook	61	I-4-1
04034AF-A001	Bobbin Case Set	61	I-4-2
04035AF-A001	Bobbin	61	I-4-3
04037SC-A001	Picker Bracket Screw(R)	28	D-3-2
04043RB-B001	Needle Plate Cushion Rubber	61	I-4-25
04054SC-8119	Plus Screw	66	K-1-21
04103100B000	Timing Pulley Bracket (L)	48	H-2-17
04103100B000	Timing Pulley Bracket (L)	53	H-6-14
04103200B000	Timing Pulley Bracket (R)	48	H-2-18
04103200B000	Timing Pulley Bracket (R)	53	H-6-13
04104300B000	Timing Pulley Driving Pin "A"	50	H-4-30
04104400B000	Timing Pulley Driving Pin	47	H-1-31
04200400B000	Y Adjusting Shaft Guide (A)	50	H-4-23
04200500B000	Y Adjusting Shaft Guide (B)	50	H-4-24
04200600B000	Adjusting Shaft Stopper	50	H-4-20
04302300B000	Timing Pulley Tension Base(W)	50	H-4-18
04400200B000	FIXED MES	29	D-4-4
04400300B000	UNDER THREAD PRESSER	29	D-4-7
04500100E000	TIMMING PULLEY(16-S5M-32F)	50	H-4-27
05000003U000	Color Change Roller Base Ass' Y	41	F-4-9
05000200U000	Take-Up Lever Drive Pin	14	B-1-15
05000210T000	Transformer (Emt25V) 1A/25.5V	69	L-1-12
05000400E000	Mes Driving Box Cover	67	K-2-2
05000400ED40	Mes Cam Driving Box Cover	27	D-2-8
05-002S-SW70	PCB Guide (TRCG-3300)	72	M-1-12
05008AF-4113	X-Y Driver Board Screw (set) (M4xL16)	72	M-1-11
05008MC-4517	Hex.Socket Bolt(M5*L8)	57	I-1-7
05008SC-4113	Hex.Socket Bolt (M4*L16)	36	F-1-27
05008SC-4113	Hex.Socket Bolt (M4*L16)	40	F-3-2
05008SC-4113	Hex.Socket Bolt (M4*L16)	40	F-3-6
05008SC-4113	Hex.Socket Bolt (M4*L16)	57	I-1-35
05009SW-1111	Washer (@4-L)	11	A-1-13
05009SW-1111	Washer (@4-L)	40	F-3-4
05009SW-1111	Washer (@4-L)	40	F-3-8
05009SW-1111	Washer (@4-L)	43	G-1-17
05009SW-1111	Washer (@4-L)	85	P-1-11
05009SW-1111	Washer (@4-L)	85	P-1-20
05014SC-7113	Hex. Socket Bolt (M4*L25)	36	F-1-3
05015CW-A001	Head Base Pin(@5*L15)	36	F-1-4
05015MC-4113	Hex. Socket Bolt (M5*L15)	18	B-5-6
05016SN-1211	Nut (@4)	44	G-2-8
05019SC-A001	Needle Bar Cover Screw (M5*L6)	36	F-1-5
05021SF-A001	Felt	36	F-1-9
05022SW-A001	Spring Shoe Washer	36	F-1-8
05023RB-A001	Needle Bar Cushion Rubber "A"	36	F-1-10
05024RB-A001	Needle Bar Cushion Rubber "B"	36	F-1-11
05026SC-4113	Stopper Screw (9/64-11.5)	36	F-1-15

Part No.	Part Name	Page	Ref.No
05028SC-4113	Holder Screw (9/64-L8)	36	F-1-13
05028SC-A001	Holder Screw	54	H-7-10
05029BM-A001	Presser Foot Set	36	F-1-17
05031AF-A001	Presser Foot Guide Bush	28	D-3-7
05031AF-A001	Presser Foot Guide Bush	36	F-1-19
05032RB-A001	Presser Foot Cushion Rubber"B	36	F-1-24
05033PR-T121	Take-Up Lever	38	F-2-20
05033RB-A001	Presser Foot Adjusting Rubber	36	F-1-25
05034RB-A001	Presser Foot Adjusting Rubber	36	F-1-26
05035PM-T121	Take-Up Lever Boss	38	F-2-22
05035RB-A001	Presser Foot Cushion Rubber"A	36	F-1-20
05036AF-A001	Needle Fixed Holder	36	F-1-21
05037DB-A001	Needle (Db-K5, #11)	36	F-1-22
05041SC-A001	Guide Rail Screw	21	C-1-4
05041SC-A001	Guide Rail Serew	39	F-2-31
05060SC-8118	Screw (M3*L3)	38	F-2-15
05062SC-A001	Thread Guide (L) Screw	19	B-6-8
05063RB-A001	Magnetic Rubber "A"	36	F-1-30
05070SC-3123	Thread Guide (L) Screw	38	F-2-7
05070SC-3123	Thread Guide (L) Screw	38	F-2-18
05100010E060	Main Bar S/W Ass'Y	80	N-2-15
05100100B000	Switch Bar	80	N-2-5
05100100E000	Bar Switch Box	80	N-2-1
05100200B000	Regulatory Rod	80	N-2-7
05100200E000	Switch Plate	80	N-2-24
05100300B000	Switch Bar Cap	80	N-2-6
05100600B000	Switch Bar Return Spring	80	N-2-12
05100700B000	S/W Bar Guide	80	N-2-13
05100800B000	S/W Bar Return Spring Guide	80	N-2-14
05200113ED40	Angle "C"	64	J-2-3
05200213ED40	Angle "D"	64	J-2-4
05363SC-A001	Needle Fixed Screw (A/S)	36	F-1-23
05452CM-A001	Eyelet "A"	38	F-2-2
05452CM-A001	Eyelet "A"	38	F-2-17
05452CM-A001	EYELET "A"	43	G-1-7
05452CM-A001	Thread Guide Bushing	82	O-1-12
05642RB-A001	Magnetic Rubber "B"	38	F-2-6
06001BM-A001	Jump Set	17	B-4-6
06003SW-2111	Washer (@4)	17	B-4-9
06003SW-2111	Washer (@4)	17	B-4-18
06003SW-2111	Washer (@4)	28	D-3-10
06003SW-2111	Washer (@4)	29	D-4-3
06003SW-2111	Washer (@4)	36	F-1-28
06003SW-2111	Washer (@4)	44	G-2-11
06003SW-2111	Washer (@4)	61	I-4-21
06003SW-2111	Washer (@4)	64	J-2-7
06008SW-4013	E-Ring (@5)	17	B-4-11
06009PR-A001	Jump Clutch Plate Spring	17	B-4-14
06010AF-8118	Plus Screw(M3*L4)	61	I-4-9
06010SC-8118	Plus Screw (M3*L4)	17	B-4-15
06010SC-8118	Plus Screw (M3*L4)	60	I-3-8
06011SW-2111	Washer (@3)	17	B-4-16
06011SW-2111	Hex. Socket Bolt(M3xL6)	23	C-3-2

Part No.	Part Name	Page	Ref.No
06011SW-2111	Washer (@3)	47	H-1-9
06011SW-2111	Washer (@3)	50	H-4-11
06011SW-2111	Washer (@3)	55	H-7-38
06011SW-2111	Washer (@3)	80	N-2-22
06012CW-A001	Jump Clutch	17	B-4-12
06014SN-9111	Hex.Nut	17	B-4-21
06025MC-7113	HEX.SOCKET BOLT(M6*L25)	31	E-1-5
06025MC-7113	Hex.Socket Bolt(M6*L25)	57	I-1-3
07000100U000	Main Switch Box	85	P-1-17
07003SC-A001	Take-Up Lever Screw	38	F-2-23
07-004S-SM5S	Main Drive Assy Screw (set) (M4xL10)	72	M-1-8
07-004S-SM5S	Driver Radiator Screw(set) (M4xL10)	72	M-1-13
07-004S-SM5S	Back plane Board Screw (Set) (M4xL10)	76	M-3-2
07-004S-SM5S	Connector PCB Cover Screw (set) (M4xL10)	76	M-3-4
07-004S-SM5S	Earth Plate Screw(set) (M4xL10)	76	M-3-8
07-004S-SM5S	Harness Cover Screw(set)	76	M-3-11
07005BM-T121	Take-Up Lever Set	38	F-2-19
07-005S-SM5S	SMPS Radiator Screw(set)	75	M-2-23
07009SC-4517	Hex.Socket Set Screw (M5*L6)	38	F-2-27
07016SC-4113	Hex.Socket Bolt(M4 x L12)	92	R-1-8
07016SC-7113	Hex.Socket Bolt(M4*L12)	90	Q-2-6
07018SC-8118	Plus Screw (M3*L8)	60	I-3-4
07026CW-UK01	Mes Cam Roller Shaft	25	D-1-21
07030AF-UK01	Roller	25	D-1-20
07035SC-7113	Washer(@3)	23	C-3-4
07035SC-7113	Bracket Screw (M3*L6)	54	H-7-37
07035SC-7113	Bracket Screw (M3*L6)	57	I-1-13
07102CM-A001	Eyelet "C"	38	F-2-21
08000113ED44	Model Mark	85	P-1-16
08000210E000	UPPER THREAD HOOK MOTOR COVER	58	I-1-50
08000700B000	Bracket	54	H-7-18
08000803I000	TENSION PLATE COVER	45	G-3-8
08000804I000	TENSION PLATE COVER	45	G-3-8
08001CL-B000	MES MOUNTING BASE	29	D-4-1
08003202B000	Cover Plate (R) 6C	45	G-3-3
08003203B000	Cover Plate (R) 9C	45	G-3-3
08003204B000	Cover Plate (R) 12C	45	G-3-3
08006SC-8118	Plus Screw (M3*L5)	40	F-3-32
08006SC-8118	Plus Screw (M3*L5)	47	H-1-8
08006SC-8118	Plus Screw (M3*L5)	50	H-4-10
08011SC-8118	Screw (M2*L4)	44	G-2-4
08011SW-1111	Spring Washer(@3)	23	C-3-3
08011SW-1111	Spring Washer (@3-S)	49	H-3-13
08013CL-B001	Movable Mes	29	D-4-10
08014FU-B001	Movable Mes Shaft (New)	29	D-4-9
08014SC-A001	Plus Screw (M3*L8)	29	D-4-11
08015PM-A001	Bushing	61	I-4-16
08017SC-B001	Screw (M3*L5)	29	D-4-12
08020MC-7113	HEX.SOCKET BOLT	11	A-1-7
08022SC-A001	Lever Stud	29	D-4-18
08023CW-A001	Mes Shaft Cramp	29	D-4-19
08025PR-B001	Mes Connecting Lever	29	D-4-17
08027BR-A001	Thrust Bearing (Ntb 1528)	25	D-1-3

S. Index

Part No.	Part Name	Page	Ref.No
08028BR-A001	Thrust Washer (As 1528)	25	D-1-4
08035SC-7113	Hex. Socket Bolt (M6*L10)	27	D-2-19
08036SF-B001	Mes Cam Shaft	25	D-1-12
08037AF-4517	Hex. Socket Set Screw M6*L10	50	H-4-12
08038SC-UI12	Hex.Socket Set Screw	25	D-1-8
08041SW-1111	WASHER (@8-S)	11	A-1-9
08041SW-1111	WASHER (@8-S)	32	E-2-4
08041SW-1111	Washer (@8-S)	33	E-3-4
08041SW-1111	Washer (@8-S)	48	H-2-8
08041SW-1111	Washer (@8-S)	51	H-5-19
08041SW-1111	Washer (@8-S)	51	H-5-22
08041SW-1111	Washer (@8-S)	51	H-5-26
08041SW-1111	Washer (@8-S)	51	H-5-28
08041SW-1111	Washer (@8-S)	53	H-6-8
08044RB-B001	Cushion Washer (T2)	25	D-1-15
08047CW-A001	Lever Support Pin	25	D-1-14
08048SP-A001	Lever Return Spring	25	D-1-24
08050SW-A001	Lever Stopper Pin Washer	25	D-1-25
08051SR-4013	E-Ring (@12)	25	D-1-26
08052RB-A001	Lever Support Pin Cushion	25	D-1-27
08056CW-B001	Lever Driver Pin	27	D-2-1
08057SW-1111	Washer (@6)	25	D-1-22
08057SW-1111	Washer (@6)	27	D-2-20
08057SW-1111	Washer (@6)	31	E-1-4
08057SW-1111	WASHER (@6)	32	E-2-7
08057SW-1111	Washer (@6)	34	E-4-10
08057SW-1111	Washer (@6)	34	E-4-13
08057SW-1111	Washer (@6)	47	H-1-27
08057SW-1111	Washer (@6)	50	H-4-34
08057SW-1111	Washer (@6)	57	I-1-5
08057SW-1111	Washer (@6)	66	K-1-16
08057SW-1111	Washer (@6)	77	M-4-6
08057SW-1111	Washer (@6)	90	Q-2-24
08058CW-B001	Mes Driving Guide Shaft	27	D-2-10
08058SN-1311	Hex. Nut (M6-No3)	34	E-4-14
08059CW-B001	Mes Drive Guide Shaft Collar	27	D-2-6
08061CW-B001	Mes Driving Base Shaft	27	D-2-11
08062SC-7113	Hex. Socket Bolt (M5*L20)	27	D-2-2
08062SC-7113	HEX. SOCKET BOLT (M5*L20)	34	E-4-2
08062SC-7113	Hex. Socket Bolt (M5*L20)	34	E-4-15
08062SC-7113	Hex. Socket Bolt (M5*L20)	48	H-2-2
08065CW-A001	Stopper Collar	27	D-2-3
08067RB-A001	O-Ring (@10)	27	D-2-5
08068EL-A001	Thread Trimming Solenoid Ass'	25	D-1-34
08071SF-A001	Solenoid Cushion	25	D-1-37
08072PR-B001	Solenoid Base Plate	25	D-1-31
08072RB-A001	Cushion Rubber	25	D-1-30
08076SC-7113	Hex. Socket Bolt(M5xL15)	23	C-3-6
08076SC-7113	Hex. Socket Bolt (M5*L12)	70	L-2-6
08076SC-7113	Hex. Socket Bolt (M5*L15)	86	P-2-2
08078PR-A001	Plunger Stopper	26	D-1-39
08079PR-A001	Plunger Bracket	26	D-1-40
08087SC-7113	HEX. SOCKET BOLT (M8*L25)	32	E-2-2

Part No.	Part Name	Page	Ref.No
08087SC-7113	Hex. Socket Bolt (M8*L25)	48	H-2-6
08091SC-7113	Hex. Socket Bolt (M6*L20)	31	E-1-2
08091SC-7113	HEX. SOCKET BOLT (M6*L20)	34	E-4-8
08091SC-7113	Hex. Socket Bolt (M6*L20)	66	K-1-14
08091SC-7113	Screw(M6xL20)	77	M-4-4
08097CL-B001	Mes Shaft Connecting Block	27	D-2-12
08098SC-8118	Plus Screw (M3*L5)	29	D-4-5
08101SC-8329	Tapping Screw (M3*L16)	67	K-2-3
08102300B000	Half Turn Sensor (Gp1S51V)	40	F-3-31
08102EL-A001	Zero Point Sensor Ass'Y	27	D-2-17
08103PR-A001	Sensor Bracket	27	D-2-18
08107CW-A001	Sensor Operator	27	D-2-22
08113SC-A001	Collar Screw	25	D-1-29
08113SC-A001	Collar Screw	29	D-4-14
08200503A000	Take-Up Lever Shaft (9C)	38	F-2-26
08200800A000	Take-Up Lever Shaft Bush(R)	38	F-2-25
08201304H000	Head Rail (12C)	37	F-1-34
08202000A000	TENSION PLATE HOLDER 9C(NEW)	43	G-1-15
08203000A000	Take-Up Lever Shaft Bush(L)	38	F-2-24
08300102I000	TENSION UNIT PLATE (6C)	43	G-1-1
08300103I000	TENSION UNIT PLATE (9C)	43	G-1-1
08300104I000	TENSION UNIT PLATE (12C)	43	G-1-1
08300202I000	BOARD BASE (6C)	44	G-2-9
08300203I000	BOARD BASE (9C)	44	G-2-9
08300204I000	BOARD BASE (12C)	44	G-2-9
08300302I000	Connection Plate	45	G-3-4
08300303I000	Connecting Plate A	45	G-3-4
08300304I000	Connection Plate	45	G-3-4
08300400A000	Lamp Cover	44	G-2-15
08300403I000	Connecting Plate B	45	G-3-4
08300702I000	Roller Base Ass'y (6C)	44	G-2-2
08300703I000	Roller Base Ass'y (9C)	44	G-2-2
08300704I000	Roller Base Ass'y (12C)	44	G-2-2
08308300B000	THREAD DETECTING WHEEL STUD	44	G-2-5
08310000B000	TENSION ADJUSTING SET	43	G-1-14
08320000I000	SUB TENSION ADJUSTING SET	43	G-1-5
08400010B002	V-Rail Ass' Y	52	H-5-36
08407100B000	Y-Axis Feed Plate "D"	54	H-7-4
08500000I000	Wiper Ass' y	59	I-2-19
08600003B000	Upper Thread Base Set 9C	60	I-3-11
09000200H000	TOP SHAFT COVER BRACKET (L)	86	P-2-6
09005SC-3123	Hex.Socket Bolt(M4*L10)	38	F-2-9
09005SC-3123	Truss Screw (M3*L6)	43	G-1-9
09005SC-3123	Truss Screw (M3*L6)	43	G-1-12
09005SC-3123	Truss Screw (M3*L6)	44	G-2-14
09005SC-3123	Truss Screw (M3*L6)	45	G-3-5
09005SC-3123	Truss Screw (M3*L6)	51	H-5-12
09005SC-3123	Truss Screw (M3*L6)	80	N-2-21
09-012S-CE53	Earth Sticker	76	M-3-18
09-023C-SC53	QC Passed Sticker	76	M-3-12
09-025R-SC53	Rubber Din Cap	76	M-3-19
09026PR-AB00	Upper Thread Presser Base 9C	60	I-3-1
09027ET-AB00	Velcro (9,C)	60	I-3-2

Part No.	Part Name	Page	Ref.No
09029PR-AB00	Presser Base Cover 9C	60	I-3-3
09038CW-A001	Thread Presser Space	60	I-3-5
09040PR-A001	Bracket (L)	60	I-3-6
09041PR-A001	Bracket (R)	60	I-3-7
09044PR-A001	Upper Thread Holder Disk Set	60	I-3-10
096440C-8119	Spring Adjusting Screw	38	F-2-12
096440N-3211	Spring Adjusting Nut (9/64,N40)	38	F-2-13
10000100A000	Thread Guide L=200	63	J-1-10
10000600I004	Frame Guide Rail Plate	90	Q-2-19
10000700I000	Insert Bushing	90	Q-2-20
10000800I000	Insert Bushing Washer	90	Q-2-21
10001AF-A001	Picker	61	I-4-19
10-003M-PT01	Side Cover Screw(M4xL8)	72	M-1-15
10-003M-PT01	Front Cover(L) Screw (M4xL8)	73	M-1-20
10004CW-A001	Picker Holder	61	I-4-17
10-005A-DU33	Earth Plate	76	M-3-7
10006FU-A001	Picker Connecting Crank	61	I-4-15
10010SC-8119	Plus Screw (M3*L5)	61	I-4-5
10010SC-8119	Plus Screw (M3*L5)	61	I-4-13
10011SC-8119	PLUS SCREW (M3*L6)	90	Q-2-27
10011SP-A001	Sol. Spring	61	I-4-6
10012RB-A001	Cushion Washer	61	I-4-7
10013PM-A001	Picker Sol. Cover	61	I-4-8
10015PR-A001	Picker Sol. Base	61	I-4-10
10017RB-A001	Picker Stopper	28	D-3-5
10019PR-A001	Connecting Link	61	I-4-12
10020SC-A001	Connecting Link Stud Screw	61	I-4-14
10-028S-SC53	IO MC Board Screw	74	M-2-4
10-028S-SC53	IO LED Board Screw(set) (M3xL7)	74	M-2-5
10-028S-SC53	DDC Radiator Screw(set) (M3xL7)	74	M-2-11
10-028S-SC53	DDC Board Screw(set) (M3xL7)	74	M-2-13
10-028S-SC53	Wiper Motor Drive Screw(set) (M3xL7)	74	M-2-14
10-028S-SC53	UNIT Board Screw(set) (M3xL7)	75	M-2-22
10200103B000	Head Face Plate (U) 9C	38	F-2-1
10400003B000	Thread Guide(L) Set	38	F-2-10
10400304B000	Spring Holder	38	F-2-14
10500200B000	FELT ATTACHMENT	89	Q-1-38
10500300B000	FRONT FELT (A)	89	Q-1-39
10500900I004	Frame (D) [L=939]	88	Q-1-3
10501610I004	Frame (C-3) [L=838.5]	88	Q-1-15
10501710I004	Frame (C-4) [L=838.5]	88	Q-1-17
10501800ID00	Frame Guide Rail Plate A [L=439]	88	Q-1-20
10507400B000	Roller Position Adjusting Pin	54	H-7-20
10510800B000	ROLLER PIN	90	Q-2-12
10600100H000	Thread Angle Frame	64	J-2-8
11005CW-UK01	Spool Plate Fixing Bolt M6*L21	63	J-1-3
11009EL-A001	Jumping Sol.	17	B-4-20
11009PR-B001	Thread Breakage Detecting Plat	43	G-1-8
11009SC-A001	Stud Screw	45	G-3-6
11012PR-B001	Thread Guide	38	F-2-8
11012PR-B001	Thread Guide (New)	43	G-1-11
11014SN-1211	Hex.Nut (M3-No2)	43	G-1-13
11015BM-B001	Sub Tension Adjusting Set(New)	64	J-2-10

S. Index

Part No.	Part Name	Page	Ref.No
11021SC-4113	Hex. Socket Bolt (M4*L35)	80	N-2-8
11029SC-4113	Hex. Socket Bolt (M4*L20)	43	G-1-16
11029SC-4113	Hex. Socket Bolt (M4*L20)	59	I-2-18
11031PR-AB00	Cover Plate 12C	45	G-3-1
11032PR-A002	Cover Plate 9C	45	G-3-1
11033PR-AE00	Cover Plate 6C	45	G-3-1
11046PR-AB00	Cable Support Plate	39	F-2-28
11047PR-A002	Cable Support Plate	39	F-2-28
11049SC-A001	Board Stud Bolt	70	L-2-2
11075PM-B001	Thread Sensor Roller(B1)Set	44	G-2-1
11083CW-B001	THREAD DETECTING WHEEL STUD	44	G-2-5
11093EL-C001	Thread Sensing Board	70	L-2-1
11101200T000	Upper Dead Point Stopper	36	F-1-14
12000110B000	NEEDEL PLATE SET	61	I-4-22
12000200B000	CABLE COVER PLATE	79	N-1-4
12000300B000	NEEDLE PLATE	61	I-4-23
12000400B000	NEEDLE PLATE ATTACHMENT	61	I-4-24
12000500I000	Upper Shaft Cover(B) Bracket	86	P-2-1
12001703I000	Head Face Plate (L) (9C)	38	F-2-5
12009SC-A001	Spool Post	63	J-1-6
12010SN-1211	Hex. Nut (M5-No3)	25	D-1-35
12010SN-1211	Hex.Nut (M5)	41	F-4-5
12010SN-1211	Hex.Nut (M5)	55	H-7-46
12010SN-1211	Hex.Nut (M5)	63	J-1-9
12012PM-A001	Spool Holder	63	J-1-4
12012-PM-A001	Spool Holder	82	O-1-5
12014SC-A001	Spool Stand Bolt	63	J-1-12
12015SF-A001	Spool Stand (L=280)	63	J-1-11
12019AD-D092	Angle "A"	64	J-2-1
12020AD-D092	Angle "B"	64	J-2-2
12033RB-UK01	Cushion Rubber	63	J-1-14
12042PM-A001	Eyelet	64	J-2-13
12052SF-A001	Spool Sponge	63	J-1-5
12209100U000	Cap Guide	59	I-2-6
13001CA-UK06	Color Change Base	40	F-3-1
13005CM-UK06	Color Change Cam	40	F-3-17
13007CW-UK06	Color Change Shaft	40	F-3-25
13010BR-T121	Washer (@12* @26*1T)	40	F-3-14
13010CW-UK06	Color Change Collar	40	F-3-15
13015PR-UK06	Potentiometer Bracket	40	F-3-22
13016MT-UK06	Color Change Motor (4 Head)	40	F-3-5
13020GA-UK06	Color Change Gear (L)	40	F-3-11
13021GA-UK06	Color Change Gear (R)	40	F-3-13
13022AD-UK06	Color Change Passivity Handle	40	F-3-9
13026BR-T121	Needle Bearing (6002Z)	33	E-3-8
13026CL-D104	Color Change Roller Base 9C	41	F-4-2
13027MT-UK06	Color Change Motor (6 Head)	40	F-3-5
13031SC-8118	Plus Screw (M5*L12)	41	F-4-6
13032AD-UK06	Color Change Film Set	40	F-3-23
13042SN-1111	Hex.Nut (M6*T5-R)	25	D-1-23
13042SN-1111	Hex.Nut (M6*T5-R)	27	D-2-15
13042SN-1111	Hex.Nut (M6*T5-R)	33	E-3-7
13042SN-1111	Hex.Nut (M6*T5-R)	40	F-3-29

Part No.	Part Name	Page	Ref.No
13042SN-1111	Hex.Nut (M6*T5-R)	57	I-1-30
13043PR-UK06	Color Change Cover	41	F-4-7
13048SC-A001	Bracket"A" Screw	39	F-2-34
13048SC-A001	Bracket"A" Screw	86	P-2-10
13053PR-UK01	Angle Plate Base	31	E-1-12
13054ET-UK01	Angle Disk	31	E-1-14
13054SC-3123	Switch Cover Screw(set) (M4xL8)	73	M-1-22
13054SC-3123	Truss Screw (M3*L8)	82	O-1-19
13061SC-8119	Plus Screw (M3*L10)	31	E-1-13
13061SC-8119	Plus Screw (M3*L10)	57	I-1-15
13107CW-UK01	Collar	31	E-1-11
14002SC-7113	Hex.Socket Bolt (M6*L15)	48	H-2-19
14002SC-7113	Hex.Socket Bolt (M6*L15)	53	H-6-15
14006SC-4113	Hex.Socket Bolt (M8*L15)	51	H-5-6
14006SC-7113	Hex.Socket Set Screw (M8*L15)	31	E-1-15
14006SC-7113	Hex.Socket Set Screw (M8*L15)	50	H-4-21
14006SC-7113	Hex.Socket Set Screw (M8*L15)	51	H-5-20
14006SC-7113	Hex.Socket Set Screw (M8*L15)	51	H-5-24
14014SC-7113	Hex.Socket Set Screw (M5*L8)	79	N-1-8
14017PR-E131	BEARING COVER	32	E-2-15
14027SC-4113	Hex.Socket Bolt (M8*L30)	33	E-3-2
14027SC-4113	Hex.Socket Bolt (M8*L30)	51	H-5-17
14027SC-4113	Hex.Socket Bolt (M8*L30)	53	H-6-6
14046SC-7113	HEX.SOCKET BOLT (M6*L30)	32	E-2-5
14058CW-A001	Collar "A"	25	D-1-10
14058CW-A001	Collar "A"	31	E-1-9
14060AF-4517	Hex.Socket Screw (M6*L6)	27	D-2-7
14060AF-4517	Hex.Socket Screw (M6*L6)	31	E-1-10
14060AF-4517	Hex.Socket Screw (M6*L6)	32	E-2-9
14060AF-4517	Hex.Socket Screw (M6*L6)	48	H-2-16
14060AF-4517	Hex.Socket Screw (M6*L6)	53	H-6-20
14061AF-4517	Hex.Socket Screw (M8*L8)	32	E-2-11
14063SC-A001	Tension Control Bolt (M6*L40)	33	E-3-6
14063SC-A001	Tension Control Bolt (M6*L40)	34	E-4-12
14064SN-7311	Hex.Nut (M6-No3)	47	H-1-23
14065BR-A001	Needle Bearing (Nk18/16A)	48	H-2-12
14065BR-A001	Needle Bearing (Nk18/16A)	53	H-6-16
15001BR-B001	Cam Roller Bearing	49	H-3-3
15001BR-B001	Cam Roller Bearing	55	H-7-40
15002CW-B001	Cam Roller Stud (A)	49	H-3-4
15002CW-B001	Cam Roller Stud (A)	55	H-7-42
15003CW-B001	Cam Roller Stud (B)	49	H-3-5
15003CW-B001	Cam Roller Stud (B)	55	H-7-41
15010AD-E121	X Cam Roller Guide Frame	47	H-1-1
15012BM-D101	Cam Roller Plate Ass' Y	49	H-3-14
15012MT-T121	Potentiometer (7824 R1K L25)	40	F-3-20
15014PR-T121	Potentiometer Washer	40	F-3-21
15017SC-4113	Hex. Socket Bolt (M8*L45)	47	H-1-2
15017SC-4113	Hex. Socket Bolt (M8*L45)	50	H-4-4
15023BM-E121	Bracket Fixed Plat Ass' Y	50	H-4-35
15024BM-E121	Bracket Fixed Plat Ass' Y	47	H-1-32
15024CW-A001	Timing Pulley Tension Base(N)	47	H-1-24
15-025M-1000	Cable tie	76	M-3-20

Part No.	Part Name	Page	Ref.No
15026DC-A001	Timing Pulley Bracket (N)	50	H-4-25
15-027A-2070	SENSOR	57	I-1-14
15027DC-A001	Timing Pulley Bracket (C)	47	H-1-18
15028SC-1111	Hex. Bolt (M6*L20)	47	H-1-25
15028SC-1111	Hex. Bolt (M6*L20)	50	H-4-32
15029SN-3211	Hex. Nut (M4-No2)	55	H-7-44
15029SN-3211	Nut (M4)	92	R-1-11
15030AD-B001	Y Cam Roller Guide Rail L=633	50	H-4-2
15030SC-7113	Screw (M5xL30)	77	M-4-8
15033CW-B001	Y-Adjusting Shaft	50	H-4-22
15037AD-BE01	Cam Roller Guide Rail (L=494)	47	H-1-16
15042BR-A001	Needle Bearing (1210Zz)	47	H-1-29
15042BR-A001	Needle Bearing (1210Zz)	50	H-4-28
15042SC-3123	Truss Screw (M4*L6)	82	O-1-9
15046RB-A001	Driving Pin Washer (Tw1225)	47	H-1-30
15046RB-A001	Driving Pin Washer (Tw1225)	50	H-4-29
15047BT-E121	X-Driver Timing Belt (L1190)	49	H-3-1
15047MT-E131	X Motor (103H89222-5242)	48	H-2-1
15049CL-SF41	Belt Catcher Plate (A)	55	H-7-39
15050CL-SF41	Belt Catcher Plate (B)	49	H-3-2
15051BT-A001	Y-Drive Timing Belt (W:35)	54	H-7-3
15055PR-A001	Tension Rivet Plate (W) W:48	50	H-4-26
15056PR-A001	Tension Plate (W) (Belt:48)	47	H-1-20
15056PR-B001	Square Washer	50	H-4-13
15057CS-UK01	Motor Bracket (Y)	48	H-2-5
15057CS-UK01	Motor Bracket (Y)	53	H-6-5
15058SC-1211	Hex. Bolt (M6*L58)	47	H-1-22
15064SC-A001	C.S Screw (M3*L3.5)	12	A-2-19
15067SC-A001	Hex.Socket Bolt (M4*L7)	54	H-7-27
15074CW-B001	Rail Guide Pin "A"	54	H-7-16
15074SC-A001	Stopper Stud	54	H-7-29
15075CW-B001	Rail Guide Pin "B"	54	H-7-15
15076CW-A031	Rail Guide Pin "C"	54	H-7-5
15077BR-B001	Ball Bearing (Lr606Nppu)	54	H-7-14
15077BR-B001	Ball Bearing (Lr606Nppu)	54	H-7-33
15077BR-B001	Ball Bearing (LR606NPPU)	90	Q-2-9
15077SW-2111	Washer (@8)	51	H-5-7
15077SW-2111	Washer (8@-S)	54	H-7-11
15078SW-8113	Toothed Lock Washer (@8)	54	H-7-12
15079SN-2311	Rail Guide Shaft Nut	54	H-7-13
15084SC-7119	C.S Screw (M4*L6)	54	H-7-2
15085AF-A001	Y-Axis Rail Guide	51	H-5-2
15089SC-7119	C.S Screw (M4*L10)	43	G-1-3
15089SC-7119	C.S Screw (M4*L12)	47	H-1-21
15090AD-B001	V-Rail Bracket	51	H-5-1
15090SC-B001	Hex.Socket Set Screw (M6*L10)	50	H-4-19
15092CW-A031	Stopper Washer	54	H-7-6
15092RB-B001	V-RAIL SUPPORT RUBBER CAP	51	H-5-4
15093AD-B001	Table Support	51	H-5-31
15095AD-B001	Spacer	51	H-5-16
15095SW-3115	SPRING WASHER (@8)	11	A-1-8
15095SW-3115	Spring Washer (@8)	12	A-2-5
15095SW-3115	Spring Washer (@8)	19	B-6-4

S. Index

Part No.	Part Name	Page	Ref.No
15095SW-3115	Spring Washer (@8)	31	E-1-16
15095SW-3115	SPRING WASHER (@8)	32	E-2-3
15095SW-3115	Spring Washer (@8)	33	E-3-3
15095SW-3115	SPRING WASHER (@8)	47	H-1-3
15095SW-3115	Spring Washer (@8)	48	H-2-7
15095SW-3115	Spring Washer (@8)	50	H-4-5
15095SW-3115	Spring Washer (@8)	51	H-5-18
15095SW-3115	Spring Washer (@8)	51	H-5-21
15095SW-3115	Spring Washer (@8)	51	H-5-25
15095SW-3115	Spring Washer (@8)	51	H-5-29
15095SW-3115	Spring Washer (@8)	53	H-6-7
15095SW-3115	Spring Washer (@8)	57	I-1-19
15095SW-3115	Spring Washer (@8)	66	K-1-20
15096CW-B001	Stud Bolt (M8*L90)	51	H-5-27
15097PR-B001	Stud Bracket	51	H-5-23
15098CW-A001	Rail Guide Pin "B"	54	H-7-34
15106BR-A001	Flange Bearing (1280Zz)	54	H-7-7
15120SC-A001	Position Adjusting Screw	47	H-1-6
15120SC-A001	Position Adjusting Screw	50	H-4-8
15121PR-A001	Square Washer	47	H-1-10
15121PR-A001	Square Washer	47	H-1-12
15122PR-E121	Zero Point Sensor Plate (X)	49	H-3-11
15122PR-E121	Zero Point Sensor Plate	54	H-7-36
15130AF-A001	Roller Guide	54	H-7-8
15133CW-B001	Roller	54	H-7-21
15134BM-B001	Roller Bracket Ass'Y	54	H-7-17
15137PR-A001	Rail Guide Shaft Bracket	54	H-7-9
15159SR-4013	E-Ring (3@)	54	H-7-22
16009SC-4113	Hex.Socket Bolt(M10*L25)	66	K-1-2
16010SC-8330	Tapping Screw (M6*L25)	52	H-5-32
16010SC-8330	Tapping Screw (M6*L25)	66	K-1-4
16013CW-A001	Table Support Angle "E"	66	K-1-12
16014CW-A001	Table Support Bracket A	66	K-1-13
16014SW-4115	Spring Washer (@6)	31	E-1-3
16014SW-4115	Spring Washer (@6)	34	E-4-9
16014SW-4115	Spring Washer (@6)	47	H-1-26
16014SW-4115	Spring Washer (@6)	57	I-1-4
16014SW-4115	SPRING WASHER (@6)	57	I-1-33
16014SW-4115	Spring Washer (@6)	66	K-1-15
16014SW-4115	Spring Washer(Ø6)	77	M-4-5
16014SW-4115	Spring Washer (@6)	90	Q-2-23
16018SW-1111	Spring Washer(@5)	23	C-3-7
16018SW-1111	Washer (@5)	48	H-2-4
16018SW-1111	Washer (@5)	70	L-2-8
16018SW-1111	Control Box Washer	72	M-1-6
16018SW-1111	Washer(Ø5)	77	M-4-10
16018SW-1111	Washer (@5)	79	N-1-10
16018SW-1111	Washer(@4)	92	R-1-10
16019SW-4115	Control Box Spring Washer	72	M-1-5
16021CW-A001	Table Support Stud	66	K-1-17
16029SW-3115	Spring Washer (10@)	66	K-1-3
16037LA-A001	Coupling Cover (L)	67	K-2-4
16038LA-A001	Coupling Cover (R)	67	K-2-5

Part No.	Part Name	Page	Ref.No
16055MT-UK01	Pulse Motor	53	H-6-1
16062EL-T121	Sensor Set	47	H-1-7
16062EL-T121	Sensor Set	50	H-4-9
16078PR-W121	Sensor Bracket (L)	47	H-1-5
16078PR-W121	Sensor Bracket (L)	50	H-4-7
16079PR-W121	Sensor Bracket (R)	47	H-1-11
16079PR-W121	Sensor Bracket (R)	50	H-4-14
17039SC-4113	Hex. Socket Bolt (M6*L17)	31	E-1-25
17051SN-A001	Mes Priving Shaft Joint	40	F-3-28
17053SN-1111	Hex. Nut(L) (M6*T5-L)	27	D-2-16
17053SN-1111	Hex. Nut(L) (M6*T5-L)	27	D-2-21
17053SN-1111	Hex. Nut(L) (M6*T5-L)	40	F-3-27
18003SH-D092	Color Change Shaft	39	F-2-32
18008SH-E131	Mes Driving Shaft L=1226	27	D-2-13
18011BM-A021	Clip [L=750mm]	89	Q-1-42
18013SH-E131	Shaft A (L=665.5)	53	H-6-11
18014SC-7113	Hex.Socket Bolt(M4*L10)	88	Q-1-6
18014SC-7113	Hex.Socket Bolt(M4*L10)	88	Q-1-8
18014SC-7113	Hex.Socket Bolt(M4*L10)	88	Q-1-10
18014SC-7113	Truss Screw (M4*L9)	88	Q-1-21
18014SC-7113	Truss Screw (M4*L9)	90	Q-2-22
18014SH-E131	Shaft B (L=533)	53	H-6-12
18014SW-3115	Spring Washer (@4-No2)	49	H-3-8
18014SW-3115	Spring Washer (@4)	51	H-5-10
18014SW-3115	Spring Washer (@4-No2)	54	H-7-24
18014SW-3115	Spring Washer (@4-No2)	58	I-1-44
18014SW-3115	SPRING WASHER (@4-NO2)	58	I-1-48
18014SW-3115	Spring Washer (@4-No2)	59	I-2-3
18014SW-3115	Spring Washer (@4-No2)	80	N-2-9
18014SW-3115	Spring Washer(@4)	88	Q-1-24
18014SW-3115	Spring Washer (@4-No2)	88	Q-1-28
18014SW-3115	Spring Washer (@4-No2)	90	Q-2-3
18014SW-3115	Spring Washer (@4-No2)	90	Q-2-7
18014SW-3115	SPRING WASHER (@4-NO2)	90	Q-2-16
18014SW-3115	Spring Washer(@4)	92	R-1-3
18015SW-3111	WASHER (4@)	22	C-2-6
18015SW-3111	Washer (4@)	26	D-1-44
18015SW-3111	Washer (4@)	31	E-1-21
18015SW-3111	Washer (4@)	49	H-3-7
18015SW-3111	Washer (@4)	51	H-5-11
18015SW-3111	Washer (4@)	54	H-7-25
18015SW-3111	Washer (4@)	55	H-7-43
18015SW-3111	Washer (4@)	58	I-1-45
18015SW-3111	WASHER (4@)	58	I-1-49
18015SW-3111	Washer (4@)	59	I-2-4
18015SW-3111	Washer (4@)	80	N-2-10
18015SW-3111	Washer(@4)	88	Q-1-25
18015SW-3111	Washer (4@)	88	Q-1-29
18015SW-3111	Washer (4@)	90	Q-2-4
18015SW-3111	Washer (4@)	90	Q-2-8
18015SW-3111	WASHER (4@)	90	Q-2-17
18015SW-3111	Washer(@4)	92	R-1-4
18033PR-UK01	OIL TUBE GUIDE	22	C-2-7

Part No.	Part Name	Page	Ref.No
18036CW-UK01	Oil Tank Cover Support	23	C-3-10
18045ET-UK01	Oil Hose L=160	22	C-2-4
18047SC-7113	Hex/ Socket Bolt (M5*L15)	52	H-5-33
18047SC-7113	Hex.Socket Bolt (M5*L15)	57	I-1-22
18047SC-7113	Control Box Screw (M5xL15)	72	M-1-4
18048SW-3115	Washer(@5)	23	C-3-8
18048SW-3115	Spring Washer (5@)	25	D-1-33
18048SW-3115	Spring Washer (5@)	25	D-1-36
18048SW-3115	Spring Washer (@5)	28	D-3-3
18048SW-3115	Spring Washer (5@)	34	E-4-3
18048SW-3115	Spring Washer (5@)	34	E-4-16
18048SW-3115	Spring Washer (@5)	41	F-4-4
18048SW-3115	Spring Washer (@5)	48	H-2-3
18048SW-3115	Spring Washer (5@)	49	H-3-6
18048SW-3115	Spring Washer (5@)	52	H-5-34
18048SW-3115	Spring Washer (@5)	53	H-6-3
18048SW-3115	Spring Washer (@5)	54	H-7-31
18048SW-3115	Spring Washer (@5)	55	H-7-45
18048SW-3115	Spring Washer (5@)	57	I-1-23
18048SW-3115	Spring Washer (@5)	63	J-1-8
18048SW-3115	Spring Washer (@5)	64	J-2-11
18048SW-3115	Spring Washer (@5)	70	L-2-3
18048SW-3115	Spring Washer (@5)	70	L-2-7
18048SW-3115	Spring Washer(Ø5)	77	M-4-9
18048SW-3115	Spring Washer (@5)	79	N-1-9
18049SW-3111	Washer (@5)	34	E-4-4
18049SW-3111	Washer (@5)	34	E-4-17
18049SW-3111	Washer (@5)	52	H-5-35
18049SW-3111	Washer (@5)	53	H-6-4
18049SW-3111	Washer (@5)	57	I-1-24
18049SW-3111	Washer (@5)	63	J-1-7
18049SW-3111	Washer (@5)	79	N-1-3
18050AF-A001	X-Axis Guide Rail	88	Q-1-22
18062CW-A021	Rail Guide Pin (B)	90	Q-2-10
18068SF-AE00	Front Felt(H)	89	Q-1-34
18069SF-A001	Felt(A)	89	Q-1-37
18071SF-A001	Rear Felt (K) (L=135)	89	Q-1-35
18072SF-AD00	Rear Felt (L) (L=105)	89	Q-1-36
18084PR-A001	Clip [L=300mm]	89	Q-1-40
18086PR-B001	Frame Clip Support	89	Q-1-41
18106PR-B001	ROLLER BRACKET	90	Q-2-14
18107CW-B001	ROLLER	90	Q-2-13
18111CW-B001	Frame 'E' Roller	54	H-7-35
18153SC-3123	Truss Screw (M4*L12)	82	O-1-7
18153SC-3123	Truss Screw (M4*L12)	83	O-2-2
18154SC-9134	PLUS SCREW (M3*L8)	70	L-2-4
19002SC-1330	Tapping Screw (4*L16-No1)	80	N-2-2
19002SC-1330	Tapping Screw (4*L16-No1)	80	N-2-4
19003EL-B001	Limit S/W (V4F1L07B)	80	N-2-17
19005SC-8118	Plus Screw (M3*L20)	80	N-2-19
19006CW-CT01	Hinge Bolt	77	M-4-12
19018PM-A001	Bar S/W Support	80	N-2-3
19020EL-A001	Connector	80	N-2-16

S. Index

Part No.	Part Name	Page	Ref.No
19024ET-B001	Limit Switch Plate	80	N-2-18
20007BM-A001	Lamp Ass'Y	79	N-1-7
20009EL-WH06	WHEEL SENSOR BOARD (6C)	44	G-2-6
20009EL-WH09	WHEEL SENSOR BOARD (9C)	44	G-2-6
20009EL-WH12	WHEEL SENSOR BOARD (12C)	44	G-2-6
20012PR-A001	Lamp Socket Fixed Plate	79	N-1-16
20014ET-A001	Lamp Socket	79	N-1-14
20014SC-9124	Hex. Socket Screw(M4*L8)	79	N-1-12
20042SC-9134	PLUS SCREW (M4*L6)	69	L-1-19
22006SC-7113	HEX. SOCKET BOLT (M3*L8)	32	E-2-16
22006SC-7113	Hex. Socket Bolt (M3*L8)	49	H-3-12
22025SC-9134	Screw (M4*L10)	85	P-1-15
23012SH-UK06	Color Change Shaft "A"	40	F-3-26
23013SH-UK06	Color Change Shaft "B"	40	F-3-30
25009EL-E121	Cable (25-09)	48	H-2-20
25011EL-E121	Cable (25-11)	53	H-6-21
25022EL-UK01	To Adjusting Plate (4Ht-22)	79	N-1-6
25025EL-E121	Cable (25-25)	40	F-3-34
25025EL-E131	Cable (25-25)	26	D-1-38
25033EL-E121	Cable (25-31)	40	F-3-33
25033EL-E131	Cable (25-33)	40	F-3-35
25036EL-UK01	Cc Potentiometer Cable(4Ht-36)	40	F-3-36
25037EL-E121	Cable (25-37)	27	D-2-23
25045EL-E121	Cable (25-45)	47	H-1-15
25046EL-E121	Cable (25-46)	47	H-1-13
25047EL-E121	Cable (25-47)	47	H-1-14
25048EL-E121	Cable (25-48)	50	H-4-16
25055EL-W121	Cable (25-55)	50	H-4-15
25056EL-W121	Cable (25-56)	50	H-4-17
25065EL-A001	Bar Switch-Joint (25-65)	80	N-2-25
25075EL-A001	Connect Cable (25-75)	80	N-2-20
25103ET-B001	Encoder Connector	23	C-3-13
32000100UK40	Oil Tank Ass'Y	22	C-2-1
32000500UK40	Oil Tank Felt	22	C-2-2
32008EL-UK01	Ballast (20W)	79	N-1-13
32020EL-UK01	Lamp	79	N-1-15
32046SP-T121	HOLDER FOR OIL HOSE	22	C-2-8
AS-000484-00	Thread Guide (M) Set (9C)	38	F-2-4
AS-000484-01	Thread Guide (M) Set (9C)	38	F-2-4
AS-000484-02	Thread Guide (M) Set (9C)	38	F-2-4
AS-000484-03	Thread Guide (M) Set (9C)	38	F-2-4
AS-000484-04	Thread Guide (M) Set (9C)	38	F-2-4
AS-000484-05	Thread Guide (M) Set (9C)	38	F-2-4
AS-000484-06	Thread Guide (M) Set (9C)	38	F-2-4
AS-000484-07	Thread Guide (M) Set (9C)	38	F-2-4
AS-000484-08	Thread Guide (M) Set (9C)	38	F-2-4
AS-000484-09	Thread Guide (M) Set (9C)	38	F-2-4
AS-000484-10	Thread Guide (M) Set (9C)	38	F-2-4
AS-001418-00	FRAME E ENDCAP(A)SET	90	Q-2-25
AS-001418-01	FRAME E ENDCAP(A)SET	90	Q-2-25
AS-001418-02	FRAME E ENDCAP(A)SET	90	Q-2-25
AS-001418-03	FRAME E ENDCAP(A)SET	90	Q-2-25

Part No.	Part Name	Page	Ref.No
AS-001419-00	FRAME E ENDCAP B SET	90	Q-2-26
AS-001419-01	FRAME E ENDCAP B SET	90	Q-2-26
AS-001419-02	FRAME E ENDCAP B SET	90	Q-2-26
AS-001419-03	FRAME E ENDCAP B SET	90	Q-2-26
AS-001553-00	Angle Ass' Y	64	J-2-14
AS-003234-00	Picker Sol. Set	61	I-4-4
AS-003234-01	Picker Sol. Set	61	I-4-4
AS-003234-02	Picker Sol. Set	61	I-4-4
AS-003951-00	Thread Control Device Ass'y	82	O-1-11
AS-004174-00	TAKE-UP LEVER DRIVER CAM Ass' Y	15	B-2-8
AS-004640-00	Color Change Motor Ass' Y	40	F-3-37
AS-004833-00	Table Set	67	K-2-1
AS-004904-00	Roller Guide Ass' Y	55	H-7-48
AS-005257-00	Needle Bar Drive Lever Ass' Y	16	B-3-32
AS-005377-00	Bearing Block C Ass' Y	55	H-7-49
AS-005391-01	Y- Cam Roller Plate Ass' Y	55	H-7-47
AS-005979-00	Spool Plate Ass' y	63	J-1-15
AS-008634-00	MES MOUNTING BASE Ass' Y	29	D-4-21
BD-000044-00	X-Y Driver Board(220V)//BD-000146-00(110V)	72	M-1-9
BD-000044-01	X-Y Driver Board(220V)//BD-000146-00(110V)	72	M-1-9
BD-000044-02	X-Y Driver Board(220V)//BD-000146-00(110V)	72	M-1-9
BD-000044-03	X-Y Driver Board(220V)//BD-000146-00(110V)	72	M-1-9
BD-000306-00	IO MC Board	74	M-2-2
BD-000306-01	IO MC Board	74	M-2-2
BD-000306-02	IO MC Board	74	M-2-2
BD-000306-03	IO MC Board	74	M-2-2
BD-000306-04	IO MC Board	74	M-2-2
BD-000306-05	IO MC Board	74	M-2-2
BD-000306-06	IO MC Board	74	M-2-2
BD-000306-07	IO MC Board	74	M-2-2
BD-000306-08	IO MC Board	74	M-2-2
BD-000310-00	Color Change Board	70	L-2-12
BD-000310-01	Color Change Board	70	L-2-12
BD-000310-02	Color Change Board	70	L-2-12
BD-000310-03	Color Change Board	70	L-2-12
BD-000310-04	Color Change Board	70	L-2-12
BD-000310-05	Color Change Board	70	L-2-12
BD-000310-06	Color Change Board	70	L-2-12
BD-000310-07	Color Change Board	70	L-2-12
BD-000310-08	Color Change Board	70	L-2-12
BD-000310-09	Color Change Board	70	L-2-12
BD-000310-10	Color Change Board	70	L-2-12
BD-000310-11	Color Change Board	70	L-2-12
BD-000310-12	Color Change Board	70	L-2-12
BD-000310-13	Color Change Board	70	L-2-12
BD-000310-14	Color Change Board	70	L-2-12
BD-000311-00	Main Drive (ASSY)(220V)//BD-000312-00(110V)	72	M-1-7
BD-000311-01	Main Drive (ASSY)(220V)//BD-000312-00(110V)	72	M-1-7
BD-000311-02	Main Drive (ASSY)(220V)//BD-000312-00(110V)	72	M-1-7
BD-000311-03	Main Drive (ASSY)(220V)//BD-000312-00(110V)	72	M-1-7
BD-000311-04	Main Drive (ASSY)(220V)//BD-000312-00(110V)	72	M-1-7
BD-000311-05	Main Drive (ASSY)(220V)//BD-000312-00(110V)	72	M-1-7
BD-000311-06	Main Drive (ASSY)(220V)//BD-000312-00(110V)	72	M-1-7

Part No.	Part Name	Page	Ref.No
BD-000387-00	DDC Board	74	M-2-9
BD-000387-01	DDC Board	74	M-2-9
BD-000387-02	DDC Board	74	M-2-9
BD-000387-03	DDC Board	74	M-2-9
BD-000389-00	Back plane Board	76	M-3-1
BD-000389-01	Back plane Board	76	M-3-1
BD-000389-02	Back plane Board	76	M-3-1
BD-000389-03	Back plane Board	76	M-3-1
BD-000392-00	UNIT Board	74	M-2-20
BD-000392-01	UNIT Board	74	M-2-20
BD-000392-02	UNIT Board	74	M-2-20
BD-000392-03	UNIT Board	74	M-2-20
BD-000423-00	IO LED Board	74	M-2-3
BD-000423-01	IO LED Board	74	M-2-3
CA-002978-00	Encoder Cable (4Head)	34	E-4-20
CA-002979-00	Encoder Cable (6Head)	34	E-4-20
CA-002981-00	Encoder Cable (8Head)	34	E-4-20
EP-000029-00	SMPS	74	M-2-17
EP-000078-00	Transformer A'ssy	82	O-1-6
EP-000079-00	On / Off Switch	83	O-2-3
EP-000080-00	Push Switch (Start)	83	O-2-8
EP-000081-00	Push Switch (Stop)	83	O-2-9
EP-000082-00	Switch (Select)	83	O-2-5
EP-000083-00	VR	83	O-2-7
EP-000095-00	PCB (DW-BW01)	82	O-1-8
EP-000131-00	Laser	92	R-1-7
EP-000131-00	Laser	92	R-1-7
EP-000141-00	Upper Thread Hook Motor Unit	57	I-1-1
EP-000149-00	Wiper Motor Driver	74	M-2-10
GP-005179-00	THREAD BREAKAGE DETECT WHEEL	44	G-2-3
GP-005180-00	UPPER THREAD HOOK SENSOR BASE	57	I-1-12
GP-005184-00	SENSOR SENSING ADJUSTING RING	57	I-1-8
GP-005184-01	SENSOR SENSING ADJUSTING RING	57	I-1-8
GP-006252-00	Cam Bushing	40	F-3-19
GP-006299-00	ADJUSTING BLOCK FOR BEARING	54	H-7-28
GP-006545-00	FELT V	90	Q-2-28
GP-006546-00	FELT W	90	Q-2-11
GP-006815-00	Idler	33	E-3-8
GP-006815-00	IDLER SHAFT	33	E-3-10
GP-006817-00	Idler Spacer	33	E-3-9
GP-006914-00	Roller Bracket	51	H-5-8
GP-006914-01	Roller Bracket	51	H-5-8
GP-006914-02	Roller Bracket	51	H-5-8
GP-006917-00	Guide Roller	51	H-5-13
GP-006917-01	Guide Roller	51	H-5-13
GP-006918-00	Guide Roller Bushing	51	H-5-14
GP-006918-01	Guide Roller Bushing	51	H-5-14
GP-007190-00	BEARING CONNECTING BLOCK B	90	Q-2-1
GP-007190-01	BEARING CONNECTING BLOCK B	90	Q-2-1
GP-007190-02	BEARING CONNECTING BLOCK B	90	Q-2-1
GP-007216-00	Needle Bar Return Spring	36	F-1-7
GP-007216-01	Needle Bar Return Spring	36	F-1-7
GP-007325-00	Arm Guard Plate (R)	21	C-1-8

S. Index

Part No.	Part Name	Page	Ref.No
GP-007345-00	MES CAM	25	D-1-7
GP-007476-00	Noise Filter	69	L-1-18
GP-008536-00	Encoder Base	23	C-3-5
GP-009020-00	OIL TANK COVER (4HEAD)	23	C-3-12
GP-009020-01	OIL TANK COVER (4HEAD)	23	C-3-12
GP-009023-00	OIL TANK COVER (6 HEAD)	23	C-3-12
GP-009023-01	OIL TANK COVER (6 HEAD)	23	C-3-12
GP-009111-00	Corner Guide(DL)	88	Q-1-33
GP-009111-01	Corner Guide(DL)	88	Q-1-33
GP-009112-00	Corner Guide(DR)	88	Q-1-30
GP-009112-01	Corner Guide(DR)	88	Q-1-30
GP-009112-02	Corner Guide(DR)	88	Q-1-30
GP-009113-00	Left Corner Guide(EL)	88	Q-1-31
GP-009114-00	Left Corner Guide(ER)	88	Q-1-32
GP-009729-00	Upper Thread Hook	59	I-2-8
GP-010074-00	Leveling Base Ass'Y	11	A-1-5
GP-010409-00	Bushing Nut(C)	88	Q-1-19
GP-010543-00	SMPS Fixing Stud (3-5-45)	75	M-2-21
GP-010543-01	SMPS Fixing Stud (3-5-45)	75	M-2-21
GP-010609-00	Rotary Hook Support	28	D-3-1
GP-010764-00	Thread Guide (L) 9C	38	F-2-11
GP-010772-00	Thread Hook Spring (9C)	38	F-2-16
GP-011803-00	TABLE SUPPORT END CAP	66	K-1-11
GP-011913-00	Drive Lever "A" Set	14	B-1-14
GP-011914-00	Take-Up Driving Lever "B"	14	B-1-7
GP-011929-00	Needle Bar	36	F-1-6
GP-011931-00	Needle Bar Guide Rail (9C)	39	F-2-30
GP-011932-00	Needle Bar Driving Cam	15	B-2-2
GP-011932-01	Needle Bar Driving Cam	15	B-2-2
GP-011933-00	Bearing Case	18	B-5-1
GP-011933-01	Bearing Case	18	B-5-1
GP-011938-00	Take-Up Lever Cam Base	15	B-2-5
GP-011938-01	Take-Up Lever Cam Base	15	B-2-5
GP-011944-00	Head Rail (9C)	37	F-1-34
GP-011944-01	Head Rail (9C)	37	F-1-34
GP-011945-00	Color Change Bracket "B"	39	F-2-33
GP-011946-00	Color Change Bracket	86	P-2-12
GP-011947-00	Head "B" (9C)	41	F-4-1
GP-011947-01	Head "B" (9C)	41	F-4-1
GP-011947-02	Head "B" (9C)	41	F-4-1
GP-011947-03	Head "B" (9C)	41	F-4-1
GP-011947-04	Head "B" (9C)	41	F-4-1
GP-011947-05	Head "B" (9C)	41	F-4-1
GP-012118-00	SMPS Radiator Sheet	74	M-2-19
GP-012734-00	Mes Cam Lever	25	D-1-13
GP-012897-00	Motor Fixing	34	E-4-7
GP-013117-00	NEEDLE BAR DRIVING SHAFT	16	B-3-13
GP-013196-00	Supprot Bracket	51	H-5-5
GP-013331-00	Connecting Bracket for Laser	92	R-1-5
GP-013331-01	Connecting Bracket for Laser	92	R-1-5
GP-013332-00	Fixing Brackcet for Laser	92	R-1-6
GP-013585-00	Side Cover "A"	17	B-4-3
GP-013585-01	Side Cover "A"	17	B-4-3

Part No.	Part Name	Page	Ref.No
GP-013586-00	Jump Sol. Bracket	17	B-4-22
GP-013587-00	Needle Bar Driving Shaft Bush	16	B-3-30
GP-013587-01	Needle Bar Driving Shaft Bush	16	B-3-30
GP-013752-00	Jumping Sol. Base Plate	17	B-4-2
GP-013752-01	Jumping Sol. Base Plate	17	B-4-2
GP-013756-00	Needle Bar Reciprocator	16	B-3-20
GP-013758-00	Arm Guard Plate (L)	21	C-1-7
GP-013761-00	Upper Thread Catcher Base	59	I-2-1
GP-013762-00	Needle Driving Shaft Driver	16	B-3-25
GP-013762-01	Needle Driving Shaft Driver	16	B-3-25
GP-013762-02	Needle Driving Shaft Driver	16	B-3-25
GP-013762-03	Needle Driving Shaft Driver	16	B-3-25
GP-013763-00	Presser Foot	36	F-1-18
GP-014346-00	Rubber For Support Base	82	O-1-18
GP-014354-00	Bobbin Shaft	82	O-1-15
GP-014354-01	Bobbin Shaft	82	O-1-15
GP-014354-02	Bobbin Shaft	82	O-1-15
GP-014354-03	Bobbin Shaft	82	O-1-15
GP-014363-00	Spool Support Base	82	O-1-3
GP-014365-00	Spool Support Base Sponge	82	O-1-4
GP-014366-00	Spool Post	82	O-1-2
GP-014368-00	Antenna Bar	83	O-2-11
GP-014369-00	Antenna Bar Hanger	83	O-2-10
GP-014370-00	Tension Control Holder	82	O-1-10
GP-014467-00	Pulley (Tubular)	31	E-1-6
GP-014467-00	TOP SHAFT PULLEY	32	E-2-8
GP-014548-00	DDC Sticker	75	M-2-26
GP-014549-00	IO MC Sticker	75	M-2-25
GP-014550-00	SMPS Sticker	75	M-2-27
GP-014677-00	VR Knob	83	O-2-6
GP-014678-00	Fuse Holder	83	O-2-4
GP-014869-00	Cover	83	O-2-1
GP-014869-01	Cover	83	O-2-1
GP-014870-00	Base	82	O-1-1
GP-014871-00	Motor Bracket	82	O-1-14
GP-014931-00	Jump Sol. Cover	17	B-4-7
GP-014941-00	Head	36	F-1-1
GP-014941-01	Head	36	F-1-1
GP-014941-02	Head	36	F-1-1
GP-014941-03	Head	36	F-1-1
GP-015478-00	X-Asix Feed Plate	49	H-3-9
GP-015653-00	SMPS Radiator	74	M-2-18
GP-015654-00	DDC Radiator Sheet	74	M-2-12
GP-015851-00	Magnetic switch Bracket Fixing Plate	69	L-1-8
GP-015921-00	Driver Radiator	72	M-1-10
GP-016007-00	DDC Bracket	74	M-2-7
GP-016007-01	DDC Bracket	74	M-2-7
GP-016008-00	IO MC Bracket	74	M-2-1
GP-016008-01	IO MC Bracket	74	M-2-1
GP-016009-00	SMPS Bracket	74	M-2-16
GP-016011-00	Front Cover (L)	72	M-1-19
GP-016014-00	Harness Cover	76	M-3-10
GP-016015-00	Side Cover	72	M-1-14

Part No.	Part Name	Page	Ref.No
GP-016016-00	Control Box	72	M-1-2
GP-016016-00	Connector PCB Cover	76	M-3-3
GP-016016-01	Control Box	72	M-1-2
GP-016016-01	Connector PCB Cover	76	M-3-3
GP-016016-02	Control Box	72	M-1-2
GP-016016-02	Connector PCB Cover	76	M-3-3
GP-016016-03	Control Box	72	M-1-2
GP-016016-03	Connector PCB Cover	76	M-3-3
GP-016016-04	Control Box	72	M-1-2
GP-016016-04	Connector PCB Cover	76	M-3-3
GP-016137-00	Table Support "B"	66	K-1-5
GP-016137-01	Table Support "B"	66	K-1-5
GP-017097-00	Laser Support Connecting Bracket	92	R-1-1
GP-017097-01	Laser Support Connecting Bracket	92	R-1-1
GP-017097-02	Laser Support Connecting Bracket	92	R-1-1
GP-017171-00	Rubber	72	M-1-3
GP-017311-00	OP Holder	77	M-4-7
GP-017311-01	OP Holder	77	M-4-7
GP-017703-00	DDC Radiator	74	M-2-8
GP-017703-01	DDC Radiator	74	M-2-8
GP-017710-00	Signal Sticker	76	M-3-17
GP-017967-00	OP Holder Bracket	77	M-4-2
GP-017967-01	OP Holder Bracket	77	M-4-2
GP-018271-00	Beam & Body Ass'Y	11	A-1-1
GP-018271-01	Beam & Body Ass'Y	11	A-1-1
GP-018276-00	L.M Guide Cover	67	K-2-8
GP-018277-00	Lm Guide Cover "B"	67	K-2-9
GP-018279-00	Table Connecting Plate	67	K-2-11
GP-018280-00	Frame (A) [L=6276]	88	Q-1-1
GP-018281-00	Frame (B) [L=6276]	88	Q-1-2
GP-018282-00	Frame (C-1) [L=6121]	88	Q-1-11
GP-018283-00	Frame (C-2) [L=6176]	88	Q-1-13
GP-018284-00	Frame E [L=1659]	90	Q-2-18
GP-018303-00	Body Inside Cover (R)	69	L-1-1
GP-018416-00	Hinge Block	77	M-4-11
GP-018516-00	TOP SHAFT COVER(L)SET	86	P-2-3
GP-018520-00	X Coupling Cover	67	K-2-10
GP-019795-00	Bearing Block (C)	54	H-7-26
GP-019796-00	Y Cam Roller Guide Bracket A	50	H-4-1
GP-019988-00	Body Side Cover (L)	85	P-1-1
GP-019989-00	Body Side Cover (R)	85	P-1-2
GP-020323-00	Table Support (E)	66	K-1-9
GP-020325-00	Table Support "G"	66	K-1-7
GP-020328-00	Table Support "C"	66	K-1-6
GP-020329-00	Table Support"D"	66	K-1-8
GP-020360-00	Spool Plate	63	J-1-1
GP-020674-00	Side Cover "B"	17	B-4-4
GP-020674-01	Side Cover "B"	17	B-4-4
GP-020831-00	Arm Top Cover	21	C-1-5
GP-020831-01	Arm Top Cover	21	C-1-5
GP-020913-00	Needle Bar Drive Lever	16	B-3-1
GP-020913-01	Needle Bar Drive Lever	16	B-3-1

Part No.	Part Name	Page	Ref.No
GP-020915-00	Presser Foot Pressure Spring	36	F-1-16
GP-020915-01	Presser Foot Pressure Spring	36	F-1-16
GP-020960-00	TAKE-UP LEVER DRIVER CAM	15	B-2-6
GP-020960-01	TAKE-UP LEVER DRIVER CAM	15	B-2-6
GP-020960-02	TAKE-UP LEVER DRIVER CAM	15	B-2-6
GP-020960-03	TAKE-UP LEVER DRIVER CAM	15	B-2-6
GP-021024-00	Motor Base Spacer	58	I-1-51
GP-021024-01	Motor Base Spacer	58	I-1-51
GP-021205-00	Arm	19	B-6-1
GP-021205-01	Arm	19	B-6-1
GP-021205-02	Arm	19	B-6-1
GP-021312-00	Stud Bolt for Driving Plate Spacer	58	I-1-42
GP-021312-01	Stud Bolt for Driving Plate Spacer	58	I-1-42
GP-021754-00	Driving Plate Block"C"	57	I-1-21
GP-021803-00	Connection Cover"C"	54	H-7-1
GP-021812-00	Beam Front Cover (L)	85	P-1-12
GP-024971-00	Table Support "K"	66	K-1-10
GP-024973-00	Table Support "A"	66	K-1-1
GP-029677-00	Encoder Fixed Bracket	76	M-3-5
GP-030369-00	Sponge	76	M-3-6
GP-030400-00	Corner Guide (A)	88	Q-1-5
GP-030400-01	Corner Guide (A)	88	Q-1-5
GP-032880-00	Rotary Hook Base	12	A-2-1
GP-032880-01	Rotary Hook Base	12	A-2-1
GP-032880-02	Rotary Hook Base	12	A-2-1
GP-037044-00	Hook Shaft Bush	12	A-2-9
GP-037692-00	Roller Set	41	F-4-3
GP-037737-00	Corner Guide (C)	88	Q-1-9
GP-037776-00	Fixing Block (A) for Bearing	90	Q-2-5
GP-037776-01	Fixing Block (A) for Bearing	90	Q-2-5
GP-037776-02	Fixing Block (A) for Bearing	90	Q-2-5
GP-037798-00	Frame (G) [L=939]	88	Q-1-4
GP-037803-00	Corner Guide (B)	88	Q-1-7
GP-037813-00	Fixing Block (C) for Bearing	88	Q-1-26
GP-044776-00	Needle Bar Holder	36	F-1-12
GP-052861-00	Reflecting Cover	79	N-1-11
LWP-BK0003-00	Return Spring Stopper	57	I-1-34
LWP-BK0003-01	Return Spring Stopper	57	I-1-34
MO-000029-00	Motor Ass'y	82	O-1-13
O2000900E000	Timing Belt (25-S5M*L625)	31	E-1-7
PN-000133-00	Roller Pin	51	H-5-15
PN-000232-00	Jump Clutch Pin	17	B-4-10
PN-000232-01	Jump Clutch Pin	17	B-4-10
PN-000722-00	CAM COLLAR PIN (L=19)	25	D-1-19
SC-000173-00	Set Screw (M5*L4)	82	O-1-16
SC-000236-00	Screw(M4xL10)	67	K-2-6
SC-000334-00	SCREW M4*L15	88	Q-1-27
SC-000406-00	IO MC Bracket Screw(캠티브) (M3xL7)	74	M-2-6
SC-000406-00	DDC Bracket Screw(캠티브)	74	M-2-15
SC-000406-00	SMPS Bracket Screw(캠티브)	75	M-2-24
SC-000417-00	Head Rail Screw	36	F-1-2
SC-000544-00	Screw(M5xL12)	77	M-4-3
SC-001625-00	Thread Guide (M) Screw (9/64 n=40)	38	F-2-3