

PARTS BOOK

Multi-Head E-Series Flat Type

E-WD(X)920-75

PME-110725

Notice

1. 본 책자는Parts Book으로 제작되었으므로 매뉴얼로 사용 불가합니다.
2. 조에 속한 파트는 개별 조립 시 제품의 파손 또는 자수 불량일 수 있어 해당 파트에 대한 주문 시에는 조 품목으로만 구입이 가능합니다.
3. 당사의 Part Book은 다음과 같은 순서로 분류되어 있으니 제품을 구입한 소비자께서는 다음과 같은 순서로 제품을 검색하여 주십시오.

- 1) Machine Layout
- 2) Section
- 3) Part List

※소모성 부품은 자수 기계의 보증 기간과 상관 없음.

1. This is a parts book. It cannot be used as a manual.
2. The parts classified as ass'y items may cause damage to the machine or bad embroidery when they are separately assembled.
Hence, when they are ordered, they can be purchased as ass'y items only.
3. The Part Book is classified as below and users could search products in the following order.


- 1) Machine Layout
- 2) Section
- 3) Part List

※Consumable parts shall not be guaranteed even in warranty period.

Information

A. Structure of Part Book

1. Machine Layout

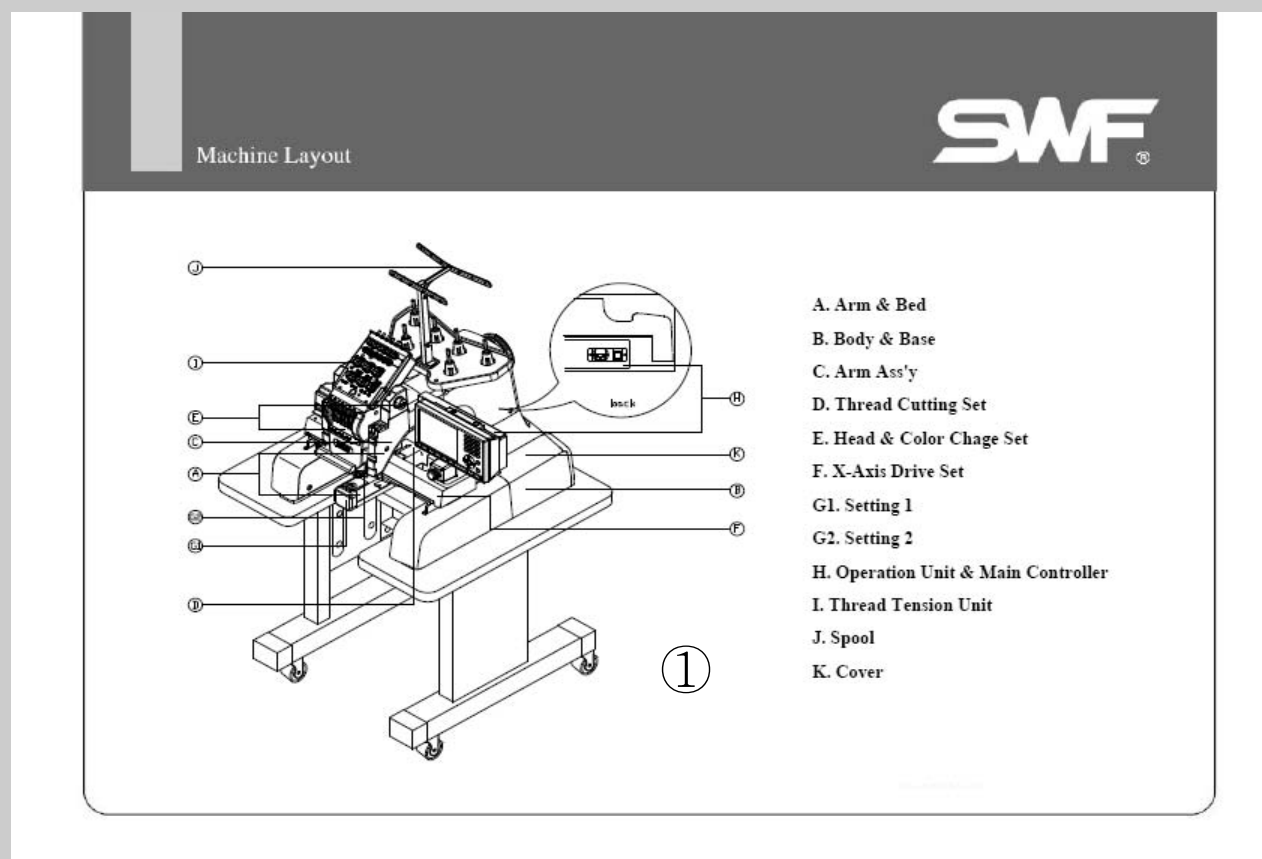


Information

A. Structure of Part Book

2. Section

- ① : Index Number
 - ② : Index Group
 - ③ : Related Parts
- Ex) A-1, A-2, A-3...

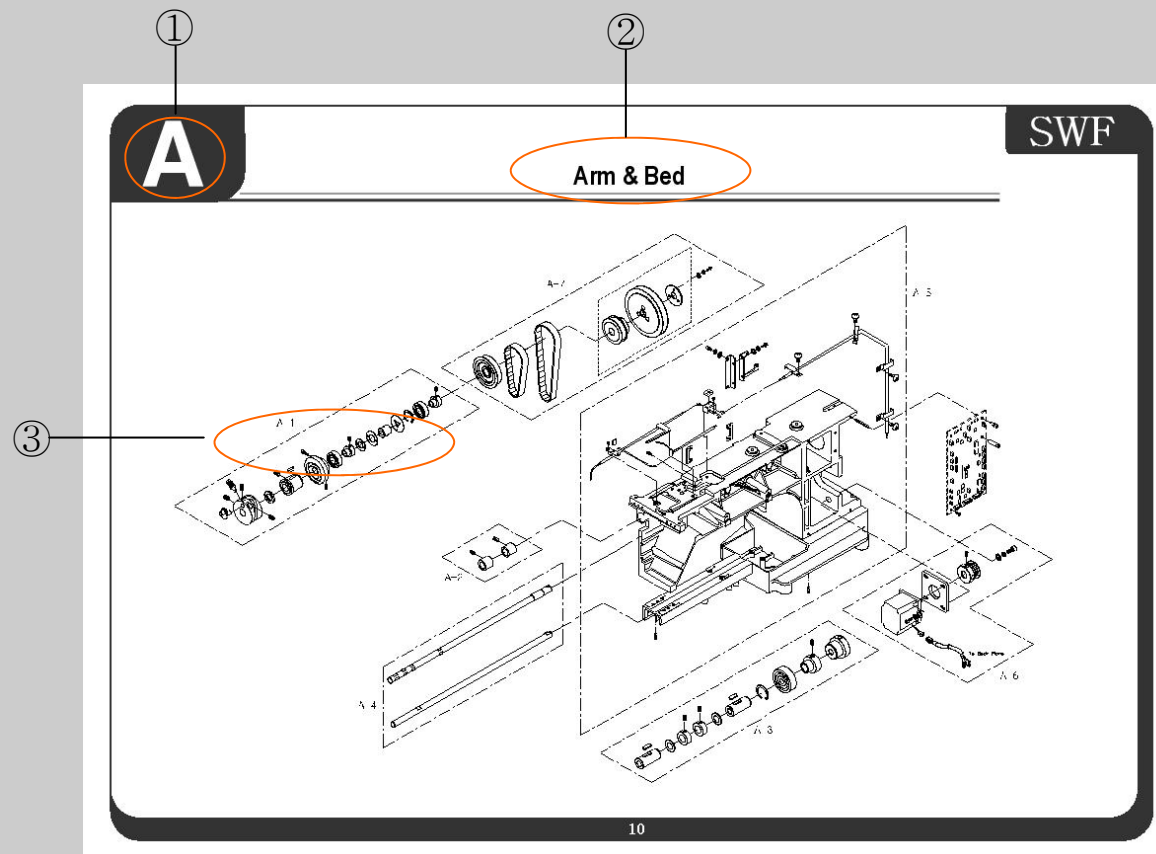

Information

A. Structure of Part Book

3. Part List

①

A-1

Note

③	④	⑤	⑥	⑦	⑧	⑨	⑩
Ref No	Part No	Part Name	Applied Period	Interchangeability	Hardware	Qty	Remark
A-1-1	0101SCM-T900	Twice-up Lever Driving Cam	Oct-08-07 ~ Oct-08-07			1	
A-1-2	09-033421-00	Twice-up Lever Driving Cam		X		1	
A-1-3	01017CW-T121	Cam Screw (8/32x20L=17)				1	
A-1-4	01016SC-4313	Screw (1/8x3/8x20 L=7.5)			O	1	
A-1-5	01016SC-4313	Hex. Socket Set Screw (1/4" 20x40 L=4.5)				1	
A-1-6	01020RR-A001	Washer				2	
A-1-7	01020RR-A001	Washer				1	
A-1-8	01020RR-T900	Needle Bar Crank				1	
A-1-9	01012MP-T121	Upper Shaft Bushing (H)				1	
A-1-10	01004SC-4317	Screw (1/8x3/8x20 L=14)			O	3	
A-1-11	01014SP-T121	Felt				1	
A-1-12	01013CM-CT01	Presser Foot Driving Cam				1	
A-1-13	04012AP-A001	Screw (1/8x3/8x20)			O	3	
A-1-14	11098SC-4313	Screw (M4xL20)			O	1	
A-1-15	01020RR-A001	Washer (600422)				1	
A-1-16	010009001000	Rearizer Collar				2	
A-1-17	04012AP-A001	Screw (1/8x3/8x20)			O	3	
A-1-18	WS-00018R-00	Washer				1	
A-1-19	CL-000097-00	Code Wheel				1	
A-1-20	09-016534-01	Collar				1	
A-1-21	01016SC-4313	Residual Piece				1	
A-1-22	01016SC-4313	C-Ridge (H477)			O	1	
A-1-23	01016SC-4313	Rearizer (600422)			O	1	

Note) * : Checks the timing of application.

① Index Number
Ex) A-1, A-2...

② Parts View

Information

A. Structure of Part Book

③ Ref. No

④ Part No

Ex)

Category	CODE	Remark
Old part	16009SC-4113	
New part	AS -000000-00	Set parts (Set 구성품)
	GP -000000-00	Instrumental parts (기구적 파트)
	EP -000000-00	Electrical parts (전기적 파트)

⑤ Parts Name : 파트들의 고유 품명을 표기 : Refers to unique names of parts

⑥ Applied Period

Ex1) 2007년2월10일 적용, 2008년7월10일 폐기
-> Feb.10.07 ~ Jul.10.08

Ex1) Applied from Feb. 10, 2007, To on July 10, 2008
-> Feb.10.07 ~ Jul.10.08

Ex2) 2007년 2월 10일 부터 파트북 발행일 까지 적용
-> Feb.10.07 ~

Ex2) Applied from Feb. 10, 2007
-> Feb.10.07 ~

Information

A. Structure of Part Book

⑦ Interchangeability

O : 구 부품을 신 부품으로 교환 가능

신 부품을 구 부품으로 교환 가능

: It is interchangeable between old and new part.

X : 구 부품을 신 부품으로 교환 불가능

신 부품을 구 부품으로 교환 불가능

: It is not interchangeable between old and new part.

△ : 구 부품을 신 부품으로 교환 가능

신 부품을 구 부품으로 교환 불가능

: It is interchangeable by new part only.

⑧ Hardware : 시중에서 구매 할 수 있는 부품

: Parts that can be purchased in the market


⑨ Q'ty : 사용 파트의 수량을 표기

: Quantity of part

⑩ Remark

⑪ Index Number

Machine Layout

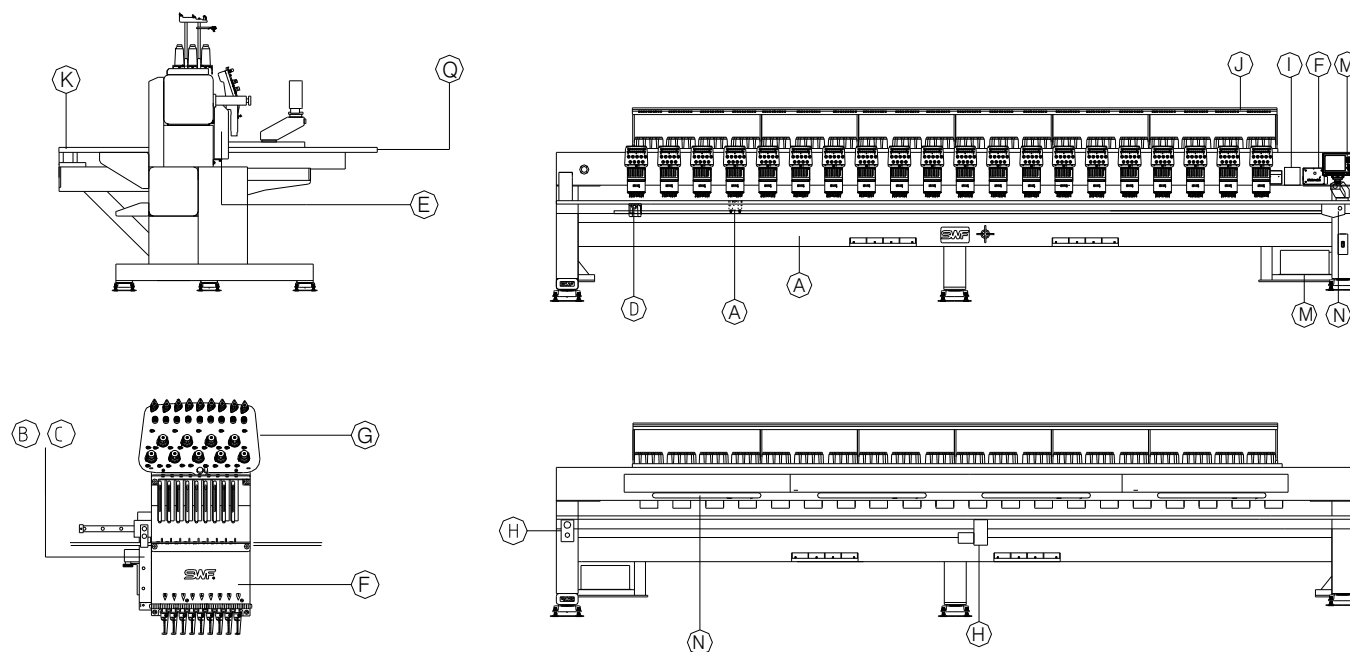

A. Beam Body & Bed

B. Arm 1

C. Arm 2

D. Thread Cutting Drive System

E. Main Drive System

F. Head

G. Thread Tension Unit

H. X-Y Axis Drive System

I. Setting

J. Thread Stand

K. Work Table

L. Cable

M. Con box & OP box

N. Lamp & Switch

O. Bobin Winder

P. Cover

Q. Embroidery Frame

© 2000 SWF ELECTRONIC CO., ALL RIGHTS RESERVED




CONTENT

A1	Beam Body & Bed (Y-Stroke 1000 Below)	10
A2	Beam Body & Bed (Y-Stroke 1200 Above)	13
B	Arm 1	15
C	Arm 2	22
D	Thread Cutting Set	29
E	Main Drive System	35
F	Head & Color Change	40
G	Thread Tension Unit	47
H1	X-Y Drive (Y-Stroke 1000 Below)	51
H2	X-Y Drive (Y-Stroke 1200 Above)	62
I	Setting	73

J	Spool	79
K1	Table (Y-Stroke 1000 Below)	82
K2	Table (Y-Stroke 1200 Above)	85
L	Cable	89
M	Con Box & O/P Box	93
N	Lamp & Switch	101
O	Bobbin Winder	105
P	Cover	108
Q1	Frame (Y-Stroke 1000 Below)	111
Q2	Frame (Y-Stroke 1200 Above)	116
R	Index	121

Beam Body & Bed (Y-Stroke 1000 Below)

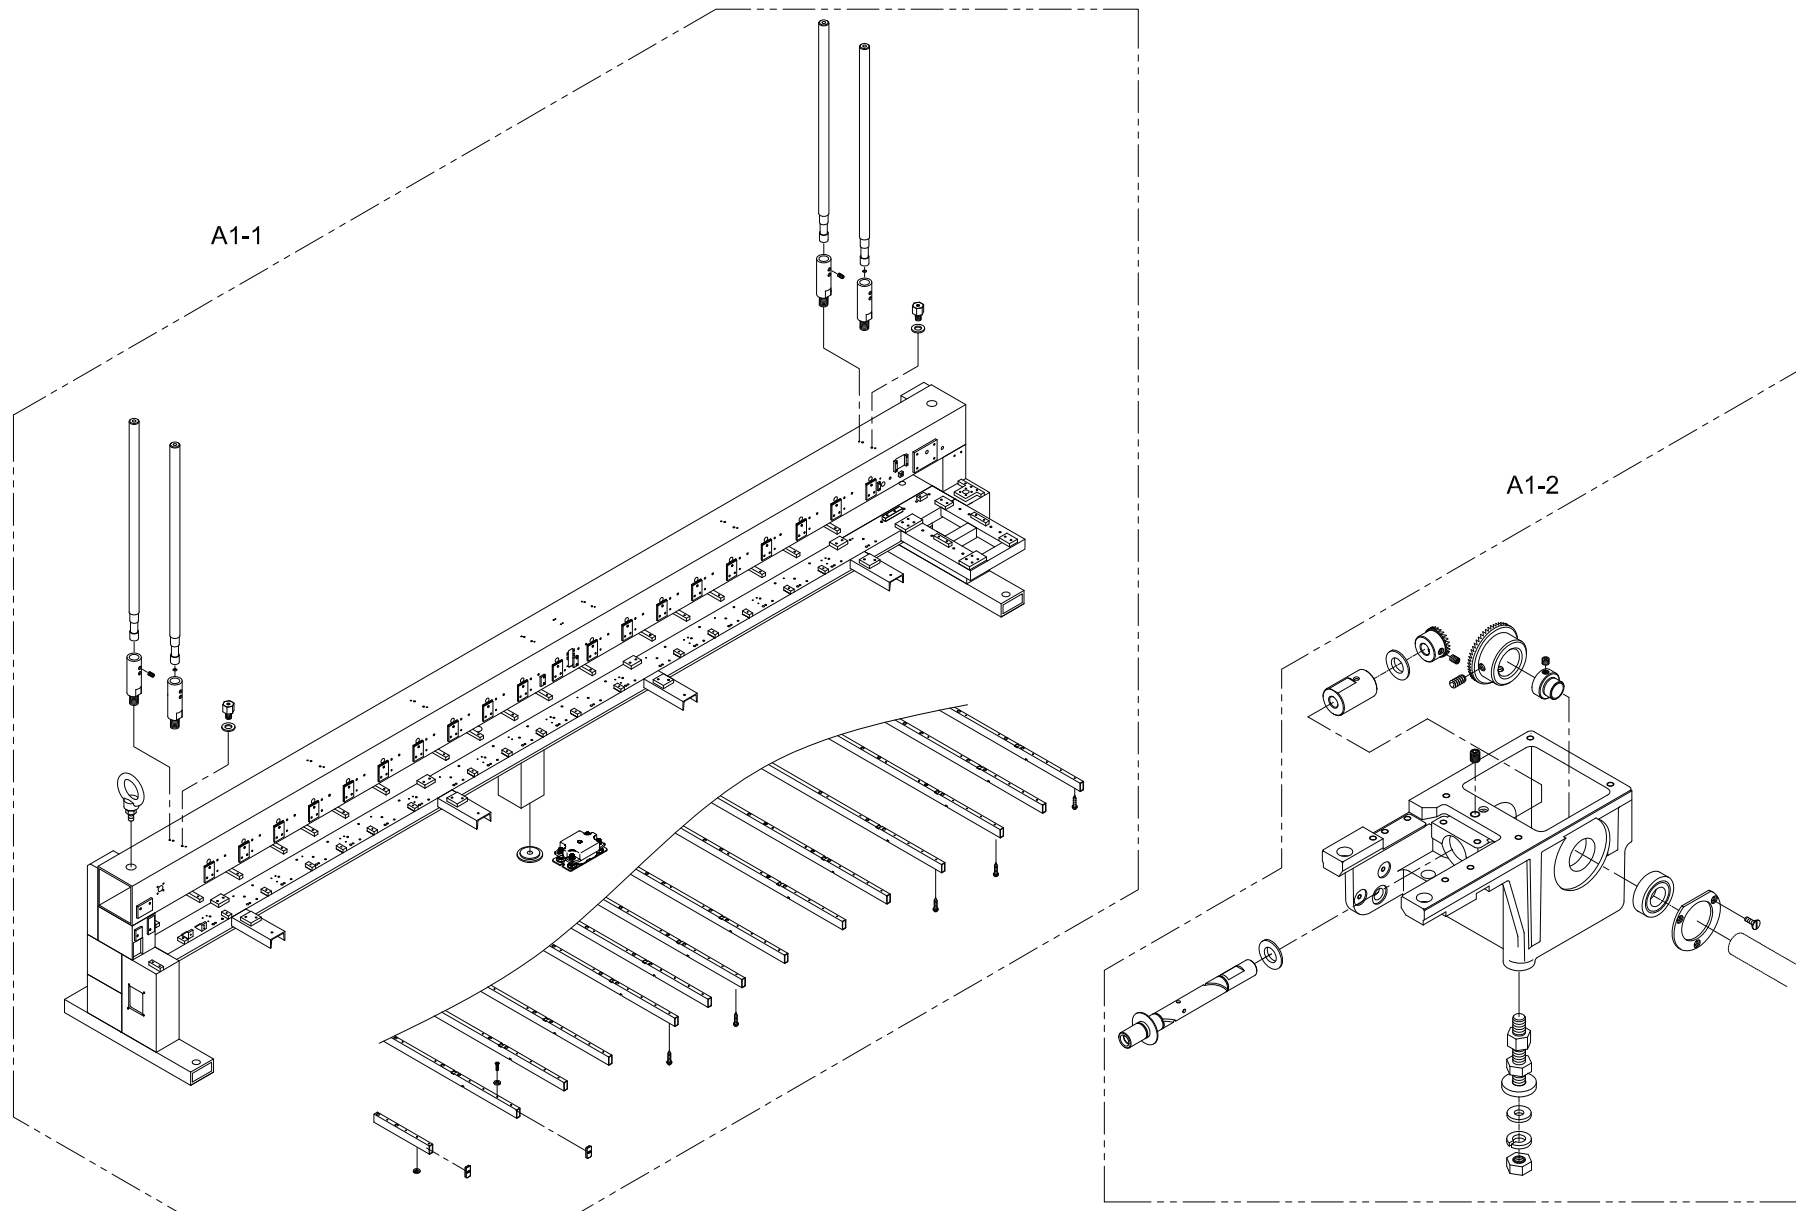

A1-1

This diagram illustrates the exploded view of the A1-1 assembly. The main component is a long, narrow rectangular frame (A1-1) with a series of small, rectangular components (A1-1-1 through A1-1-17) mounted along its length. The frame is shown in a perspective view, with its front and side profiles visible. The components are arranged in a row, with some components (A1-1-1 through A1-1-10) being mounted on the front face and others (A1-1-11 through A1-1-17) being mounted on the side face. The diagram also shows the assembly of the frame with various fasteners and components. A1-1-1 and A1-1-2 are shown as separate components. A1-1-3 is a circular component. A1-1-4 and A1-1-5 are small rectangular components. A1-1-6 and A1-1-7 are long, thin components. A1-1-8 is a small rectangular component. A1-1-9 is a long, thin component. A1-1-10 is a small rectangular component. A1-1-11 and A1-1-12 are small rectangular components. A1-1-13 is a long, thin component. A1-1-14 and A1-1-16 are small rectangular components. A1-1-15 is a long, thin component. A1-1-17 is a small rectangular component.

Note


[illegible]

11

A1

[illegible]

Beam Body & Bed (Y-Stroke 1200 Above)

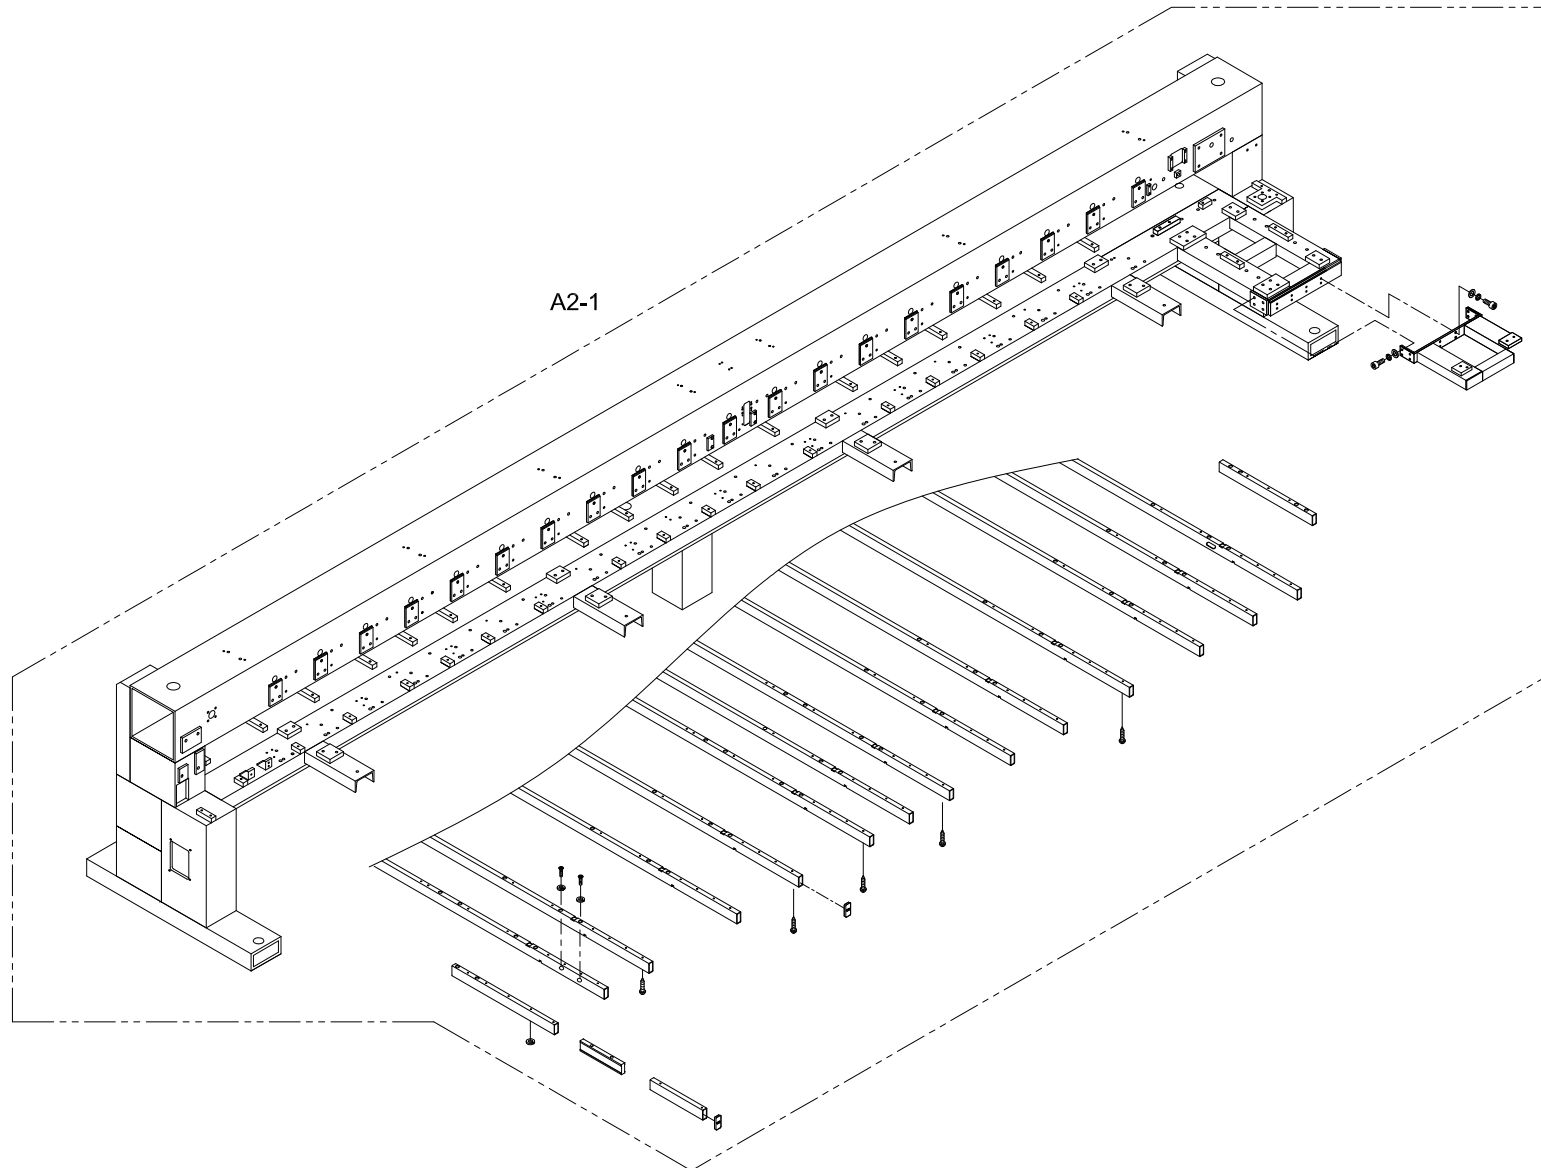

A2-1

A2-1-1

19

A2-1-4
A2-1-3
A2-1-5
A2-1-2

A1-1-8

A1-1-9

A1-1-12
A1-1-13

A1-1-6

A1-1-16

A1-1-14


A1-1-7
A1-1-15
A1-1-11

A1-1-10 A1-1-17

Note

A2

Arm 1

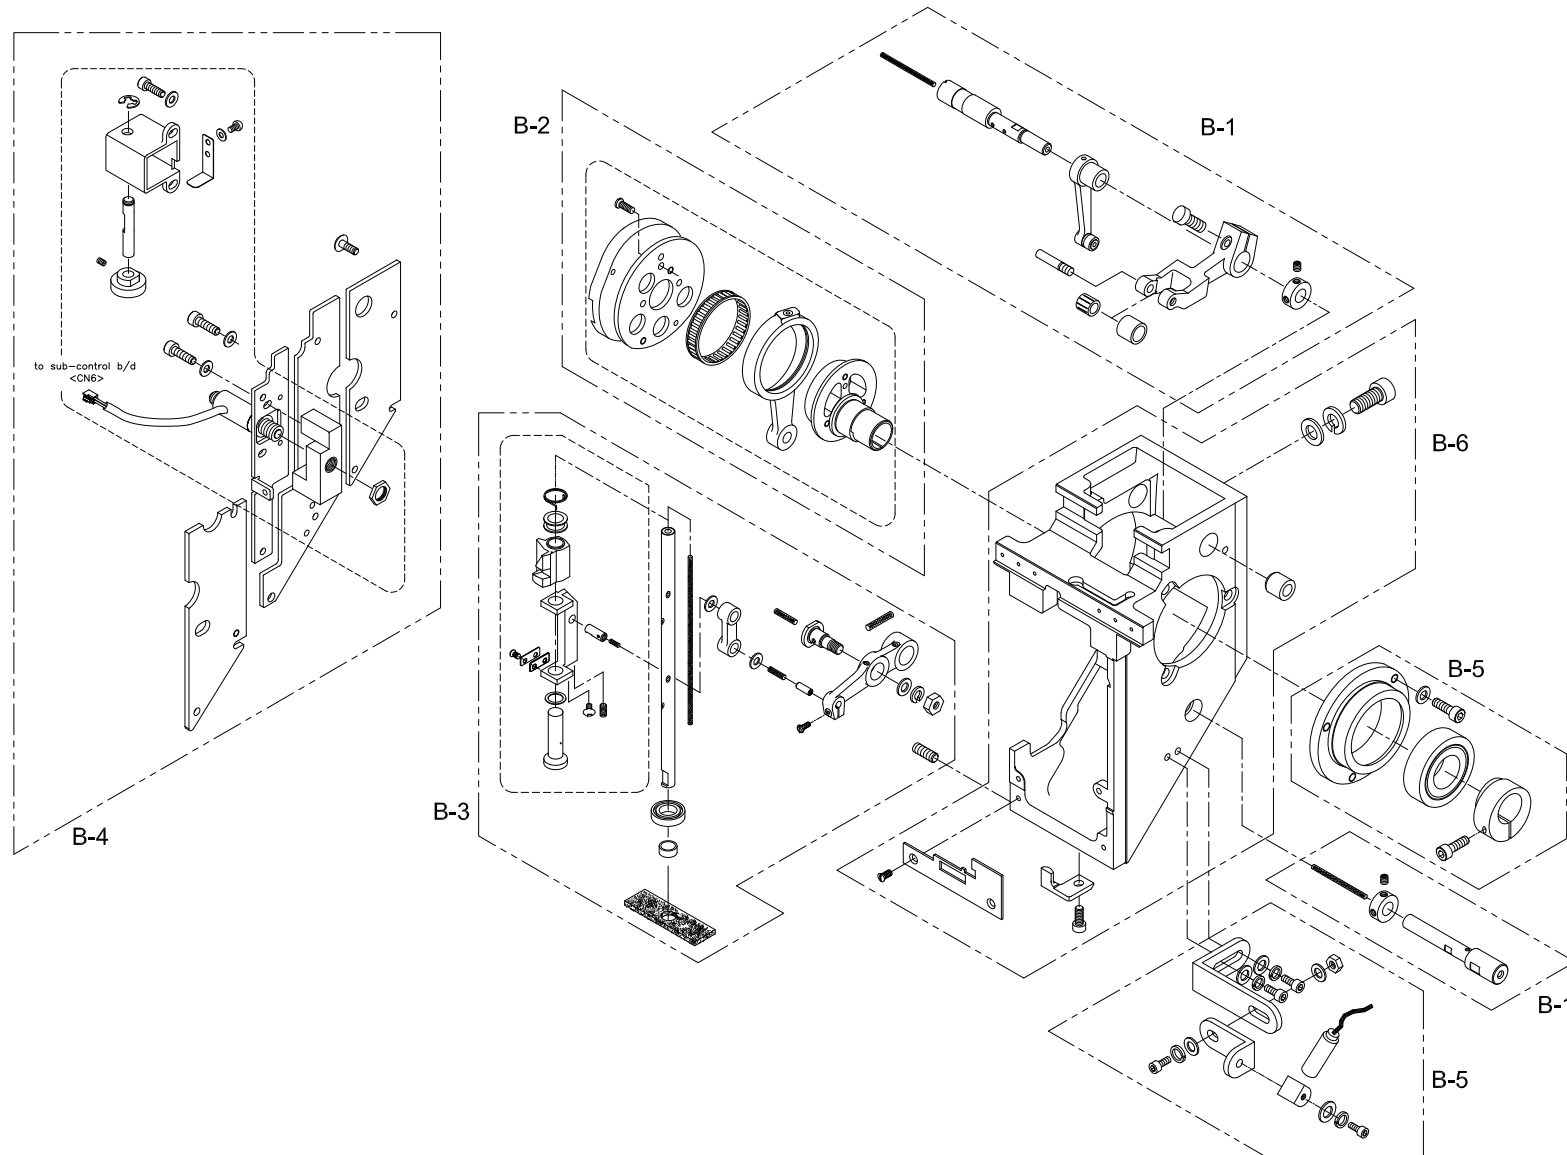

B-1

Exploded view diagram of a mechanical assembly, likely a door lock or latch mechanism. The diagram shows various components labeled B-1-1 through B-1-18. A dashed box highlights a sub-assembly of parts B-1-6 through B-1-13. The main assembly is shown in a perspective view, with dashed lines indicating the placement of the sub-assembly and other components like B-1-1, B-1-2, B-1-4, B-1-5, B-1-7, B-1-8, B-1-9, B-1-10, B-1-11, B-1-12, B-1-13, B-1-14, B-1-15, B-1-16, B-1-17, and B-1-18.

Note

B

B-2

This diagram illustrates the exploded view of the B-2 assembly. The components are labeled as follows:


- B-2-1**: The main rectangular housing or base.
- B-2-2**: A cylindrical component with a flange, positioned to be inserted into the housing.
- B-2-3**: A ring or gasket component that fits around the cylindrical part.
- B-2-4**: A circular flange or cover plate.
- B-2-5**: A circular component with multiple small holes, likely a filter or a manifold.
- B-2-6**: A small screw or fastener used to secure the circular components.
- B-2-7**: A small pin or clip used to hold the assembly together.

The diagram shows the relative positions and alignment of these parts for assembly.

Note

B

B-3

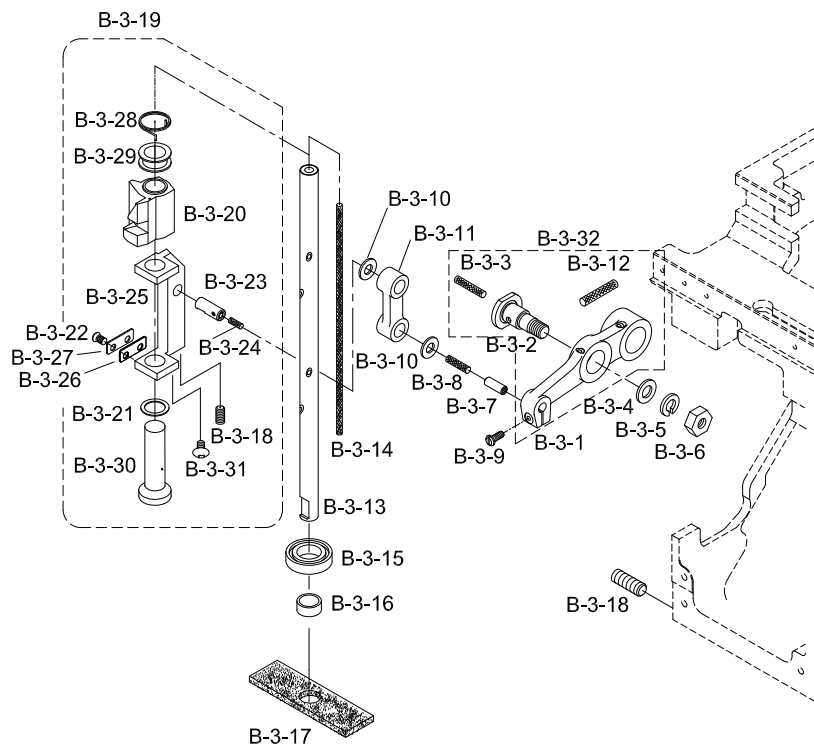

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
B-3-1	GP-020913-00	Needle Bar Drive Lever	Aug,26,06 ~ Nov,14,06	X		20	
	GP-020913-01		Nov,14,06 ~	△			
B-3-2	03023SC-A001	Connecting Rod Stud				20	
B-3-3	-	Wick				20	
B-3-4	03025SW-1211	Washer (@6)			O	20	
B-3-5	03026SW-9115	Spring Washer (@6)			O	20	
B-3-6	03027SN-A001	Stud Nut				20	
B-3-7	03303300H000	Lever Pin				20	
B-3-8	-	Wick				20	
B-3-9	02015SC-7113	Driving Lever Pin Screw				20	
B-3-10	03034SW-A001	Reciprocator Washer				40	
B-3-11	GP-044784-00	Needle Bar Drive Rink	Jan,13,09 ~	X		20	
B-3-12	-	Wick				20	
B-3-13	GP-013117-00	NEEDLE BAR DRIVING SHAFT	Nov,07,05 ~	X		20	
B-3-14	-	Wick				20	
B-3-15	03008000H000	Ball Bearing 689 (Ntn)			O	20	
B-3-16	03008100K000	Needle Bar Drive Bearing Bush				20	
B-3-17	03053SF-A001	Felt "B"				20	
B-3-18	03020SC-A001	Drive Pin Screw 11/64,N40,L8			O	80	
B-3-19	AS-004809-00	Needle Bar Reeciprocator Set	Jun,08,06	X		20	
	AS-004809-01		Nov,14,06	△			
	AS-004809-02		Aug,22,08	△			
B-3-20	GP-013756-00	Needle Bar Reeciprocator	Dec,14,05 ~	X		20	
B-3-21	03048SW-A001	Reciprocator Washer				20	
B-3-22	03040SC-A001	Stopper Bracket Screw				40	
B-3-23	03033CW-A001	Driver Pin				20	
B-3-24	-	Wick				20	
B-3-25	GP-013762-00	Needle Driving Shaft Driver	Nov,14,05 ~ Jul,25,08	X		20	
	GP-013762-01		Jul,25,08 ~ Dec,03,08	△			
	GP-013762-02		Dec,03,08 ~ Feb,20,09	△			
	GP-013762-03		Feb,20,09 ~	△			
B-3-26	03041PR-B001	Reciprocator Stopper				20	
B-3-27	03039PR-B001	Stopper Bracket				20	
B-3-28	03045SP-B001	Jump Spring				20	
B-3-29	03046CW-B001	Jump Spring Guide				20	
B-3-30	GP-013587-00	Needle Bar Driving Shaft Bush	Dec,05,05 ~ Feb,20,09	X		20	
	GP-013587-01		Feb,20,09 ~	△			
B-3-31	03006MC-3123	Truss Screw (M3*L6)			O	20	
B-3-32	AS-005257-00	Needle Bar Drive Lever Assy	Aug,28,06	X		20	
	AS-005257-01		Oct,23,07	△		20	

B-4-6

B-4-7

B-4-11

B-4-15

B-4-16

B-4-14

B-4-10

B-4-13

B-4-12

B-4-17

B-4-18

B-4-19

B-4-9

to sub-control b/d
<CN6>

B-4-20

B-4-2

B-4-3

B-4-4

B-4-5

B-4-21

B-4-22

B-4-1

Note

B

B-5

This exploded view diagram illustrates the assembly of the B-5 component. The main housing is shown on the left. To its right, a circular flange assembly is detailed, consisting of flange B-2-1, gasket B-5-1, and another flange B-5-2. Bolts B-5-3 and B-5-4 are used to secure the flange assembly. A separate circular component B-5-5 is shown with bolt B-5-6. Below the main housing, a bracket assembly B-5-7 is shown, which includes a bracket B-5-7, a pin B-5-8, a nut B-5-9, a washer B-5-10, a bolt B-5-11, a pin B-5-12, a washer B-5-13, a bolt B-5-14, a nut B-5-15, a washer B-5-16, and a pin B-5-17. A cable B-5-18 is shown connected to the bracket assembly.

Note

B


B-6

This diagram illustrates the assembly of the B-6 component. The main unit, labeled B-6-1, is a rectangular metal housing with a circular access panel on the right side. Several mounting points are indicated by dashed lines. B-6-2 is a long screw, B-6-3 is a washer, and B-6-4 is a nut, which are shown being assembled into the top of the unit. B-6-5 is a small U-shaped bracket, and B-6-6 is a screw, shown being attached to the bottom of the unit. B-6-7 is a larger bracket, and B-6-8 is a screw, shown being attached to the left side of the unit.

Note	
-------------	--

B

Arm 2

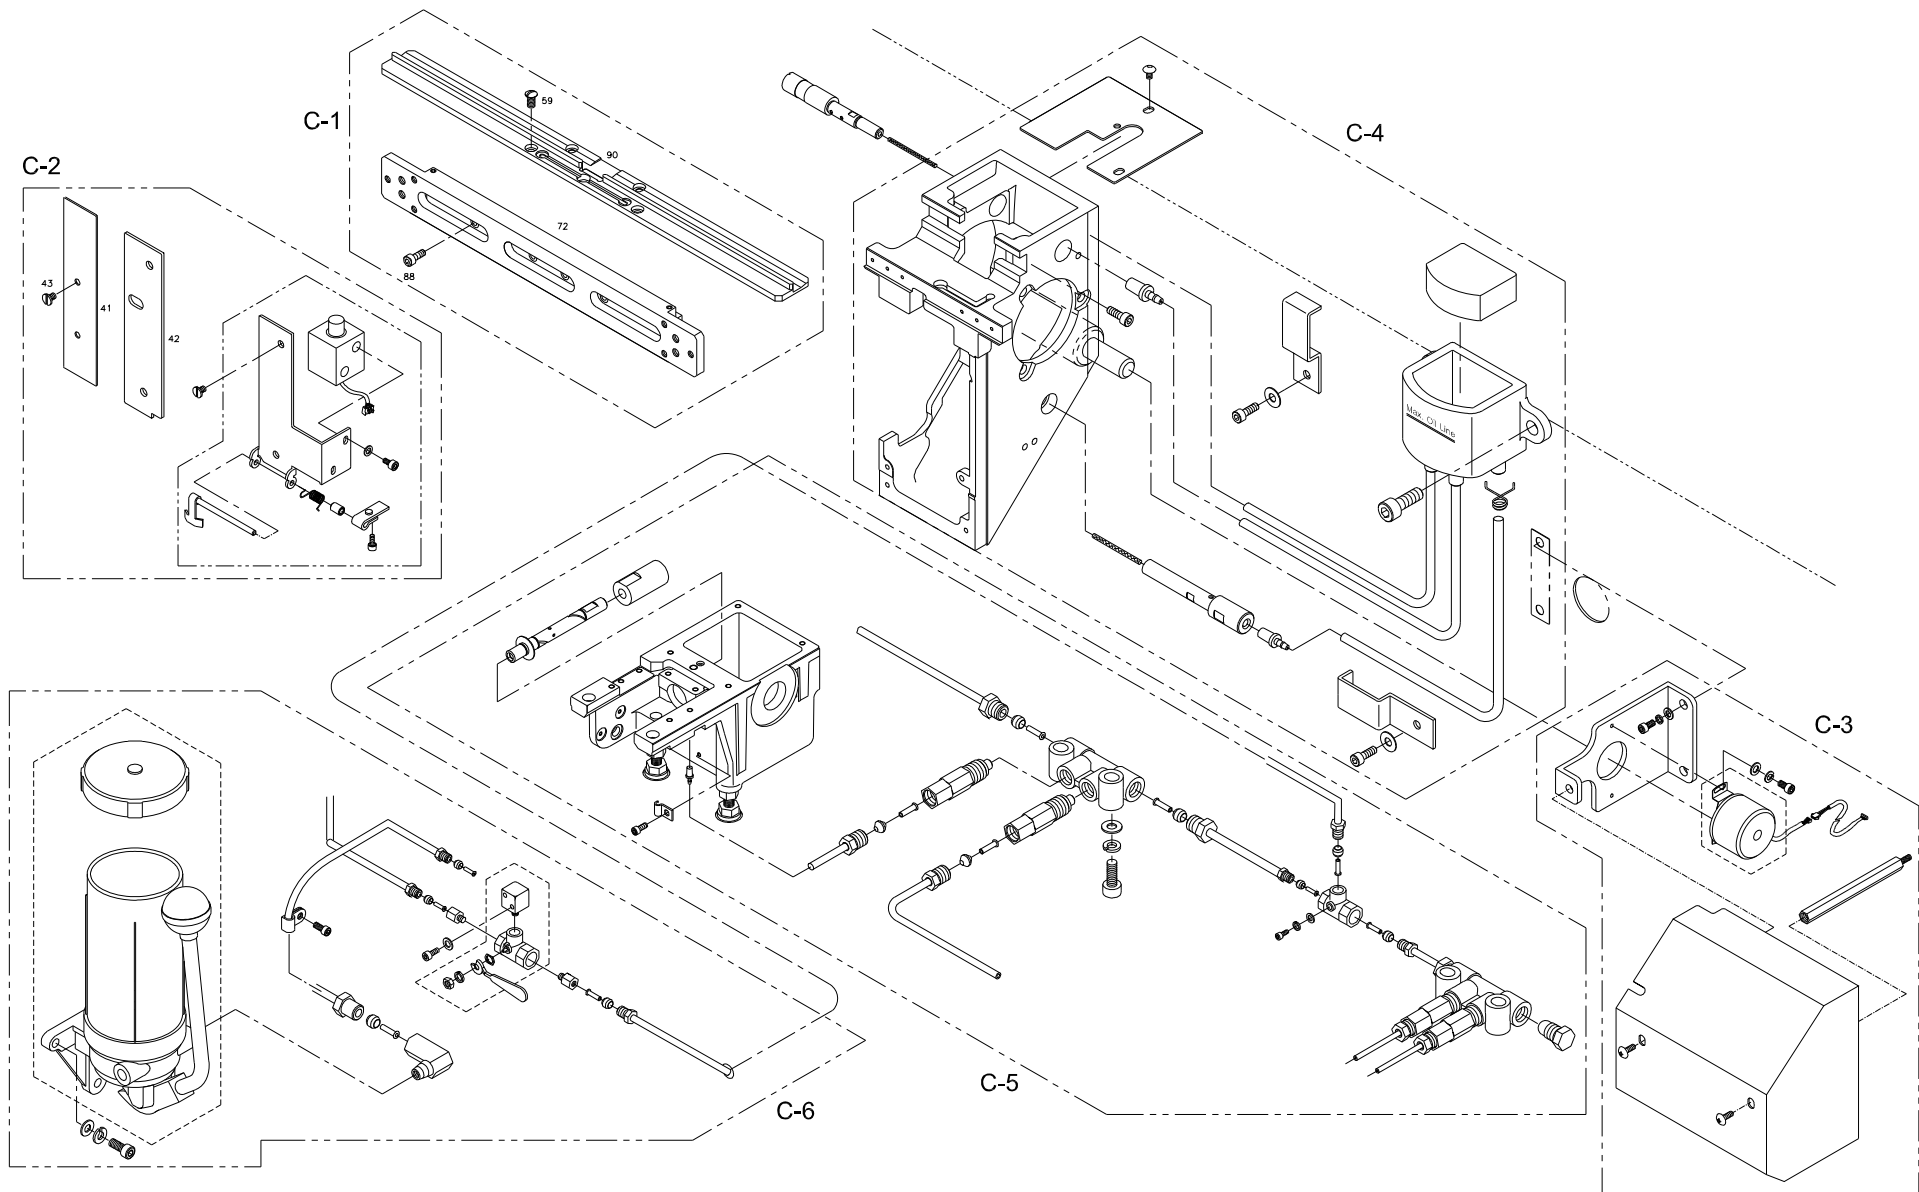

C-1

This exploded view diagram illustrates the assembly of the C-1 component. The main body is shown in dashed lines. The following parts are shown in their relative positions for assembly:

- C-1-1**: A long, narrow metal plate with multiple mounting holes and a central slot.
- C-1-2**: A small screw or bolt used to secure the plate.
- C-1-3**: A long, narrow metal plate with multiple mounting holes and a central slot, positioned below C-1-1.
- C-1-4**: A small screw or bolt used to secure the plate.
- C-1-6**: A metal plate with a U-shaped cutout and two mounting holes.
- C-1-7**: A small screw or bolt used to secure the plate.

Note

C

This exploded view diagram illustrates the assembly of the C-2 unit. The components are labeled as follows:

- C-2-1**: A vertical rectangular plate with two circular holes.
- C-2-2**: A vertical rectangular plate with two circular holes and a central slot.
- C-2-3**: A screw used to secure the plate.
- C-2-4**: A dashed line indicating the assembly path for the main structure.
- C-2-5**: A vertical rectangular plate with two circular holes.
- C-2-6**: A screw used to secure the plate.
- C-2-7**: A horizontal rectangular plate with a central slot.
- C-2-8**: A small rectangular component, likely a switch or sensor.
- C-2-9**: A small rectangular component, likely a switch or sensor.
- C-2-10**: A small rectangular component, likely a switch or sensor.
- C-2-11**: A screw used to secure the component.
- C-2-12**: A small rectangular component, likely a switch or sensor.
- C-2-13**: A screw used to secure the component.
- C-2-14**: A screw used to secure the component.

[illegible]

C

C-3

This exploded view diagram illustrates the assembly of the C-3 unit. The components are labeled as follows:

- C-3-1**: A cylindrical component, likely a motor or actuator, shown with its mounting bracket.
- C-3-2**: A small screw or fastener used to secure the mounting bracket.
- C-3-3**: A small screw or fastener used to secure the mounting bracket.
- C-3-4**: A small screw or fastener used to secure the mounting bracket.
- C-3-5**: A mounting bracket or plate that houses the cylindrical component.
- C-3-6**: A small screw or fastener used to secure the mounting bracket.
- C-3-7**: A small screw or fastener used to secure the mounting bracket.
- C-3-8**: A small screw or fastener used to secure the mounting bracket.
- C-3-9**: A cable or wire with a connector, shown attached to the cylindrical component.
- C-3-10**: A large, rectangular component, likely a base or housing, shown with its mounting bracket.
- C-3-11**: A long, thin component, likely a sensor or probe, shown with its mounting bracket.
- C-3-12**: A small screw or fastener used to secure the mounting bracket.

The diagram shows the assembly order and the relative positions of the components. Dashed lines indicate the assembly path and the final assembled state.

Note



C-4

This diagram illustrates the assembly of the C-4 control system. The main components and their connections are as follows:

- C-4-1**: The main control unit, featuring a "Max. Cut Line" label.
- C-4-2**: A protective cap for the top of the control unit.
- C-4-3**: A screw used to secure the mounting plate (C-4-7) to the control unit (C-4-1).
- C-4-4**: A cable that runs from the control unit to the solenoid valve.
- C-4-5**: A solenoid valve that is connected to the main gas line.
- C-4-6**: A screw used to secure the mounting plate (C-4-7) to the gas line.
- C-4-7**: A mounting plate that holds the solenoid valve (C-4-5) and the gas line connection (C-4-6).
- C-4-8**: A screw used to secure the control unit (C-4-1) to the mounting plate (C-4-7).

The diagram shows the control unit (C-4-1) with its cap (C-4-2) being mounted to a wall using the mounting plate (C-4-7) and screws (C-4-3, C-4-6, C-4-8). The solenoid valve (C-4-5) is connected to the main gas line and the control unit via the cable (C-4-4).

Note



C

C-6


This exploded view diagram illustrates the assembly of the C-6 water pump. The main components are shown in their relative positions, with dashed lines indicating the assembly path. The callout numbers are as follows:

- C-6-1**: Upper pump housing cover.
- C-6-2**: Lower pump housing cover.
- C-6-3**: Bolt for the lower housing cover.
- C-6-4**: Bolt for the lower housing cover.
- C-6-5**: Motor assembly.
- C-6-6**: Bolt for the motor assembly.
- C-6-7**: Bolt for the motor assembly.
- C-6-8**: Bolt for the motor assembly.
- C-6-9**: Bolt for the motor assembly.
- C-6-10**: Bolt for the motor assembly.
- C-6-11**: Bolt for the motor assembly.
- C-6-12**: Bolt for the motor assembly.
- C-6-13**: Bolt for the motor assembly.
- C-6-14**: Bolt for the motor assembly.
- C-6-15**: Bolt for the motor assembly.
- C-6-16**: Bolt for the motor assembly.
- C-6-17**: Bolt for the motor assembly.
- C-6-18**: Bolt for the motor assembly.
- C-6-19**: Bolt for the motor assembly.
- C-6-20**: Bolt for the motor assembly.


Note

C

Thread Cutting Set

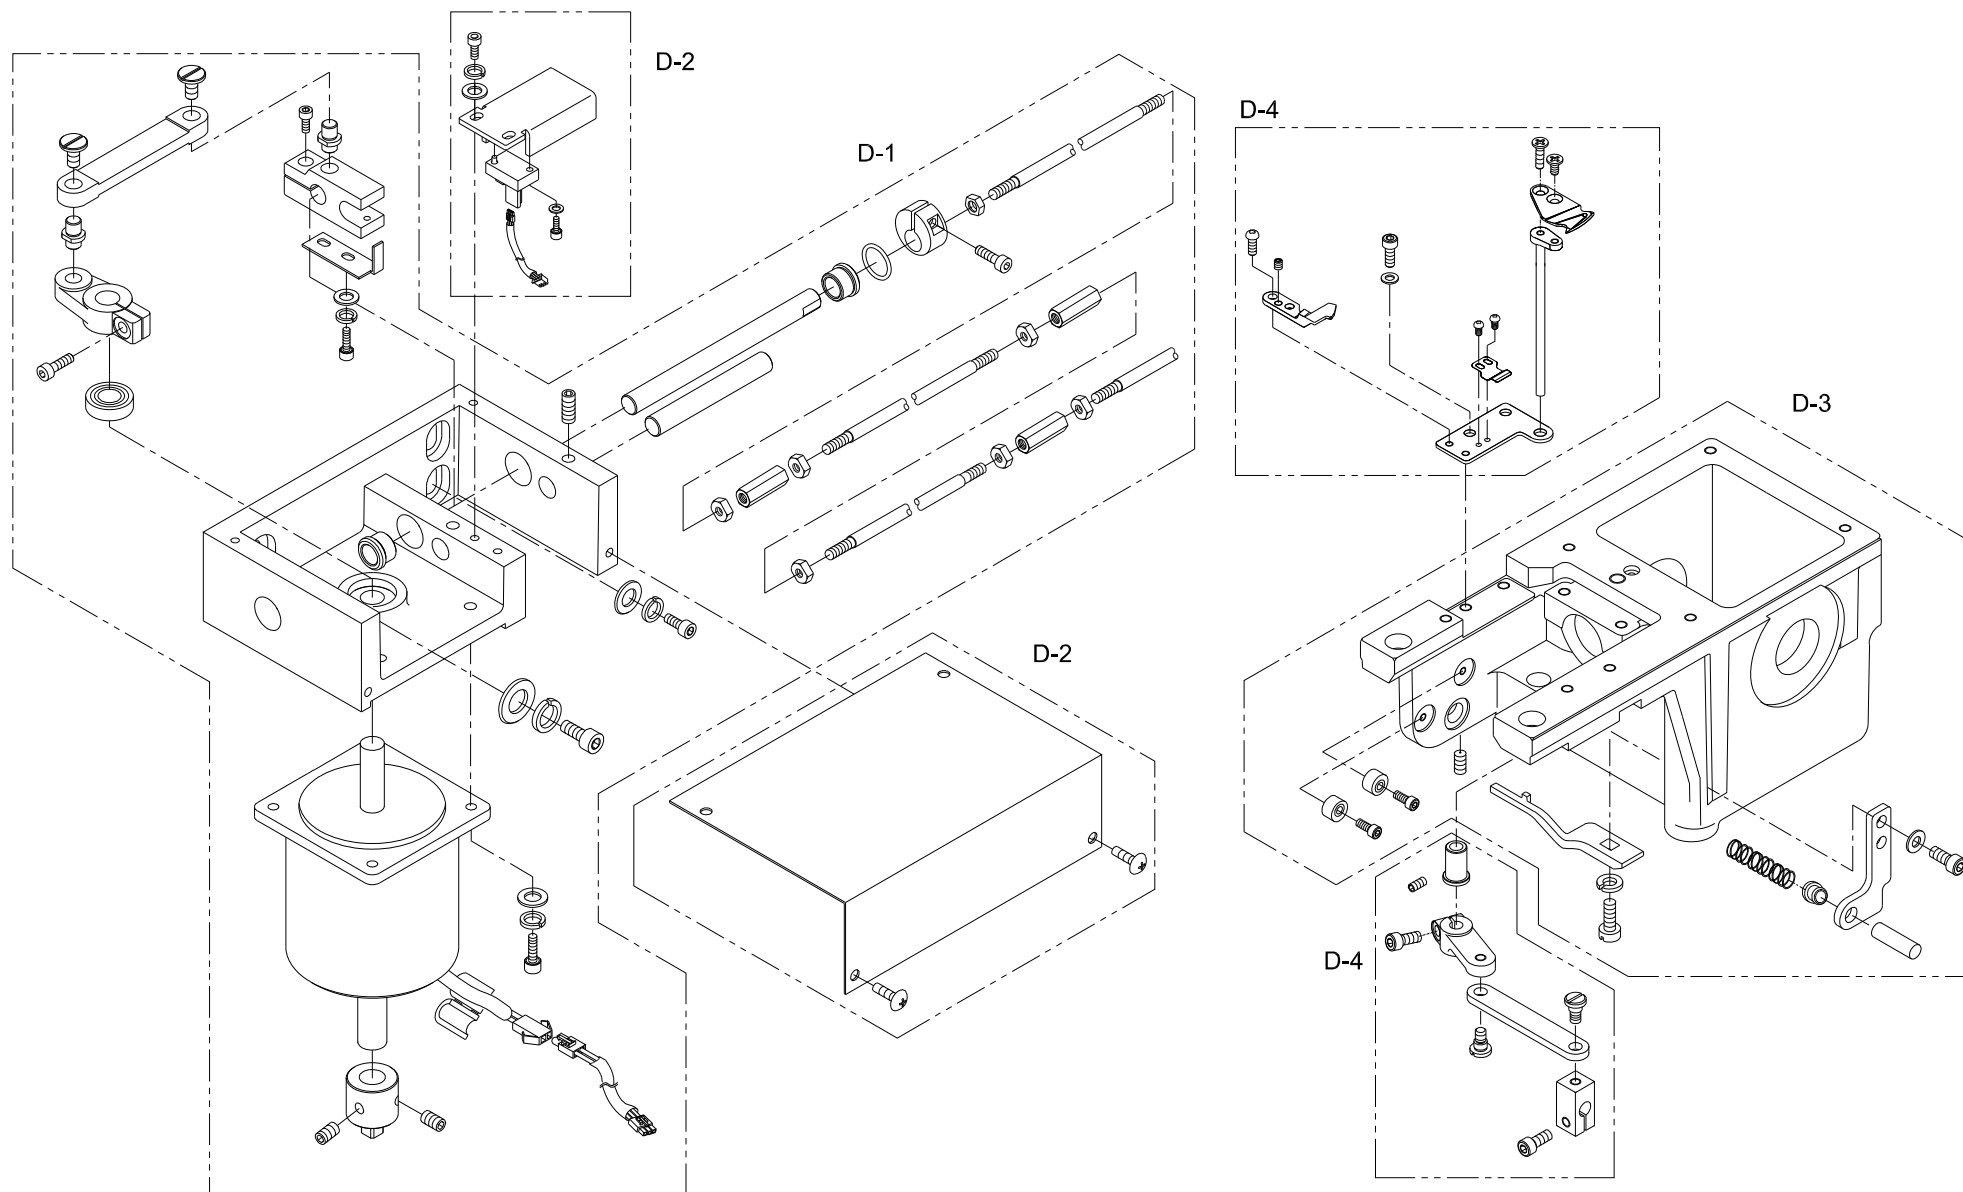

D-1

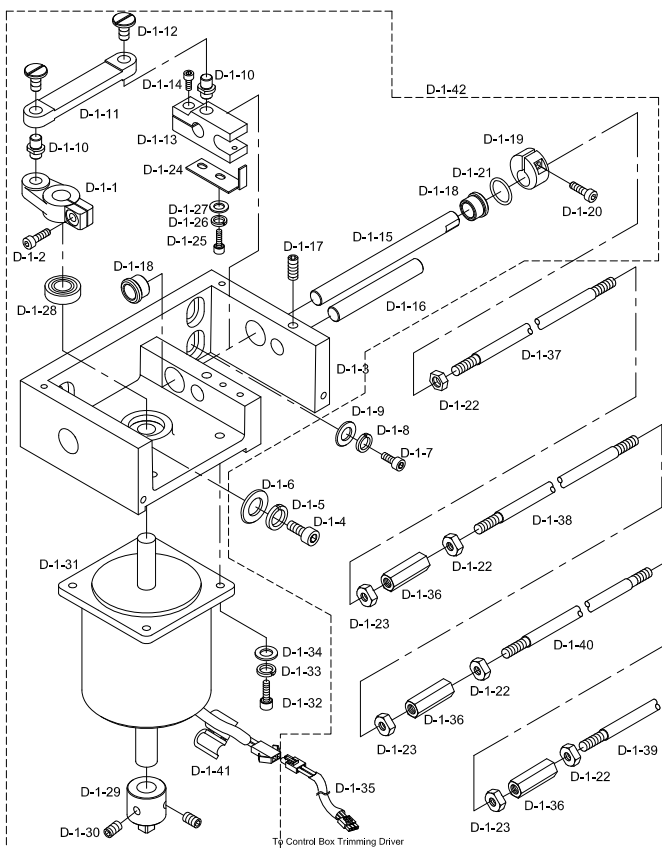

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
D-1-1	04001100BT00	MES DRIVING CRANK				1	
D-1-2	14002SC-7113	Hex.Socket Bolt (M6*L15)			O	1	
D-1-3	GP-015257-00	MES CAM DRIVING BOX	Feb,15,06 ~	X		1	
D-1-4	14003SC-4113	Hex. Socket Bolt (M8*L25)			O	1	
D-1-5	15095SW-3115	Spring Washer (@8)			O	1	
D-1-6	04029SW-A001	Stud Bolt Washer (@8)			O	1	
D-1-7	06025MC-7113	Hex. Socket Bolt (M6*L25)			O	2	
D-1-8	03026SW-9115	Spring Washer (@6)			O	2	
D-1-9	03025SW-1211	Washer (@6)			O	2	
D-1-10	PN-000726-00	Mes Link Pin	Jan,13,09 ~	X		2	
D-1-11	03700400H000	Mes Driving Link				1	
D-1-12	03700500H000	Mes Driving Link Screw				2	
D-1-13	03700600H000	Mes Shaft Driving Clamp				1	
D-1-14	08062SC-7113	Hex. Socket Bolt (M5*L20)			O	1	
D-1-15	03700700H000	Mes Driving Shaft (@10*L121)			O	1	
D-1-16	03700800H000	Mes Driving Shaft Guide				1	
D-1-17	14060AF-4517	Hex.Socket Screw(M6*L6)			O	1	
D-1-18	03701100H000	Mes Driving Shaft Bush				2	
D-1-19	08065CW-A001	Stopper Collar				1	
D-1-20	18047SC-7113	Hex. Socket Bolt (M5*L15)			O	1	
D-1-21	08067RB-A001	O-Ring (@10)			O	1	
D-1-22	13042SN-1111	Hex. Nut (M6*T5-R)			O	4	
D-1-23	17053SN-1111	Hex. Nut (M6*T5-L)			O	3	
D-1-24	GP-015265-00	Limit Sensor Plate	Feb,15,06 ~ May,12,06	X		1	
	GP-015265-01		May,12,06 ~	△			
D-1-25	07035SC-7113	BRACKET SCREW (M3*L6)			O	2	
D-1-26	11019SW-9115	Spring Washer (@3)			O	2	
D-1-27	06011SW-2111	Washer (@3)			O	2	
D-1-28	03701000H000	Ball Bearing (6001Z)			O	1	
D-1-29	03701200BT00	MOTOR DRIVING NOB				1	
D-1-30	14060AF-4517	Hex.Socket Screw(M6*L6)			O	2	
D-1-31	16055MT-UK06	PULSE MOTOR (103H8223-5114)	(100 under)			1	
	16059MT-E131	Y MOTOR (103H8222-5212)	(120 over)				
D-1-32	18047SC-7113	Hex. Socket Bolt (M5*L15)			O	4	
D-1-33	18048SW-3115	SPRING WASHER (5@)			O	4	
D-1-34	18049SW-3111	WASHER (@5)			O	4	

This exploded view diagram illustrates the assembly of the T3 Control Box Trimming Driver. The components are organized into several sub-assemblies, each enclosed in a dashed-line box:

- Top Mounting Assembly:** Includes parts D-1-1, D-1-2, D-1-10, D-1-11, D-1-12, D-1-13, D-1-14, D-1-24, D-1-25, D-1-26, and D-1-27.
- Shaft and Coupling Assembly:** Features the main shaft (D-1-15), a coupling (D-1-19), and various bushings and spacers (D-1-16, D-1-17, D-1-18, D-1-20, D-1-21, D-1-22, D-1-23, D-1-36, D-1-37, D-1-38, D-1-39, D-1-40).
- Motor and Base Assembly:** Shows the motor unit (D-1-31), base plate (D-1-3), and mounting hardware (D-1-4, D-1-5, D-1-6, D-1-7, D-1-8, D-1-9).
- Control and Wiring Assembly:** Includes the control box (D-1-29), wiring harness (D-1-35), and associated connectors and components (D-1-30, D-1-32, D-1-33, D-1-34, D-1-41, D-1-42).

The diagram uses standard mechanical drawing conventions, with dashed lines indicating the assembly sequence and alignment of the parts.

Note

[illegible]

D-2

The diagram illustrates the assembly of the D-2 unit. The components and their assembly sequence are as follows:

- D-2-1**: The main rectangular unit.
- D-2-2**, **D-2-3**, and **D-2-4**: Screws used to secure the top cover of the main unit.
- D-2-5**: A bracket or connector piece attached to the side of the main unit.
- D-2-6** and **D-2-7**: Screws used to secure the bracket.
- D-2-10**: A cable or hose connected to the bracket, labeled **CN7 (To Joint Board)**.
- D-2-8**: The base plate or support structure.
- D-2-9**: Screws used to secure the base plate to the main unit.

Note



This diagram illustrates the assembly of the rear chassis components. The main structure is a rectangular frame with a central cross-member. Various parts are shown being installed into this frame:

- D-3-1**: A metal bracket or plate that fits into the central cross-member.
- D-3-2**: A long threaded bolt that passes through the bracket D-3-1 and the central cross-member.
- D-3-3**: A washer or spacer that sits between the bracket D-3-1 and the cross-member.
- D-3-4**: A coiled spring that is part of the suspension system, located near the rear axle area.
- D-3-5** and **D-3-6**: Small components, possibly bushings or spacers, located near the front of the chassis.
- D-3-7**: A small cylindrical component, possibly a pin or a small bushing, located near the rear axle.
- D-3-8**: A long, thin metal rod or pin that passes through the rear axle assembly.
- D-3-9**: A coiled spring, likely a shock absorber spring, located near the rear axle.
- D-3-10**: A small cylindrical component, possibly a pin or a small bushing, located near the rear axle.
- D-3-11**: A metal bracket or plate that fits into the rear of the chassis frame.


Note




[illegible]

D

Main Drive System

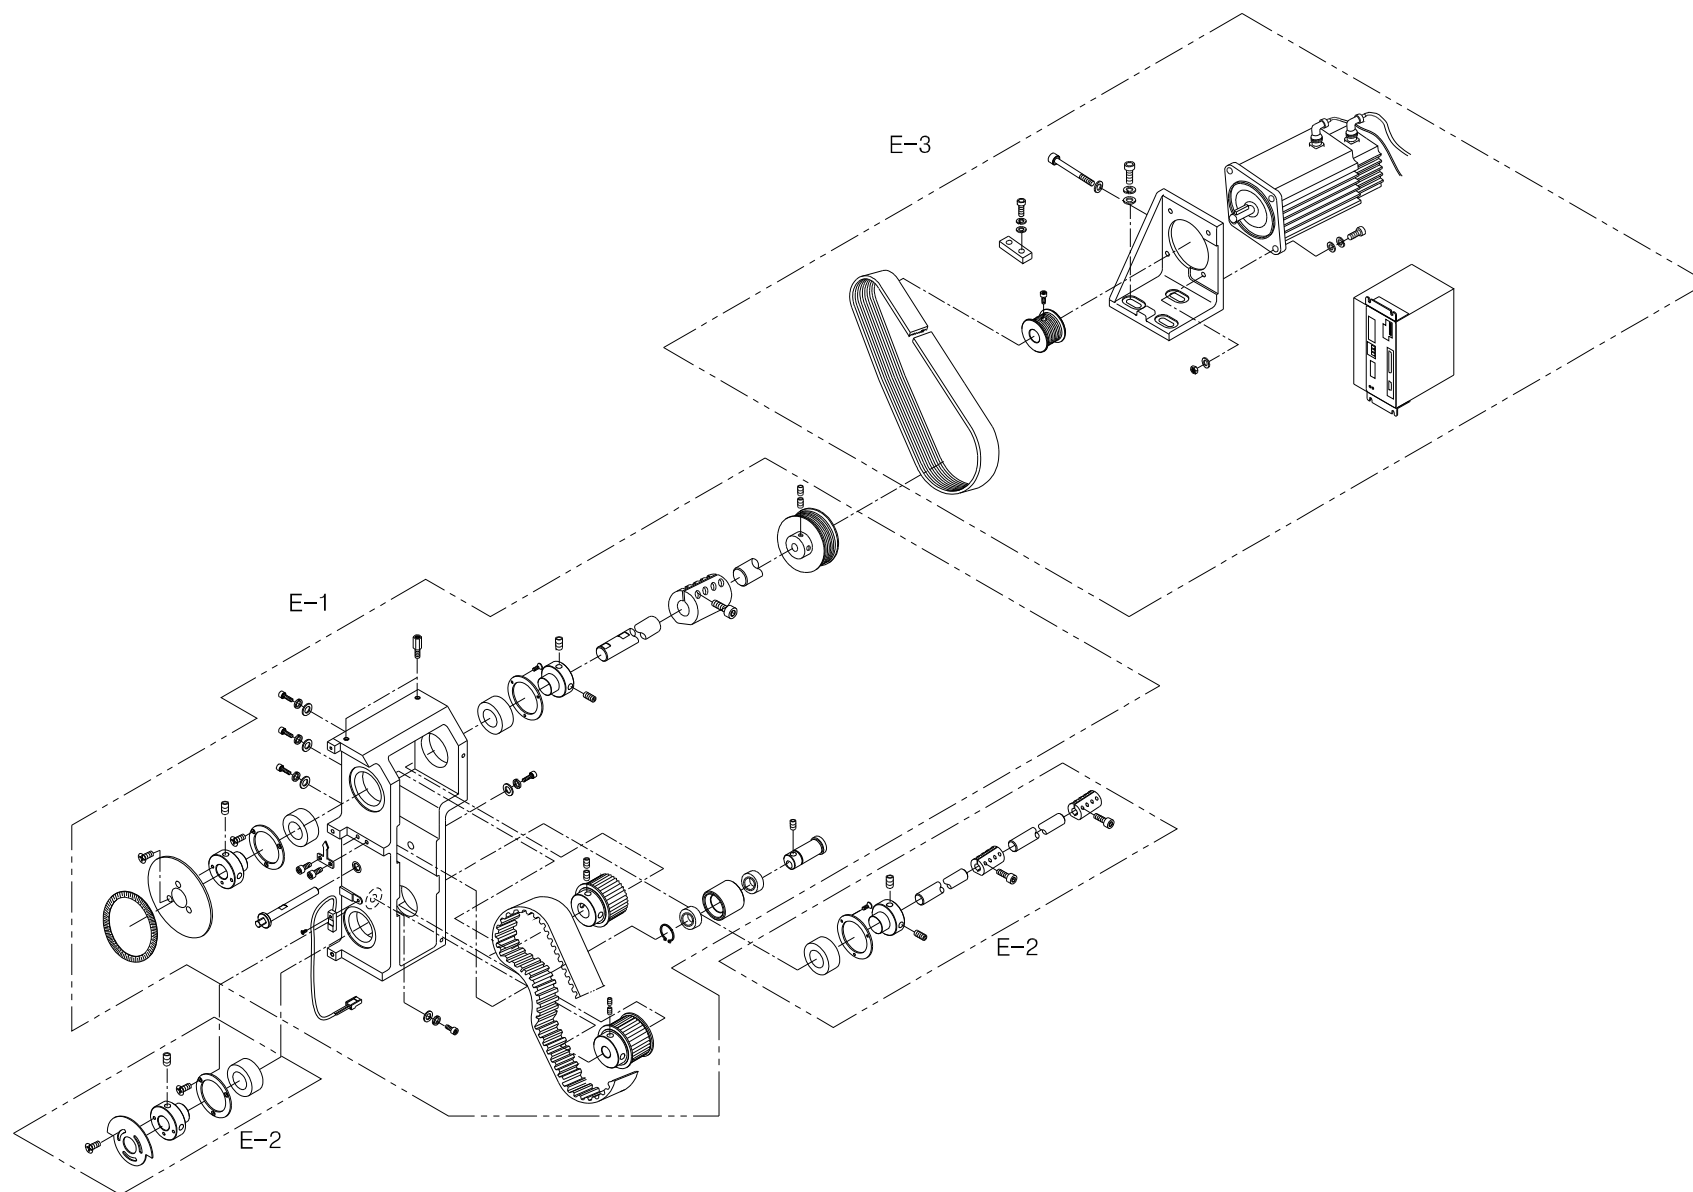

E-1

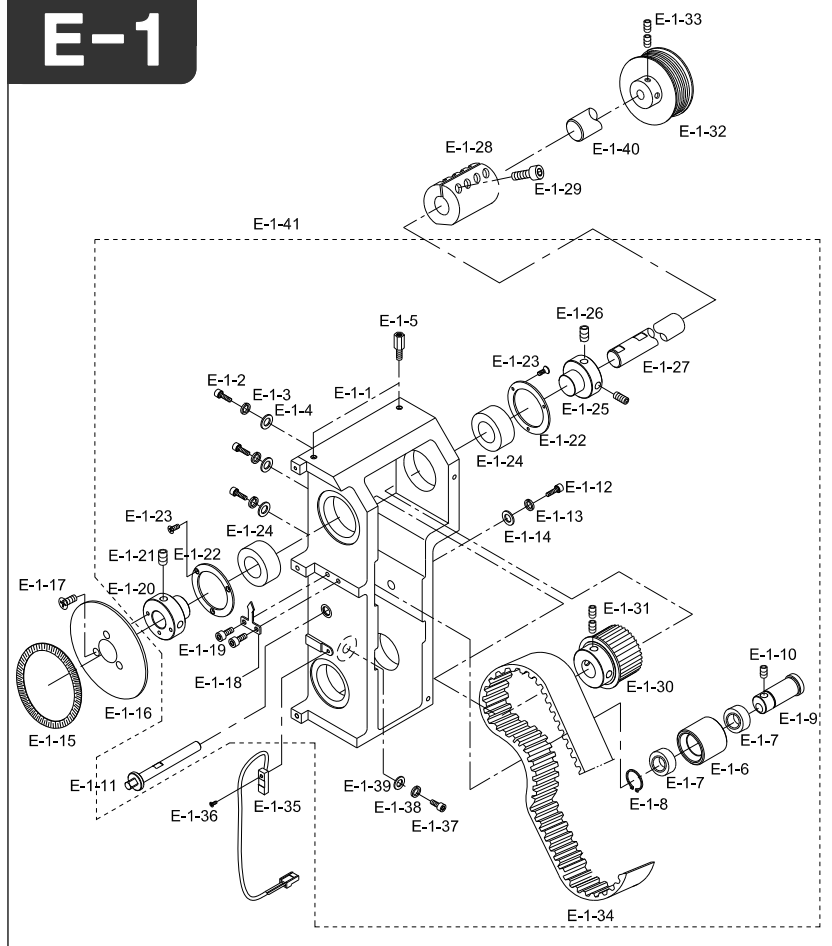

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
E-1-1	GP-020802-00	MAIN DRIVING PULLEY BOX	Aug,23,06 ~ Sep,13,06	X		1	
	GP-020802-01		Sep,13,06 ~ Mar,12,08	△			
	GP-020802-02		Mar,12,08 ~ May,15,08	△			
	GP-020802-03		May,15,08 ~	△			
E-1-2	03003SC-4113	Pulley Box Screw [M8×L35]			O	3	
E-1-3	15095SW-3115	Pulley Box Spring Washer [Ø8]			O	3	
E-1-4	04029SW-A001	Pulley Box Washer [Ø8]			O	3	
E-1-5	GP-010263-00	Pulley Box Cover Stud	Jun,28,05 ~	X		2	
E-1-6	03200300I000	Tension Adjusting Roller				1	
E-1-7	03200400I000	ROLLER BEARING				2	
E-1-8	03200700I000	C-Ring (#20)			O	1	
E-1-9	03200600I000	Idler Bush				1	
E-1-10	04004MC-4517	Hex.Socket Bolt (M4×L4)			O	1	
E-1-11	03200500I000	Idler Shaft				1	
E-1-12	14006SC-7113	Hex.Socket Bolt (M8×L10)			O	1	
E-1-13	04029SW-A001	Washer (Ø8)			O	1	
E-1-14	15095SW-3115	Spring Washer (Ø8)			O	1	
E-1-15	03005600H000	ANGLE DISK				1	
E-1-16	03005710H000	Angle Plate Base @20				1	
E-1-17	21002SC-8119	Plus Screw (M3-L8)			O	3	
E-1-18	03005800H000	Indicator				1	
E-1-19	02023SC-7113	Hex.Socket Bolt (M4×L8)			O	2	
E-1-20	03201100I000	Collar "B" @20				1	
E-1-21	14060AF-4517	Hex.Socket Screw(M6×L6)			O	2	
E-1-22	12101000I000	Bearing Cover (A)				2	
E-1-23	08006SC-8118	Hex.Socket Screw (M3xL5)			O	6	
E-1-24	01001100H000	Ball Bearing (6005Zz)			O	4	
E-1-25	03005210H000	Collar "A"				1	
E-1-26	14060AF-4517	Hex.Socket Screw(M6×L6)			O	4	
E-1-27	GP-006655-00	Top Shaft "A" [190mm]	Dec,29,04 ~	X		1	
E-1-28	03006720HDK0	COUPLING @20				4	
E-1-29	08091SC-7113	Hex.Socket Bolt (M6×L20)			O	16	
E-1-30	03200900I000	Pulley for Upper Shaft Ass'y				1	
E-1-31	14061AF-4517	Hex.Socket Screw(M8×L8)			O	4	
E-1-32	03100410H000	Top Shaft Drive Pulley				1	
E-1-33	03016SC-4113	Hex.Socket Screw(M5×L15)			O	4	
E-1-34	03200800I000	Timing Belt (B300 S5M 625)				1	

This diagram illustrates the exploded view of the E-1 engine assembly. The main engine block (E-1-1) is the central component, with various parts shown in their relative positions. Key components include:

- Top Section:** E-1-2, E-1-3, E-1-4, E-1-5, E-1-1, E-1-23, E-1-24, E-1-25, E-1-26, E-1-27, E-1-28, E-1-29, E-1-30, E-1-31, E-1-32, E-1-33, E-1-34, E-1-35, E-1-36, E-1-37, E-1-38, E-1-39.
- Bottom Section:** E-1-10, E-1-11, E-1-12, E-1-13, E-1-14, E-1-15, E-1-16, E-1-17, E-1-18, E-1-19, E-1-20, E-1-21, E-1-22, E-1-23, E-1-24, E-1-25, E-1-26, E-1-27, E-1-28, E-1-29, E-1-30, E-1-31, E-1-32, E-1-33, E-1-34, E-1-35, E-1-36, E-1-37, E-1-38, E-1-39.

The diagram shows the assembly sequence and the relative positions of the various components, including the main engine block, the fuel system, the cooling system, and the exhaust system.

Note

[illegible]

E-2

This exploded view diagram illustrates the assembly of a mechanical unit. The main components are shown in a perspective view, with various sub-assemblies and individual parts exploded around them. The components are labeled as follows:

- E-2-1**: A small circular component, possibly a cap or a small wheel.
- E-2-2**: A small circular component, possibly a cap or a small wheel.
- E-2-3**: A small circular component, possibly a cap or a small wheel.
- E-2-4**: A small circular component, possibly a cap or a small wheel.
- E-2-5**: A small circular component, possibly a cap or a small wheel.
- E-2-6**: A small circular component, possibly a cap or a small wheel.
- E-2-7**: A small circular component, possibly a cap or a small wheel.
- E-2-8**: A small circular component, possibly a cap or a small wheel.
- E-2-9**: A small circular component, possibly a cap or a small wheel.
- E-2-10**: A small circular component, possibly a cap or a small wheel.
- E-2-11**: A small circular component, possibly a cap or a small wheel.
- E-2-12**: A small circular component, possibly a cap or a small wheel.
- E-2-13**: A small circular component, possibly a cap or a small wheel.
- E-2-14**: A small circular component, possibly a cap or a small wheel.
- E-2-15**: A small circular component, possibly a cap or a small wheel.
- E-2-16**: A small circular component, possibly a cap or a small wheel.
- E-2-17**: A small circular component, possibly a cap or a small wheel.
- E-2-18**: A small circular component, possibly a cap or a small wheel.
- E-2-19**: A small circular component, possibly a cap or a small wheel.

Note



E-3

E-3-20


This diagram illustrates the assembly of the E-3 component. The main assembly area is enclosed in a dashed box. Key components and their assembly points are labeled as follows:

- E-3-1**: A large rectangular component with a circular flange on the left side.
- E-3-2**: A screw used to secure the top of the main component.
- E-3-3**: A small screw used for mounting.
- E-3-4**: Two screws used for mounting the component to a surface.
- E-3-5**: A triangular mounting bracket.
- E-3-6**: A small screw used for mounting.
- E-3-7**: A screw used for mounting.
- E-3-8**: A washer used for mounting.
- E-3-9**: A screw used for mounting.
- E-3-10**: A screw used for mounting.
- E-3-11**: A screw used for mounting.
- E-3-12**: A small rectangular plate.
- E-3-13**: A screw used for mounting.
- E-3-14**: A screw used for mounting.
- E-3-15**: A screw used for mounting.
- E-3-17**: A large circular component with a central hub.
- E-3-18**: A screw used for mounting.
- E-3-19**: A long, flexible, multi-layered component, likely a fan or filter.
- E-3-20**: A small rectangular component, likely a control unit or power supply.


Note



Head & Color Change

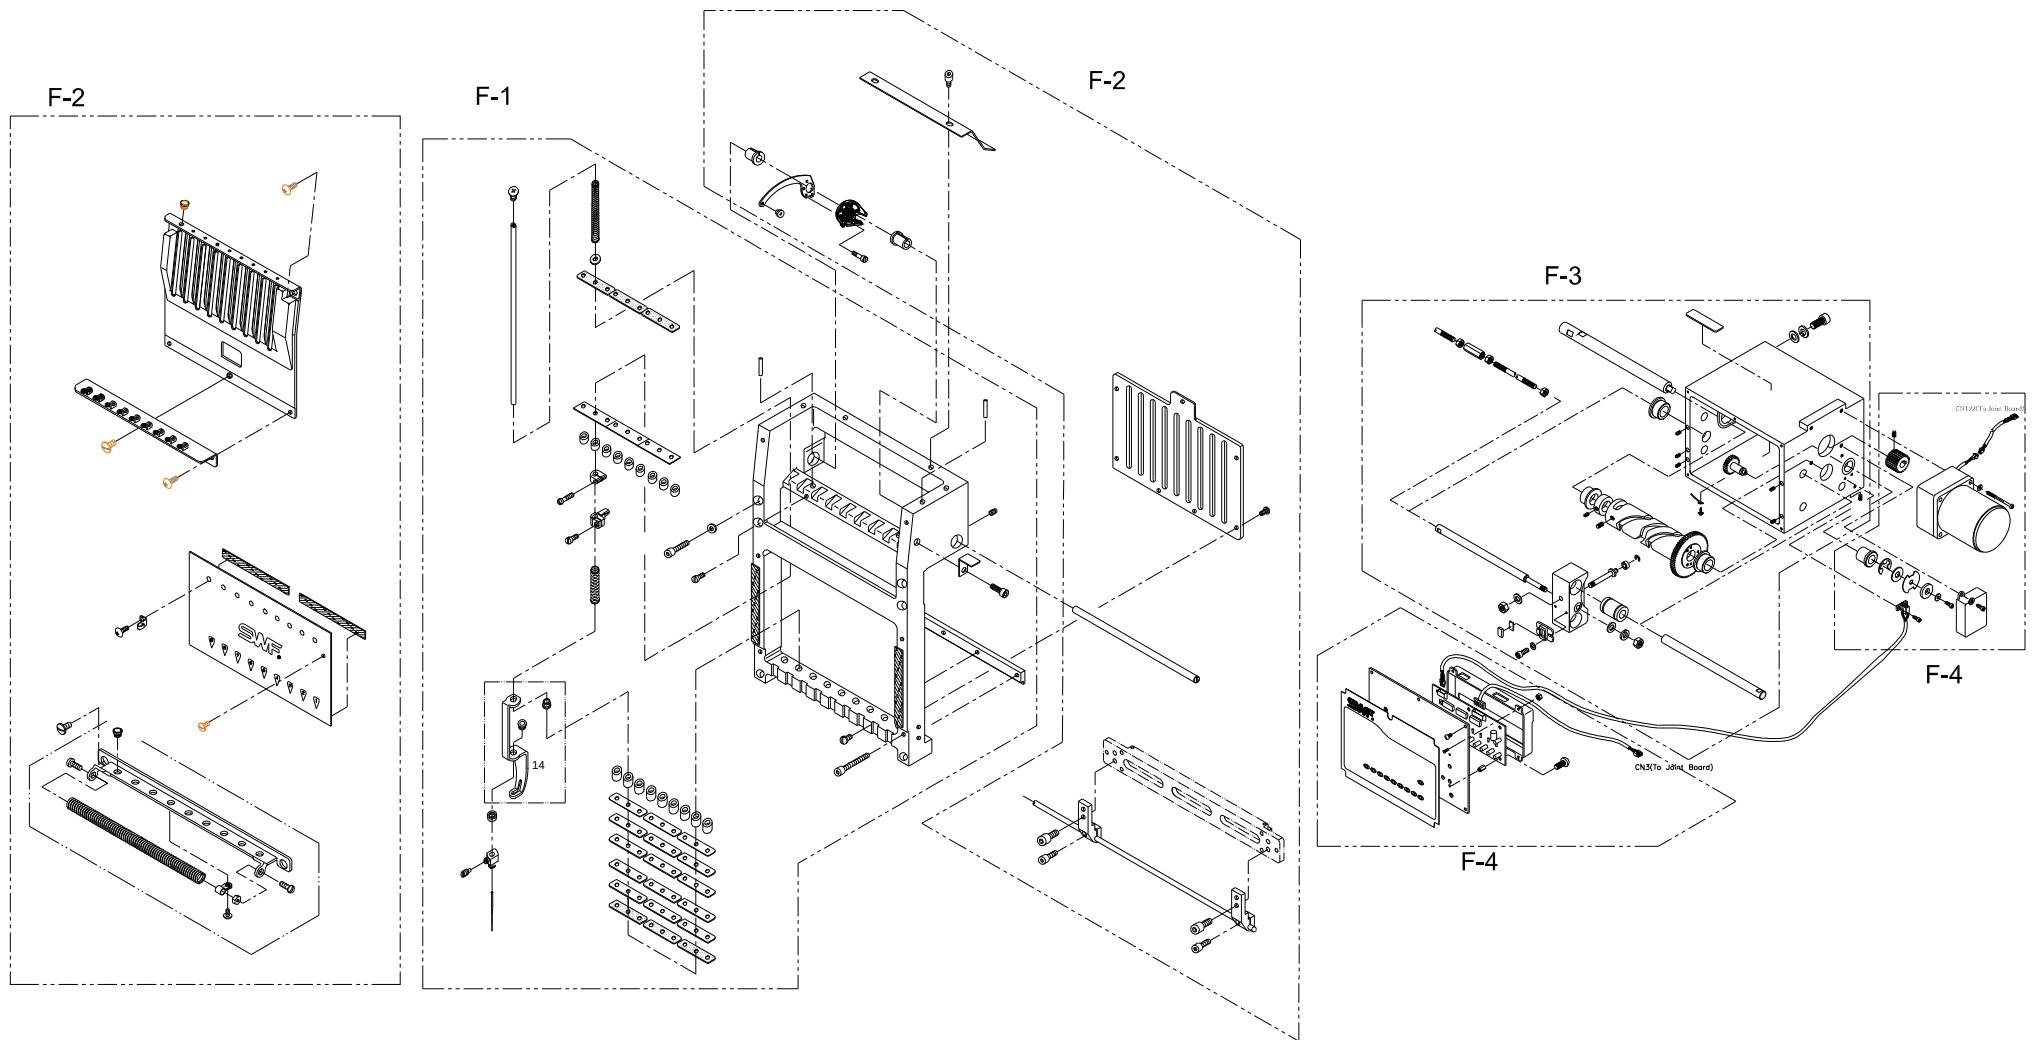

F-1

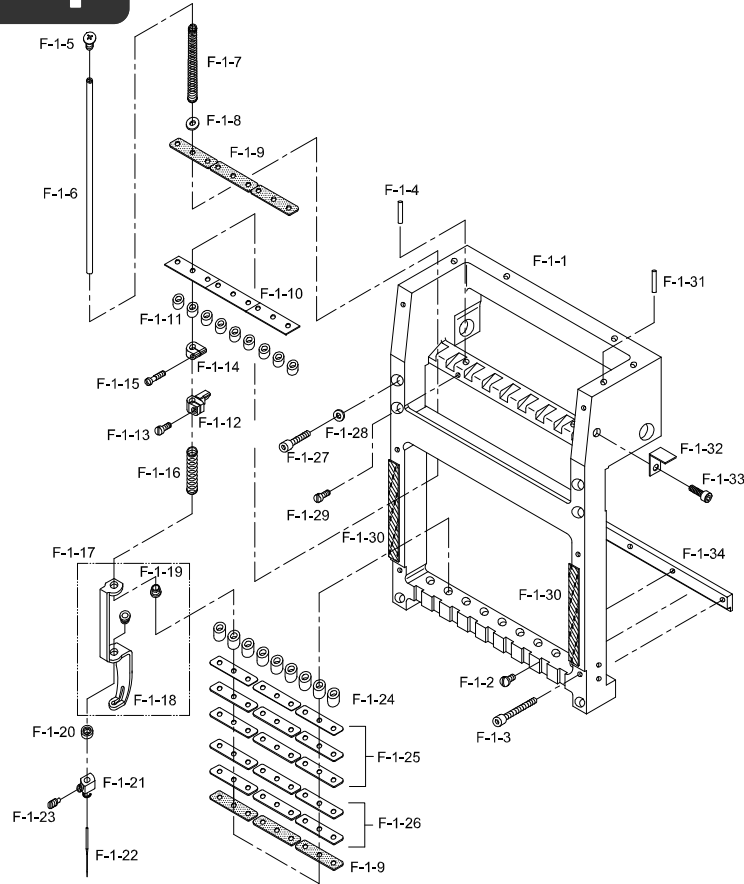

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
F-1-1	GP-011947-00	Head	Aug,14,05 ~ Nov,14,06	X		20	
	GP-011947-01		Nov,14,06 ~ Mar,26,07	△			
	GP-011947-02		Mar,26,07 ~ Nov,02,07	△			
	GP-011947-03		Nov,02,07 ~ Sep,11,08	△			
	GP-011947-04		Sep,11,08 ~ Nov,03,08	△			
	GP-011947-05		Nov,03,08 ~	△			
F-1-2	SC-000417-00	Head Rail Screw	Sep,14,05 ~	X		60	
F-1-3	05014SC-7113	Hex. Socket Bolt (M4*L25)			O	40	
F-1-4	05015CW-A001	Head Base Pin(@5*L15)			O	20	
F-1-5	05019SC-A001	Needle Bar Cover Screw (M5*L6)			O	180	
F-1-6	GP-011929-00	Needle Bar	Sep,14,05 ~	X		180	
F-1-7	GP-007216-00	Needle Bar Return Spring	Jan,21,05 ~ Sep,02,05	X		180	
	GP-007216-01		Sep,02,05 ~	△			
F-1-8	05022SW-A001	Spring Shoe Washer				180	
F-1-9	05021SF-A001	Felt				120	
F-1-10	05023RB-A001	Needle Bar Cushion Rubber "A"				60	
F-1-11	05024RB-A001	Needle Bar Cushion Rubber "B"				180	
F-1-12	GP-044776-00	Needle Bar Holder	Jan,13,09 ~	X		180	
F-1-13	05028SC-4113	Holder Screw (9/64-L8)				180	
F-1-14	11101200T000	Upper Dead Point Stopper				180	
F-1-15	05026SC-4113	Stopper Screw (9/64-11.5)				180	
F-1-16	GP-020915-00	Presser Foot Pressure Spring	Aug,26,06 ~ May,03,07	X		180	
	GP-020915-01		May,03,07 ~	△			
F-1-17	05029BM-A001	Presser Foot Set				180	
F-1-18	GP-013763-00	Presser Foot	Dec,14,05 ~	X		180	
F-1-19	05031AF-A001	Presser Foot Guide Bush				360	
F-1-20	05035RB-A001	Presser Foot Cushion Rubber"A"				180	
F-1-21	05036AF-A001	Needle Fixed Holder				180	
F-1-22	05037DB-A001	Needle (Db-K5, #11)			O	180	
F-1-23	05363SC-A001	Needle Fixed Screw (A/S)				180	
F-1-24	05032RB-A001	Presser Foot Cushion Rubber"B"				180	
F-1-25	05033RB-A001	Presser Foot Adjusting Rubber				180	
F-1-26	05034RB-A001	Presser Foot Adjusting Rubber				120	
F-1-27	05008SC-4113	Hex.Socket Bolt (M4*L16)			O	40	
F-1-28	06003SW-2111	Washer (@4)			O	80	
F-1-29	03022SC-4517	Hex. Socket Set Screw(M4*L5)			O	20	
F-1-30	05063RB-A001	Magnetic Rubber "A"				40	


F-1

This exploded view diagram illustrates the assembly of the F-1 unit. The main frame, labeled F-1-1, is the central component. Various parts are shown being attached to it, including side rails (F-1-2, F-1-3), top rails (F-1-4, F-1-5), and bottom rails (F-1-6, F-1-7). The diagram also shows the installation of multiple sets of rollers (F-1-8, F-1-9, F-1-10, F-1-11, F-1-12, F-1-13, F-1-14, F-1-15, F-1-16, F-1-17, F-1-18, F-1-19, F-1-20, F-1-21, F-1-22, F-1-23, F-1-24, F-1-25, F-1-26, F-1-27, F-1-28, F-1-29, F-1-30, F-1-31, F-1-32, F-1-33, F-1-34) and the final assembly of the top cover (F-1-35). The diagram uses dashed lines to indicate the assembly path and the relative positions of the components.

Note




F-2

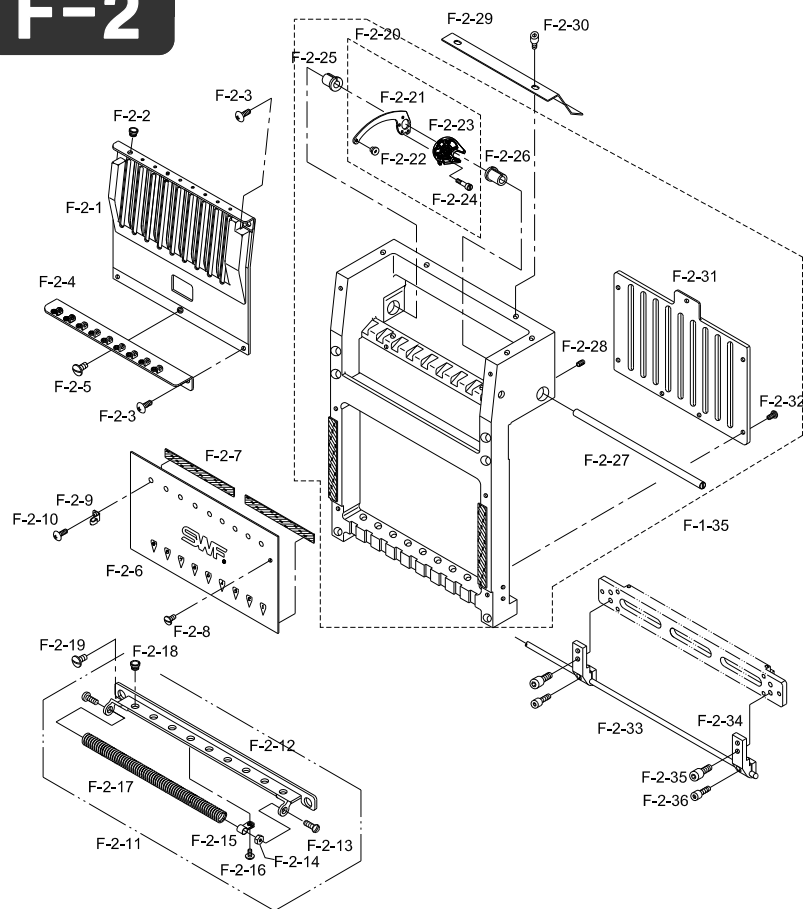

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
F-2-1	10200103B000	Head Face Plate (U) 9C				20	
F-2-2	05452CM-A001	Eyelet "A"				180	
F-2-3	05070SC-3123	Head Face Plate (U) Screw				40	
F-2-4	10300003A000	THREAD GUIDE (M) SET (9C)				20	
F-2-5	05062SC-A001	Thread Guide (L) Screw				20	
F-2-6	05651PR-A002	Head Face Plate (L) Set 9C				20	
F-2-7	05642RB-A001	Magnetic Rubber "B"				40	
F-2-8	05070SC-3123	Thread Guide (L) Screw				20	
F-2-9	11012PR-B001	Thread Guide				180	
F-2-10	09005SC-3123	Hex.Socket Bolt (M4*L10)			O	180	
F-2-11	10400003B000	Thread Guide (L) Set				20	
F-2-12	GP-010764-00	Thread Guide (L) 9C	Jul,20,05 ~	X		20	
F-2-13	096440C-8119	Spring Adjusting Screw				40	
F-2-14	096440N-3211	Spring Adjusting Nut (9/64,N40)			O	40	
F-2-15	10400304B000	Spring Holder				20	
F-2-16	05060SC-8118	Screw (M3*L3)			O	20	
F-2-17	GP-010772-00	Thread Hook Spring (9C)	Jul,21,05 ~	X		20	
F-2-18	05452CM-A001	Eyelet "A"				180	
F-2-19	05070SC-3123	Thread Guide (L) Screw				40	
F-2-20	07005BM-T121	Take-Up Lever Set				180	
F-2-21	05033PR-T121	Take-Up Lever				180	
F-2-22	07102CM-A001	Eyelet "C" (6C)				180	
F-2-23	05035PM-T121	Take-Up Lever Boss (9C)				180	
F-2-24	07003SC-A001	Take-Up Lever Screw (12C)				320	
F-2-25	08203000A000	Take-Up Lever Shaft Bush(L)				20	
F-2-26	08200800A000	Take-Up Lever Shaft Bush(R)				20	
F-2-27	08200503A000	Take-Up Lever Shaft (9C)				20	
F-2-28	07009SC-4517	Hex.Socket Set Screw (M5*L6)			O	20	
F-2-29	11046PR-AB00	Cable Support Plate				20	
	11047PR-A002	Cable Support Plate				20	
F-2-30	02023SC-7113	Hex. Socket Bolt (M4*L8)				40	
F-2-31	GP-011931-00	Needle Bar Guide Rail (9C)				20	
F-2-32	05041SC-A001	Guide Rail Serew				120	
F-2-33	18003SH-D092	Color Change Shaft				1	
F-2-34	GP-011945-00	Color Change Bracket "B"	Sep,14,05 ~	X		39	
F-2-35	02031SC-7113	Hex.Socket Screw (M5*L10)			O	77	
F-2-36	02015SC-7113	Hex. Socket Bolt (M4*L10)			O	1	

F-3

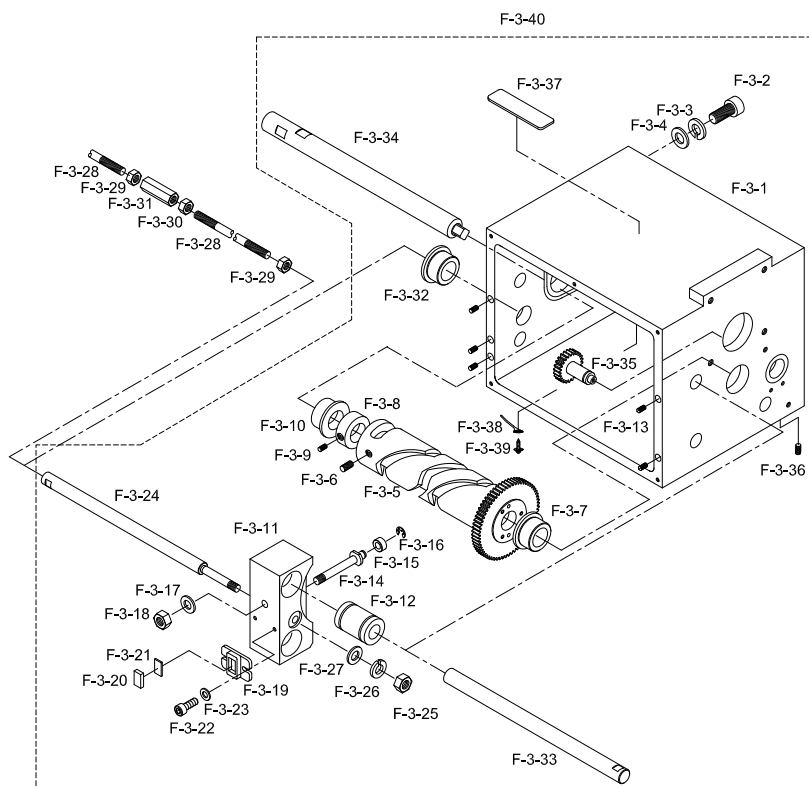

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
F-3-1	GP-005239-00	Color Change Box 6,9C	Oct,21,04 ~ Oct,26,05	X		1	
	GP-005239-01		Oct,26,05 ~ Mar,24,09	△			
	GP-005239-02		Mar,24,09 ~	△			
	GP-005255-00	Color Change Box 12C	Oct,21,04 ~ Oct,26,05	X			
	GP-005255-01		Oct,26,05 ~ Mar,24,09	△			
	GP-005255-02		Mar,24,09 ~	△			
F-3-2	03003SC-4113	Hex. Socket Bolt "B" (M8*L35)				4	
F-3-3	15095SW-3115	Spring Washer (@8)			O	4	
F-3-4	04029SW-A001	Stud Bolt Washer (@8)			O	4	
F-3-5	13008BM-AE00	Color Change Cam Ass'Y			O	1	
	13007BM-AC00	Color Change Cam Ass'Y 9C				1	
	13006BM-AB00	Color Change Cam Ass'Y 12C				1	
F-3-6	14060AF-4517	HEX.SOCKET SCREW(M6*L6)				4	
F-3-7	13008GA-A001	Color Change Cam Gear				1	
F-3-8	CL-000353-00	Cam Collar				1	
F-3-9	04016AF-A001	Cam Collar Screw				2	
F-3-10	08101100B000	Cam Bushing				2	
F-3-11	13034AD-A001	Color Change Block				1	
F-3-12	13035BR-A001	Guide Bushing				2	
F-3-13	03020SC-A001	Drive Pin Screw (11/64,N40,L8)				5	
F-3-14	ST-000013-00	ROLLER SHAFT	Dec,18,08 ~	X		1	
F-3-15	RL-000001-00	Roller	Dec,18,08 ~	X		1	
F-3-16	13044SR-4013	E-Ring (@4)			O	1	
F-3-17	08057SW-1111	Washer (@6)			O	1	
F-3-18	13042SN-1111	Hex. Nut (M6*T5-R)			O	1	
F-3-19	13036PR-A001	Magnet Holder				1	
F-3-20	10-027C-SC53	Magnet				1	
F-3-21	08106200B000	Magnet Holder Spacer				1	
F-3-22	22006SC-7113	HEX. SOCKET BOLT (M3*L8)			O	2	
F-3-23	06011SW-2111	Washer (@3)			O	2	
F-3-24	17055SH-A005	COLOR CHANGE SHAFT "A"				1	
	17054SH-AB00	COLOR CHANGE SHAFT "A"					
F-3-25	13042SN-1111	Hex. Nut (M6*T5-R)			O	1	
F-3-26	03026SW-9115	Spring Washer (@6)			O	1	
F-3-27	03025SW-1211	Washer (@6)			O	1	

This exploded view diagram illustrates the assembly of the F-3000 Series Servomotor. The main components and their sub-assemblies are labeled as follows:


- Motor Housing (F-3-1):** The main outer casing, shown in an exploded view with its internal components.
- Internal Components:**
 - F-3-2:** A screw or bolt used for mounting.
 - F-3-3:** A washer or spacer.
 - F-3-4:** A nut or washer.
 - F-3-5:** A large gear or pulley.
 - F-3-6:** A smaller gear or pulley.
 - F-3-7:** A shaft or axle.
 - F-3-8:** A bearing or bushing.
 - F-3-9:** A small screw or pin.
 - F-3-10:** A small screw or pin.
 - F-3-11:** A mounting bracket or plate.
 - F-3-12:** A small screw or pin.
 - F-3-13:** A small screw or pin.
 - F-3-14:** A small screw or pin.
 - F-3-15:** A small screw or pin.
 - F-3-16:** A small screw or pin.
 - F-3-17:** A small screw or pin.
 - F-3-18:** A small screw or pin.
 - F-3-19:** A small screw or pin.
 - F-3-20:** A small screw or pin.
 - F-3-21:** A small screw or pin.
 - F-3-22:** A small screw or pin.
 - F-3-23:** A small screw or pin.
 - F-3-24:** A long shaft or axle.
 - F-3-25:** A small screw or pin.
 - F-3-26:** A small screw or pin.
 - F-3-27:** A small screw or pin.
 - F-3-28:** A small screw or pin.
 - F-3-29:** A small screw or pin.
 - F-3-30:** A small screw or pin.
 - F-3-31:** A small screw or pin.
 - F-3-32:** A small screw or pin.
 - F-3-33:** A long shaft or axle.
 - F-3-34:** A long shaft or axle.
 - F-3-35:** A small screw or pin.
 - F-3-36:** A small screw or pin.
 - F-3-37:** A small screw or pin.
 - F-3-38:** A small screw or pin.
 - F-3-39:** A small screw or pin.
 - F-3-40:** A small screw or pin.

The diagram shows the assembly of the motor housing, the internal gear train, and the mounting bracket, with various screws and pins used to secure the components.

Note

[illegible]


F-4

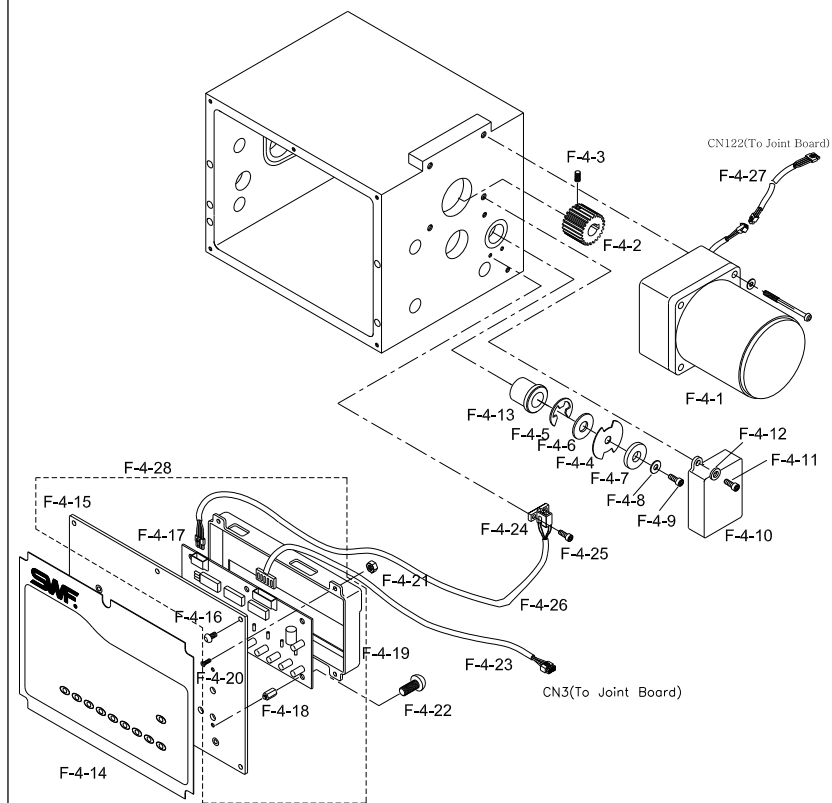

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
F-4-1	13028MT-A001	Color Change Motor Unit				1	
F-4-2	08102900B000	Motor Gear				1	
F-4-3	13030SC-4517	Hex. Socket Set Screw (M4*L8)			O	1	
F-4-4	08101700B000	Half Turn Film				1	
F-4-5	08044SR-4013	E-Ring (@8)			O	1	
F-4-6	13018PR-A001	Half Turn Film Washer "A" (T2.3)				1	
F-4-7	13019PR-A001	Half Turn Film Washer "B" (T1)				1	
F-4-8	18015SW-3111	WASHER (4@)			O	1	
F-4-9	02023SC-7113	HEX.SOCKET BOLT (M4*L8)			O	1	
F-4-10	13025PM-A001	Sensor Cover				1	
F-4-11	02015SC-7113	HEX.SOCKET BOLT(M4*L10)			O	2	
F-4-12	18015SW-3111	Washer (4@-S)			O	2	
F-4-13	08101500B000	Half Turn Bushing				1	
F-4-14	120001003BHI9	Membrane Switch				1	
F-4-15	13053PR-A005	Membrane Switch Cover 6,9C				1	
	13052PR-AB00	Membrane Switch Cover 12C				1	
F-4-16	03006MC-9123	TRUSS SCREW(M3*L6) SUS			O	5	
F-4-17	07-001A-SW60	Color Change Board 6C				1	
	02-001A-UI12	Color Change Board (9C)				1	
	04-001A-SW60	Color Change Board 12C				1	
F-4-18	GP-008534-00	Stud Bolt	Apr,08,05 ~	X		6	
F-4-19	13060ET-A005	Board Cover 6,9C				1	
	13059ET-AB00	Board Cover 12C				1	
F-4-20	13061SC-8119	Plus Screw (M3*L10)			O	4	
F-4-21	05057SN-3211	Hex. Nut (M3)			O	4	
F-4-22	06010SC-8118	Plus Screw (M3*L4)			O	6	
F-4-23	CA-000411-00	Needle Position To Joint B/D	Aug,13,05 ~ Feb,08,06	X		1	
	CA-000411-01		Feb,08,06 ~	△			
F-4-24	13023EL-A001	Half Turn Sensor				1	
F-4-25	15163SC-3123	Truss Screw (M3*L12)			O	2	
F-4-26	MH-20	Half Turn Sensor Cable				1	
F-4-27	CA-000328-00	Color Change Motor To Joint Board	Jul,16,05 ~ Nov,17,05	X		1	
	CA-000328-01		Nov,17,05 ~	△			
F-4-28	AS-000867-00	Color Change Box Cover Assy	Aug,16,04 ~	X		1	
	AS-000867-01		May,01,08 ~	△			

Thread Tension Unit

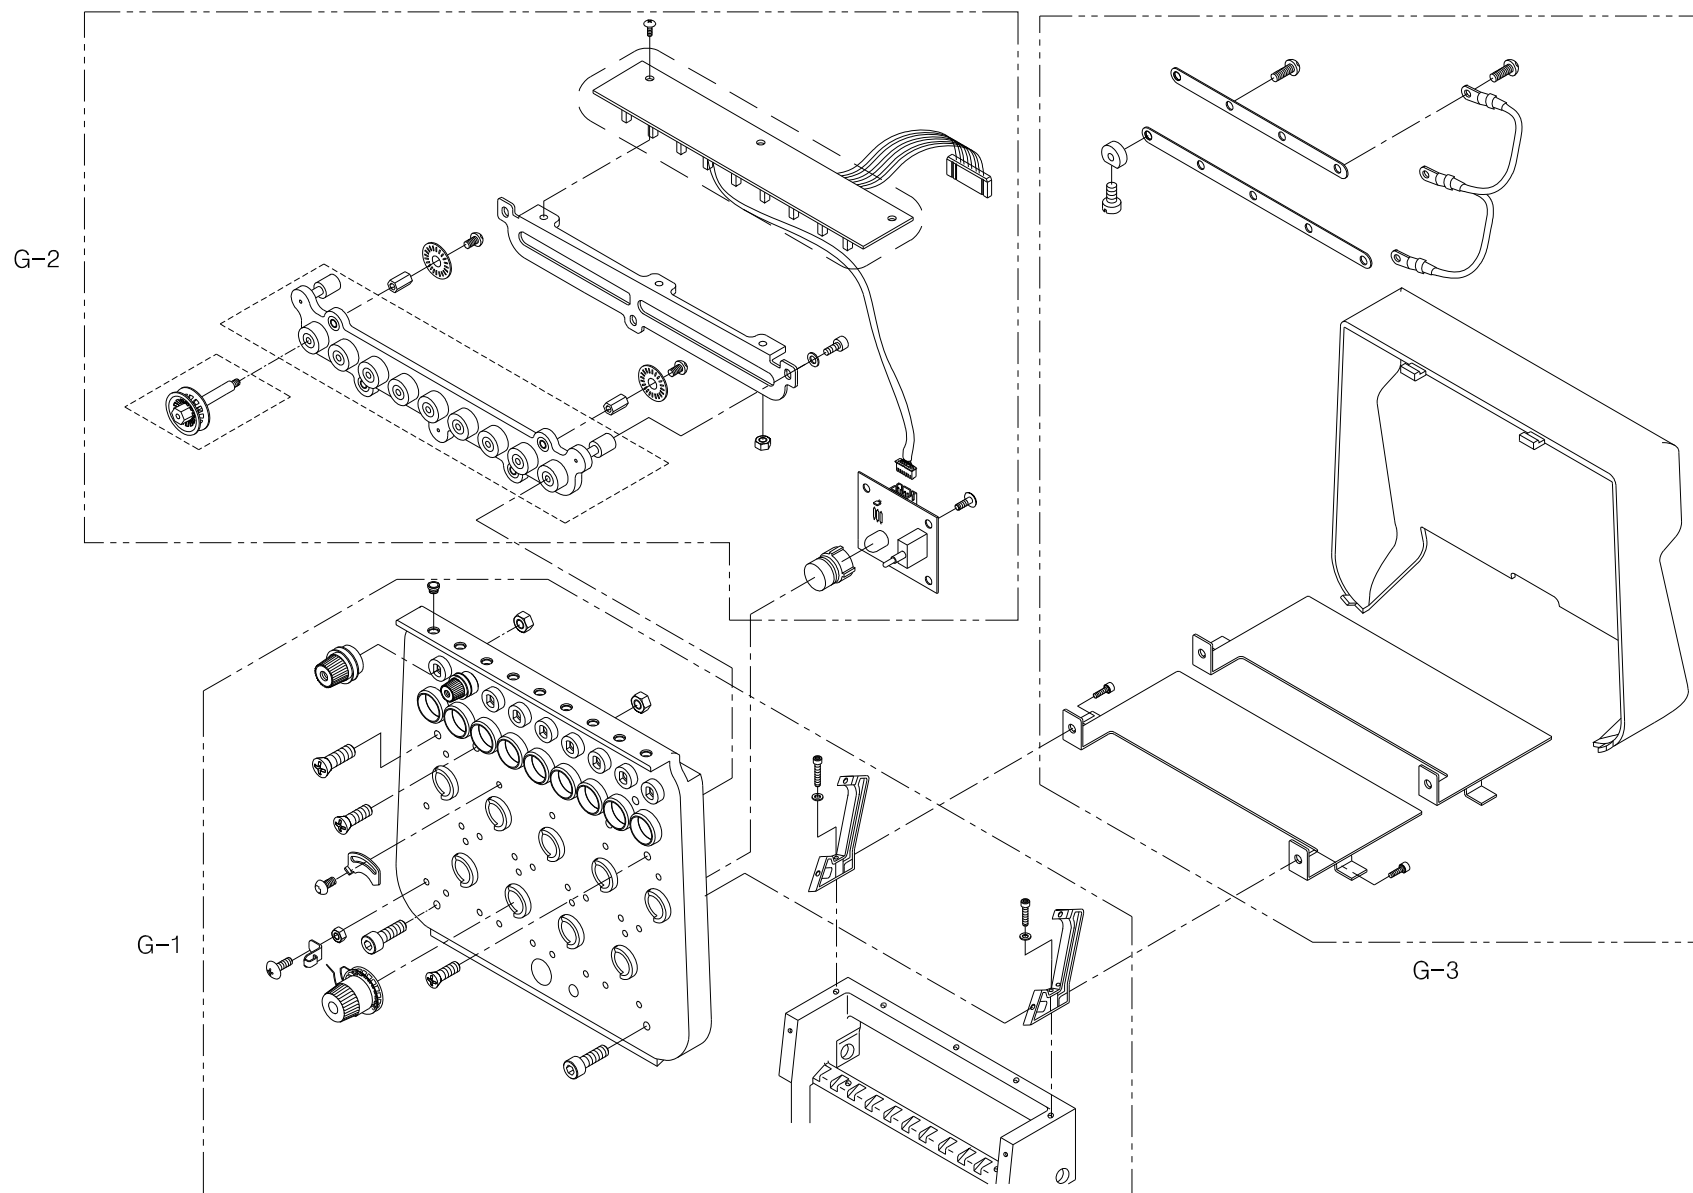

Note	
------	--

G-2 : G-1-19



G-3

This exploded view diagram illustrates the assembly of the G-3 unit. The components are labeled as follows:


- G-3-1**: The main rectangular base plate.
- G-3-2**: Two screws used to secure the base plate to the frame.
- G-3-3**: A small rectangular component, likely a switch or indicator, mounted on the side of the base plate.
- G-3-4**: A long, thin metal strip with four mounting holes.
- G-3-5**: Two screws used to secure the metal strip to the base plate.
- G-3-6**: A small circular component, possibly a knob or button, attached to the end of the metal strip.
- G-3-7**: A flexible cable or hose with two connectors, one of which is shown attached to the metal strip.
- G-3-8**: A large, U-shaped metal frame that houses the base plate and other components.

The diagram shows the base plate (G-3-1) being inserted into the frame (G-3-8). The metal strip (G-3-4) is shown being attached to the base plate with screws (G-3-5). The cable (G-3-7) is shown being connected to the strip. The frame (G-3-8) has mounting tabs that align with the base plate. Dashed lines indicate the assembly path and alignment of the components.


G-3-4~7 : G-1-19

[illegible]

X-Y Axis Drive System (Y-Stroke 1000 Below)

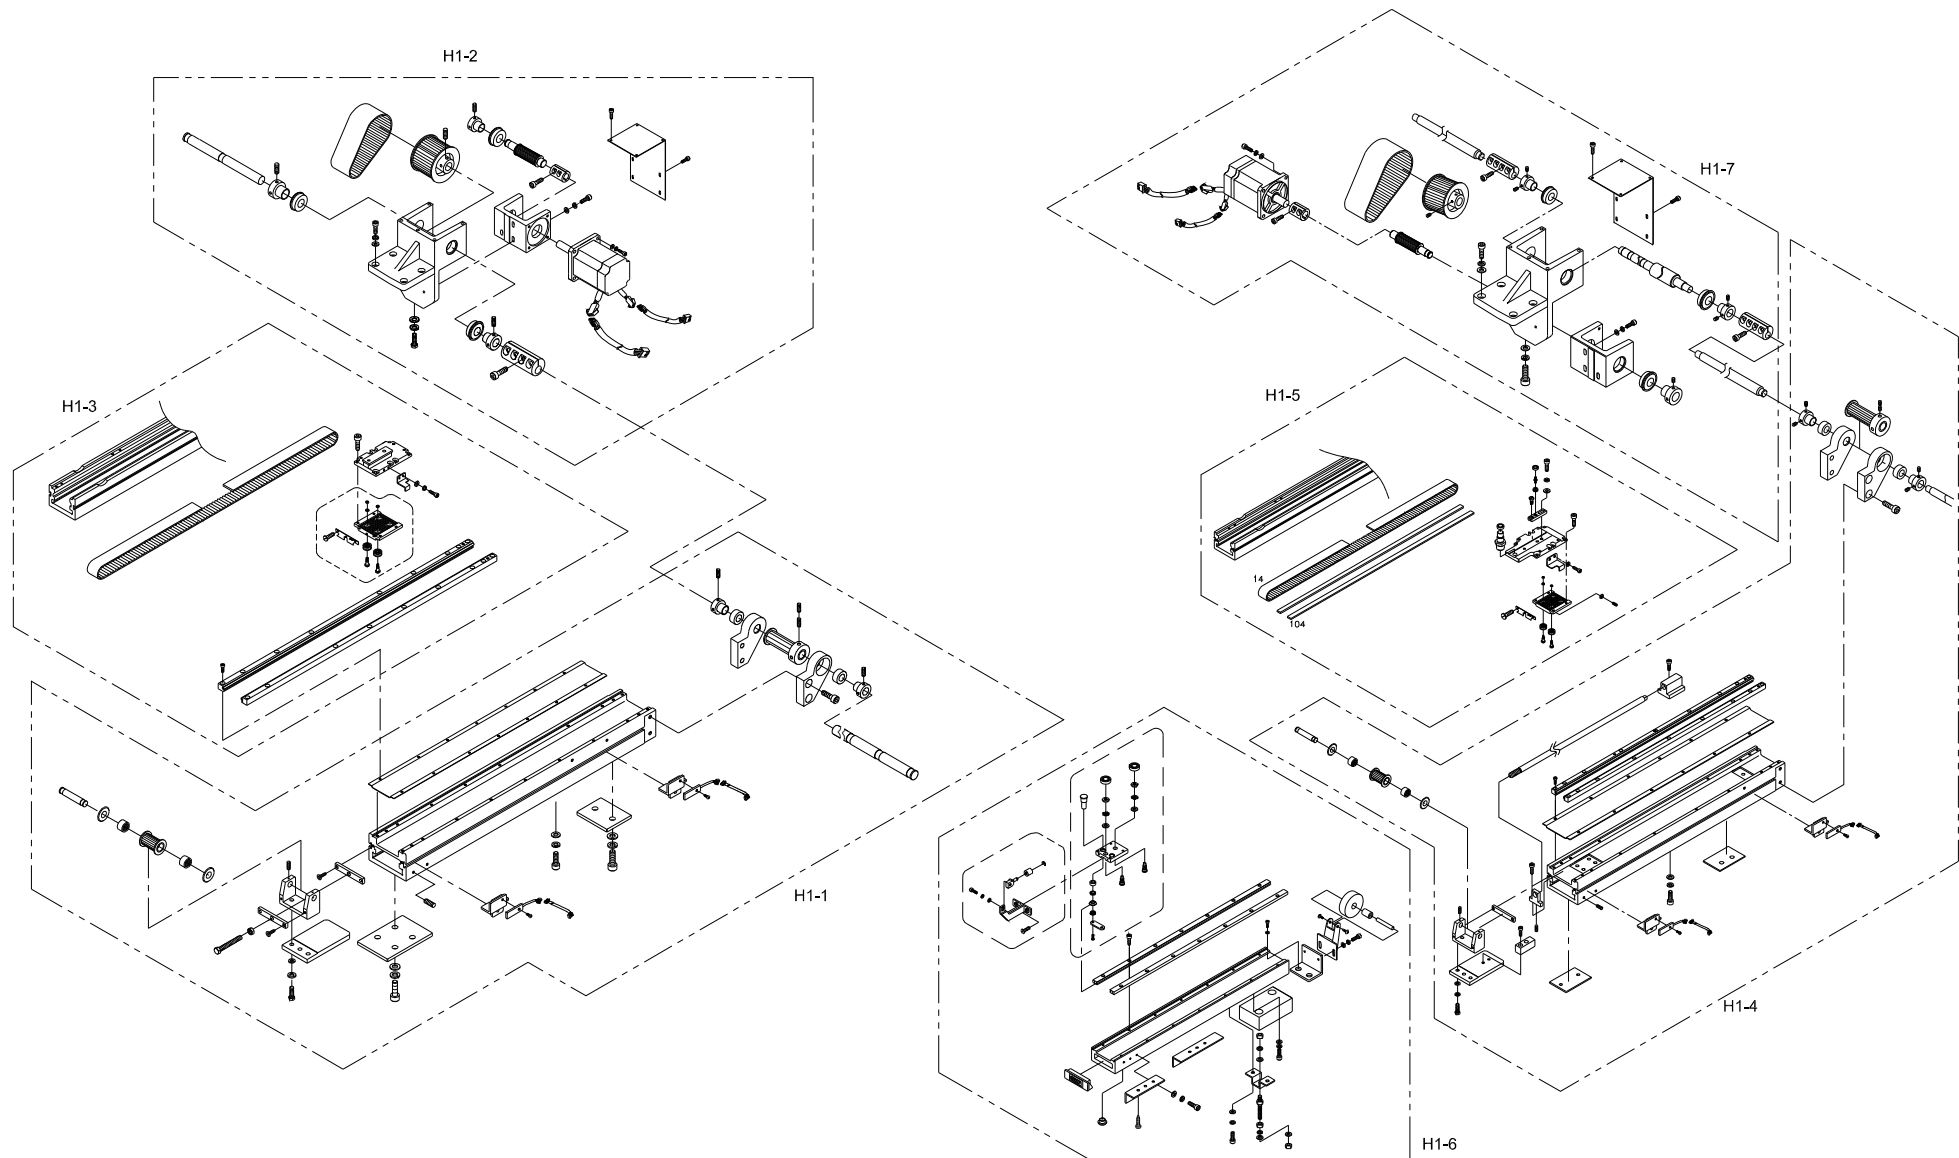

H1-1

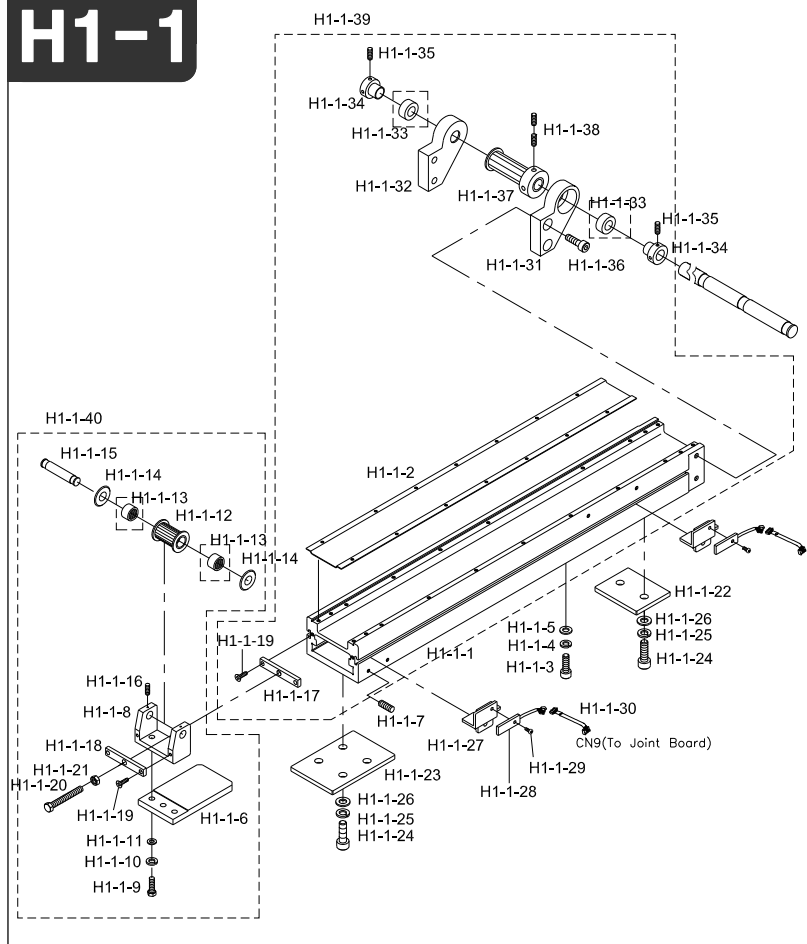

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
H1-1-1	04100100ID00	X Axis Frame				3	
H1-1-2	04100100BH01	Guard Plate For Timing Belt (L=564)				3	
	04100100BH0A	Guard Plate For Timing Belt (L=964)				3	
H1-1-3	15017SC-4113	Hex. Socket Bolt (M8*L45)			O	12	
	15019SC-4113	Hex. Socket Bolt (M8*L40)			O	12	
H1-1-4	15095SW-3115	Spring Washer (@8)			O	12	
H1-1-5	04029SW-A001	Stud Bolt Washer (@8)			O	12	
H1-1-6	04202400B000	Timing Pulley Tension Base				3	
H1-1-7	15090SC-B001	Hex.Socket Set Screw (M6*L10)			O	6	
H1-1-8	15027DC-A001	Timing Pulley Bracket (W)				3	
H1-1-9	15028SC-1111	Hex. Bolt (M6*L20)			O	6	
H1-1-10	03026SW-9115	Spring Washer (@6)			O	6	
H1-1-11	08057SW-1111	Washer (@6)			O	6	
H1-1-12	04600100B000	TIMING PULLEY D(18-S5M-32F)				3	
H1-1-13	15042BR-A001	Needle Bearing (1210zz)			O	6	
H1-1-14	15046RB-A001	Driving Pin Washer				6	
H1-1-15	04104400B000	Timing Pulley Driving Pin "B"				3	
H1-1-16	03022SC-4517	Hex.Socket Screw (M4*L5)			O	6	
H1-1-17	15055PR-A001	Tension Rivet Plate (W)				3	
H1-1-18	15056PR-A001	Tension Plate (W)				3	
H1-1-19	15089SC-7119	C.S Screw (M4*L12)			O	12	
H1-1-20	15058SC-1211	Hex. Bolt (M6*L58)			O	3	
H1-1-21	14064SN-7311	Hex.Nut (M6-No3)			O	3	
H1-1-22	04000100H000	X-Lm Guide Support Plate (A)				3	
H1-1-23	04000200H000	X-Lm Guide Support Plate (B)				3	
H1-1-24	15020SC-4113	Hex.Socket Bolt (M8*L50)			O	18	
H1-1-25	15095SW-3115	Spring Washer (@8)			O	18	
H1-1-26	04029SW-A001	Stud Bolt Washer(S) (@8)			O	18	
H1-1-27	GP-008025-00	Sensor Bracket X,Y	Mar,17,05 ~	X		2	
H1-1-28	EP-000067-00	X-Sensor	Dec,05,05 ~	X		2	
H1-1-29	02023SC-7113	Position Adjusting Screw				4	
H1-1-30	CA-000324-00	X-Sensor To Joint Board	Jul,16,05 ~	X		1	
H1-1-31	04000650I000	TIMING PULLEY BRACKET (L)				3	
H1-1-32	04000660I000	TIMING PULLEY BRACKET (R)				3	
H1-1-33	04000630I000	BEARING (6905ZZ)			O	6	
H1-1-34	04003500I000	NEEDLE BEARING COLLAR				6	
H1-1-35	14060AF-4517	HEX.SOCKET SCREW(M6*L6)			O	12	

H1

H1-1

H1-1-39

H1-1-35

H1-1-34

H1-1-33

H1-1-32

H1-1-38

H1-1-37

H1-1-33

H1-1-35

H1-1-34

H1-1-31

H1-1-36

H1-1-40

H1-1-15

H1-1-14

H1-1-13

H1-1-12

H1-1-13

H1-1-14

H1-1-19

H1-1-17

H1-1-16

H1-1-8

H1-1-18

H1-1-21

H1-1-20

H1-1-19

H1-1-11

H1-1-10

H1-1-9

H1-1-2

H1-1-1

H1-1-5

H1-1-4

H1-1-3

H1-1-22

H1-1-26

H1-1-25

H1-1-24

H1-1-7

H1-1-23

H1-1-26

H1-1-25

H1-1-24

H1-1-27

H1-1-28


H1-1-30

CN9(To Joint Board)

Note

[illegible]

H1-2

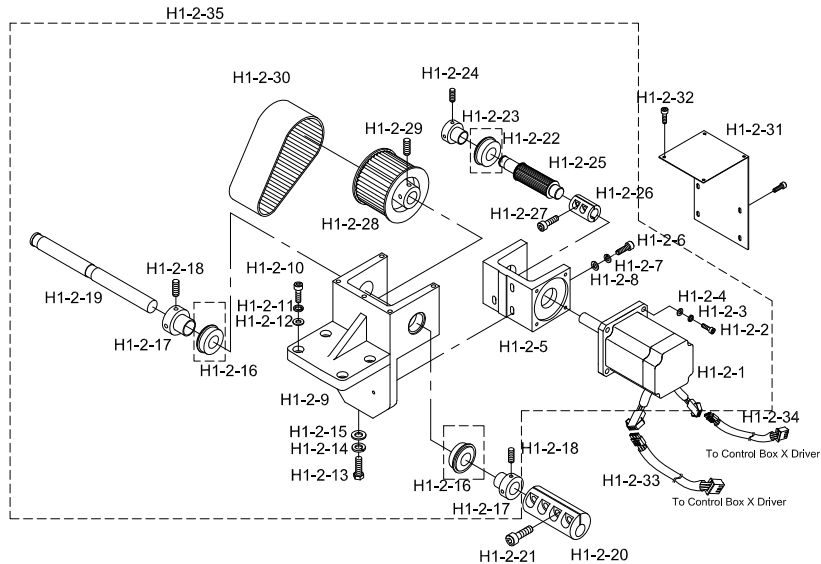

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
H1-2-1	DMPD3-000002	Motor				1	
H1-2-2	08062SC-4113	Hex.Socket Bolt(M5*L20)			O	4	
H1-2-3	08070SW-9115	Spring Washer (@8)			O	4	
H1-2-4	18049SW-3111	Stud Bolt Washer(S) (@8)			O	4	
H1-2-5	GP-020302-00	X-Motor Bracket	Aug,11,06 ~			1	
H1-2-6	08087SC-7113	Hex.Socket Bolt(M8*L25)			O	3	
H1-2-7	15095SW-3115	Spring Washer (@8)			O	3	
H1-2-8	04029SW-A001	Stud Bolt Washer(S) (@8)			O	3	
H1-2-9	04001800I000	X Motor Base				1	
H1-2-10	08087SC-7113	Hex.Socket Bolt(M8*L25)			O	4	
H1-2-11	15095SW-3115	Spring Washer (@8)			O	4	
H1-2-12	04029SW-A001	Stud Bolt Washer(S) (@8)			O	4	
H1-2-13	15019SC-4113	Hex. Socket Bolt (M8*L40)			O	1	
H1-2-14	15095SW-3115	Spring Washer (@8)			O	1	
H1-2-15	04029SW-A001	Stud Bolt Washer(S) (@8)			O	1	
H1-2-16	02-009A-8180	Ball Bearing (6004NR)			O	2	
H1-2-17	03005210H000	COLLAR "A"				2	
H1-2-18	14060AF-4517	Hex.Socket Screw(M6*L6)				4	
H1-2-19	04001000I004	X Driving Pulley Shaft				1	
H1-2-20	GP-044599-00	COUPLING @20	Dec,23,08 ~	X		3	
H1-2-21	03016SC-4113	Screw			O	12	
H1-2-22	02-009A-8180	Ball Bearing (6004NR)			O	1	
H1-2-23	04003500B000	Bearing Stopper Collar "A"				1	
H1-2-24	14060AF-4517	Hex.Socket Screw(M6*L6)			O	2	
H1-2-25	PL-000054-00	X-Y Driving Shaft Timing Pulley	Jul,05,10 ~			1	
H1-2-26	GP-020301-00	Driving Shaft Coupling	Aug,11,06 ~ Aug06,07	X		1	
	GP-020301-01		Aug06,07 ~ Nov,13,08	△			
	GP-020301-02		Nov,13,08 ~	△			
H1-2-27	08091SC-7113	Hex.Socket Bolt(M6*L20)			O	2	
H1-2-28	04100330I000	Timing PULLEY(72-S5M-050)				1	
H1-2-29	14061AF-4517	Hex.Socket Screw(M8*L8)			O	8	
H1-2-30	04100410I000	Timing BELT (50-S5M-475)				1	
H1-2-31	12002000I000	X-Y Axis Servo Motor Cover				1	
H1-2-32	18033SC-3123	Truss Screw (M5*L6)			O	8	
H1-2-33	CA-001053-00	X-Motor To Control Box X-Driver Cable	Mar,03,06 ~	X		1	
H1-2-34	CA-001054-00	X-Motor To Encoder Cable To X-Driver Cable	Mar,03,06 ~	X		1	
H1-2-35	AS-008153-00	X Motor Base Assy	Jan,30,08 ~	X		1	
	AS-008153-01		Mar,09,09 ~	△			

H1

This exploded view diagram illustrates the assembly of the H1-3 unit. The components are labeled as follows:

- H1-3-1**: The main rectangular frame or base.
- H1-3-2**: A long, thin metal strip or rail.
- H1-3-3**: A long, thin metal strip or rail, similar to H1-3-2.
- H1-3-4**: A small rectangular component, possibly a bracket or connector.
- H1-3-5**: A small rectangular component, possibly a bracket or connector.
- H1-3-6**: A small rectangular component, possibly a bracket or connector.
- H1-3-7**: A small rectangular component, possibly a bracket or connector.
- H1-3-8**: A small rectangular component, possibly a bracket or connector.
- H1-3-9**: A small rectangular component, possibly a bracket or connector.
- H1-3-10**: A small rectangular component, possibly a bracket or connector.
- H1-3-11**: A small rectangular component, possibly a bracket or connector.
- H1-3-12**: A small rectangular component, possibly a bracket or connector.
- H1-3-13**: A small rectangular component, possibly a bracket or connector.
- H1-3-14**: A small rectangular component, possibly a bracket or connector.
- H1-3-15**: A small rectangular component, possibly a bracket or connector.
- H1-3-16**: A small rectangular component, possibly a bracket or connector.
- H1-3-17**: A small rectangular component, possibly a bracket or connector.
- H1-3-18**: A small rectangular component, possibly a bracket or connector.
- H1-1-39**: A small rectangular component, possibly a bracket or connector.

The diagram shows the assembly sequence with dashed lines indicating the placement of components. The main frame (H1-3-1) is shown at the bottom, with various strips and connectors being attached to it. The components are arranged in a way that shows their relative positions and how they fit together.

[illegible]


[illegible]

Note





H1-6

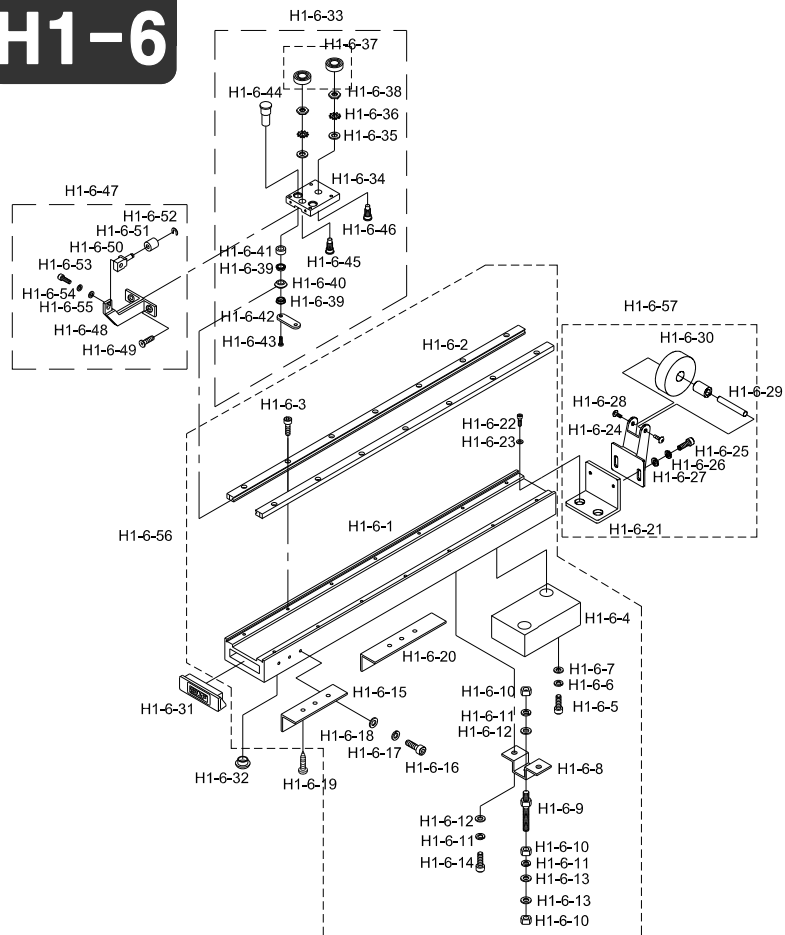


Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
H1-6-1	15107AD-B021	V-Rail Bracket				4	
H1-6-2	15104AF-A021	Y-Axis Rail Guide				8	
H1-6-3	02015SC-7113	Hex. Socket Bolt (M4*L10)			O	56	
H1-6-4	15095AD-B001	Spacer				4	
H1-6-5	15020SC-4113	Hex. Socket Bolt (M8X150)			O	8	
H1-6-6	15095SW-3115	Spring Washer (@8)			O	8	
H1-6-7	08041SW-1111	Washer (@8-S)			O	8	
H1-6-8	15097PR-B001	Stud Bracket				4	
H1-6-9	15096CW-B001	Stud Bolt				4	
H1-6-10	04032SN-A001	Hex. Nut (M8)			O	4	
H1-6-11	15095SW-3115	Spring Washer (@8)			O	4	
H1-6-12	08041SW-1111	Washer (@8-S)			O	4	
H1-6-13	04029SW-A001	Stud Bolt Washer (@8)			O	4	
H1-6-14	14006SC-7113	Hex.Socket Set Screw(M8*L15)			O	8	
H1-6-15	15093AD-B001	Table Support				16	
H1-6-16	18047SC-7113	Hex. Socket Bolt (M5*L15)			O	48	
H1-6-17	18048SW-3115	Spring Washer (5@)			O	48	
H1-6-18	18049SW-3111	Washer (@5)			O	45	
H1-6-19	16010SC-8330	Tapping Screw (M6*L25)			O	48	
H1-6-20	15094AD-B001	Table Support				8	
H1-6-21	GP-013196-00	Support Bracket	Nov,10,05 ~	X		4	
H1-6-22	14006SC-4113	Hex. Socket Bolt (M8*L15)			O	8	
H1-6-23	15077SW-2111	Washer (@8)			O	8	
H1-6-24	GP-006914-00	Roller Bracket	Jan,12,05 ~ Jun,02,05	X		4	
	GP-006914-01		Jun,02,05 ~ May,03,06	△			
	GP-006914-02		May,03,06 ~	△			
H1-6-25	02023SC-7113	Hex. Socket Bolt (M4*L8)			O	8	
H1-6-26	02028SW-9115	Spring Washer (@4)			O	8	
H1-6-27	05009SW-1111	Washer(@4)			O	8	
H1-6-28	09005SC-3123	Truss Screw (M3*L6)			O	8	
H1-6-29	PN-000133-00	Roller Pin	Jan,12,05 ~	X		4	
H1-6-30	GP-006917-00	Guide Roller	Jan,12,05 ~ Jun,02,05	X		4	
	GP-006917-01		Jun,02,05 ~	△			
H1-6-31	15092RB-B001	Rubber Cap (A)				4	
H1-6-32	15091RB-A001	Rubber Cap (B)				4	
H1-6-33	AS-004904-00	V-Roller Guide Set		X		4	
H1-6-34	08400010B000	Y-Axis Feed Plate "D"				4	

H1

H1-7

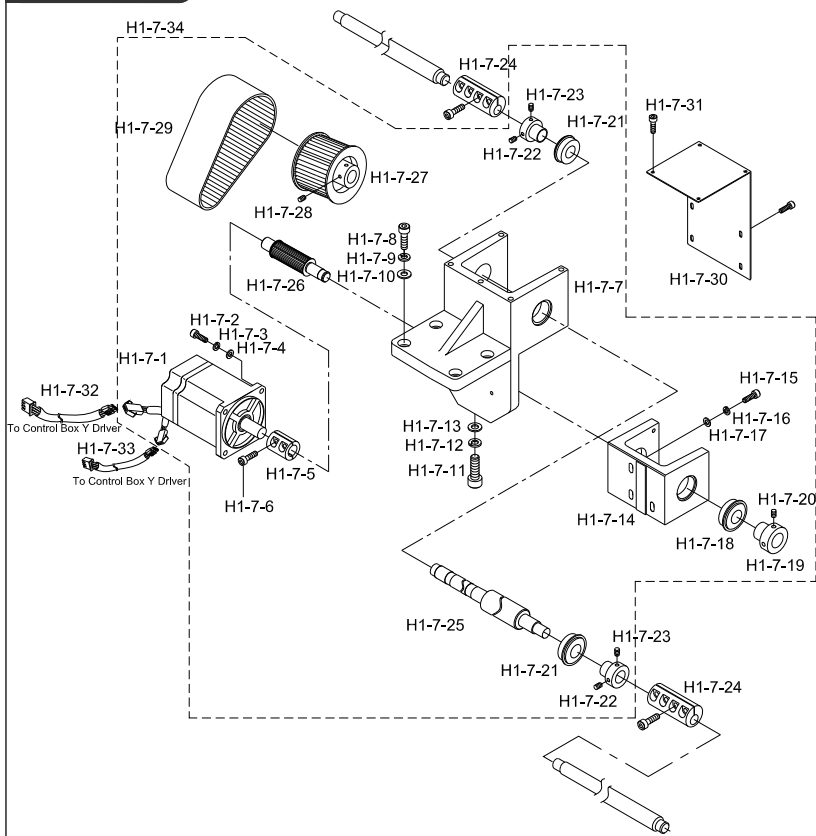


Note


Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
H1-7-1	DMPD3-000002	Motor				1	
H1-7-2	08062SC-4113	Hex.Socket Bolt(M5*L20)			O	4	
H1-7-3	08070SW-9115	Spring Washer (@8)			O	4	
H1-7-4	18049SW-3111	Stud Bolt Washer(S) (@8)			O	4	
H1-7-5	GP-020301-00	Driving Shaft Coupling	Aug,11,06 ~ Aug,06,07	X		1	
	GP-020301-01		Aug,06,07 ~ Nov,13,08	△			
	GP-020301-02		Nov,13,08 ~	△			
H1-7-6	08091SC-7113	Hex.Socket Bolt(M6*L20)			O	2	
H1-7-7	04002200I000	Y-MOTER BASE				1	
H1-7-8	06025MC-7113	Hex.Socket Bolt(M6*L25)			O	4	
H1-7-9	15095SW-3115	Spring Washer (@8)			O	4	
H1-7-10	04029SW-A001	Stud Bolt Washer(S) (@8)			O	4	
H1-7-11	15019SC-4113	Hex. Socket Bolt (M8*L40)			O	1	
H1-7-12	15095SW-3115	Spring Washer (@8)			O	1	
H1-7-13	04029SW-A001	Stud Bolt Washer(S) (@8)			O	1	
H1-7-14	GP-020304-00	Y-Motor Bracket	Aug,11,06 ~	X		1	
H1-7-15	06025MC-7113	Hex.Socket Bolt(M6*L25)			O	3	
H1-7-16	15095SW-3115	Spring Washer (@8)			O	3	
H1-7-17	04029SW-A001	Stud Bolt Washer(S) (@8)			O	3	
H1-7-18	02-009A-8180	BALL BEARING 6004NR				1	
H1-7-19	04003500B000	Needle Bearing Collar				1	
H1-7-20	14060AF-4517	Hex.Socket Set Screw(M5*L5)			O	2	
H1-7-21	02-009A-8180	Ball Bearing 6004NR			O	2	
H1-7-22	03005210H000	Collar "A"				2	
H1-7-23	14060AF-4517	Hex.Socket Screw(M6*L6)			O	4	
H1-7-24	03006720HDK0	Coupling(@20)				2	
H1-7-25	04200200I000	Y-Driving Pulley Shaft				1	
H1-7-26	GP-020300-00	Y-Axis Timing Pulley	Aug,11,06 ~	X		1	
H1-7-27	04100330I000	Timing PULLEY(72-S5M-050)				1	
H1-7-28	14061AF-4517	Hex.Socket Screw(M8*L8)			O	8	
H1-7-29	04100410I000	Timing BELT (50-S5M-475)				1	
H1-7-30	12002000I000	Y-Axis Servo Motor Cover A				1	
H1-7-31	18033SC-3123	Truss Screw (M5*L6)			O	8	
H1-7-32	CA-001055-00	Y-Motor To Control Box Y Driver Cable	Mar,03,06 ~	X		1	
H1-7-33	CA-001056-00	Y-Motor Encoder To Y Driver Cable	Mar,03,06 ~	X		1	
H1-7-34	AS-008193-00	Y-Motor - Base	Feb,04,08 ~	X		1	
	AS-008193-01		Mar,09,09 ~	△			

H1

X-Y Axis Drive System (Y-Stroke 1200 Above)

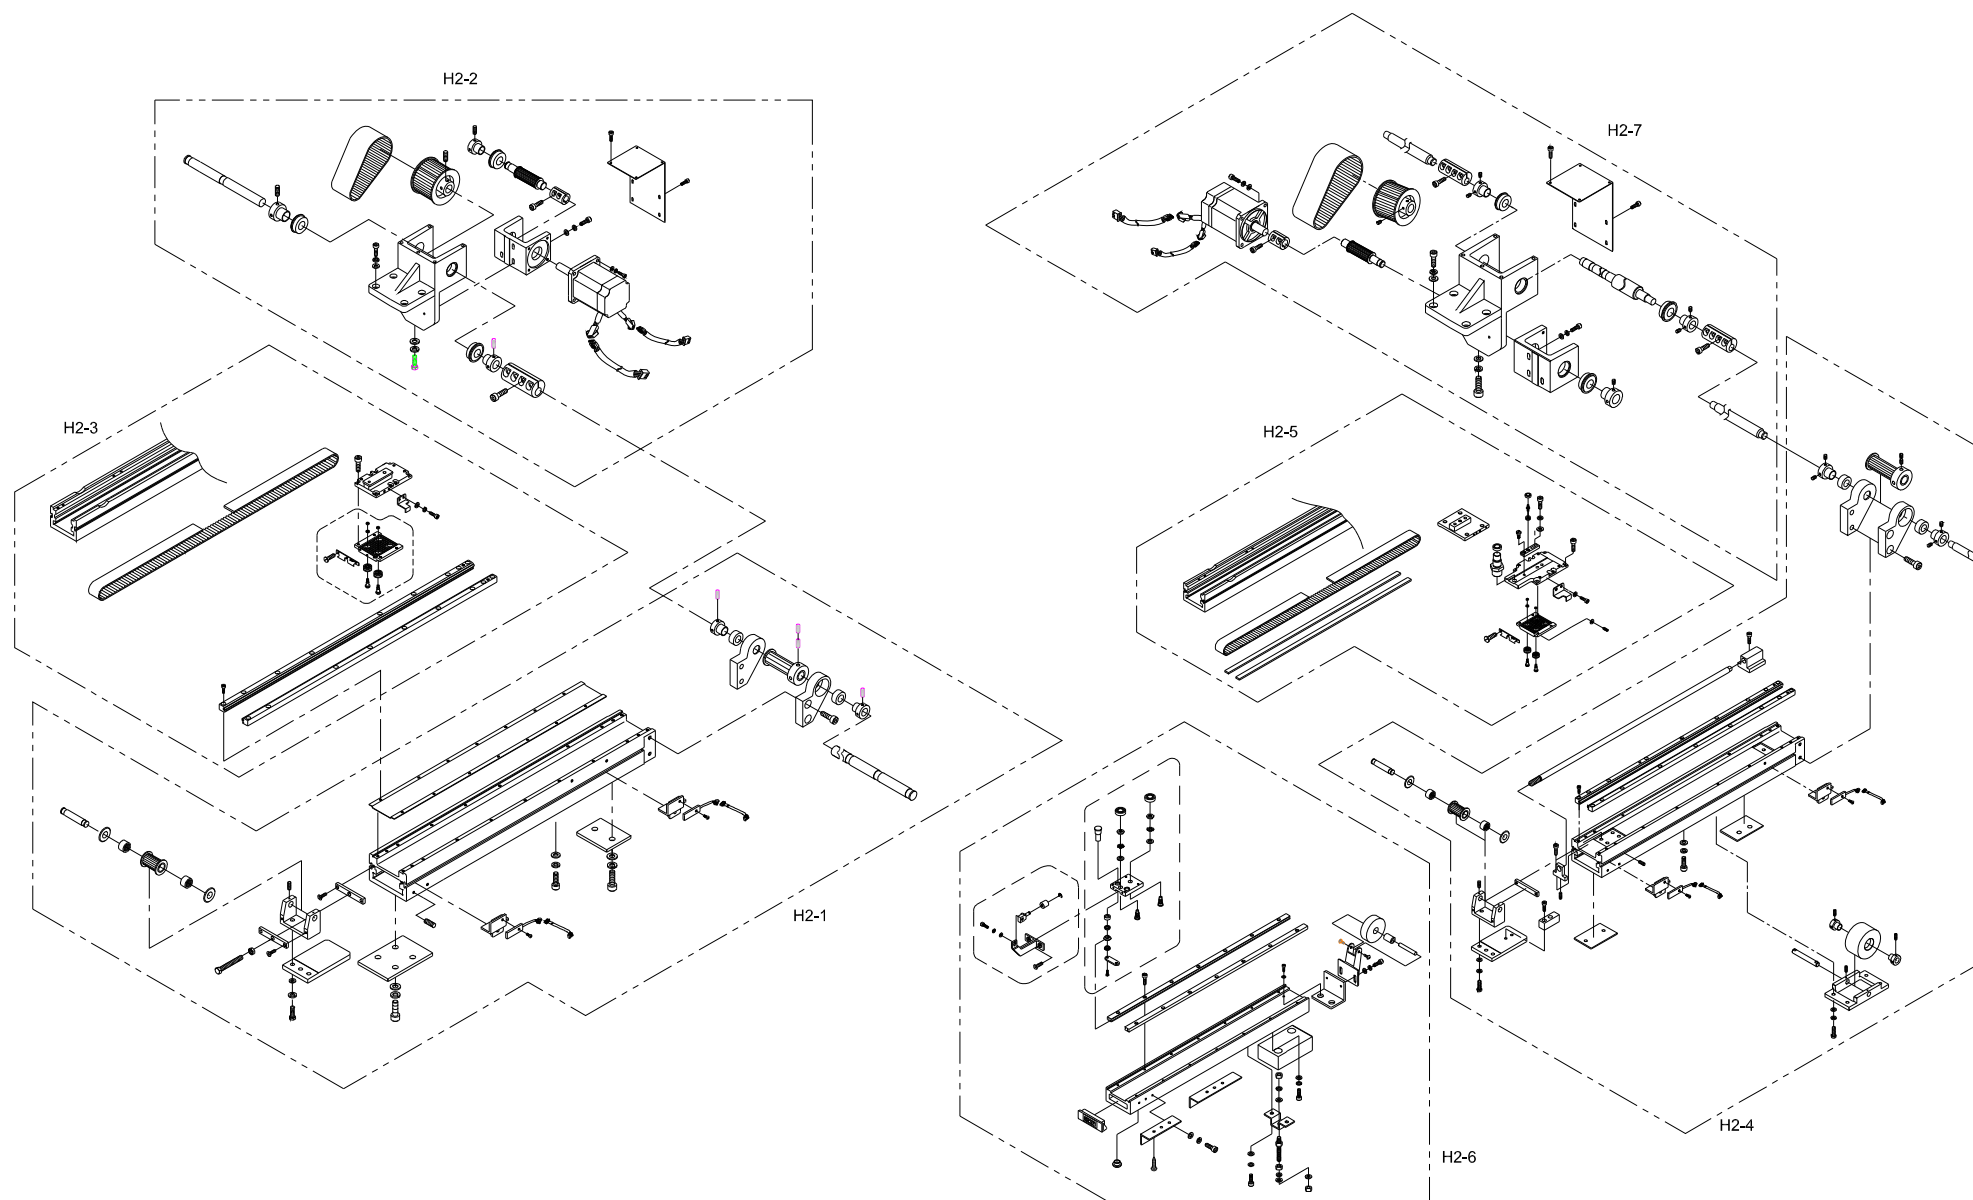

H2-1

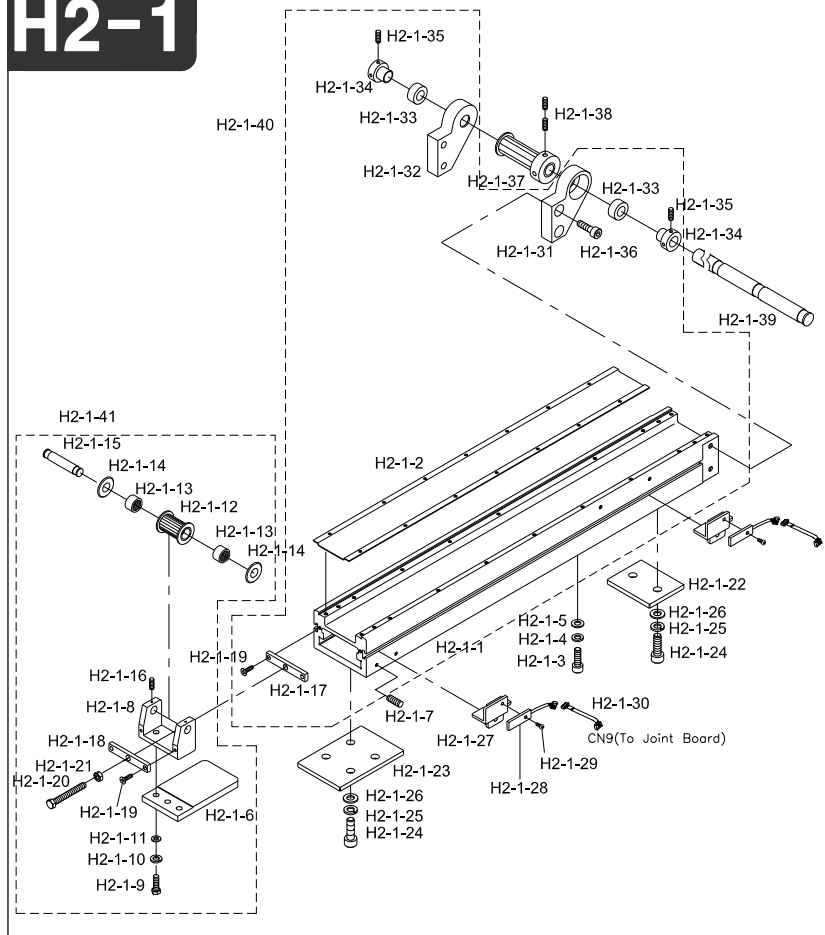

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
H2-1-1	04100100ID00	X Axis Frame				3	
H2-1-2	04105100B000	X BELT CATCHER PLATE (B)				3	
H2-1-3	15017SC-4113	Hex. Socket Bolt (M8*L45)			O	12	
	15019SC-4113	Hex. Socket Bolt (M8*L40)			O	12	
H2-1-4	15095SW-3115	Spring Washer (@8)			O	12	
H2-1-5	04029SW-A001	Stud Bolt Washer (@8)			O	12	
H2-1-6	04202400B000	Timing Pulley Tension Base				3	
H2-1-7	15090SC-B001	Hex.Socket Set Screw (M6*L10)			O	6	
H2-1-8	15027DC-A001	Timing Pulley Bracket (W)				3	
H2-1-9	15028SC-1111	Hex. Bolt (M6*L20)			O	6	
H2-1-10	03026SW-9115	Spring Washer (@6)			O	6	
H2-1-11	08057SW-1111	Washer (@6)			O	6	
H2-1-12	04600100B000	TIMING PULLEY D(18-S5M-32F)				3	
H2-1-13	15042BR-A001	Needle Bearing (1210zz)			O	6	
H2-1-14	15046RB-A001	Driving Pin Washer				6	
H2-1-15	04104400B000	Timing Pulley Driving Pin "B"				3	
H2-1-16	03022SC-4517	Hex.Socket Screw (M4*L5)			O	6	
H2-1-17	15055PR-A001	Tension Rivet Plate (W)				3	
H2-1-18	15056PR-A001	Tension Plate (W)				3	
H2-1-19	15089SC-7119	C.S SCREW (M4*L10)			O	12	
H2-1-20	15058SC-1211	Hex. Bolt (M6*L58)			O	3	
H2-1-21	14064SN-7311	HEX.NUT (M6-NO3)			O	3	
H2-1-22	04000100H000	X-Lm Guide Support Plate (A)				3	
H2-1-23	04000200H000	X-Lm Guide Support Plate (B)				3	
H2-1-24	15020SC-4113	Hex,Socket Bolt (M8*L50)			O	18	
H2-1-25	15095SW-3115	Spring Washer (@8)			O	18	
H2-1-26	04029SW-A001	Stud Bolt Washer(S) (@8)			O	18	
H2-1-27	GP-008025-00	Sensor Bracket X,Y	Mar,17,05 ~	X		2	
H2-1-28	EP-000067-00	X-Sensor	Dec,05,05 ~	X		2	
H2-1-29	02023SC-7113	Position Adjusting Screw				4	
H2-1-30	CA-000324-00	X-Sensor To Joint Board	Jul,16,05 ~	X		1	
H2-1-31	04000650I000	TIMING PULLEY BRACKET (L)				3	
H2-1-32	04000660I000	TIMING PULLEY BRACKET (R)				3	
H2-1-33	04000630I000	BEARING (6905ZZ)			O	6	
H2-1-34	04003500I000	NEEDLE BEARING COLLAR				6	
H2-1-35	14060AF-4517	HEX.SOCKET SCREW(M6*L6)			O	12	
H2-1-36	14002SC-7113	Hex.Socket Set Screw(M6*L15)			O	12	

H2-1

The diagram illustrates the assembly of the H2-1 door. The main components are the door panel (H2-1-2) and the frame (H2-1-1). The assembly is shown in an exploded view, with parts labeled with H2-1-1 through H2-1-41. The assembly sequence is indicated by dashed lines and arrows. The main components are the door panel (H2-1-2) and the frame (H2-1-1). The assembly is shown in an exploded view, with parts labeled with H2-1-1 through H2-1-41. The assembly sequence is indicated by dashed lines and arrows. The main components are the door panel (H2-1-2) and the frame (H2-1-1). The assembly is shown in an exploded view, with parts labeled with H2-1-1 through H2-1-41. The assembly sequence is indicated by dashed lines and arrows.


Key components and parts shown include:

- Door Panel (H2-1-2)
- Frame (H2-1-1)
- Parts H2-1-1 through H2-1-41, including various bolts, nuts, washers, and brackets.
- Assembly sequence indicated by dashed lines and arrows.

Note

H2

H2-2

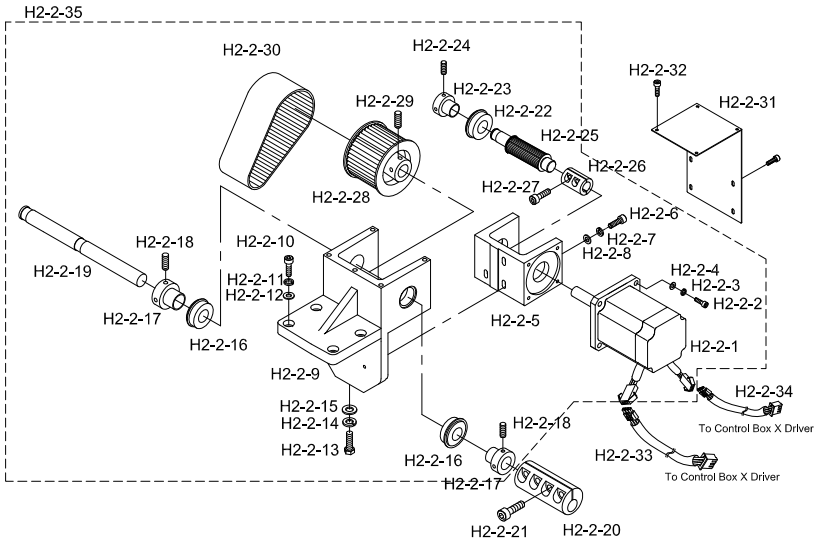

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
H2-2-1	DMPD3-000002	X-Y Motor (P20B10100Dxs)				1	
H2-2-2	08062SC-4113	Hex.Socket Bolt(M5*L20)			O	4	
H2-2-3	08070SW-9115	Spring Washer (@8)			O	4	
H2-2-4	18049SW-3111	Stud Bolt Washer(S) (@8)			O	4	
H2-2-5	GP-020302-00	X-Motor Bracket	Aug,11,06 ~	X		1	
H2-2-6	08087SC-7113	Hex.Socket Bolt(M8*L25)			O	3	
H2-2-7	15095SW-3115	Spring Washer (@8)			O	3	
H2-2-8	04029SW-A001	Stud Bolt Washer(S) (@8)			O	3	
H2-2-9	04001800I000	X Motor Base				1	
H2-2-10	08087SC-7113	Hex.Socket Bolt(M8*L25)			O	4	
H2-2-11	15095SW-3115	Spring Washer (@8)			O	4	
H2-2-12	04029SW-A001	Stud Bolt Washer(S) (@8)			O	4	
H2-2-13	15019SC-4113	Hex. Socket Bolt (M8*L40)			O	1	
H2-2-14	15095SW-3115	Spring Washer (@8)			O	1	
H2-2-15	04029SW-A001	Stud Bolt Washer(S) (@8)			O	1	
H2-2-16	02-009A-8180	Ball Bearing (6004NR)			O	2	
H2-2-17	03005210H000	COLLAR "A"				2	
H2-2-18	14060AF-4517	Hex.Socket Screw(M6*L6)			O	4	
H2-2-19	04001000I004	X Driving Pulley Shaft				1	
H2-2-20	GP-044599-00	COUPLING @20	Dec,23,08 ~	X		3	
H2-2-21	03016SC-4113	Screw			O	12	
H2-2-22	02-009A-8180	Ball Bearing (6004NR)			O	1	
H2-2-23	04003500B000	Bearing Stopper Collar "A"				1	
H2-2-24	14060AF-4517	Hex.Socket Screw(M6*L6)				2	
H2-2-25	PL-000054-00	X-Y Driving Shaft Timing Pulley	Jul,05,10 ~			1	
H2-2-26	04001700H000	Driving Shaft Coupling				1	
H2-2-27	GP-020301-00	Hex.Socket Bolt(M6*L20)	Aug,11,06 ~ Aug,06,07	X	O	2	
	GP-020301-01		Aug,06,07 ~ Nov,13,08	△			
	GP-020301-02		Nov,13,08 ~	△			
H2-2-28	04100330I000	Timing PULLEY(72-S5M-050)				1	
H2-2-29	14061AF-4517	Hex.Socket Screw(M8*L8)			O	8	
H2-2-30	04100410I000	Timing BELT (50-S5M-475)				1	
H2-2-31	12002000I000	X-Y Axis Servo Motor Cover				1	
H2-2-32	18033SC-3123	Truss Screw (M5*L6)			O	8	
H2-2-33	CA-001053-00	X-Motor To Control Box X-Driver Cable	Mar,03,06 ~	X		1	
H2-2-34	CA-001054-00	X-Motor To Encoder Cable To X-Driver Cable	Mar,03,06 ~	X		1	
H2-2-35	AS-008636-00	Y-Motor Base Assy	May,14,08 ~	X		1	

H2

This exploded view diagram illustrates the assembly of the H2-3 unit. The components are labeled as follows:


- H2-3-1**: A long, thin metal rail or track.
- H2-3-2**: A small screw or fastener used to secure the rail.
- H2-3-3**: A long, thin metal rail or track, similar to H2-3-1.
- H2-3-4**: A small metal bracket or connector.
- H2-3-5**: A small screw or fastener.
- H2-3-6**: A small metal bracket or connector.
- H2-3-7**: A small metal bracket or connector.
- H2-3-8**: A small metal bracket or connector.
- H2-3-9**: A small metal bracket or connector.
- H2-3-10**: A small metal bracket or connector.
- H2-3-11**: A small screw or fastener.
- H2-3-12**: A small screw or fastener.
- H2-3-13**: A small screw or fastener.
- H2-3-14**: A small metal bracket or connector.
- H2-3-15**: A small metal bracket or connector.
- H2-3-16**: A small metal bracket or connector.
- H2-3-17**: A small metal bracket or connector.
- H2-3-18**: A small metal bracket or connector.
- H2-1-40**: A large, complex metal frame or housing that serves as the base for the assembly.

The diagram shows the relative positions and assembly sequence of these components, with dashed lines indicating the alignment and fit of the parts.

[illegible]

H2

H2-4

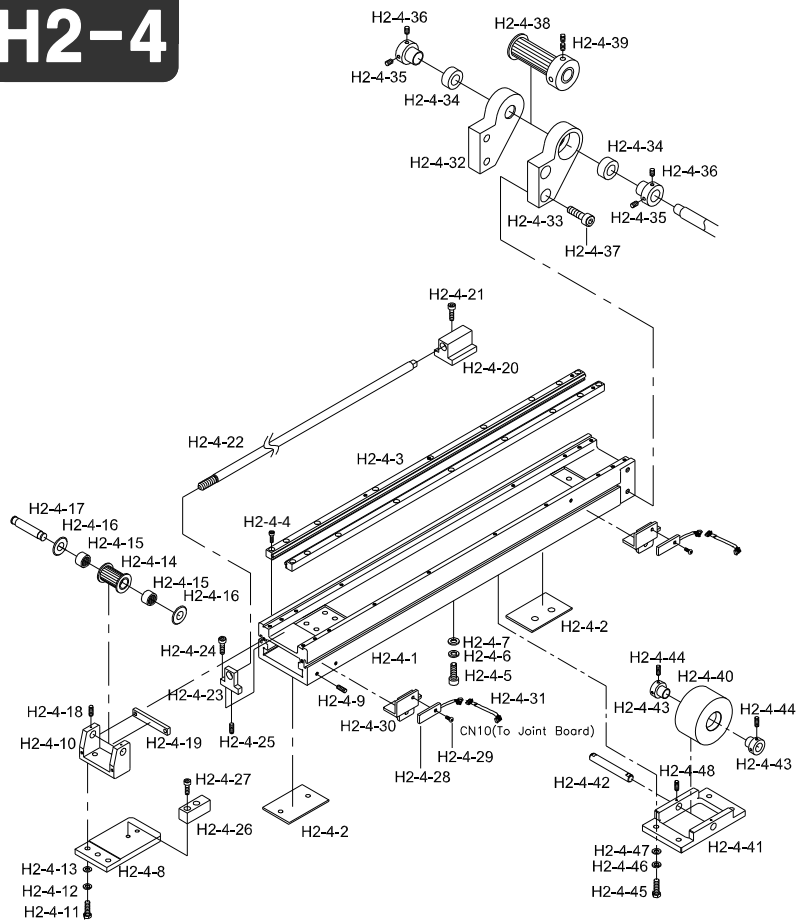

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
H2-4-1	04200100I004	Y-Axis Frame L=638				4	
H2-4-2	15112PR-A001	L/M Guide Plate "A-2"				12	
H2-4-3	15030AD-B021	Y Cam Roller Guide Rail L=633				8	
H2-4-4	04016MC-4113	Cam Roller Guide Fixed Screw				8	
H2-4-5	15017SC-4113	Hex. Socket Bolt (M8*L45)			O	16	
	15019SC-4113	Hex. Socket Bolt (M8*L40)			O	16	
H2-4-6	15095SW-3115	SPRING WASHER (@8)			O	16	
H2-4-7	04029SW-A001	Stud Bolt Washer (@8)			O	16	
H2-4-8	04302300B000	Timing Pulley Tension Base(N) (Belt:35)				2	
	04202400B000	Timing Pulley Tension Base				4	
H2-4-9	15090SC-B001	Hex.Socket Set Screw (M6*L10)			O	8	
H2-4-10	15026DC-A001	Timing Pulley Tension Bracket (N)				2	
	15027DC-A001	Timing Pulley Bracket (W)				4	
H2-4-11	15028SC-1111	Hex. Bolt (M6*L20)			O	21	
H2-4-12	03026SW-9115	Spring Washer (@6)			O	18	
H2-4-13	08057SW-1111	Washer (@6)			O	18	
H2-4-14	04500200B000	TIMING PULLEY B(18-S5M-32F)				2	
	04600100B000	TIMING PULLEY D(18-S5M-32F)				4	
H2-4-15	15042BR-A001	Needle Bearing (1210zz)			O	12	
H2-4-16	15046RB-A001	Driving Pin Washer				12	
H2-4-17	04104300B000	Timing Pulley Driving Pin "A" (Belt:35)				2	
	04104400B000	Timing Pulley Driving Pin "B" (Belt:48)				4	
H2-4-18	03022SC-4517	Hex.Socket Screw (M4*L5)			O	12	
H2-4-19	15055PR-A001	Tension Rivet Plate (W)				2	
H2-4-20	04200500B000	Y Adjusting Shaft Guide (B)				6	
H2-4-21	16059SC-7113	HEX.SOCKET BOLT (M6*L12)			O	24	
H2-4-22	04000900B009	Y-Adjusting Shaft				6	
H2-4-23	04200400B000	Y Adjusting Shaft Guide (A)				6	
H2-4-24	16059SC-7113	Hex.Socket Bolt (M6*L12)			O	12	
H2-4-25	14061AF-4517	Hex.Socket Set Screw (M8*L8)			O	6	
H2-4-26	04200600B000	Adjusting Shaft Stopper				4	
H2-4-27	14006SC-7113	HEX.SOCKET SET SCREW(M8*L15)			O	12	
H2-4-28	EP-000067-00	Xy-Sensor Ass'Y	Dec,05,05 ~	X		2	
H2-4-29	EP-008035-00	Perception Sensor Bracket X,Y				2	
H2-4-30	02023SC-7113	Plus Screw (M3*L8)			O	4	
H2-4-31	CA-000325-00	Y-Sensor To Joint Board Cable	Jul,16,05 ~	X		1	
H2-4-32	04000650I000	TIMING PULLEY BRACKET (L)				4	

H2-4

This exploded view diagram illustrates the assembly of the H2-4 unit. The components are labeled with part numbers and are shown in their relative positions for assembly. The main assembly consists of a long, narrow frame (H2-4-3) with a central channel. Various brackets, pins, and fasteners are used to secure the components. The assembly sequence is indicated by dashed lines and arrows. Key components include:

- H2-4-3**: The main frame or base.
- H2-4-1**: A bracket or support piece.
- H2-4-2**: A small plate or bracket.
- H2-4-4**: A long, thin component, possibly a rod or pin.
- H2-4-5**: A small pin or fastener.
- H2-4-6**: A small pin or fastener.
- H2-4-7**: A small pin or fastener.
- H2-4-8**: A small plate or bracket.
- H2-4-9**: A small pin or fastener.
- H2-4-10**: A small plate or bracket.
- H2-4-11**: A small pin or fastener.
- H2-4-12**: A small pin or fastener.
- H2-4-13**: A small pin or fastener.
- H2-4-14**: A small pin or fastener.
- H2-4-15**: A small pin or fastener.
- H2-4-16**: A small pin or fastener.
- H2-4-17**: A small pin or fastener.
- H2-4-18**: A small pin or fastener.
- H2-4-19**: A small pin or fastener.
- H2-4-20**: A small pin or fastener.
- H2-4-21**: A small pin or fastener.
- H2-4-22**: A long, thin component, possibly a rod or pin.
- H2-4-23**: A small pin or fastener.
- H2-4-24**: A small pin or fastener.
- H2-4-25**: A small pin or fastener.
- H2-4-26**: A small pin or fastener.
- H2-4-27**: A small pin or fastener.
- H2-4-28**: A small pin or fastener.
- H2-4-29**: A small pin or fastener.
- H2-4-30**: A small pin or fastener.
- H2-4-31**: A small pin or fastener.
- H2-4-32**: A small pin or fastener.
- H2-4-33**: A small pin or fastener.
- H2-4-34**: A small pin or fastener.
- H2-4-35**: A small pin or fastener.
- H2-4-36**: A small pin or fastener.
- H2-4-37**: A small pin or fastener.
- H2-4-38**: A small pin or fastener.
- H2-4-39**: A small pin or fastener.
- H2-4-40**: A small pin or fastener.
- H2-4-41**: A small pin or fastener.
- H2-4-42**: A small pin or fastener.
- H2-4-43**: A small pin or fastener.
- H2-4-44**: A small pin or fastener.
- H2-4-45**: A small pin or fastener.
- H2-4-46**: A small pin or fastener.
- H2-4-47**: A small pin or fastener.
- H2-4-48**: A small pin or fastener.
- H2-4-49**: A small pin or fastener.
- H2-4-50**: A small pin or fastener.

Note


H2

The diagram illustrates the assembly of the H2-5-10 component. The main assembly is shown in an exploded view, with parts labeled H2-5-1 through H2-5-29. The components include:

- H2-5-1**: A long, thin, rectangular component with a textured surface.
- H2-5-2**: A long, thin, rectangular component with a textured surface, positioned above H2-5-1.
- H2-5-3**: A small, rectangular component with a textured surface.
- H2-5-4**: A small, rectangular component with a textured surface.
- H2-5-5**: A small, rectangular component with a textured surface.
- H2-5-6**: A small, rectangular component with a textured surface.
- H2-5-7**: A small, rectangular component with a textured surface.
- H2-5-8**: A small, rectangular component with a textured surface.
- H2-5-9**: A small, rectangular component with a textured surface.
- H2-5-10**: A small, rectangular component with a textured surface.
- H2-5-11**: A small, rectangular component with a textured surface.
- H2-5-12**: A small, rectangular component with a textured surface.
- H2-5-13**: A small, rectangular component with a textured surface.
- H2-5-14**: A small, rectangular component with a textured surface.
- H2-5-15**: A small, rectangular component with a textured surface.
- H2-5-16**: A small, rectangular component with a textured surface.
- H2-5-17**: A small, rectangular component with a textured surface.
- H2-5-18**: A small, rectangular component with a textured surface.
- H2-5-19**: A small, rectangular component with a textured surface.
- H2-5-20**: A small, rectangular component with a textured surface.
- H2-5-21**: A small, rectangular component with a textured surface.
- H2-5-22**: A small, rectangular component with a textured surface.
- H2-5-23**: A small, rectangular component with a textured surface.
- H2-5-24**: A small, rectangular component with a textured surface.
- H2-5-25**: A small, rectangular component with a textured surface.
- H2-5-26**: A small, rectangular component with a textured surface.
- H2-5-27**: A small, rectangular component with a textured surface.
- H2-5-28**: A small, rectangular component with a textured surface.
- H2-5-29**: A small, rectangular component with a textured surface.



H2-6

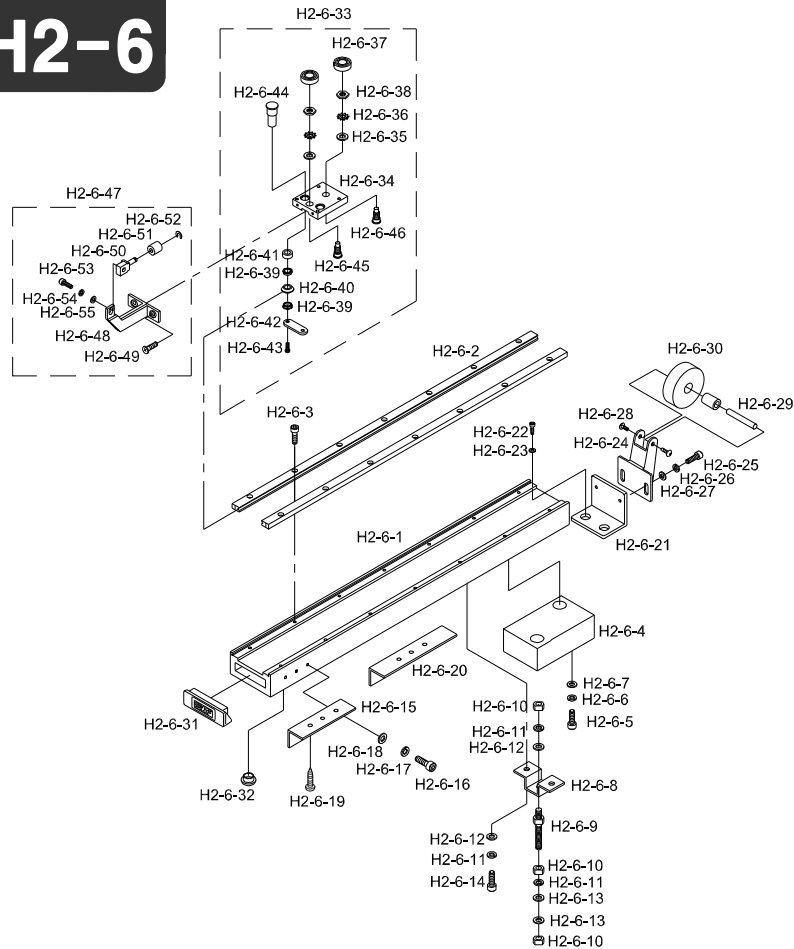

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
H2-6-1	08000200B009	V-Rail Bracket				4	
H2-6-2	08000100B009	Y-Axis Rail Guide				8	
H2-6-3	02015SC-7113	HEX.SOCKET BOLT (M4*L10)			O	112	
H2-6-4	15095AD-B001	Spacer				4	
H2-6-5	15020SC-4113	Hex. Socket Bolt (M8X150)			O	8	
H2-6-6	15095SW-3115	SPRING WASHER (@8)			O	8	
H2-6-7	08041SW-1111	Washer (@8-S)			O	8	
H2-6-8	15097PR-B001	Stud Bracket				4	
H2-6-9	15096CW-B001	Stud Bolt				4	
H2-6-10	04032SN-A001	Hex. Nut (M8)			O	4	
H2-6-11	15095SW-3115	SPRING WASHER (@8)			O	4	
H2-6-12	08041SW-1111	Washer (@8-S)			O	4	
H2-6-13	04029SW-A001	Stud Bolt Washer (@8)			O	4	
H2-6-14	14006SC-7113	Hex.Socket Set Screw (M8*L15)			O	12	
H2-6-15	15093AD-B001	Table Support				16	
H2-6-16	18047SC-7113	Hex. Socket Bolt (M5*L15)			O	72	
H2-6-17	18048SW-3115	Spring Washer (5@)			O	72	
H2-6-18	18049SW-3111	Washer (@5)			O	72	
H2-6-19	16010SC-8330	Tapping Screw (M6*L25)			O	72	
H2-6-20	15094AD-B001	Table Support (B)				8	
H2-6-21	GP-013196-00	ROLLER BRACKET SUPPORT	Nov,10,05 ~	X		4	
H2-6-22	14006SC-4113	Hex. Socket Bolt (M8*L15)			O	8	
H2-6-23	15077SW-2111	Washer (@8)			O	8	
H2-6-24	GP-006914-00	Roller Bracket	Jan,12,05 ~ Jun,02,05			4	
	GP-006914-01		Jun,02,05 ~ May,03,06				
	GP-006914-02		May,03,06 ~				
H2-6-25	02023SC-7113	Hex. Socket Bolt (M4*L8)			O	8	
H2-6-26	02028SW-9115	Spring Washer (@4)			O	8	
H2-6-27	05009SW-1111	Washer (@4)			O	8	
H2-6-28	09005SC-3123	Truss Screw (M3*L6)			O	8	
H2-6-29	PN-000133-00	Roller Pin	Jan,12,05 ~	X		4	
H2-6-30	GP-006917-00	Guide Roller	Jan,12,05 ~ Jun,02,05	X		4	
	GP-006917-01		Jun,02,05 ~	△			
H2-6-31	15092RB-B001	Rubber Cap (A)				4	
H2-6-32	15091RB-A001	Rubber Cap (B)				4	
H2-6-33	15071BM-A001	V-Roller Guide Set				4	
H2-6-34	08400010B000	Y-Axis Feed Plate "D"				4	

H2

H2-6


The diagram illustrates the assembly of the H2-6 unit, showing the following components and their assembly sequence:

- Top Section:** H2-6-33, H2-6-37, H2-6-44, H2-6-38, H2-6-36, H2-6-35, H2-6-34, H2-6-46, H2-6-41, H2-6-39, H2-6-45, H2-6-40, H2-6-39, H2-6-42, H2-6-43.
- Left Section:** H2-6-47, H2-6-52, H2-6-51, H2-6-50, H2-6-53, H2-6-54, H2-6-55, H2-6-48, H2-6-49.
- Central Section:** H2-6-2, H2-6-22, H2-6-23, H2-6-3, H2-6-1, H2-6-20, H2-6-15, H2-6-18, H2-6-17, H2-6-16, H2-6-19, H2-6-31, H2-6-32.
- Right Section:** H2-6-30, H2-6-29, H2-6-28, H2-6-24, H2-6-25, H2-6-26, H2-6-27, H2-6-21, H2-6-4.
- Bottom Section:** H2-6-7, H2-6-6, H2-6-5, H2-6-10, H2-6-11, H2-6-12, H2-6-8, H2-6-9, H2-6-12, H2-6-11, H2-6-14, H2-6-10, H2-6-11, H2-6-13, H2-6-13, H2-6-10.

Note

H2

H2-7

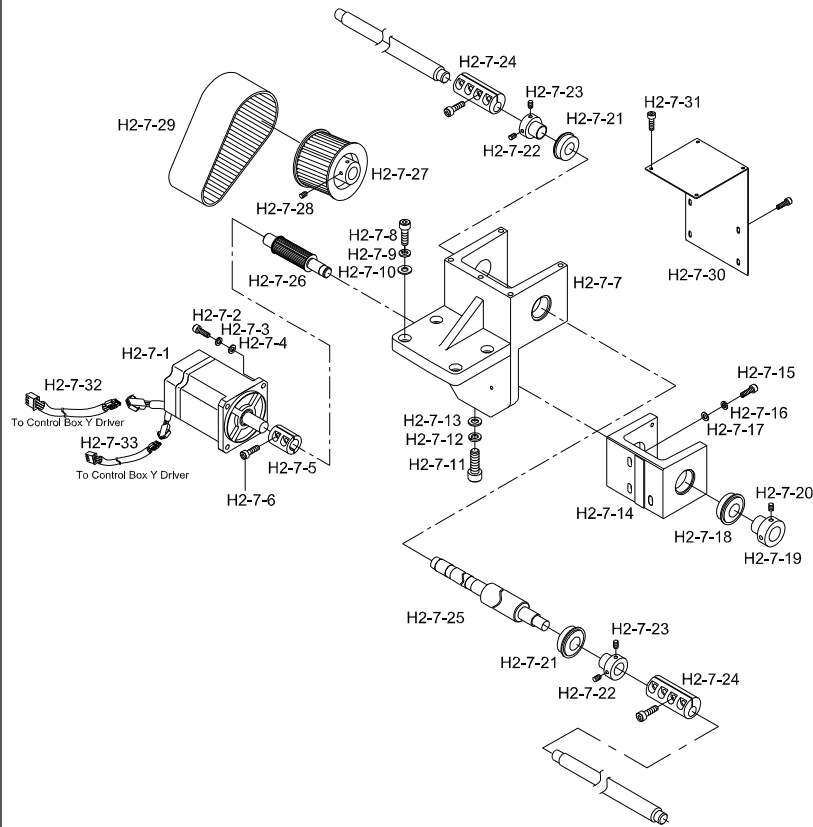


Note


Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
H2-7-1	DMPD3-000002	Motor				1	
H2-7-2	08062SC-4113	Hex.Socket Bolt(M5*L20)				4	
H2-7-3	08070SW-9115	Spring Washer (@8)				4	
H2-7-4	18049SW-3111	Stud Bolt Washer(S) (@8)				4	
H2-7-5	GP-020301-00	Driving Shaft Coupling	Aug,11,06 ~ Aug,06,07	X		1	
	GP-020301-01		Aug,06,07 ~ Nov,13,08	△			
	GP-020301-02		Nov,13,08 ~	△			
H2-7-6	08091SC-7113	Hex.Socket Bolt(M6*L20)				2	
H2-7-7	04002200I000	Y-MOTER BASE				1	
H2-7-8	06025MC-7113	Hex.Socket Bolt(M6*L25)				4	
H2-7-9	15095SW-3115	Spring Washer (@8)				4	
H2-7-10	04029SW-A001	Stud Bolt Washer(S) (@8)				4	
H2-7-11	15019SC-4113	Hex. Socket Bolt (M8*L40)				1	
H2-7-12	15095SW-3115	Spring Washer (@8)				1	
H2-7-13	04029SW-A001	Stud Bolt Washer(S) (@8)				1	
H2-7-14	GP-020304-00	Y-Motor Bracket	Aug,11,06 ~	X		1	
H2-7-15	06025MC-7113	Hex.Socket Bolt(M6*L25)				3	
H2-7-16	15095SW-3115	Spring Washer (@8)				3	
H2-7-17	04029SW-A001	Stud Bolt Washer(S) (@8)				3	
H2-7-18	02-009A-8180	BALL BEARING 6004NR				1	
H2-7-19	04003500B000	Needle Bearing Collar				1	
H2-7-20	14060AF-4517	Hex.Socket Set Screw(M5*L5)				2	
H2-7-21	02-009A-8180	Ball Bearing 6004NR				2	
H2-7-22	03005210H000	Collar "A"				2	
H2-7-23	14060AF-4517	Hex.Socket Screw(M6*L6)				4	
H2-7-24	03006720HDKO	Coupling(@20)				1	
H2-7-25	04200200I000	Y-Driving Pulley Shaft				1	
H2-7-26	GP-020300-00	Y-Axis Timing Pulley	Aug,11,06 ~	X		1	
H2-7-27	04100330I000	Timing PULLEY(72-S5M-050)				1	
H2-7-28	14061AF-4517	Hex.Socket Screw(M8*L8)				8	
H2-7-29	04100410I000	Timing BELT (50-S5M-475)				1	
H2-7-30	12002000I000	Y-Axis Servo Motor Cover A				1	
H2-7-31	18033SC-3123	Truss Screw (M5*L6)				8	
H2-7-32	CA-001055-00	Y-Motor To Control Box Y Driver Cable	Mar,03,06 ~	X		1	
H2-7-33	CA-001056-00	Y-Motor Encoder To Y Driver Cable	Mar,03,06 ~	X		1	

H2

Setting

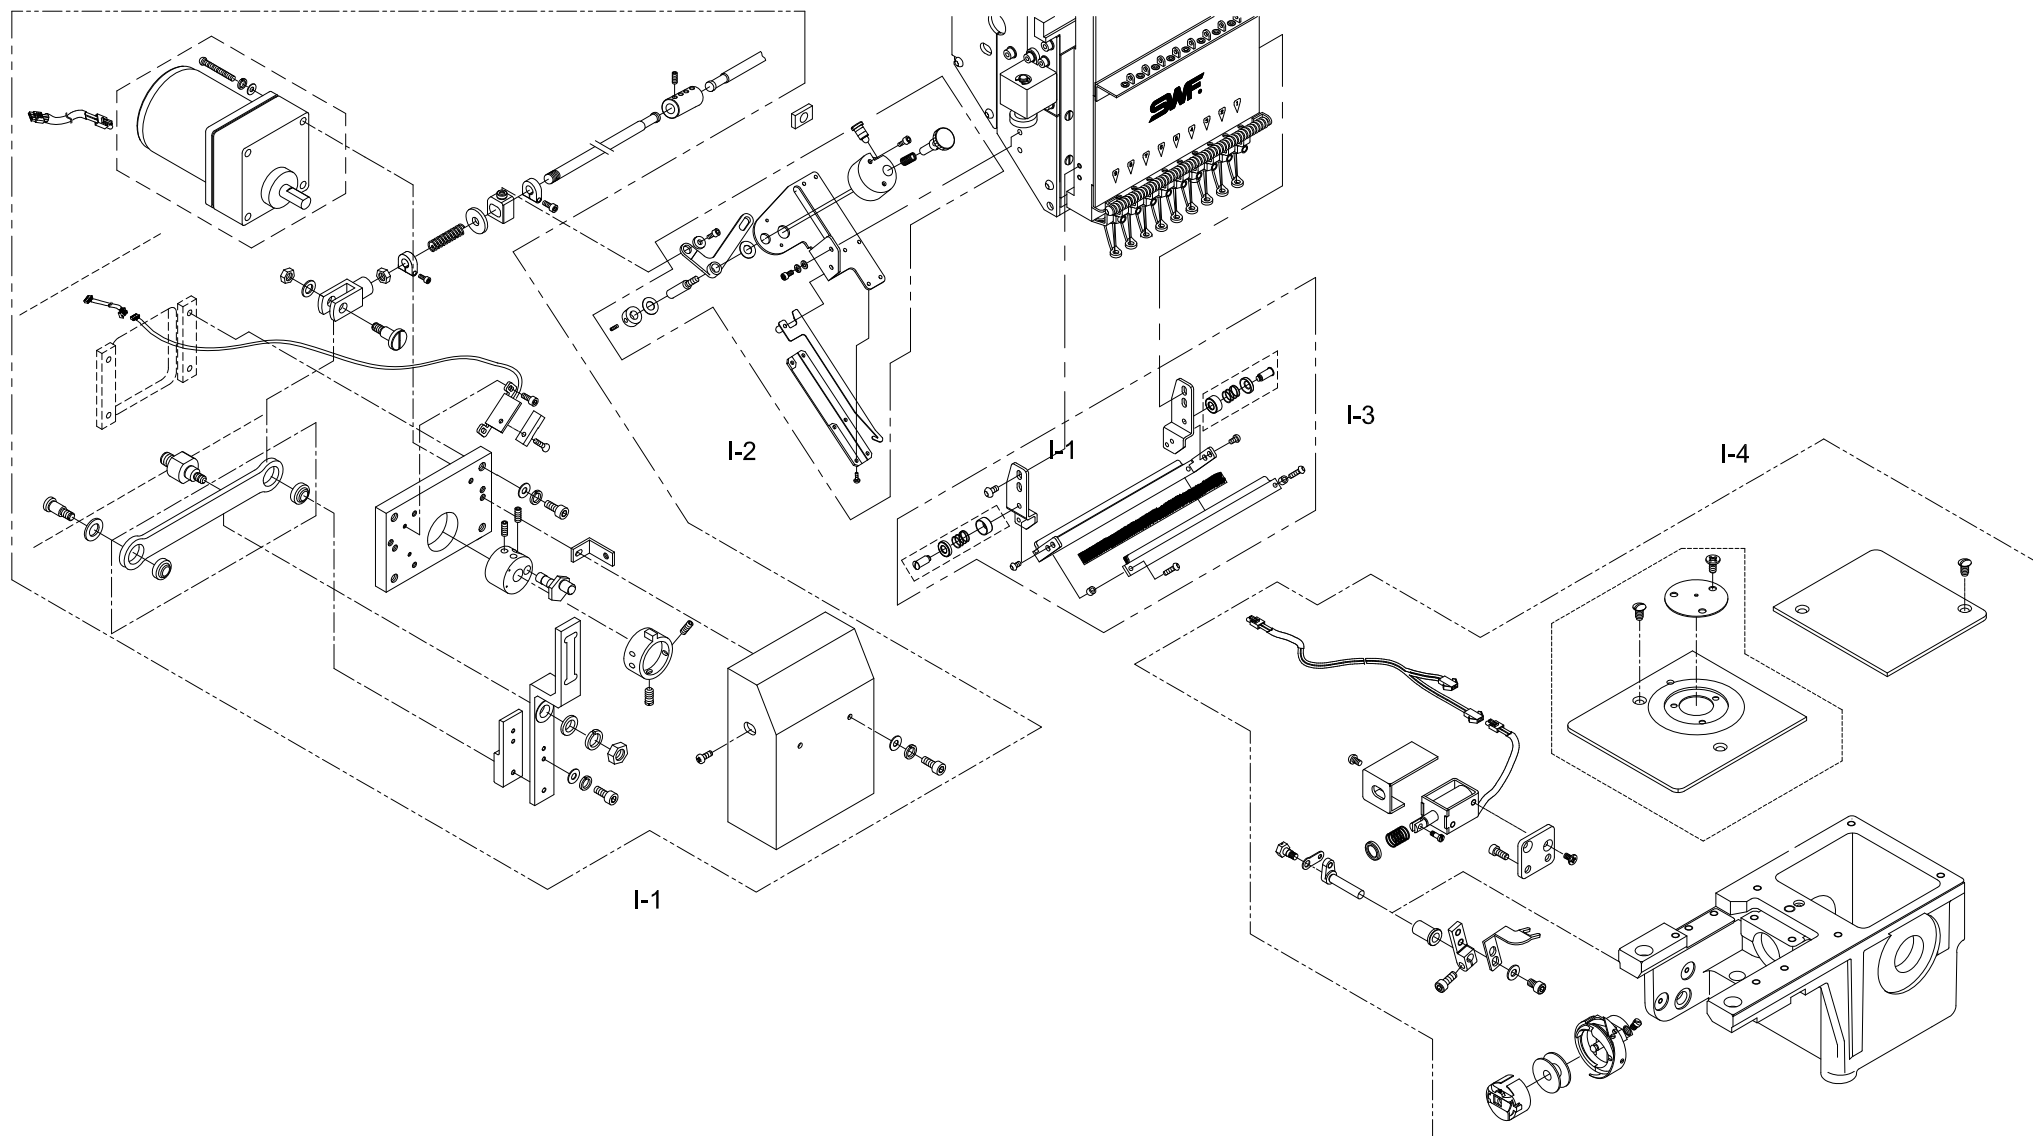

I-1

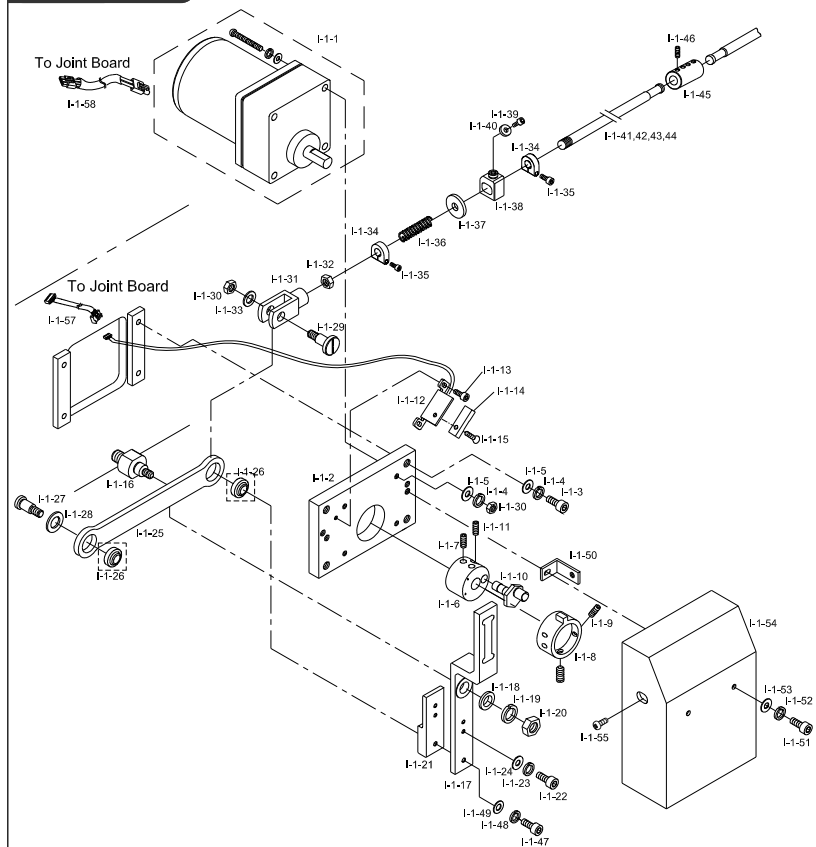

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
I-1-1	03003100H000	Upper Thread Hook Motor Unit				1	
I-1-2	GP-046540-00	MOTOR BASE	Jun,09,09 ~ Jul,08,10	X		1	
	GP-046540-01		Jul,08,10 ~	△			
I-1-3	06025MC-7113	Hex. Socket Bolt (M6*L25)			O	4	
I-1-4	16014SW-4115	Spring Washer (@8)			O	4	
I-1-5	08057SW-1111	Washer (@6)			O	4	
I-1-6	03003300H000	Cam Shaft Fixing Block				1	
I-1-7	05008MC-4517	Hex. Socket Bolt (M5*L8)			O	2	
I-1-8	GP-005184-00	SENSOR SENSING ADJUSTING RING	Oct,14,04 ~ May,19,05	X		1	
	GP-005184-01		May,19,05 ~	△			
I-1-9	04014SC-4517	Hex.Socket Set Screw(M5*L5)			O	2	
I-1-10	03003500H000	Motor Driving Cam Shaft				1	
I-1-11	04014SC-4517	Hex.Socket Set Screw(M5*L5)			O	1	
I-1-12	GP-015085-00	UPPER THREAD HOOK SENSOR BASE	Oct,13,04 ~	X		1	
I-1-13	07035SC-7113	Bracket Screw (M3*L6)			O	2	
I-1-14	EP-000067-00	SENSOR				1	
I-1-15	13061SC-8119	Plus Screw (M3*L10)			O	1	
I-1-16	SC-001729-00	STUD BOLT FOR DRIVING PLATE	Jun,03,09 ~ Apr,20,10	X		1	
	SC-001729-01		Apr,20,10 ~ Jul,08,10	△			
	SC-001729-02		Jul,08,10 ~	△			
I-1-17	03003910H000	Upper Thread Driving Plate				1	
I-1-18	WS-000549-00	Stud Bolt Washer	Feb,20,09 ~ Jun,24,09	X		1	
	WS-000549-01		Jun,24,09 ~	△			
I-1-19	16014SW-4115	Spring Washer (@8)			O	1	
I-1-20	13042SN-1111	Hex. Nut (M6*T5-R)			O	1	
I-1-21	GP-021754-00	Driving Plate Block"C"	Sep,21,06 ~	X		1	
I-1-22	03016SC-4113	Hex. Socket Bolt (M5*L15)			O	2	
I-1-23	18048SW-3115	Spring Washer (@5)			O	2	
I-1-24	18049SW-3111	Washer (@5)			O	2	
I-1-25	GP-044787-00	MOTOR DRIVING CONNECT PLATE	Jan,13,09 ~	X		1	
I-1-26	03004400H000	Motor Driving Connect Bearing				2	
I-1-27	03008300H000	Connecting Plate Pin				1	
I-1-28	03004500H000	Connecting Plate Pin Washer				1	
I-1-29	SC-001605-00	Connecting Plate Stud Screw	Jan,13,09 ~	X		1	
I-1-30	13042SN-1111	Hex. Nut (M6*T5-R)			O	1	
I-1-31	03004800H000	Connecting Plate Knuckle				1	
I-1-32	04032SN-A001	Hex. Nut (M8)			O	1	
I-1-33	03026SW-9115	Spring Washer				1	
I-1-34	LWP-BK0003-00	Return Spring Stopper	Dec,28,10 ~	X		36	
	LWP-BK0003-01		Jul,01,11 ~	△			
I-1-35	05008SC-4113	Hex. Socket Bolt (M4*L16)			O	36	
I-1-36	03002700H000	Return Spring				18	

Note



Note



I-3

This diagram illustrates the exploded view of the I-3 door assembly. The main components shown include:

- Door Panel:** The main door panel with the "SWF" logo and a series of triangular warning symbols.
- Top Mounting:** A bracket assembly (I-3-11) that secures the top of the door panel.
- Bottom Mounting:** A bracket assembly (I-3-7) that secures the bottom of the door panel.
- Rollers:** A series of rollers (I-3-2) mounted on a track (I-3-1) to facilitate smooth movement.
- Adjusters:** A series of adjusters (I-3-3) mounted on the bottom of the door panel to adjust the gap and alignment.
- Hardware:** Various screws, bolts, and washers (I-3-4, I-3-5, I-3-6, I-3-8, I-3-9, I-3-10) used to assemble the components.

The diagram is divided into two sections by a dashed line. The top section shows the door panel and the top mounting bracket (I-3-11). The bottom section shows the bottom mounting bracket (I-3-7), the roller track (I-3-1), the rollers (I-3-2), the adjusters (I-3-3), and the various hardware components (I-3-4, I-3-5, I-3-6, I-3-8, I-3-9, I-3-10).

Note




This exploded view diagram illustrates the assembly of the I-4 camera. The components are labeled as follows:

- I-4-1**: Main camera body
- I-4-2**: Lens assembly
- I-4-3**: Lens mount
- I-4-4**: Mounting bracket
- I-4-5**: Mounting screw
- I-4-6**: Mounting screw
- I-4-7**: Mounting screw
- I-4-8**: Mounting screw
- I-4-9**: Mounting screw
- I-4-10**: Mounting bracket
- I-4-11**: Mounting screw
- I-4-12**: Mounting screw
- I-4-13**: Mounting screw
- I-4-14**: Mounting screw
- I-4-15**: Mounting screw
- I-4-16**: Mounting screw
- I-4-17**: Mounting bracket
- I-4-18**: Mounting screw
- I-4-19**: Mounting bracket
- I-4-20**: Mounting screw
- I-4-21**: Mounting screw
- I-4-22**: Mounting screw
- I-4-23**: Mounting bracket
- I-4-24**: Mounting screw
- I-4-25**: Mounting screw
- I-4-26**: Mounting screw
- I-4-27**: Mounting bracket
- To Joint Board <CN15,CN16>**: Cable connection

Note

Spool

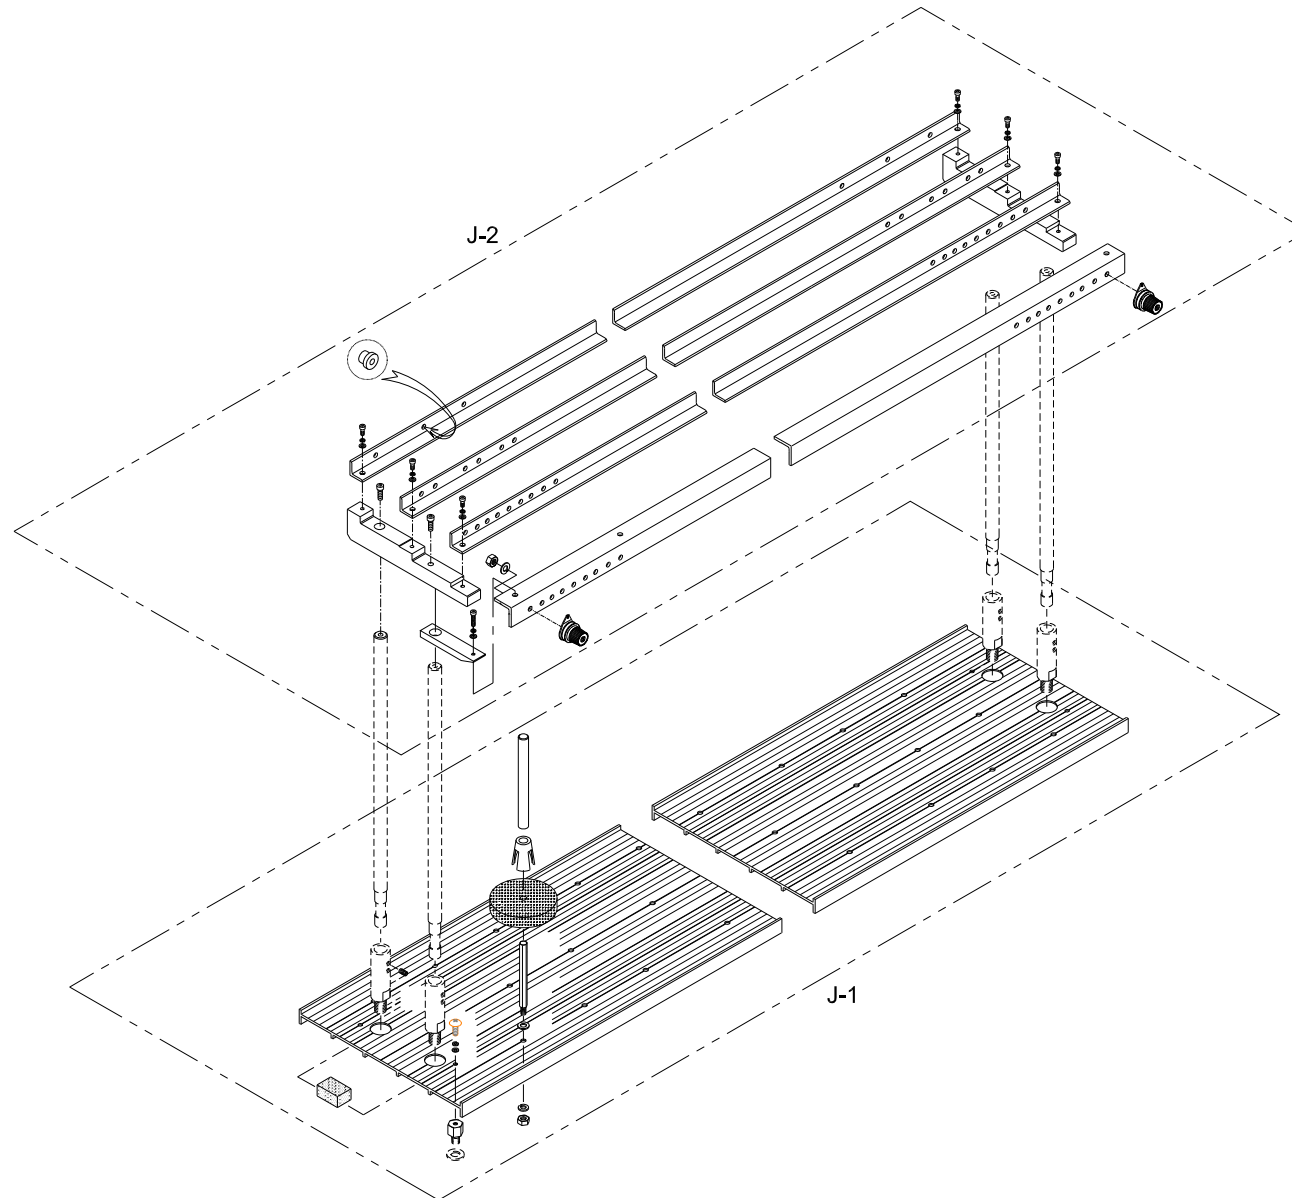

This exploded view diagram illustrates the assembly of the J-1-14 component. The main assembly, J-1-1, is a rectangular plate with a series of parallel ridges. It is shown being secured to a base plate, J-1-2, which also features a similar ribbed design. The assembly is held together by a central bolt, J-1-9, which passes through a washer, J-1-8, and a nut, J-1-10. A lock washer, J-1-11, and a lock nut, J-1-12, are used to secure the bolt. A small rectangular block, J-1-13, is positioned at the bottom left corner of the assembly. A dashed line indicates the location of the J-1-14 component, which is shown as a separate part with a series of parallel ridges. The diagram also shows a small rectangular block, J-1-13, and a small circular component, J-1-14, which is shown as a separate part.

[illegible]


This diagram illustrates the exploded view of the J-2 assembly components. The parts are labeled as follows:

- J-2-1**: A long, narrow rectangular plate with multiple holes along its length.
- J-2-2**: A long, narrow rectangular plate with multiple holes along its length.
- J-2-3**: A long, narrow rectangular plate with multiple holes along its length.
- J-2-4**: A long, narrow rectangular plate with multiple holes along its length.
- J-2-5**: A long, narrow rectangular plate with multiple holes along its length.
- J-2-6**: A small rectangular plate with a single hole.
- J-2-7**: A small rectangular plate with a single hole.
- J-2-8**: A small rectangular plate with a single hole.
- J-2-9**: A long, narrow rectangular plate with multiple holes along its length.
- J-2-10**: A small rectangular plate with a single hole.
- J-2-11**: A small rectangular plate with a single hole.
- J-2-12**: A small rectangular plate with a single hole.
- J-2-13**: A small rectangular plate with a single hole.
- J-2-14**: A long, narrow rectangular plate with multiple holes along its length.
- J-2-15**: A small rectangular plate with a single hole.
- J-2-16**: A small rectangular plate with a single hole.
- J-2-17**: A small rectangular plate with a single hole.
- J-2-18**: A small rectangular plate with a single hole.
- J-2-19**: A small rectangular plate with a single hole.

The diagram shows the relative positions and orientations of these components, indicating how they fit together to form the complete assembly. A dashed line indicates the boundary of the assembly area.

[illegible]

Work Table (Y-Stroke 1000 Below)

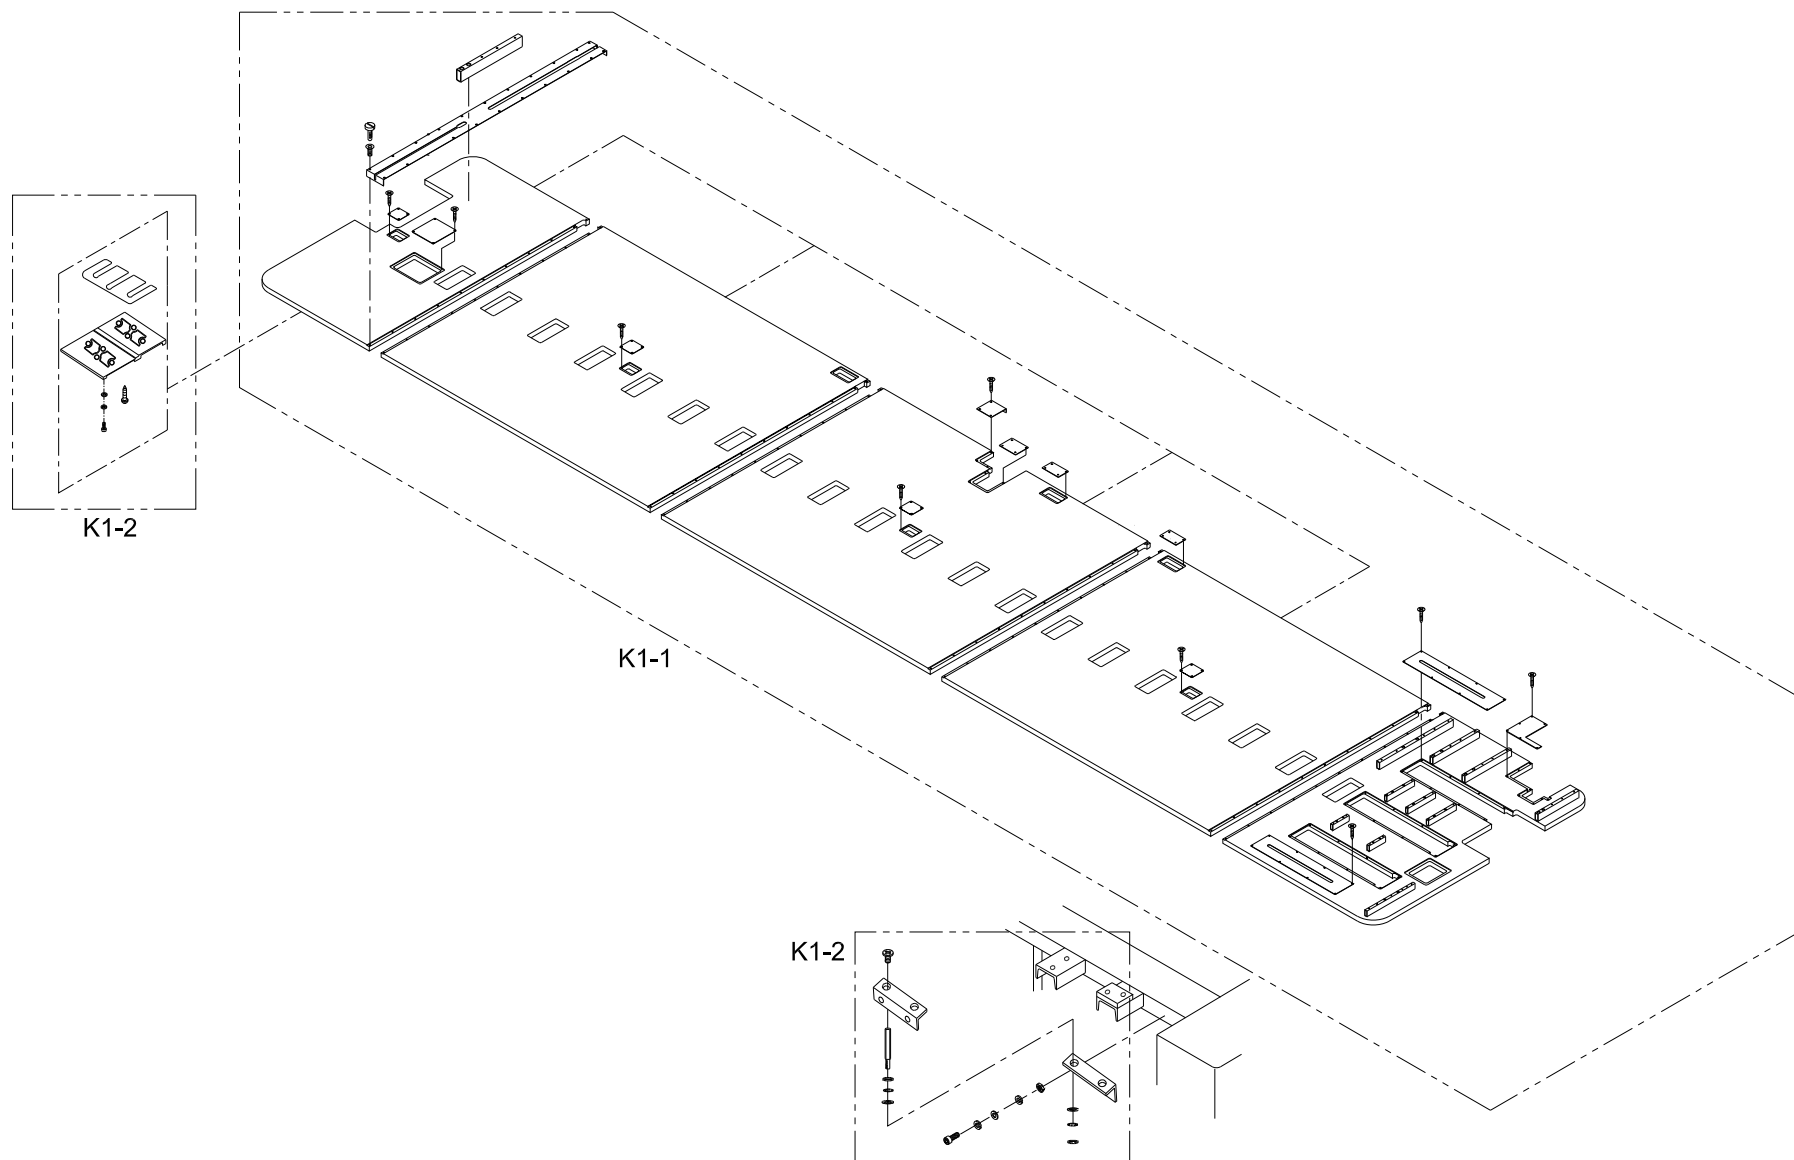

K1-1

This exploded view diagram illustrates the assembly of the K1-1 unit. The components are labeled as follows:

- K1-1-1: Main base plate
- K1-1-2, K1-1-3, K1-1-4, K1-1-5: Top rail assembly components
- K1-1-6, K1-1-7, K1-1-8, K1-1-9: Small rectangular components and spacers
- K1-1-10, K1-1-11, K1-1-12, K1-1-13, K1-1-14, K1-1-15, K1-1-16, K1-1-17, K1-1-18, K1-1-19: Various internal structural components and rails
- K1-1-20, K1-1-21, K1-1-22, K1-1-23: Small rectangular components and spacers

The diagram shows the assembly sequence with arrows indicating the direction of assembly. The main base plate (K1-1-1) is the central component, with various rails and components being attached to it. The top rail assembly (K1-1-2 to K1-1-5) is shown being attached to the top of the base plate. The internal components (K1-1-10 to K1-1-19) are shown being attached to the bottom of the base plate. The small rectangular components and spacers (K1-1-6 to K1-1-9, K1-1-20 to K1-1-23) are shown being inserted into the base plate.

Note

K1

K1-2


This diagram illustrates the assembly of the K1-2 control panel. It shows the main panel (K1-2-1) with various components being installed. The components and their assembly order are as follows:

- K1-2-18**: A mounting bracket that is first attached to the back of the panel.
- K1-2-17**: A terminal block that is then mounted onto the bracket K1-2-18.
- K1-2-13**, **K1-2-14**, and **K1-2-15**: Screws used to secure the terminal block K1-2-17.
- K1-2-16**: A screw used to secure the bracket K1-2-18 to the panel.
- K1-2-4**: A screw used to secure the main panel K1-2-1 to the mounting surface.
- K1-2-3**: A screw used to secure the terminal block K1-2-17 to the panel.
- K1-2-5**, **K1-2-6**, and **K1-2-7**: Screws used to secure the terminal block K1-2-17 to the panel.
- K1-2-8**, **K1-2-9**, **K1-2-10**, and **K1-2-11**: Screws used to secure the terminal block K1-2-17 to the panel.
- K12-2**: A mounting bracket that is attached to the side of the panel.
- K1-2-5**, **K1-2-6**, and **K1-2-7**: Screws used to secure the terminal block K1-2-17 to the panel.


Note

K1

Work Table (Y-Stroke 1200 Above)

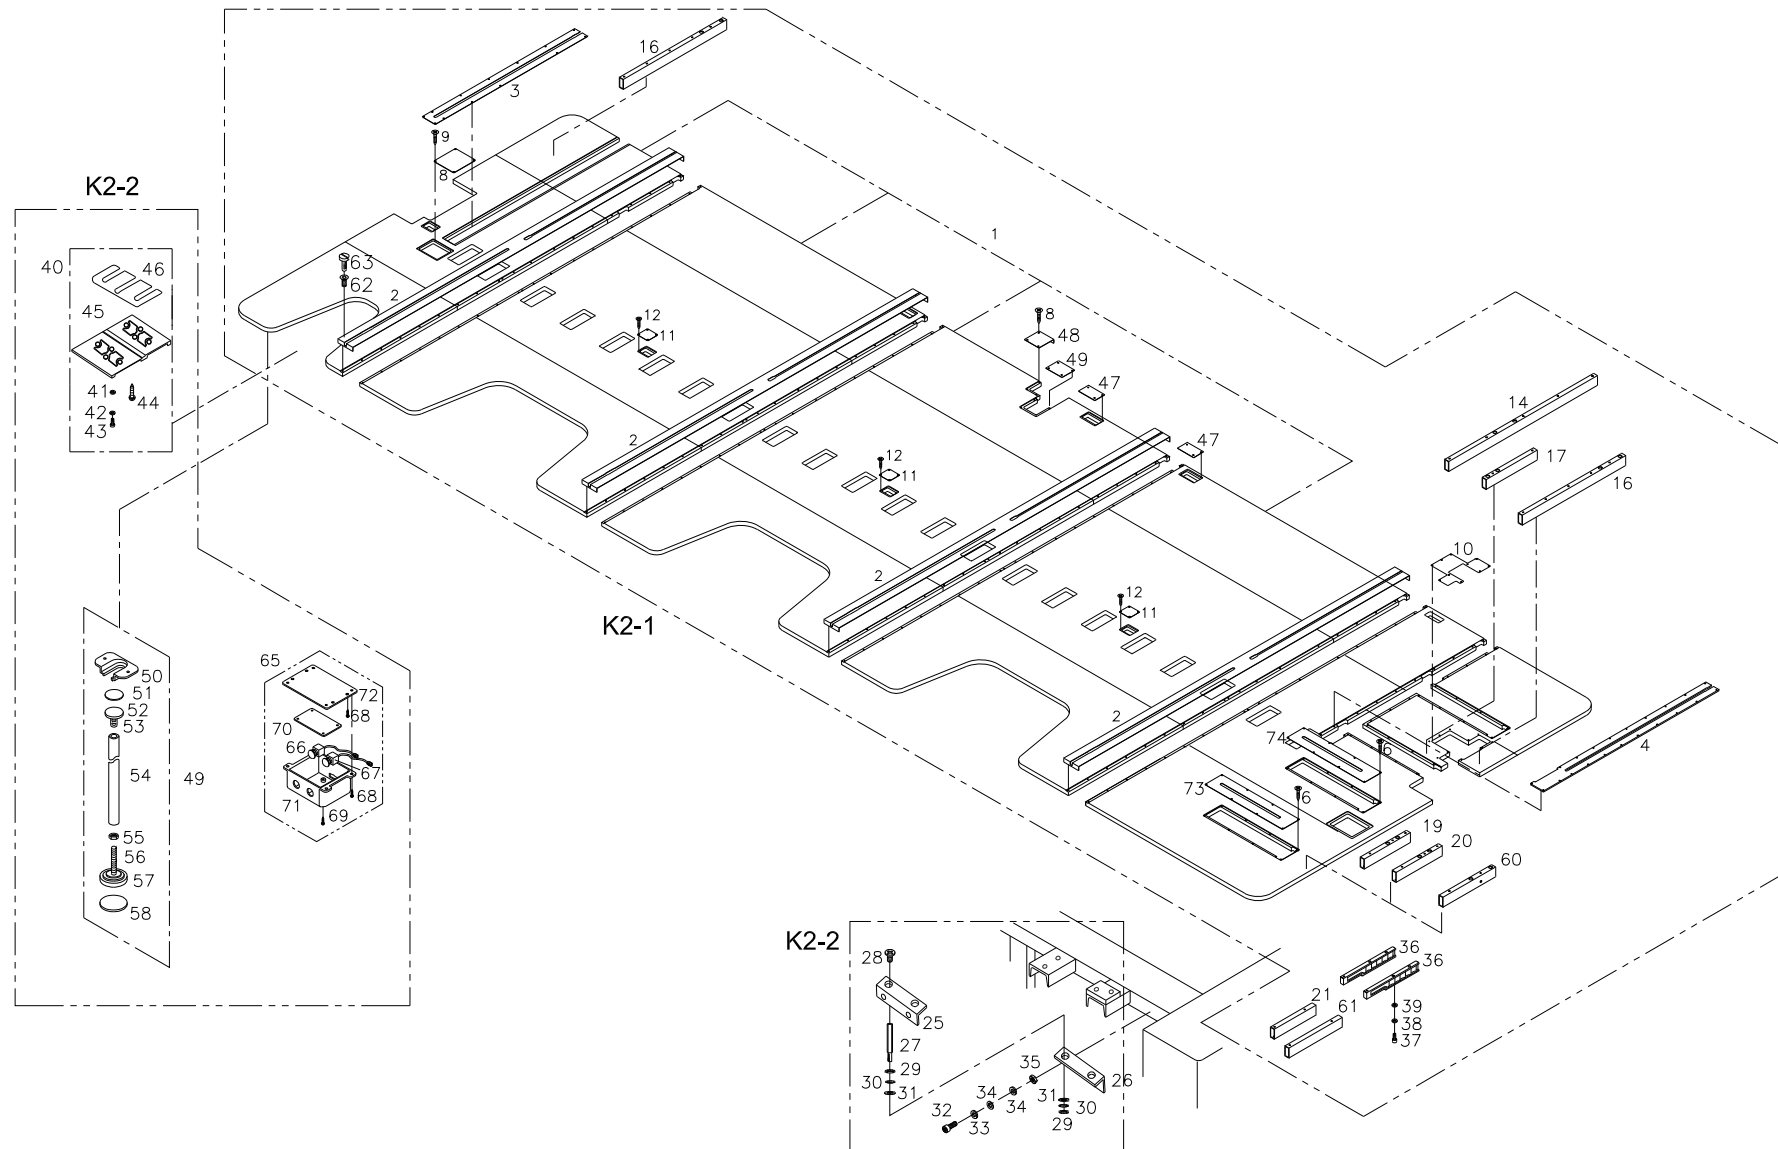

K2-1

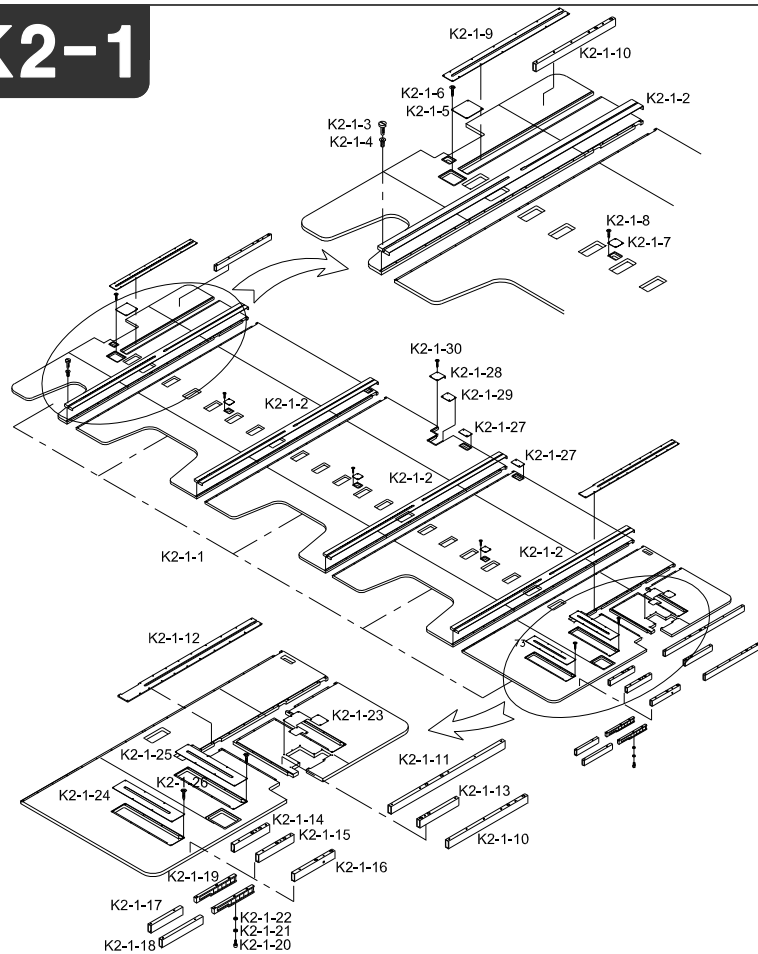


Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
K2-1-1	AS-005607-00	Table(Set)	Oct,28,06 ~	X		1	
K2-1-2	GP-021267-00	TABLE CONNECTING COVER				4	
K2-1-3	SC-000236-00	SCREW M4*L10	Aug,26,04 ~	X	O	152	
K2-1-4	SN-000164-00	TABLE INSERT NUT	Aug,17,07 ~ Mar,06,08	X		152	
	SN-000164-01		Mar,06,08 ~	△			
K2-1-5	08088PR-B001	Mes Driving Box Cover				1	
K2-1-6	08101SC-8329	Tapping Screw (M3*L16)			O	4	
K2-1-7	16035LA-A001	Low Shaft Coupling Cover B				4	
K2-1-8	08101SC-8329	Tapping Screw (@3*L16)			O	20	
K2-1-9	GP-004228-00	TABLE CONNECTING COVER	Aug,26,04 ~	X		1	
K2-1-10	06000400B009	Table Support (D) (L=730)				2	
K2-1-11	06000200B009	Table Support (B) (L=1051)				2	
K2-1-12	06000010B000	Table Connecting Cover (D)				1	
K2-1-13	06000500B009	Table Support (E) (L=360)				3	
K2-1-14	06000700B009	Table Support (G) (L=325)				3	
K2-1-15	06000800B009	Table Support (H) (L=376)				20	
K2-1-16	06000200BTZI	TABLE SUPPORT ANGLE "C"				1	
K2-1-17	06000900B009	Table Support (I) (L=293)				2	
K2-1-18	06000900BUYK	TABLE SUPPORT ANGLE "K"				1	
K2-1-19	GP-010089-00	Table Support Connecting Bar B	Jun,14,05 ~ Oct,04,05	X		23	
	GP-010089-01		Oct,04,05 ~ Mar,14,08	△			
	GP-010089-02		Mar,14,08 ~ Mar,28,08	△			
	GP-010089-03		Mar,28,08 ~	△			
K2-1-20	16009SC-4113	Hex. Socket Bolt				92	
K2-1-21	16014SW-4115	Spring Washer (@6)			O	92	
K2-1-22	08057SW-1111	Washer (@6)			O	92	
K2-1-23	GP-006144-00	X-Coupling Cover	Dec,09,04 ~	X		1	
K2-1-24	GP-021058-00	X-LM Guide Cover B				1	
K2-1-25	GP-021059-00	X-LM Guide Cover C	Aug,31,06 ~ Jan,25,07	X		1	
	GP-021059-01		Jan,25,07 ~	△			
K2-1-26	08101SC-8329	Tapping Screw (M3*L16)			O	26	
K2-1-27	GP-017156-00	Y-Coupling Cover	Apr,14,06	X		1	
K2-1-28	GP-006538-00	Y-Coupling Cover A	Dec,21,04 ~	X		16	
K2-1-29	GP-006540-00	Y-Coupling Cover C	Dec,21,04 ~	X		1	
K2-1-30	08101SC-8329	Tapping Screw (M3*L16)			O	6	

K2

K2-2

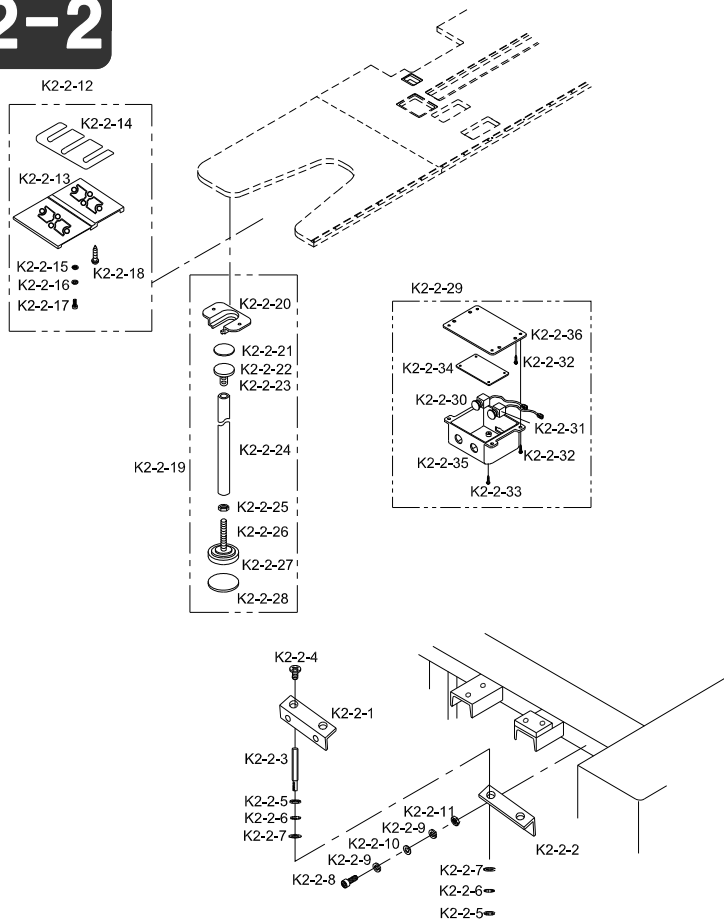

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
K2-2-1	16013CW-A001	Table Support (E) (L=320)				1	
K2-2-2	16014CW-A001	Table Support Bracket "A"				1	
K2-2-3	16021CW-A001	Stud Bolt				2	
K2-2-4	06020MC-8119	PLUSS SCREW (M6*L20)			O	2	
K2-2-5	04032SN-A001	Hex. Nut (M8)			O	4	
K2-2-6	15095SW-3115	Spring Washer (@8)			O	2	
K2-2-7	04029SW-A001	Stud Bolt Washer (@8)			O	4	
K2-2-8	08091SC-7113	Hex. Socket Bolt (M6*L20)			O	2	
K2-2-9	16014SW-4115	Spring Washer (@6)			O	2	
K2-2-10	08057SW-1111	Washer (@6)			O	2	
K2-2-11	13042SN-1111	Hex. Nut (M6*T5-R)			O	2	
K2-2-12	16043BM-A021	Table Connecting Plate (Set)				20	
K2-2-13	06001100B000	TABLE CONNECTING PLATE "C"				24	
K2-2-14	06001200B000	TABLE SPACE PLATE "C"				48	
K2-2-15	18049SW-3111	Washer (@5)			O	160	
K2-2-16	18048SW-3115	Spring Washer (@5)			O	160	
K2-2-17	02031SC-7113	Hex. Socket Screw (M5*L10)			O	160	
K2-2-18	16010SC-8330	Tapping Screw (M6*L25)			O	160	
K2-2-19	16047BM-A021	TABLE SUPPORT BASE SET (L)				10	
	12000200B009	TABLE SUPPORT BAR B				2	
K2-2-20	12010000B009	TABLE SUPPORT BAR BRACKET				1	
K2-2-21	16048RB-A021	TABLE SUPPORT PLATE RUBBER				1	
K2-2-22	16047PR-A021	TABLE SUPPORT PLATE				1	
K2-2-23	16049CW-A021	TABLE SUPPORT PLATE PIN				1	
K2-2-24	16050CW-A021	TABLE SUPPORT BAR				1	
	12000200B009	TABLE SUPPORT BAR B				1	
K2-2-25	02321SN-A001	HEX. NUT (M16)				2	
K2-2-26	02325SC-A021	HEX. BOLT (M16*L150)				1	
K2-2-27	02331CW-A001	TABLE SUPPORT BASE SET				1	
K2-2-28	02332RB-A001	TABLE SUPPORT RUBBER (B)				1	
K2-2-29	SWF-00000344	OFFSET SWITCH BOX ASS'Y				4	
K2-2-30	02026EL-UK01	START S/W				1	
K2-2-31	02027EL-UK01	STOP S/W				1	
K2-2-32	09005SC-3123	SCREW (M3*L6)			O	8	
K2-2-33	22015SC-9134	SCREW (M3*L6)			O	5	
K2-2-34	BD-000177-00	OFFSET S/W BOARD	Apr,04,05 ~	X		1	
K2-2-35	GP-012130-00	OFFSET S/W BOX	Sep,23,05 ~	X		1	

K2

K2-2


The diagram illustrates the assembly of the K2-2 unit, showing the following components and their assembly sequence:

- K2-2-12**: Main housing or base plate.
- K2-2-13**: A small rectangular component with four pins.
- K2-2-14**: A small rectangular component with three pins.
- K2-2-15**, **K2-2-16**, **K2-2-17**: Small circular components.
- K2-2-18**: A small screw or fastener.
- K2-2-19**: A long vertical rod or pin.
- K2-2-20**: A small rectangular component with a circular base.
- K2-2-21**, **K2-2-22**, **K2-2-23**: Small circular components.
- K2-2-24**: A small rectangular component.
- K2-2-25**, **K2-2-26**, **K2-2-27**, **K2-2-28**: A series of small circular components and a larger circular component.
- K2-2-29**: A small rectangular component.
- K2-2-30**, **K2-2-31**, **K2-2-32**, **K2-2-33**, **K2-2-34**, **K2-2-35**, **K2-2-36**: A complex assembly of components including a rectangular plate, a circular component, a small rectangular component, a small circular component, a small rectangular component, a small circular component, and a small rectangular component.
- K2-2-4**: A small rectangular component.
- K2-2-3**: A small rectangular component.
- K2-2-5**, **K2-2-6**, **K2-2-7**: A series of small circular components.
- K2-2-8**: A small rectangular component.
- K2-2-9**, **K2-2-10**, **K2-2-11**: A series of small circular components.
- K2-2-2**: A small rectangular component.
- K2-2-7**, **K2-2-6**, **K2-2-5**: A series of small circular components.


Note

K2

Cable

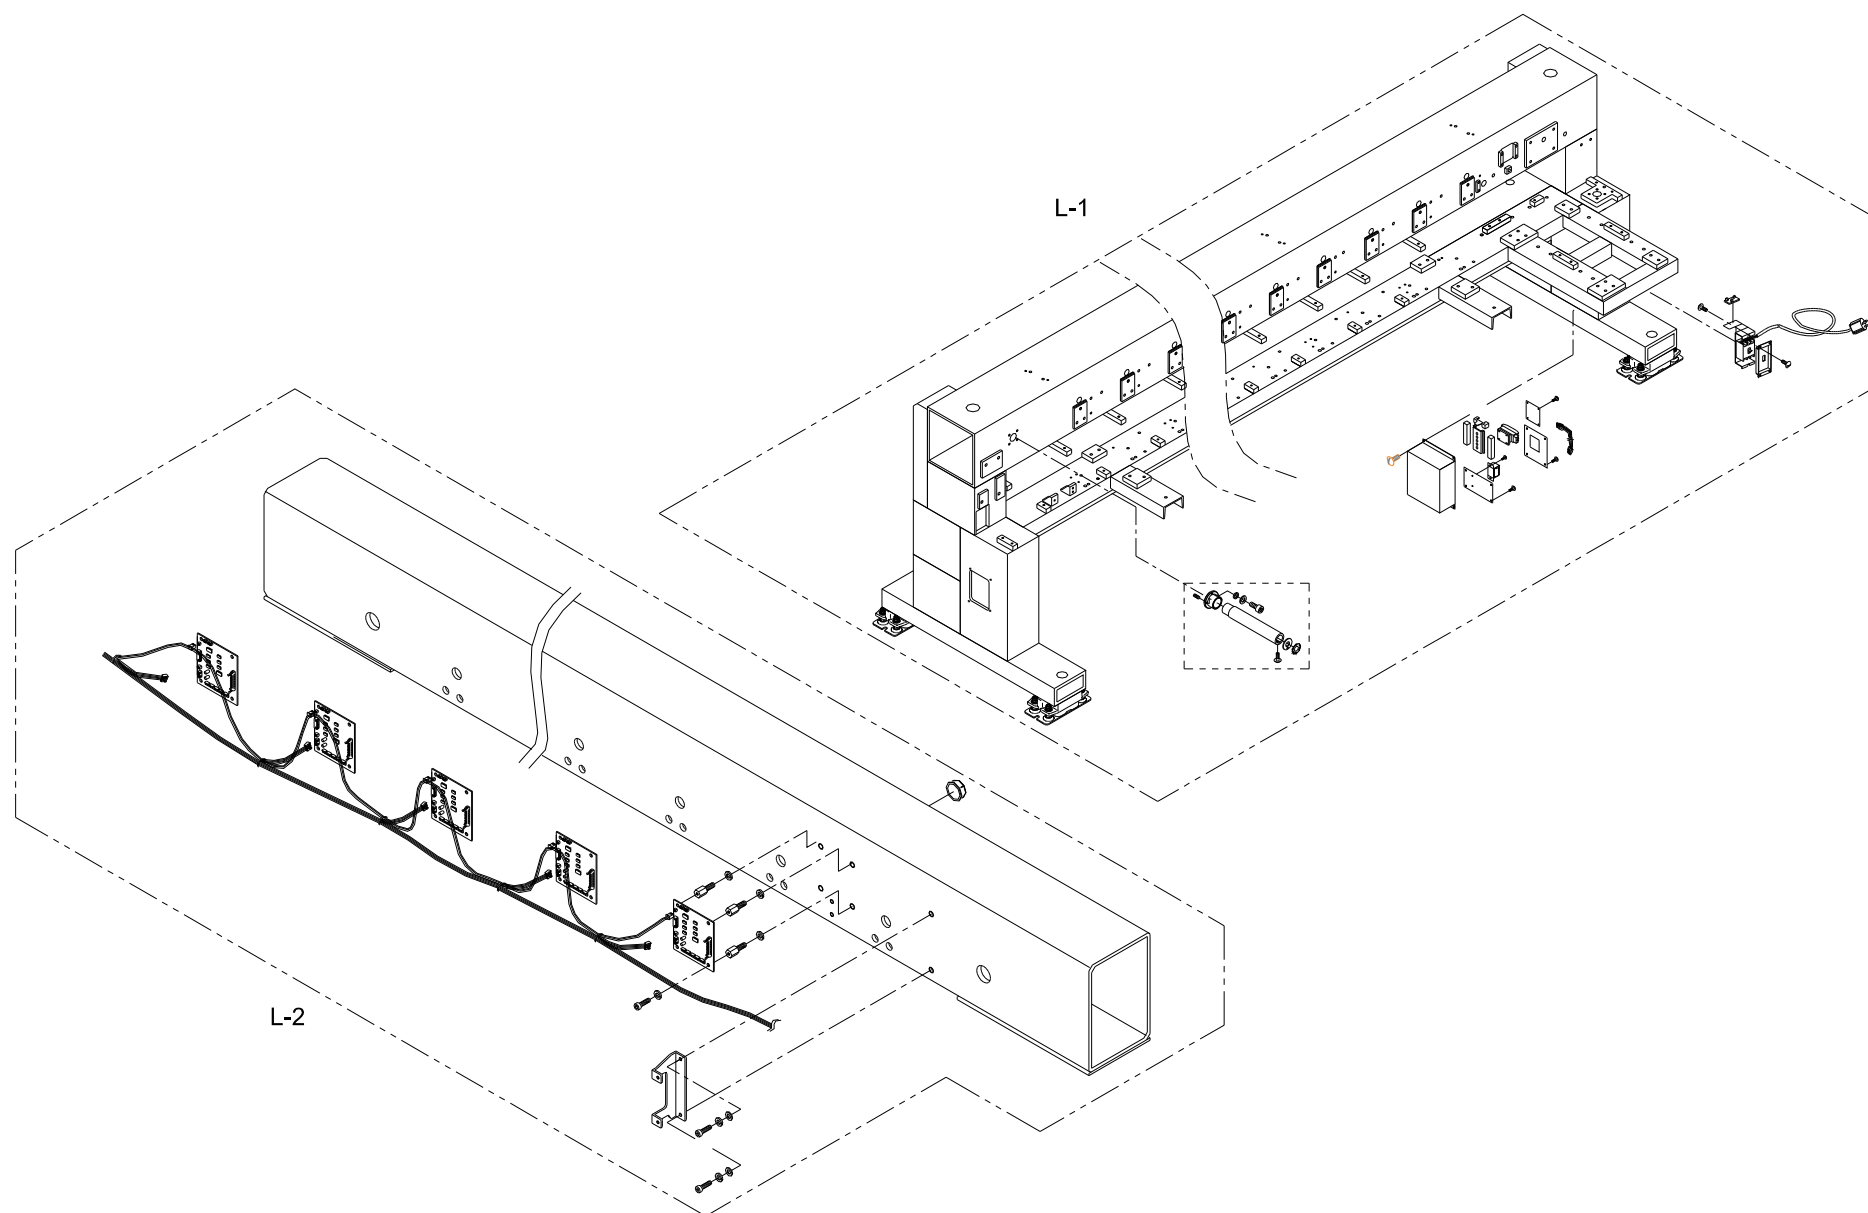

L-1

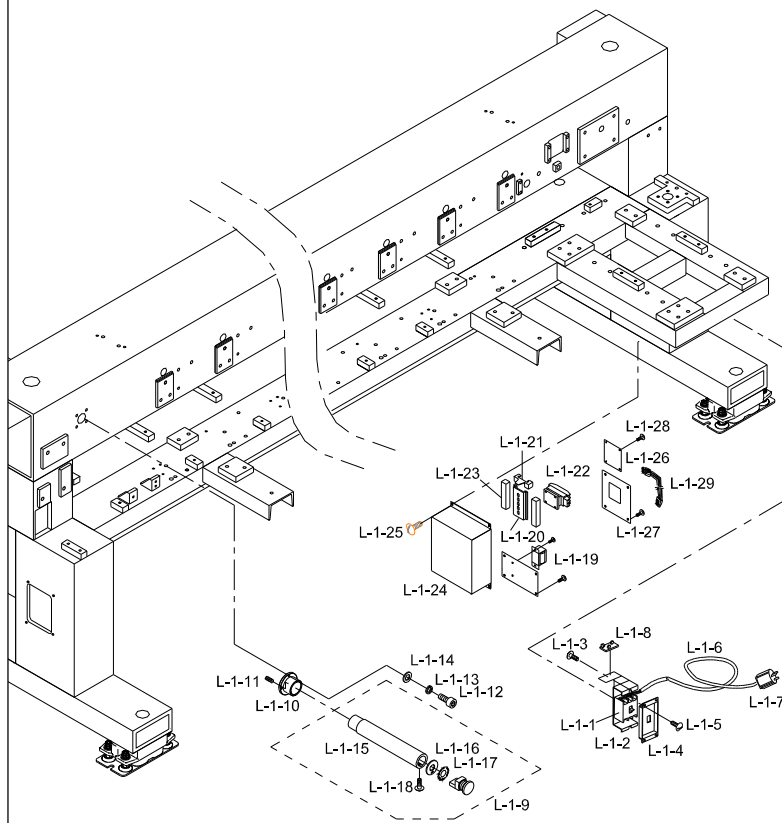

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
L-1-1	24029ET-A001	Main Power S/W				1	
L-1-2	GP-015700-00	Main Power S/W Bracket	Feb,23,06 ~	X		1	
L-1-3	02038SC-9131	Plus Screw (M5*L10)			O	2	
L-1-4	09000600B000	ON/OFF S/W BOX COVER				1	
L-1-5	02044SC-3123	Truss Screw (M5*L8)			O	4	
L-1-6	MH-01	MAIN POWER PLUG TO NFB INPUT				1	
L-1-7	24032ET-A001	Power Plug(3P)				1	
L-1-8	BD-000168-00	SURGE PROTECTOR	Jan,20,05 ~ Apr,19,05	X		1	
	BD-000168-01		Apr,19,05 ~ Jun,05,08	△			
	BD-000168-02		Jun,05,08 ~	△			
L-1-9	-	Emergency Switch (A) Set				1	
L-1-10	09000400B000	Guide Bush (A)				1	
L-1-11	04014SC-4517	Hex. Socket Set Screw (M5*L6)			O	4	
L-1-12	08091SC-7113	Hex. Socket Bolt (M6*L20)			O	4	
L-1-13	03026SW-9115	Spring Washer (@6)			O	4	
L-1-14	08057SW-1111	Washer (@6)			O	4	
L-1-15	GP-009902-00	Emergency Switch Holder(A) [L=268]	Jun,02,05 ~	X		1	
L-1-16	09000500B000	Emergency Switch Plate				1	
L-1-17	-	Emergency Switch Sticker				1	
L-1-18	02023SC-7113	Truss Screw (M4*L8)			O	1	
L-1-19	05000210T000	TRANSFORMER (EMT25V) 1A/25.5V				1	
L-1-20	02000910T000	MAGNETIC S/W FIXED BRACKET				1	
L-1-21	02001300T000	BRACKET STOPPER (CE)				2	
L-1-22	02000100T000	MAGNETIC SWITCH SET				1	
L-1-23	09001400BT00	CEMENT RESISTANCE (4.7/20W)				2	
L-1-24	GP-021698-00	Noise Filter Box	Sep,20,06 ~	X		1	
L-1-25	02044SC-3123	Truss Screw(M5*L10)			O	8	
L-1-26	BD-000256-00	Shunt Board	Aug,29,05 ~ Sep,15,05	X		1	
	BD-000256-01		Sep,15,05 ~ Sep,28,05	△			
	BD-000256-02		Sep,28,05 ~ Oct,28,05	△			
	BD-000256-03		Oct,28,05 ~ Feb,27,06	△			
	BD-000256-04		Feb,27,06 ~ Apr,26,06	△			
	BD-000256-05		Apr,26,06 ~ Mar,10,07	△			
	BD-000256-06		Mar,10,07 ~ Nov,19,08	△			
	BD-000256-07		Nov,19,08 ~	△			
L-1-27	BD-000304-00	MS Top Board	Nov,25,05 ~ Mar,27,07	X		1	
	BD-000304-01		Mar,27,07 ~ Jun,29,07	△			

L-1

This exploded view diagram illustrates the assembly of the L-1 unit. The main structure is a large, L-shaped metal frame. Various components are shown in their relative positions, with dashed lines indicating their assembly paths. The components are labeled as follows:

- L-1-1: A small rectangular component, likely a control panel or display, shown in two positions (L-1-1 and L-1-2).
- L-1-3: A small circular component, possibly a button or indicator.
- L-1-4: A small rectangular component, likely a control panel or display, shown in two positions (L-1-4 and L-1-5).
- L-1-6: A cable or connector.
- L-1-7: A small rectangular component, likely a control panel or display.
- L-1-8: A small rectangular component, likely a control panel or display.
- L-1-9: A small rectangular component, likely a control panel or display.
- L-1-10: A small circular component, possibly a button or indicator.
- L-1-11: A small circular component, possibly a button or indicator.
- L-1-12: A small rectangular component, likely a control panel or display.
- L-1-13: A small rectangular component, likely a control panel or display.
- L-1-14: A small rectangular component, likely a control panel or display.
- L-1-15: A small rectangular component, likely a control panel or display.
- L-1-16: A small rectangular component, likely a control panel or display.
- L-1-17: A small rectangular component, likely a control panel or display.
- L-1-18: A small rectangular component, likely a control panel or display.
- L-1-19: A small rectangular component, likely a control panel or display.
- L-1-20: A small rectangular component, likely a control panel or display.
- L-1-21: A small rectangular component, likely a control panel or display.
- L-1-22: A small rectangular component, likely a control panel or display.
- L-1-23: A small rectangular component, likely a control panel or display.
- L-1-24: A small rectangular component, likely a control panel or display.
- L-1-25: A small rectangular component, likely a control panel or display.
- L-1-26: A small rectangular component, likely a control panel or display.
- L-1-27: A small rectangular component, likely a control panel or display.
- L-1-28: A small rectangular component, likely a control panel or display.
- L-1-29: A small rectangular component, likely a control panel or display.


Note



Diagram illustrating the Thread Sensing Cable assembly. The cable is connected to the control box and runs along the structure. The cable is secured to the structure using L-2-1, L-2-2, L-2-3, L-2-4, L-2-5, L-2-6, L-2-7, L-2-8, L-2-9, and L-2-10. The cable is labeled "Thread Sensing Cable" and "Thread Sensing Power Cable". The connection to the control box is labeled "From Control Box".

[illegible]

Con Box & OP Box

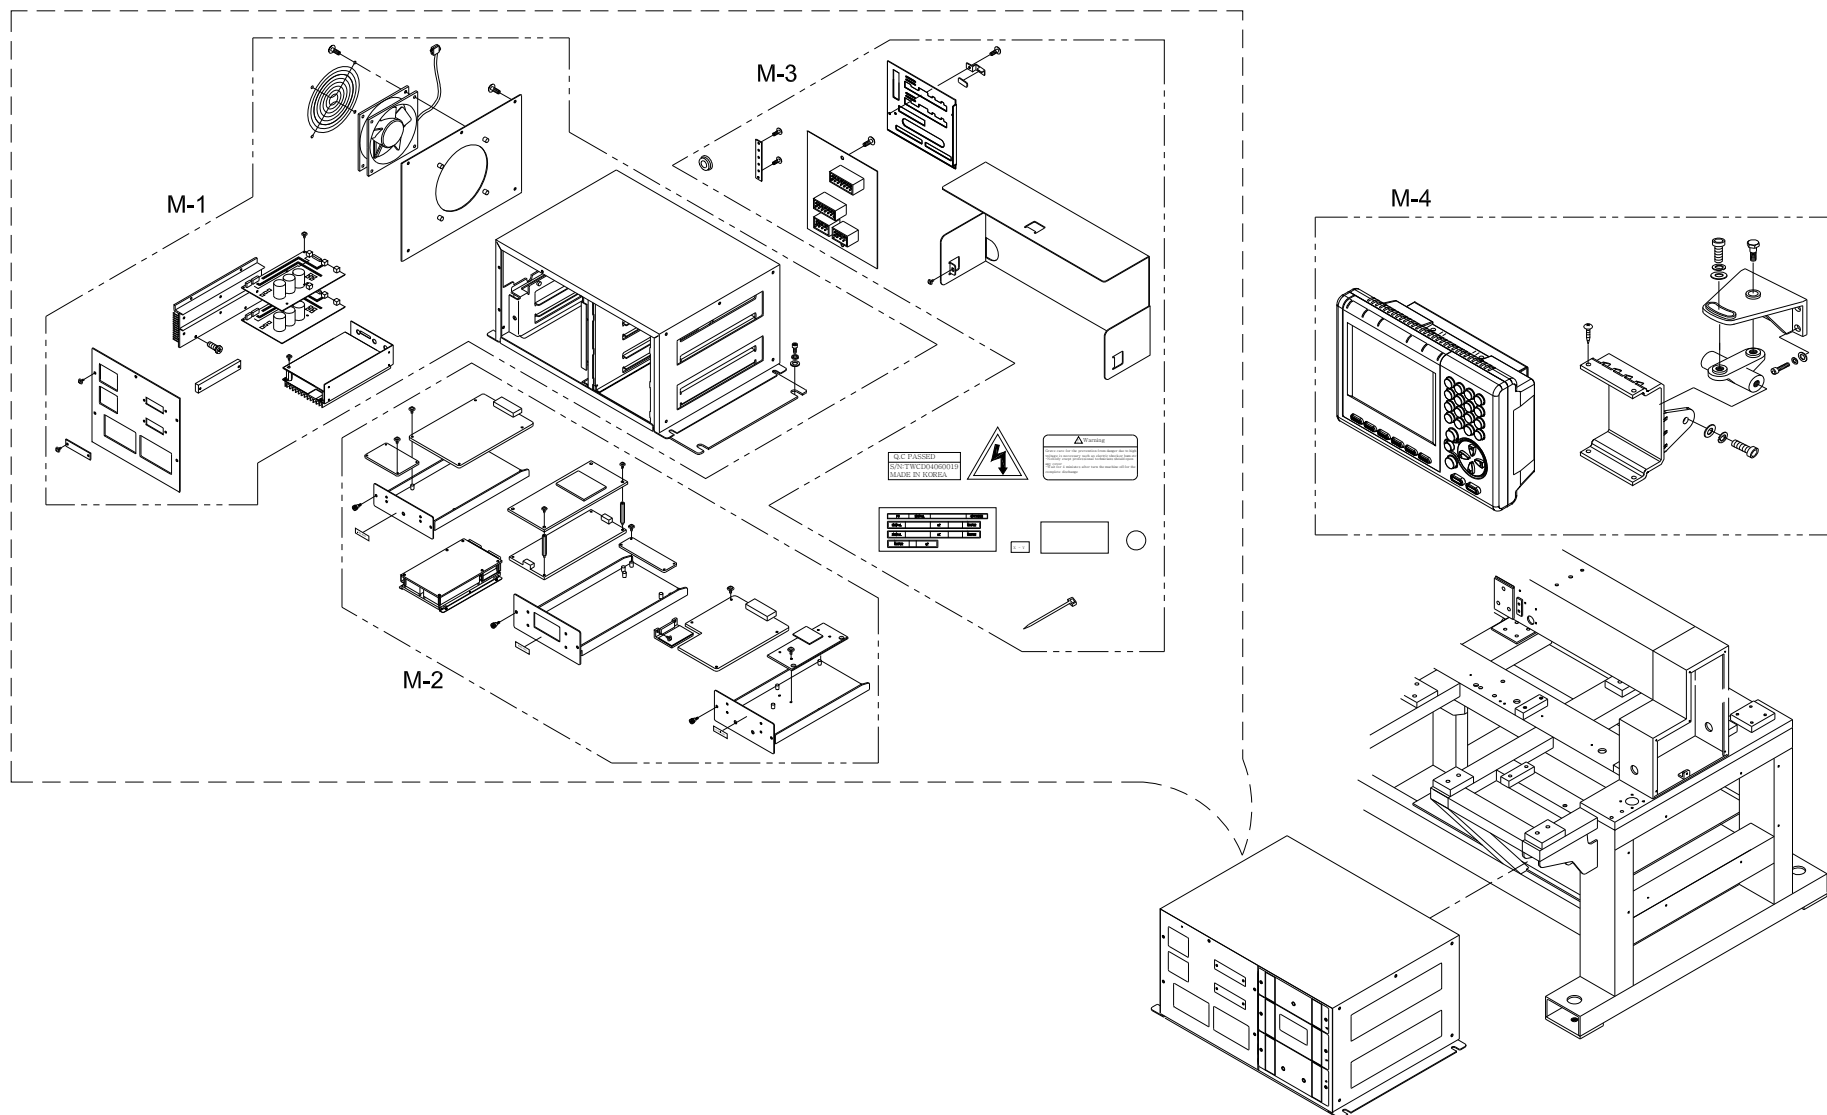

M-1


Diagram illustrating the assembly of the M-1 chassis, showing the following components and their assembly order:

- M-1-1**: Main chassis unit.
- M-1-2**: Front panel.
- M-1-3**: Top cover.
- M-1-4**: Side panel.
- M-1-5**: Bottom cover.
- M-1-6**: Screws for the top cover.
- M-1-7**: Screws for the side panel.
- M-1-8**: Screws for the bottom cover.
- M-1-9**: Screws for the front panel.
- M-1-10**: Screws for the top cover.
- M-1-11**: Screws for the side panel.
- M-1-12**: Screws for the bottom cover.
- M-1-13**: Screws for the front panel.
- M-1-14**: Screws for the top cover.
- M-1-15**: Screws for the side panel.
- M-1-16**: Screws for the bottom cover.
- M-1-17**: Screws for the front panel.
- M-1-18**: Screws for the top cover.
- M-1-19**: Screws for the side panel.
- M-1-20**: Screws for the bottom cover.
- M-1-21**: Screws for the front panel.

Note	
------	--



M-2

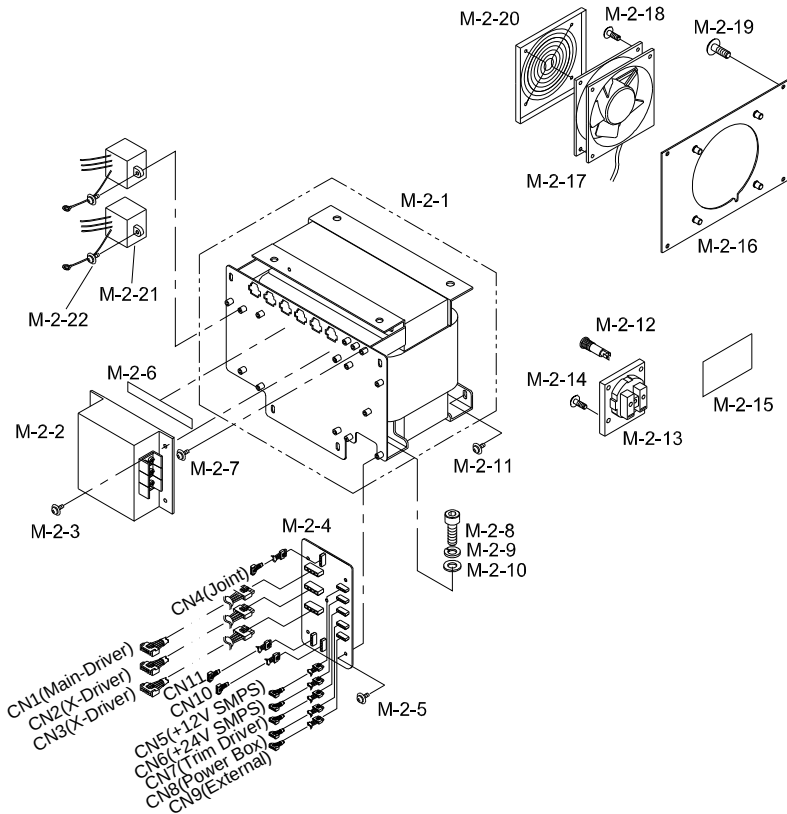


Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
M-2-1	AS-004284-00	Transformer Ass'y(Set)	Mar,13,06 ~ Jun,16,06	X		1	
	AS-004284-01		Jun,16,06 ~	△			
	EP-000046-00	Transformer	Aug,16,05 ~ Feb,06,06	X		1	
	EP-000046-01		Feb,06,06 ~	△			
	GP-009448-00	Fixing Bracket for Core(A)	May,13,05 ~	X		1	
	GP-009450-00	Fixing Bracket for Core(B)	May,13,05 ~	X		1	
	GP-013747-00	Fixing Bracket for Core(C)	Dec,14,05 ~ Jun,16,06	X		1	
	GP-013747-01		Jun,16,06 ~	△			
	GP-010149-00	Fixing Bracket for Core(D)	Jun,18,05 ~	X		1	
	GP-009451-00	Fixing Bracket for Connect Plate	May,13,05 ~	X		1	
	GP-009454-00	Copper Plate for SMPS(A)	May,13,05 ~	X		2	
	GP-009453-00	Copper Plate for SMPS(B)	May,13,05 ~	X		2	
	GP-013748-00	Connect Plate	Dec,14,05 ~	X		1	
	07-004S-SM5S	Fixing Screw for Connect Plate(Set)				4	
M-2-2	EP-000047-00	Noise Filter	Aug,16,05 ~	X		1	
M-2-3	07-004S-SM5S	Fixing Screw Noise Filter(Set)			O	4	
M-2-4	BD-000365-00	Connect Board	Feb,03,06 ~ Jul,04,06	X		1	
	BD-000365-01		Jul,04,06 ~	△			
M-2-5	07-004S-SM5S	Fixing Screw For Connect Board(Set)			O	4	
M-2-6	GP-015970-00	Input voltage Sticker	Feb,28,06 ~	X		1	
M-2-7	07-004S-SM5S	Ground Screw for Connect Plate(Set)				4	
M-2-8	10-016M-SW66	Fixing Screw for Transformer A			O	2	
M-2-9	10-003S-SW66	Spring Washer				2	
M-2-10	10-004S-SW66	Washer				2	
M-2-11	SC-000393-00	Fixing Screw for Transformer B	Jul,19,05 ~	X	O	2	
M-2-12	EP-000049-00	Fuse Holder	Aug,16,05 ~	X		1	
M-2-13	EP-000050-00	External Concept	Aug,16,05 ~ Jun,21,07	X		1	
	EP-000050-01		Jun,21,07 ~	△			
M-2-14	10-072S-SW70	Fixing Screw for External Concept			O	1	
M-2-15	01-004S-BT01	Fan Cleaning Sticker				1	
M-2-16	GP-009431-00	Side Cover	May,13,05 ~ Sep,30,05	X		1	
	GP-009431-01		Sep,30,05 ~	△			
M-2-17	EP-000048-00	Fan	Aug,16,05 ~	X		1	
M-2-18	01-002M-AU12	Fixing Screw for Fan			O	4	
M-2-19	10-003M-PT01	Fixing Screw for Side Cover(Truss)			O	4	
M-2-20	01-002B-AU12	FAN Cover				1	

This exploded view diagram illustrates the components of the M-2000 Series Main Unit. The central component is the main unit (M-2-1), which is shown with its front panel (M-2-16) and side panel (M-2-17) attached. The front panel is secured by screws (M-2-18) and the side panel by screws (M-2-19). The main unit is also shown with its top cover (M-2-20) and bottom cover (M-2-21) attached. The top cover is secured by screws (M-2-22) and the bottom cover by screws (M-2-23). The main unit is shown with its front panel (M-2-16) and side panel (M-2-17) attached. The front panel is secured by screws (M-2-18) and the side panel by screws (M-2-19). The main unit is also shown with its top cover (M-2-20) and bottom cover (M-2-21) attached. The top cover is secured by screws (M-2-22) and the bottom cover by screws (M-2-23). The main unit is shown with its front panel (M-2-16) and side panel (M-2-17) attached. The front panel is secured by screws (M-2-18) and the side panel by screws (M-2-19). The main unit is also shown with its top cover (M-2-20) and bottom cover (M-2-21) attached. The top cover is secured by screws (M-2-22) and the bottom cover by screws (M-2-23).



M-3

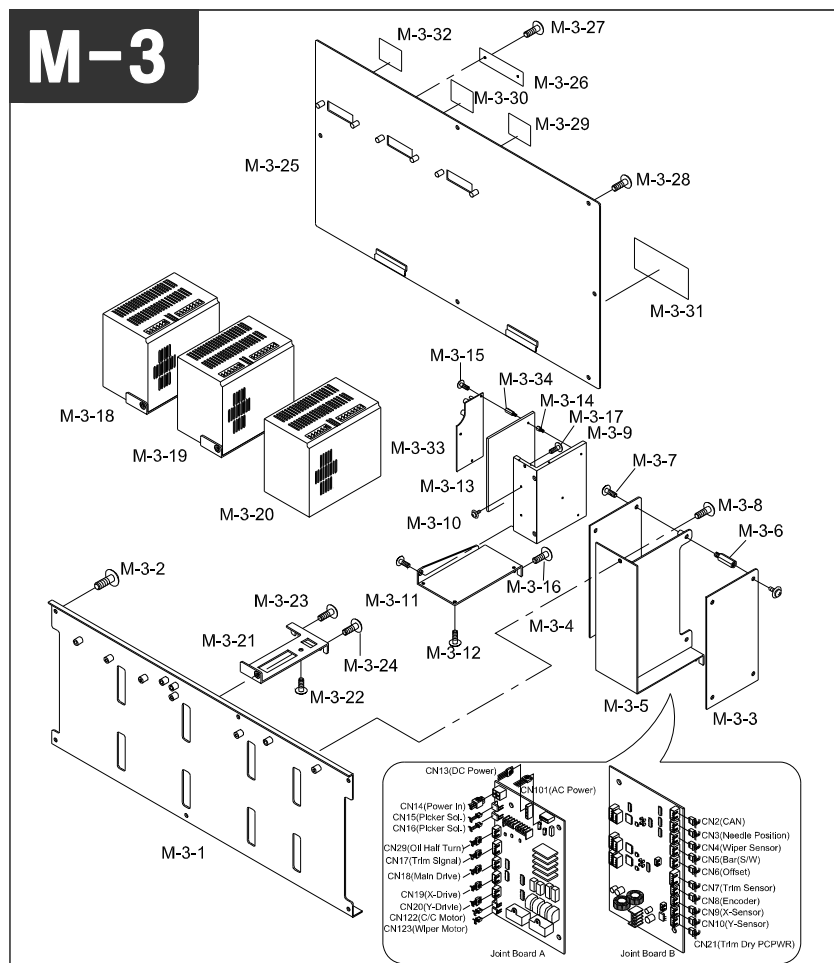

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
M-3-1	GP-009445-00	Driver Fixing Plate	May,13,05 ~ Jun,16,06	X		1	
	GP-009445-01		Jun,16,06 ~ Oct,25,06	△			
	GP-009445-02		Oct,25,06 ~	△			
M-3-2	07-004S-SM5S	Fixing Screw for Driver Fixing Plate(Set)			O	6	
M-3-3	BD-000301-00	Joint Board(A) , Joint Board(B)	Nov,23,05 ~ Jun,26,06	X		1	
M-3-4	BD-000301-01		Jun,26,06 ~ Aug,16,06	△			
	BD-000301-02		Aug,16,06 ~ Oct,19,06	△			
	BD-000301-03		Oct,19,06 ~ Apr,16,07	△			
	BD-000301-04		Apr,16,07 ~ May,23,07	△			
	BD-000301-05		May,23,07 ~ Jul,20,07	△			
	BD-000301-06		Jul,20,07 ~ Jan,08,08	△			
	BD-000301-07		Jan,08,08 ~ May,20,08	△			
	BD-000301-08		May,20,08 ~ Jul,16,08	△			
	BD-000301-09		Jul,16,08 ~ Aug,26,08	△			
	BD-000301-10		Aug,26,08 ~	△			
M-3-5	GP-009442-00	Fixing Bracket for Joint Board	May,13,05 ~ Sep,30,05	X	O	2	
	GP-009442-01		Sep,30,05 ~ Apr,03,08	△			
	GP-009442-02		Apr,03,08 ~	△			
M-3-6	10-012M-PT10	Stud for Joint Board				8	
M-3-7	10-021M-SW66	Fixing Screw for Joint Board(Set)			O	8	
M-3-8	07-004S-SM5S	Fixing Screw for J/B Fixing Bracket(Set)			O	1	
M-3-9	GP-012729-00	Radiator for Trimming Driver	Oct,14,05 ~	X		1	
M-3-10	06-001C-SE50	Fixing Screw for Trimming Driver Radiator(A)			O	6	
M-3-11	GP-009433-00	Fixing Bracket for Trimming Driver	May,13,05 ~	X	O	1	
M-3-12	10-004M-SW68	Fixing Screw for Trimming Driver Radiator(B)			O	3	
M-3-13	BD-000244-00	Trimming Driver(B)	Aug,17,05 ~ Oct,25,05	X		1	
	BD-000244-01		Oct,25,05 ~ Apr,06,06	△			
	BD-000244-02		Apr,06,06 ~ Sep,28,07	△			
	BD-000244-03		Sep,28,07 ~ Dec,03,07	△			
	BD-000244-04		Dec,03,07 ~ Jul,18,08	△			
	BD-000244-04		Jul,18,08 ~	△			
M-3-14	10-012M-PT10	Stud for Trimming Driver(B)				3	
M-3-15	10-021M-SW66	Fixing Screw for Trimming Driver (Set)			O	3	
M-3-16	07-004S-SM5S	Fixing Screw for Trimming Driver Bracket A(Set)			O	2	
M-3-17	10-042M-AU10	Fixing Screw for Trimming Driver BracketB(Set)			O	1	
M-3-18	EP-000124-00	Y-Driver	Feb,18,06 ~	X		1	
M-3-19	EP-000124-00	X-Driver	Feb,18,06 ~	X		1	

Note

M-3

Exploded view diagram of the M-3 printer assembly, showing various components and their assembly order:

- M-3-1**: Main printer body/frame.
- M-3-2**: Screws for the main body.
- M-3-3**: Right side panel.
- M-3-4**: Bottom plate.
- M-3-5**: Left side panel.
- M-3-6**: Screws for the side panels.
- M-3-7**: Top cover plate.
- M-3-8**: Screws for the top cover.
- M-3-9**: Screws for the top cover.
- M-3-10**: Screws for the top cover.
- M-3-11**: Screws for the top cover.
- M-3-12**: Screws for the top cover.
- M-3-13**: Screws for the top cover.
- M-3-14**: Screws for the top cover.
- M-3-15**: Screws for the top cover.
- M-3-16**: Screws for the top cover.
- M-3-17**: Screws for the top cover.
- M-3-18**: Ink cartridge (Black).
- M-3-19**: Ink cartridge (Cyan).
- M-3-20**: Ink cartridge (Magenta).
- M-3-21**: Ink cartridge (Yellow).
- M-3-22**: Ink cartridge (Black).
- M-3-23**: Ink cartridge (Black).
- M-3-24**: Ink cartridge (Black).
- M-3-25**: Ink cartridge (Black).
- M-3-26**: Ink cartridge (Black).
- M-3-27**: Ink cartridge (Black).
- M-3-28**: Ink cartridge (Black).
- M-3-29**: Ink cartridge (Black).
- M-3-30**: Ink cartridge (Black).
- M-3-31**: Ink cartridge (Black).
- M-3-32**: Ink cartridge (Black).
- M-3-33**: Ink cartridge (Black).
- M-3-34**: Ink cartridge (Black).
- M-3-35**: Ink cartridge (Black).
- M-3-36**: Ink cartridge (Black).
- M-3-37**: Ink cartridge (Black).
- M-3-38**: Ink cartridge (Black).
- M-3-39**: Ink cartridge (Black).
- M-3-40**: Ink cartridge (Black).
- M-3-41**: Ink cartridge (Black).
- M-3-42**: Ink cartridge (Black).
- M-3-43**: Ink cartridge (Black).
- M-3-44**: Ink cartridge (Black).
- M-3-45**: Ink cartridge (Black).
- M-3-46**: Ink cartridge (Black).
- M-3-47**: Ink cartridge (Black).
- M-3-48**: Ink cartridge (Black).
- M-3-49**: Ink cartridge (Black).
- M-3-50**: Ink cartridge (Black).
- M-3-51**: Ink cartridge (Black).
- M-3-52**: Ink cartridge (Black).
- M-3-53**: Ink cartridge (Black).
- M-3-54**: Ink cartridge (Black).
- M-3-55**: Ink cartridge (Black).
- M-3-56**: Ink cartridge (Black).
- M-3-57**: Ink cartridge (Black).
- M-3-58**: Ink cartridge (Black).
- M-3-59**: Ink cartridge (Black).
- M-3-60**: Ink cartridge (Black).
- M-3-61**: Ink cartridge (Black).
- M-3-62**: Ink cartridge (Black).
- M-3-63**: Ink cartridge (Black).
- M-3-64**: Ink cartridge (Black).
- M-3-65**: Ink cartridge (Black).
- M-3-66**: Ink cartridge (Black).
- M-3-67**: Ink cartridge (Black).
- M-3-68**: Ink cartridge (Black).
- M-3-69**: Ink cartridge (Black).
- M-3-70**: Ink cartridge (Black).
- M-3-71**: Ink cartridge (Black).
- M-3-72**: Ink cartridge (Black).
- M-3-73**: Ink cartridge (Black).
- M-3-74**: Ink cartridge (Black).
- M-3-75**: Ink cartridge (Black).
- M-3-76**: Ink cartridge (Black).
- M-3-77**: Ink cartridge (Black).
- M-3-78**: Ink cartridge (Black).
- M-3-79**: Ink cartridge (Black).
- M-3-80**: Ink cartridge (Black).
- M-3-81**: Ink cartridge (Black).
- M-3-82**: Ink cartridge (Black).
- M-3-83**: Ink cartridge (Black).
- M-3-84**: Ink cartridge (Black).
- M-3-85**: Ink cartridge (Black).
- M-3-86**: Ink cartridge (Black).
- M-3-87**: Ink cartridge (Black).
- M-3-88**: Ink cartridge (Black).
- M-3-89**: Ink cartridge (Black).
- M-3-90**: Ink cartridge (Black).
- M-3-91**: Ink cartridge (Black).
- M-3-92**: Ink cartridge (Black).
- M-3-93**: Ink cartridge (Black).
- M-3-94**: Ink cartridge (Black).
- M-3-95**: Ink cartridge (Black).
- M-3-96**: Ink cartridge (Black).
- M-3-97**: Ink cartridge (Black).
- M-3-98**: Ink cartridge (Black).
- M-3-99**: Ink cartridge (Black).
- M-3-100**: Ink cartridge (Black).

Joint Board A

- CN13(DC Power)
- CN14(Power In)
- CN15(Picker Scl.)
- CN16(Picker Scl.)
- CN25(Off Halt Turn)
- CN17(Trim Signal)
- CN18(Main Drive)
- CN19(X-Drive)
- CN20(Y-Drive)
- CN122(C/C Motor)
- CN123(Wiper Motor)
- CN101(AC Power)

Joint Board B


- CN2(CAN)
- CN3(Needle Position)
- CN4(Wiper Sensor)
- CN5(Bar/S/W)
- CN6(Offset)
- CN7(Trim Sensor)
- CN8(Encoder)
- CN9(X-Sensor)
- CN10(Y-Sensor)
- CN21(Trim Dry PCPWR)

Note

[illegible]

98

M-4

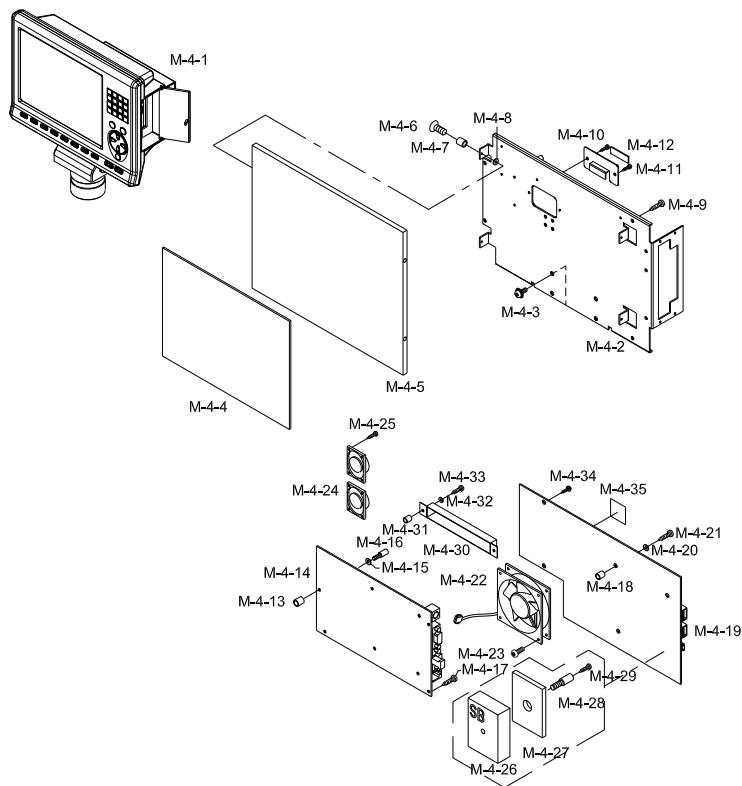

Note

Ref.No	Part No.	Part Name	Application date	Interchangeability	Hardware	Q'ty	Remarks
M-4-1	SWF-00000550	Operation Box Ass'y				1	
M-4-2	GP-014345-03	Base Plate				1	
M-4-3	07-004S-SM5S	Screw for Fixing Bracket for OP				4	
M-4-4	GP-014350-03	LCD Cover				1	
M-4-5	20-006A-SW70	LCD				1	
M-4-6	SC-000629-00	Screw for LCD (M2×L8)				4	
M-4-7	GP-019021-00	Insulation Bush(A)				4	
M-4-8	GP-019022-00	Insulation Bush(B)				4	
M-4-9	SC-000460-00	Screw for Base Plate				4	
M-4-10	01-002B-OT10	Pressing Plate for LCD				1	
M-4-11	20-002B-SW70	Connecting Pressing Plate Sponge				2	
M-4-12	10-028S-SC53	Screw for Pressing Plate (M3xL7)				2	
M-4-13	GP-014361-00	Insulation Bush(A)				6	
M-4-14	BD-000299-00	CPU Board				1	
M-4-15	GP-014362-00	Insulation Bush(B)				6	
M-4-16	GP-014341-03	CPU Board Fixing Stud				4	
M-4-17	07-005S-SM5S	CPU Board Screw (SET) (M3xL10)				2	
M-4-18	GP-014361-00	Insulation Bush(A)				6	
M-4-19	BD-000364-00	IO Board				1	
M-4-20	GP-014362-00	Insulation Bush(B)				4	
M-4-21	07-005S-SM5S	IO Board Fixing Screw (SET)				4	
M-4-22	EP-000030-00	FAN				1	
M-4-23	SC-000392-00	FAN Fixing Screw (M4xL30)				3	
M-4-24	01-016A-DU33	Speaker				2	
M-4-25	10-028S-SC53	Speaker Fixing Screw				4	
M-4-26	GP-017235-00	SB DDC Radiator				1	
M-4-27	GP-017239-00	SB DDC Radiator Sheet				1	
M-4-28	GP-010656-00	Fixing Stud for SB DDC Radiator				1	
M-4-29	10-028S-SC53	Fixing Screw for SB DDC Radiator(SET) (M3xL7)				1	
M-4-30	22027EL-A001	Inverter				1	
M-4-31	10-001C-AT10	Insulation Bush(A)				2	
	01-102B-OT10	Insulation Bush(B)				2	
M-4-33	10-028S-SC53	Inverter Fixing Plate (M3xL7)				2	
M-4-34	10-002S-SW66	IO Board 접지나사 (SET) (M3xL8)				2	
M-4-35	09-023C-SC53	QC Passed Sticker				1	

M-5


Diagram illustrating the components and assembly steps for the M-5 car stereo unit. The components are labeled as follows:

- M-5-1**: Main stereo unit.
- M-5-2**: Top bezel.
- M-5-3**: Bottom bezel.
- M-5-4**: Side bezel.
- M-5-5**: Mounting bracket.
- M-5-6**: Mounting bracket.
- M-5-7**: Mounting bracket.
- M-5-8**: Mounting bracket.
- M-5-9**: Mounting bracket.
- M-5-10**: Mounting bracket.
- M-5-11**: Mounting bracket.
- M-5-12**: Mounting bracket.
- M-5-13**: Mounting bracket.
- M-5-14**: Mounting bracket.
- M-5-15**: Mounting bracket.
- M-5-16**: Mounting bracket.
- M-5-17**: Mounting bracket.
- M-5-18**: Mounting bracket.
- M-5-19**: Mounting bracket.
- M-5-20**: Mounting bracket.
- M-5-21**: Mounting bracket.
- M-5-22**: Mounting bracket.
- M-5-23**: Mounting bracket.
- M-5-24**: Mounting bracket.
- M-5-25**: Mounting bracket.
- M-5-26**: Mounting bracket.
- M-5-27**: Mounting bracket.
- M-5-28**: Mounting bracket.
- M-5-29**: Mounting bracket.
- M-5-30**: Mounting bracket.
- M-5-31**: Mounting bracket.
- M-5-32**: Mounting bracket.
- M-5-33**: Mounting bracket.
- M-5-34**: Mounting bracket.
- M-5-35**: Mounting bracket.
- M-5-36**: Mounting bracket.
- M-5-37**: Mounting bracket.
- M-5-38**: Mounting bracket.
- M-5-39**: Mounting bracket.
- M-5-40**: Mounting bracket.
- M-5-41**: Mounting bracket.
- M-5-42**: Mounting bracket.
- M-5-43**: Mounting bracket.
- M-5-44**: Mounting bracket.
- M-5-45**: Mounting bracket.
- M-5-46**: Mounting bracket.
- M-5-47**: Mounting bracket.
- M-5-48**: Mounting bracket.
- M-5-49**: Mounting bracket.
- M-5-50**: Mounting bracket.
- M-5-51**: Mounting bracket.
- M-5-52**: Mounting bracket.
- M-5-53**: Mounting bracket.
- M-5-54**: Mounting bracket.
- M-5-55**: Mounting bracket.
- M-5-56**: Mounting bracket.
- M-5-57**: Mounting bracket.
- M-5-58**: Mounting bracket.
- M-5-59**: Mounting bracket.
- M-5-60**: Mounting bracket.
- M-5-61**: Mounting bracket.
- M-5-62**: Mounting bracket.
- M-5-63**: Mounting bracket.
- M-5-64**: Mounting bracket.
- M-5-65**: Mounting bracket.
- M-5-66**: Mounting bracket.
- M-5-67**: Mounting bracket.
- M-5-68**: Mounting bracket.
- M-5-69**: Mounting bracket.
- M-5-70**: Mounting bracket.
- M-5-71**: Mounting bracket.
- M-5-72**: Mounting bracket.
- M-5-73**: Mounting bracket.
- M-5-74**: Mounting bracket.
- M-5-75**: Mounting bracket.
- M-5-76**: Mounting bracket.
- M-5-77**: Mounting bracket.
- M-5-78**: Mounting bracket.
- M-5-79**: Mounting bracket.
- M-5-80**: Mounting bracket.
- M-5-81**: Mounting bracket.
- M-5-82**: Mounting bracket.
- M-5-83**: Mounting bracket.
- M-5-84**: Mounting bracket.
- M-5-85**: Mounting bracket.
- M-5-86**: Mounting bracket.
- M-5-87**: Mounting bracket.
- M-5-88**: Mounting bracket.
- M-5-89**: Mounting bracket.
- M-5-90**: Mounting bracket.
- M-5-91**: Mounting bracket.
- M-5-92**: Mounting bracket.
- M-5-93**: Mounting bracket.
- M-5-94**: Mounting bracket.
- M-5-95**: Mounting bracket.
- M-5-96**: Mounting bracket.
- M-5-97**: Mounting bracket.
- M-5-98**: Mounting bracket.
- M-5-99**: Mounting bracket.
- M-5-100**: Mounting bracket.

Note



Lamp & Switch

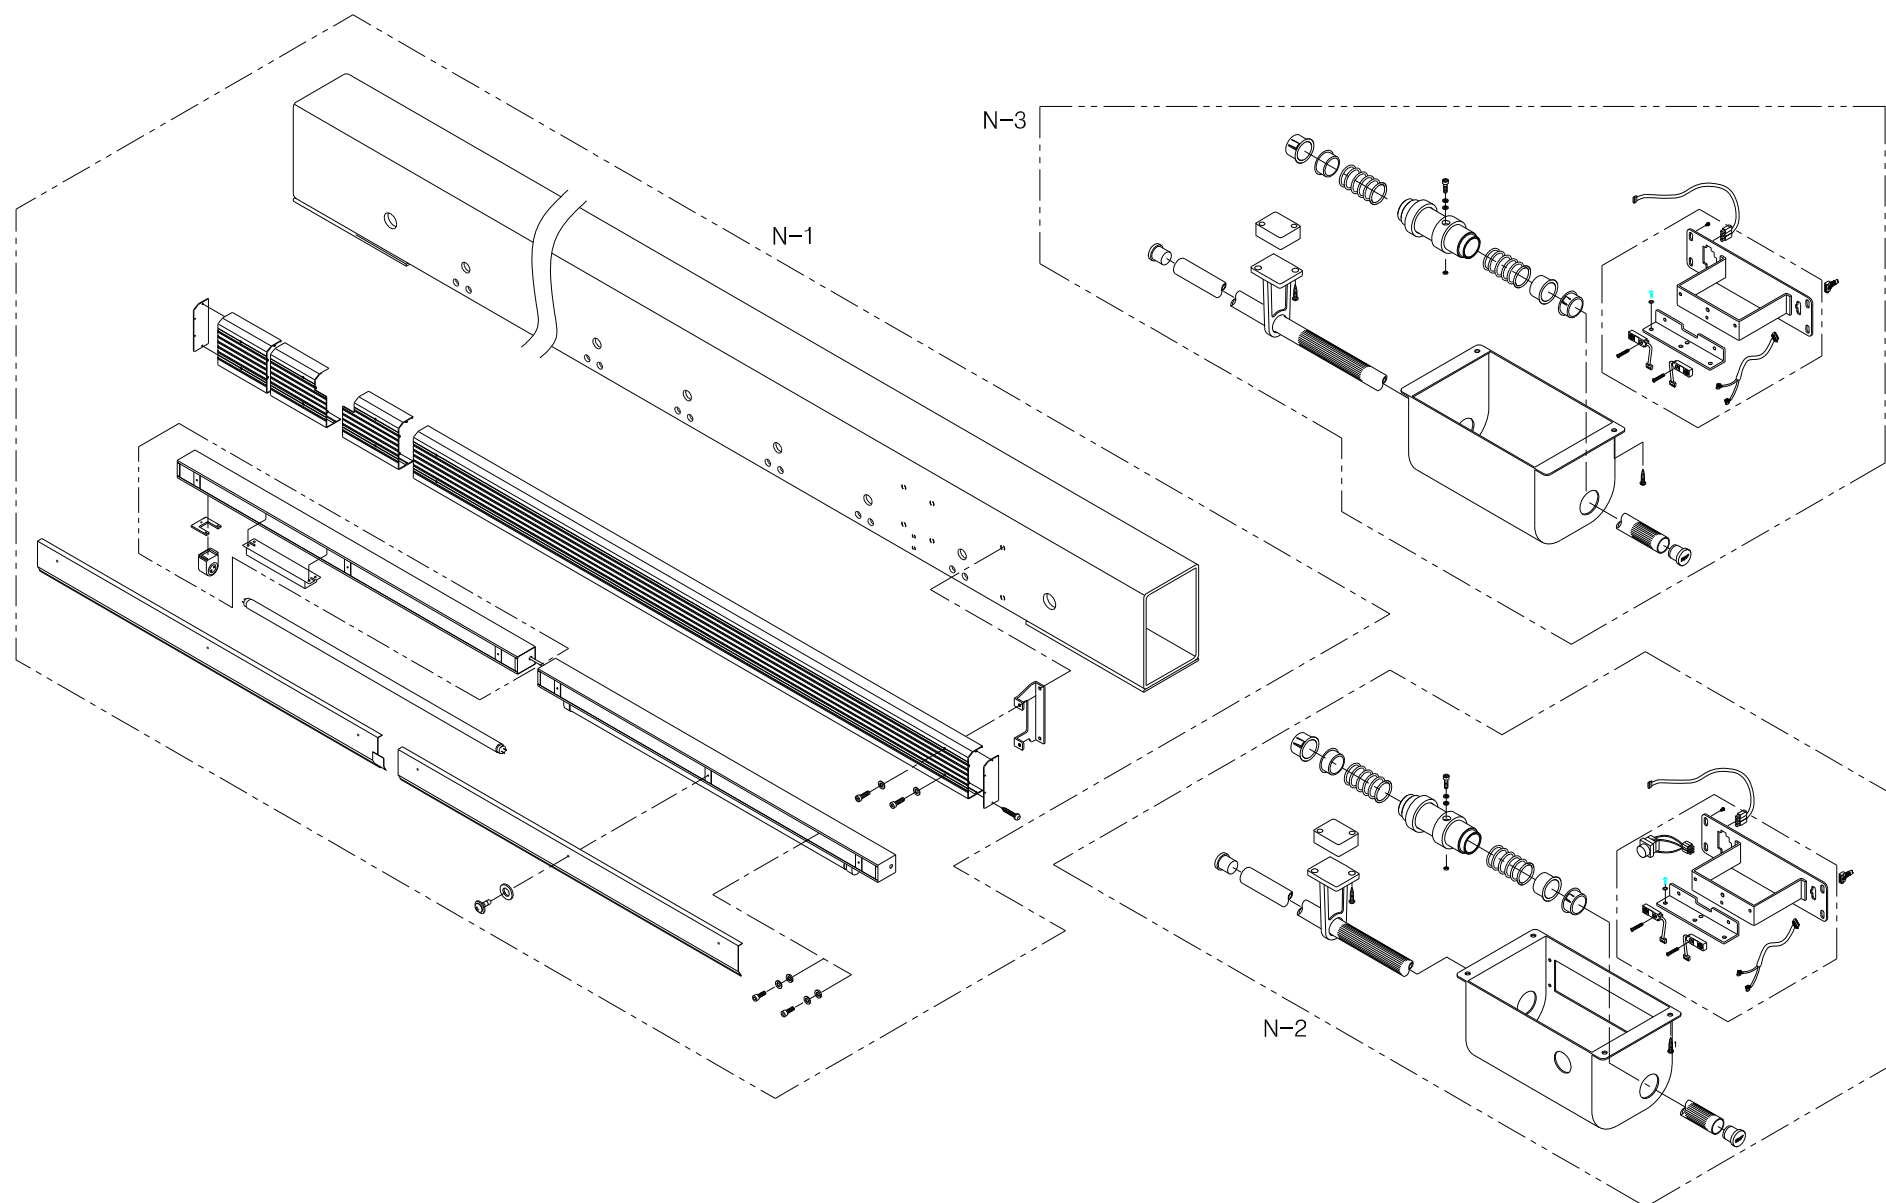


This diagram illustrates the exploded view of a cable tray assembly. The components are labeled as follows:

- N-1-1**: Cable tray cover (top).
- N-1-2**: Cable tray cover (bottom).
- N-1-3**: Cable tray cover (middle).
- N-1-4**: Cable tray cover (bottom).
- N-1-5**: Cable tray cover (bottom).
- N-1-6**: Cable tray cover (bottom).
- N-1-7**: Cable tray cover (bottom).
- N-1-8**: Cable tray cover (bottom).
- N-1-9**: Cable tray cover (bottom).
- N-1-10**: Cable tray cover (bottom).
- N-1-11**: Cable tray cover (bottom).
- N-1-12**: Cable tray cover (bottom).
- N-1-13**: Cable tray cover (bottom).
- N-1-14**: Cable tray cover (bottom).
- N-1-15**: Cable tray cover (bottom).
- N-1-16**: Cable tray cover (bottom).
- N-1-17**: Cable tray cover (bottom).
- N-1-18**: Cable tray cover (bottom).
- N-1-19**: Cable tray cover (bottom).
- N-1-20**: Cable tray cover (bottom).
- N-1-21**: Cable tray cover (bottom).
- N-1-22**: Cable tray cover (bottom).
- N-1-23**: Cable tray cover (bottom).

N

N-2

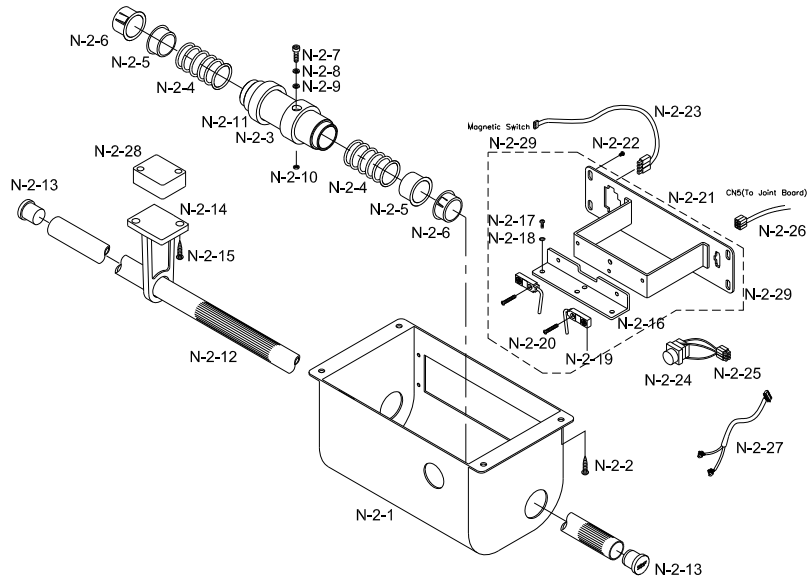

Note


Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
N-2-1	GP-014250-00	Bar Switch Box (B)	Jan,03,06 ~	X		1	
N-2-2	19002SC-1330	Tapping Screw (4*L16-No1)			O	4	
N-2-3	GP-014251-00	Regulatory Rod	Jan,03,06 ~	X		1	
N-2-4	19012SP-B001	Return Spring				2	
N-2-5	05100800B000	S/W Bar Return Spring Guide				2	
N-2-6	19021PM-B001	S/W Bar Guide				2	
N-2-7	11021SC-4113	Hex. Socket Bolt (M4*L35)			O	1	
N-2-8	18014SW-3115	Spring Washer (@4-No2)			O	1	
N-2-9	18015SW-3111	Washer (4@)			O	1	
N-2-10	02029SN-9311	Hex. Nut (M4-No2)			O	1	
N-2-11	GP-014252-00	Bar Switch Sensing Ring	Jan,03,06 ~	X		1	
N-2-12	05100100B000	Switch Bar @19*@22 L6300				1	
N-2-13	05100300B000	Switch Bar Cap				2	
N-2-14	GP-010233-00	Bar S/W Support	Jun,27,05 ~	X		2	
N-2-15	19002SC-1330	Tapping Screw (4*L16-No1)			O	4	
N-2-16	GP-014253-00	Bar Switch Sensor Bracket	Jan,03,06 ~	X		2	
N-2-17		Screw				2	
N-2-18		Washer				2	
N-2-19	EP-000067-00	Sensor	Dec,12,05 ~	X		2	
N-2-20	19005SC-8118	Plus Screw (M3*L20)			O	4	
N-2-21	GP-016393-00	Bar Switch Box Cover (B)	Mar,17,06 ~	X		1	
N-2-22	02010SC-3123	Truss Screw (M4*L8)			O	4	
N-2-23	CA-000918-00	MS Top Board Cable	Feb,19,06 ~ Jul,11,06	X		1	
	CA-000918-01		Jul,11,06 ~	△			
N-2-24	09001100BT00	Magnetic Switch (SET) (1@)				1	
	09001110BT00	Magnetic Switch (SET)					
N-2-25	CA-000917-00	I/O S/W Connecting Connector	Feb,19,06 ~ Dec,21,06	X		1	
	CA-000917-01		Dec,21,06 ~	△			
N-2-26	CA-000322-00	Bar S/W To Joint Board Cable	Jul,16,05 ~	X		1	
N-2-27	CA-000321-00	Bar Sensor Cable	Jul,16,05 ~	X		1	
N-2-28	GP-014255-00	Bar Switch Holder Spacer	Jan,03,06 ~	X		5	
N-2-29	AS-004766-00	Bar Switch Sensor A Assy	Jun,05,06 ~	X		1	
	AS-004766-01		Apr,24,08 ~	△			

[illegible]

Note	
------	--

N

Bobbin Winder

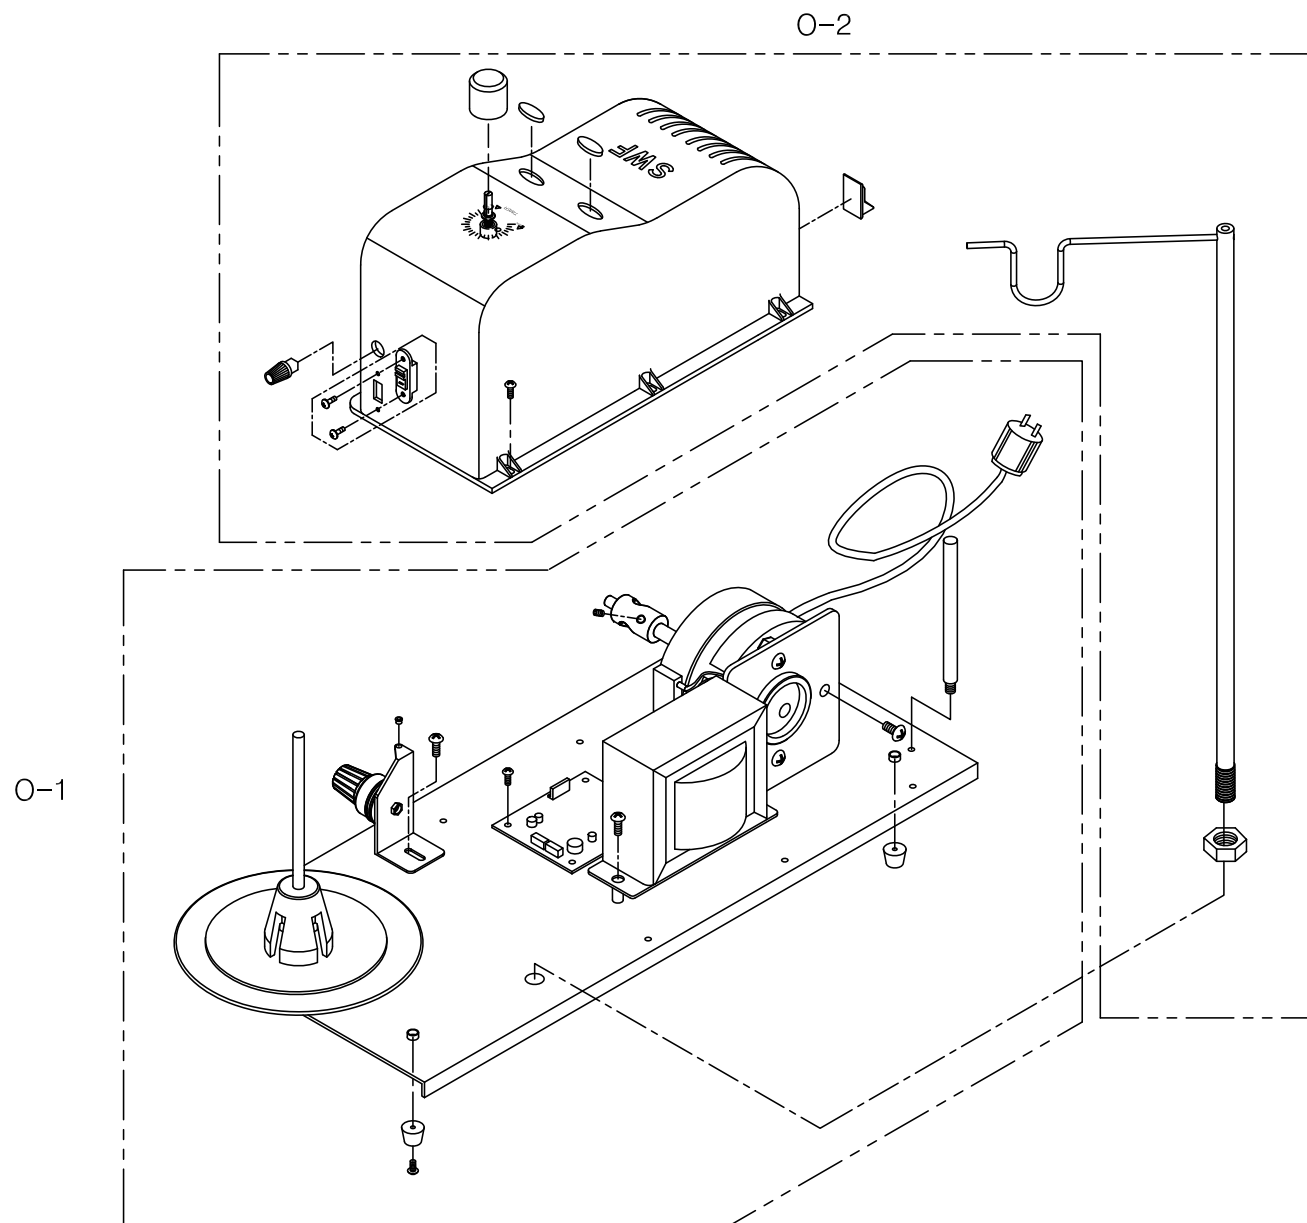

[illegible]

O-2


This exploded view diagram illustrates the assembly of the O-2 unit. The main component is a rectangular unit with a curved top and a control panel on the front. The control panel features a large circular dial with a needle and a scale, and a smaller rectangular display or indicator. The unit is mounted on a base plate. Various components are shown in their relative positions, with dashed lines indicating their assembly paths. The components are labeled as follows:

- O-2-1: A long vertical rod or post.
- O-2-2: A screw or bolt used for mounting.
- O-2-3: A small rectangular plate or bracket.
- O-2-4: A small cylindrical component, possibly a cap or plug.
- O-2-5: A small rectangular component, possibly a switch or indicator.
- O-2-6: A small cylindrical component, possibly a cap or plug.
- O-2-7: A small cylindrical component, possibly a cap or plug.
- O-2-8: A small rectangular component, possibly a switch or indicator.
- O-2-9: A small rectangular component, possibly a switch or indicator.
- O-2-10: A U-shaped bracket or support.
- O-2-11: A small rectangular component, possibly a switch or indicator.

Note



Cover

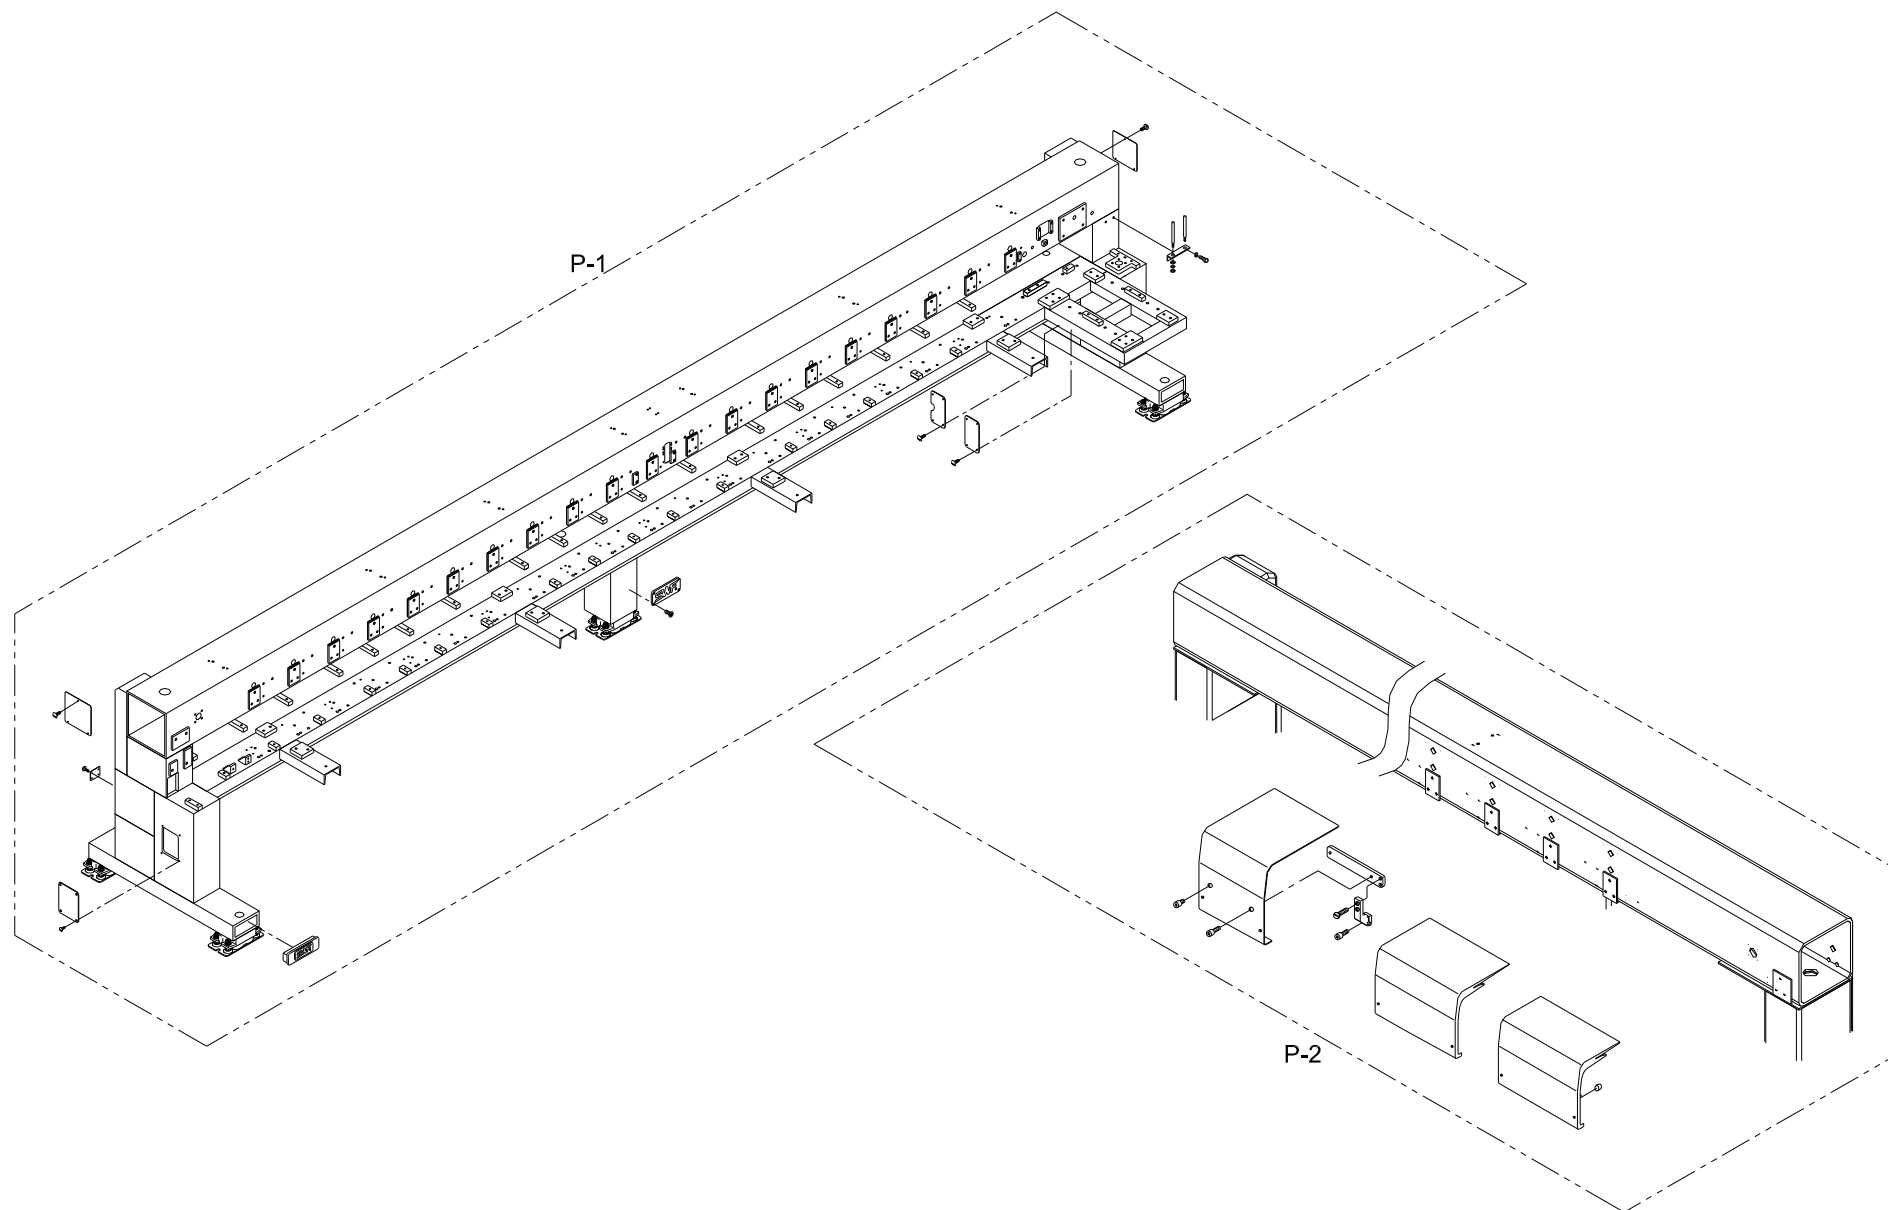

This exploded view diagram illustrates the assembly of the P-1000 power supply unit. The main components shown include:

- Power Transformer (P-1-1):** The central component with multiple secondary windings.
- Rectifier Bridge (P-1-2):** A bridge rectifier mounted on a heat sink.
- Filter Capacitor (P-1-3):** A large electrolytic capacitor for filtering the rectified output.
- Regulator IC (P-1-4):** An integrated circuit for voltage regulation.
- Heat Sink (P-1-5):** A large metal heat sink for dissipating heat from the regulator and transformer.
- Output Filter (P-1-6):** A smaller electrolytic capacitor for the final output.
- Control Components (P-1-7, P-1-8, P-1-9, P-1-10, P-1-11, P-1-12, P-1-13, P-1-14, P-1-15, P-1-16, P-1-17, P-1-18, P-1-19):** Various resistors, capacitors, and other electronic components for the control and feedback circuitry.
- Mounting Hardware (P-1-20, P-1-21, P-1-22, P-1-23, P-1-24, P-1-25, P-1-26, P-1-27, P-1-28, P-1-29, P-1-30, P-1-31, P-1-32, P-1-33, P-1-34, P-1-35, P-1-36, P-1-37, P-1-38, P-1-39, P-1-40, P-1-41, P-1-42, P-1-43, P-1-44, P-1-45, P-1-46, P-1-47, P-1-48, P-1-49, P-1-50):** Screws, nuts, washers, and other hardware used for mounting the components.

The diagram shows the relative positions and assembly sequence of these components, with dashed lines indicating the path of assembly.

Note

[illegible]


P-2

The diagram illustrates the assembly of the P-2 system. It features a long, narrow main unit with a curved top and a series of mounting brackets along its length. Several sub-components are shown in an exploded view, including a large curved panel (P-2-1), a smaller curved panel (P-2-8), and a rectangular panel (P-2-9). Various fasteners and connectors are labeled, such as P-2-2, P-2-3, P-2-4, P-2-5, P-2-6, P-2-7, and P-2-10. The main unit is shown with a series of mounting brackets along its length, and a large curved panel (P-2-1) is shown being attached to the top. The diagram is a technical line drawing with no shading.


Note

[illegible]

Frame (Y-Stroke 1000 Below)

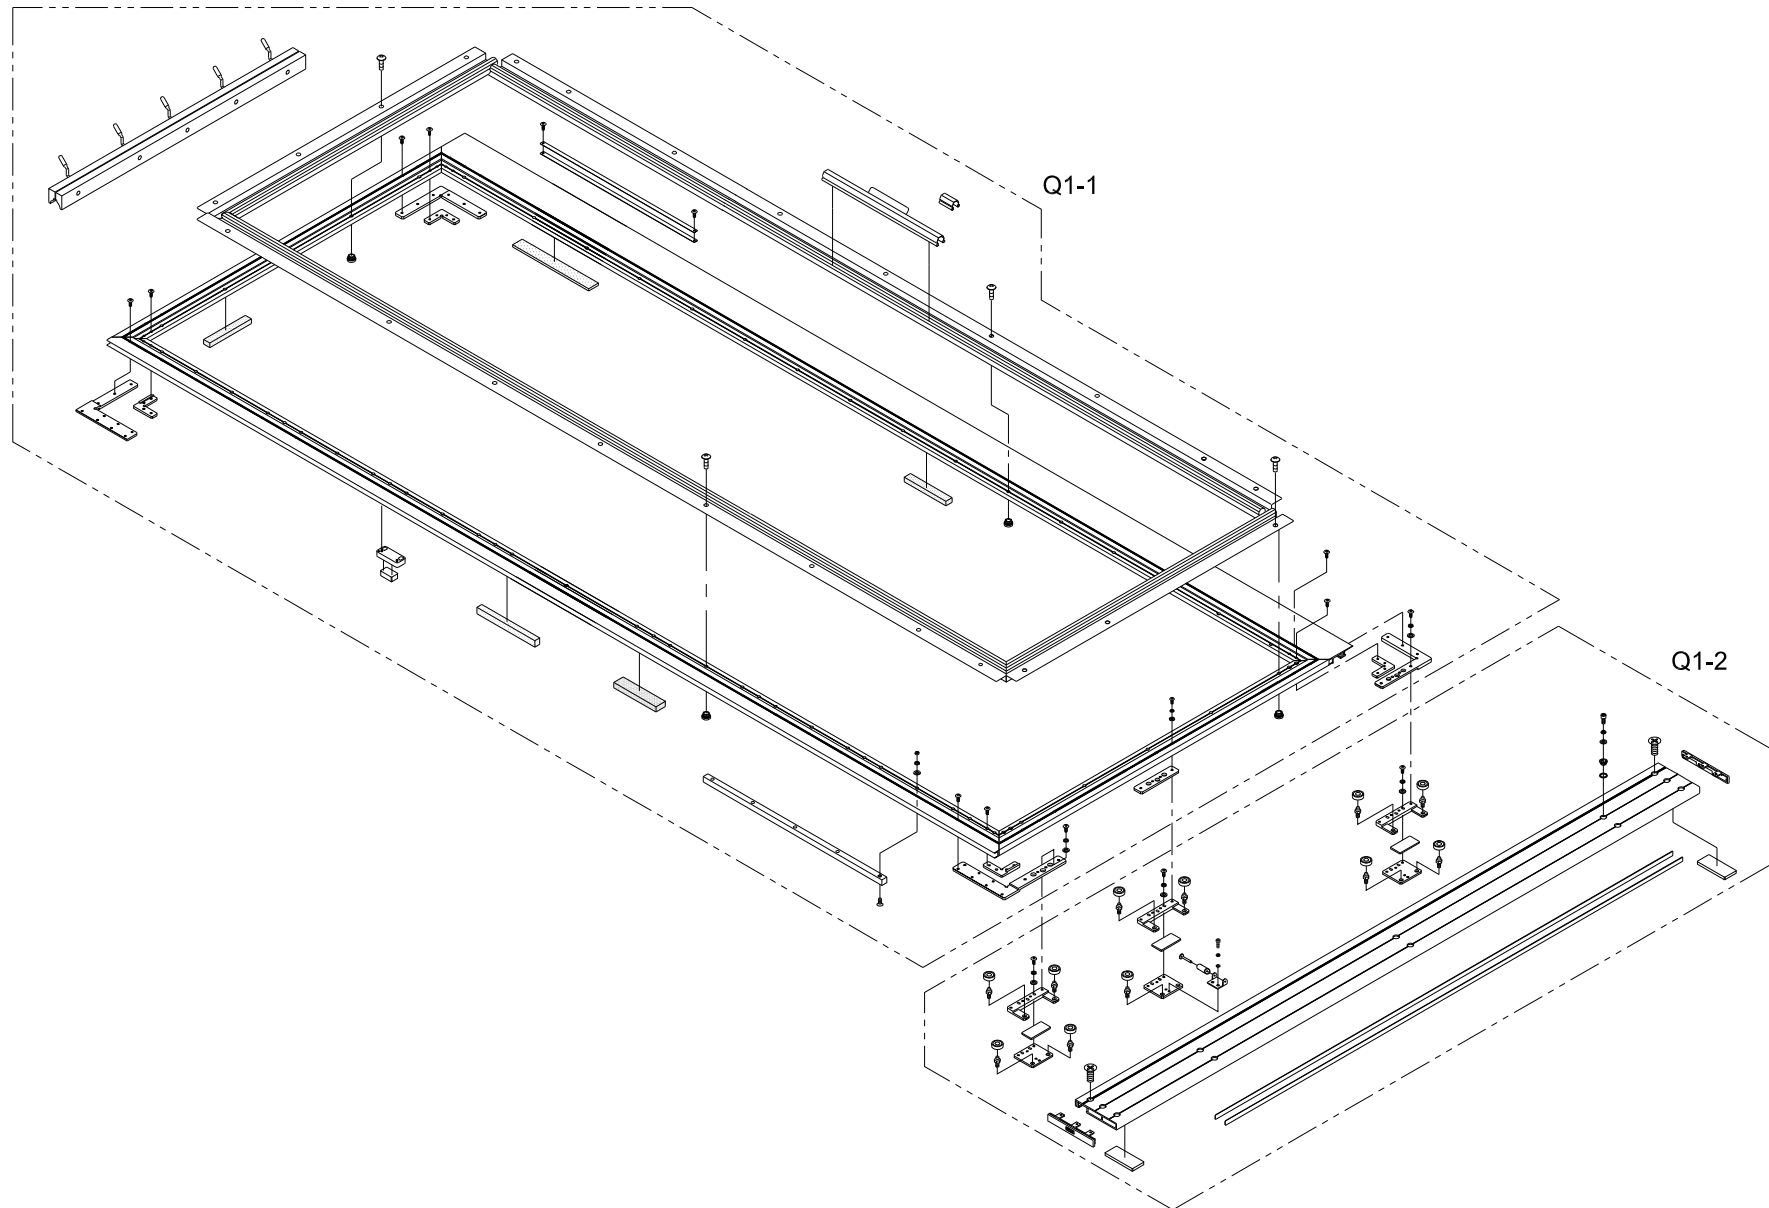

Q1-1

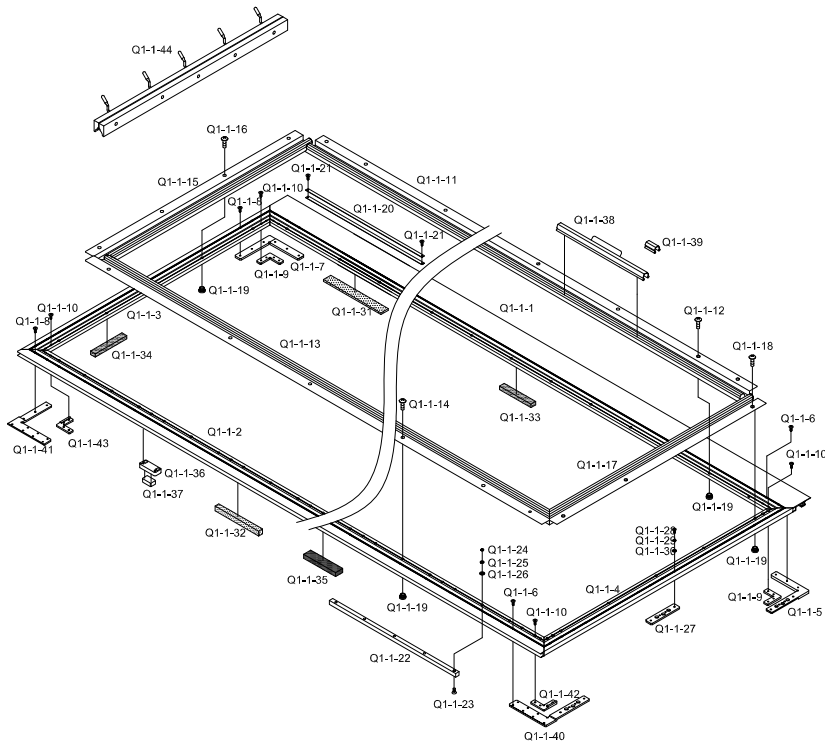

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
Q1-1-1	10500700IDK0	Frame (A) [L=6276]				1	
Q1-1-2	10500800IDK0	Frame (B) [L=6276]				1	
Q1-1-3	10500900I004	Frame (D) [L=939]				1	
Q1-1-4	GP-037798-00	Frame (G) [L=939]	Mar,26,08 ~	X		1	
Q1-1-5	GP-030400-00	Corner Guide (A)	May,16,07 ~ Mar,26,08	X		1	
	GP-030400-01		Mar,26,08 ~	△			
Q1-1-6	18014SC-7113	Hex.Socket Bolt(M4*L10)			O	12	
Q1-1-7	GP-037803-00	Corner Guide (B)	Mar,06,08 ~	X		1	
Q1-1-8	18014SC-7113	Hex.Socket Bolt(M4*L10)			O	12	
Q1-1-9	GP-037737-00	Corner Guide (C)	Mar,24,08 ~	X		2	
Q1-1-10	18014SC-7113	Hex.Socket Bolt(M4*L10)			O	16	
Q1-1-11	10501410IDK0	Frame (C-1) [L=6121]				1	
Q1-1-12	SC-001903-00	Truss Screw (M4*L8)			O	41	
Q1-1-13	10501510IDK0	Frame (C-2) [L=6176]				1	
Q1-1-14	SC-001903-00	Truss Screw (M4*L8)			O	81	
Q1-1-15	10501610I004	Frame (C-3) [L=838.5]				1	
Q1-1-16	SC-001903-00	Truss Screw (M4*L8)			O	5	
Q1-1-17	10501710I004	Frame (C-4) [L=838.5]				1	
Q1-1-18	SC-001903-00	Truss Screw (M4*L8)			O	5	
Q1-1-19	GP-010409-00	Bushing Nut(C)	Jul,04,05 ~	X		88	
Q1-1-20	10501800ID00	Frame Guide Rail Plate A [L=439]				8	
Q1-1-21	18014SC-7113	Truss Screw (M4*L9)			O	16	
Q1-1-22	18050AF-A001	X-Axis Guide Rail (L400)				4	
	18051CW-AC30	X-Axis Guide Rail (L700)				4	
Q1-1-23	02010AF-3123	Hex.Socket Bolt(M4*L12)			O	20	
Q1-1-24	18151SN-8311	Cap Nut(@4)			O	20	
Q1-1-25	18014SW-3115	Spring Washer (@4)			O	20	
Q1-1-26	18015SW-3111	Washer (4@)			O	20	
Q1-1-27	GP-037813-00	Fixing Block (C) for Bearing	Mar,27,08 ~	X		1	
Q1-1-28	SC-000334-00	SCREW M4*L15	May,19,05 ~	X	O	4	
Q1-1-29	18014SW-3115	Spring Washer (@4-No2)			O	4	
Q1-1-30	18015SW-3111	Washer (4@)			O	4	
Q1-1-31	18068SF-AE00	Front Felt(H)				3	
Q1-1-32	GP-009936-00	Front Felt (O-1) (L=82.5)	Jun,07,05 ~	X		40	
Q1-1-33	18071SF-A001	Rear Felt (K) (L=135)				40	
Q1-1-34	18072SF-AD00	Rear Felt (L) (L=105)				4	
Q1-1-35	10501900I000	Felt(A)				17	


Q1

This diagram illustrates the exploded view of a rectangular frame assembly. The components are labeled with part numbers, including:

- Q1-1-44 (Top rail with hooks)
- Q1-1-16 (Screw)
- Q1-1-15 (Bracket)
- Q1-1-10 (Bracket)
- Q1-1-21 (Bracket)
- Q1-1-11 (Rail)
- Q1-1-20 (Bracket)
- Q1-1-7 (Bracket)
- Q1-1-19 (Bracket)
- Q1-1-13 (Bracket)
- Q1-1-31 (Bracket)
- Q1-1-1 (Rail)
- Q1-1-38 (Bracket)
- Q1-1-39 (Bracket)
- Q1-1-12 (Bracket)
- Q1-1-18 (Bracket)
- Q1-1-16 (Bracket)
- Q1-1-10 (Bracket)
- Q1-1-19 (Bracket)
- Q1-1-17 (Bracket)
- Q1-1-33 (Bracket)
- Q1-1-14 (Bracket)
- Q1-1-2 (Rail)
- Q1-1-34 (Bracket)
- Q1-1-10 (Bracket)
- Q1-1-41 (Bracket)
- Q1-1-43 (Bracket)
- Q1-1-36 (Bracket)
- Q1-1-37 (Bracket)
- Q1-1-32 (Bracket)
- Q1-1-35 (Bracket)
- Q1-1-19 (Bracket)
- Q1-1-22 (Bracket)
- Q1-1-23 (Bracket)
- Q1-1-40 (Bracket)
- Q1-1-24 (Bracket)
- Q1-1-25 (Bracket)
- Q1-1-26 (Bracket)
- Q1-1-6 (Bracket)
- Q1-1-10 (Bracket)
- Q1-1-4 (Bracket)
- Q1-1-27 (Bracket)
- Q1-1-19 (Bracket)
- Q1-1-4 (Bracket)
- Q1-1-5 (Bracket)
- Q1-1-29 (Bracket)
- Q1-1-30 (Bracket)
- Q1-1-31 (Bracket)

Q1

Q1-2

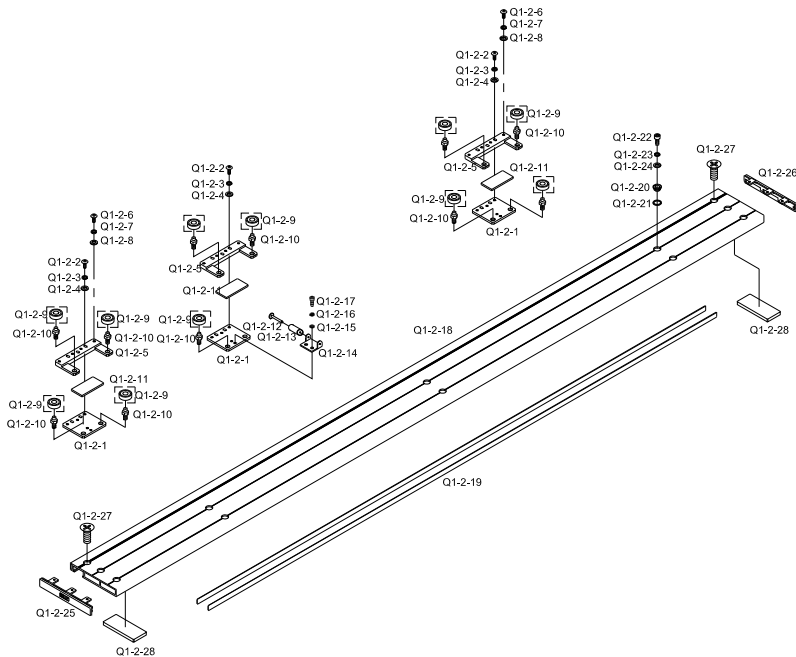

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
Q1-2-1	GP-007190-00	BEARING CONNECTING BLOCK B	Jan,20,05 ~ Apr,07,05	X		3	
	GP-007190-01		Apr,07,05 ~ Mar,26,08	△			
	GP-007190-02		Mar,26,08 ~	△			
Q1-2-2	02023SC-7113	Hex.Socket Bolt(M4*L8)			O	9	
Q1-2-3	18014SW-3115	Spring Washer (@4-No2)			O	9	
Q1-2-4	18015SW-3111	Washer (4@)			O	9	
Q1-2-5	GP-037776-00	Fixing Block (A) for Bearing	Mar,25,08 ~ Apr,14,08	X		3	
	GP-037776-01		Apr,14,08 ~ May,26,08	△			
	GP-037776-02		May,26,08 ~	△			
Q1-2-6	07016SC-7113	Hex.Socket Bolt(M4*L12)			O	8	
Q1-2-7	18014SW-3115	Spring Washer (@4-No2)			O	8	
Q1-2-8	18015SW-3111	Washer (4@)			O	8	
Q1-2-9	15077BR-B001	Ball Bearing (LR606NPPU)			O	12	
Q1-2-10	18062CW-A021	Rail Guide Pin (B)				12	
Q1-2-11	GP-006546-00	FELT W	Dec,21,04 ~	X		3	
Q1-2-12	10510800B000	ROLLER PIN				3	
Q1-2-13	18107CW-B001	ROLLER				3	
Q1-2-14	18106PR-B001	ROLLER BRACKET				3	
Q1-2-15	18015SW-3111	WASHER (4@)			O	6	
Q1-2-16	18014SW-3115	SPRING WASHER (@4-NO2)			O	6	
Q1-2-17	02023SC-7113	HEX.SOCKET BOLT (M4*L8)			O	6	
Q1-2-18	GP-005282-00	Frame E [L=1659]	Oct,26,04 ~ Feb,20,07	X		1	
	GP-005282-01		Feb,20,07 ~ May,23,07	△			
	GP-005282-02		May,23,07 ~ Jul,25,07	△			
	GP-005282-03		Jul,25,07 ~	△			
Q1-2-19	10000600I004	Frame Guide Rail Plate				2	
Q1-2-20	10000700I000	Insert Bushing				6	
Q1-2-21	10000800I000	Insert Bushing Washer				6	
Q1-2-22	18014SC-7113	Truss Screw (M4*L9)			O	6	
Q1-2-23	16014SW-4115	Spring Washer (@6)			O	6	
Q1-2-24	08057SW-1111	Washer (@6)			O	6	
Q1-2-25	AS-001418-00	FRAME E ENDCAP(A)SET	Oct,26,04 ~ Apr,01,05	X		1	
	AS-001418-01		Apr,01,05 ~ Feb,20,07	△			
	AS-001418-02		Feb,20,07 ~ May,23,07	△			
	AS-001418-03		May,23,07 ~	△			
Q1-2-26	AS-001419-00	FRAME E ENDCAP B SET	Oct,26,04 ~ Apr,01,05	X		1	
	AS-001419-01		Apr,01,05 ~ Feb,20,07	△			


Q1

[illegible]


Note	
------	--

Q1

Frame (Y-Stroke 1200 Above)

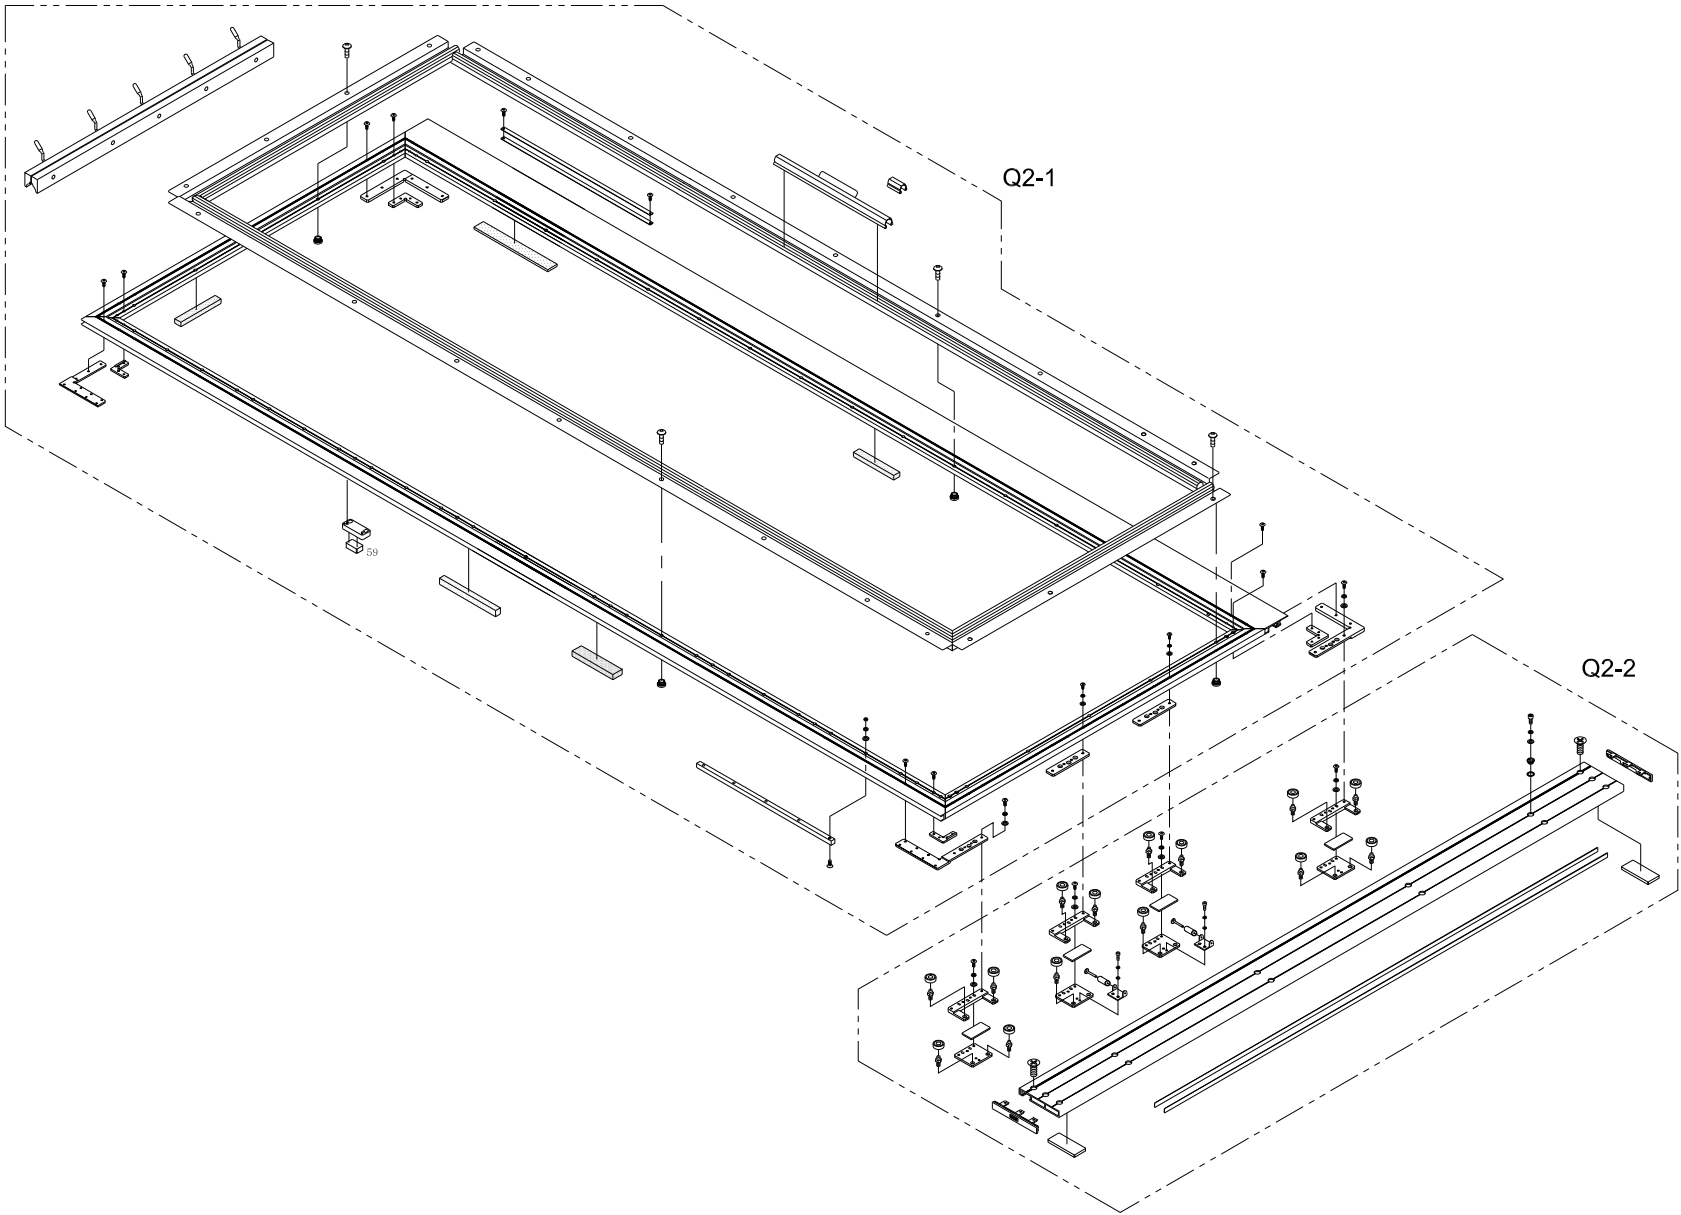

Q2-1

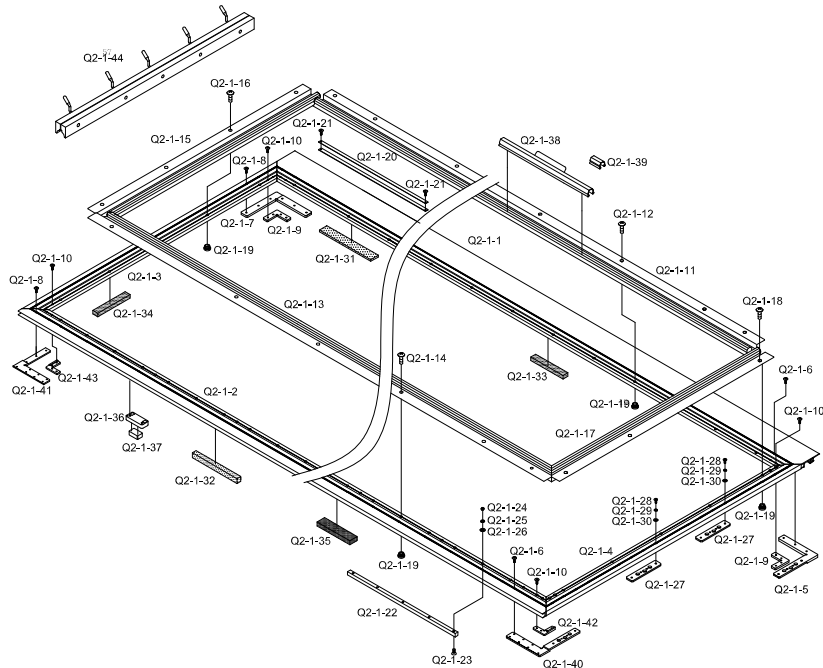

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
Q2-1-1	10500700IDK0	Frame (A) [L=6276]				1	
Q2-1-2	10500800IDK0	Frame (B) [L=6276]				1	
Q2-1-3	10500900I004	Frame (D) [L=939]				1	
Q2-1-4	GP-037798-00	Frame (G) [L=939]	Mar,26,08 ~	X		1	
Q2-1-5	GP-030400-00	Corner Guide (A)	May,16,07 ~ Mar,26,08	X		1	
	GP-030400-01		Mar,26,08 ~	△			
Q2-1-6	18014SC-7113	Hex.Socket Bolt(M4*L10)			O	12	
Q2-1-7	GP-037803-00	Corner Guide (B)	Mar,26,08 ~	X		1	
Q2-1-8	18014SC-7113	Hex.Socket Bolt(M4*L10)			O	12	
Q2-1-9	GP-037737-00	Corner Guide (C)	Mar,24,08 ~	X		2	
Q2-1-10	18014SC-7113	Hex.Socket Bolt(M4*L10)			O	16	
Q2-1-11	10501410IDK0	Frame (C-1) [L=6121]				1	
Q2-1-12	SC-001903-00	Truss Screw (M4*L8)			O	41	
Q2-1-13	10501510IDK0	Frame (C-2) [L=6176]				1	
Q2-1-14	SC-001903-00	Truss Screw (M4*L8)			O	81	
Q2-1-15	10501610I004	Frame (C-3) [L=838.5]				1	
Q2-1-16	SC-001903-00	Truss Screw (M4*L8)			O	7	
Q2-1-17	10501710I004	Frame (C-4) [L=838.5]				1	
Q2-1-18	SC-001903-00	Truss Screw (M4*L8)			O	7	
Q2-1-19	GP-010409-00	Bushing Nut(C)	Jul,04,05 ~	X		88	
Q2-1-20	10501800ID00	Frame Guide Rail Plate A [L=439]				8	
Q2-1-21	18014SC-7113	Truss Screw (M4*L9)			O	16	
Q2-1-22	18050AF-A001	X-Axis Guide Rail (L400)				4	
	18051CW-AC30	X-Axis Guide Rail (L700)				4	
Q2-1-23	02010AF-3123	Hex.Socket Bolt(M4*L12)			O	20	
Q2-1-24	18151SN-8311	Cap Nut(@4)			O	20	
Q2-1-25	18014SW-3115	Spring Washer (@4)			O	20	
Q2-1-26	18015SW-3111	Washer (4@)			O	20	
Q2-1-27	GP-037813-00	Fixing Block (C) for Bearing	Mar,27,08 ~	X		2	
Q2-1-28	SC-000334-00	SCREW M4*L15	May,19,05 ~	X	O	8	
Q2-1-29	18014SW-3115	Spring Washer (@4-No2)			O	8	
Q2-1-30	18015SW-3111	Washer (4@)			O	8	
Q2-1-31	18068SF-AE00	Front Felt(H)				3	
Q2-1-32	GP-009936-00	Front Felt (O-1) (L=82.5)	Jun,07,05 ~	X		40	
Q2-1-33	18071SF-A001	Rear Felt (K) (L=135)				40	
Q2-1-34	18072SF-AD00	Rear Felt (L) (L=105)				4	
Q2-1-35	10501900I000	Felt(A)				17	


Q2

[illegible]

Note	
------	--

Q2

Q2-2

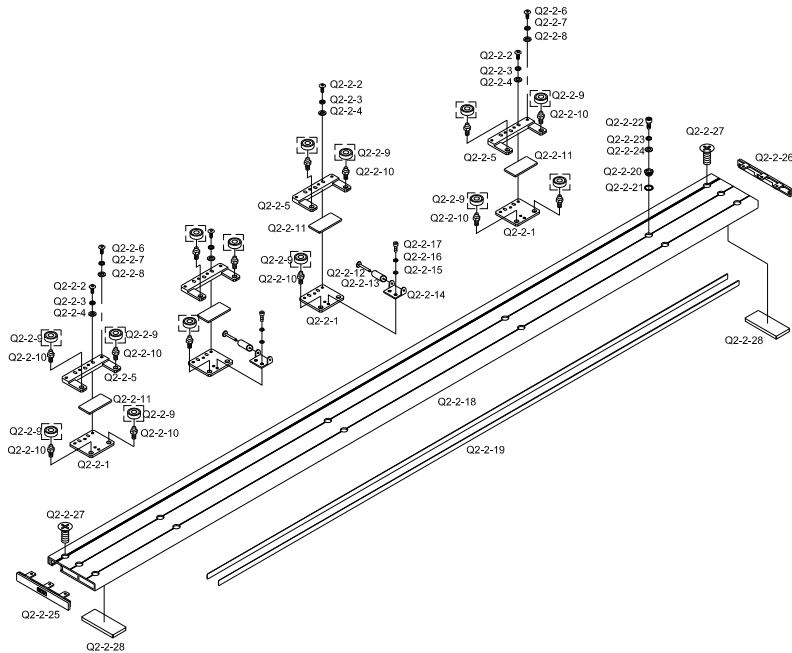

Note

Ref.No	Part No.	Part Name	Applied Period	Interchangeability	Hardware	Q'ty	Remark
Q2-2-1	GP-007190-00	BEARING CONNECTING BLOCK B	Jan,20,05 ~ Apr,07,05	X		4	
	GP-007190-01		Apr,07,05 ~ Mar,26,08	△			
	GP-007190-02		Mar,26,08 ~	△			
Q2-2-2	02023SC-7113	Hex.Socket Bolt(M4*L8)				12	
Q2-2-3	18014SW-3115	Spring Washer (@4-No2)				12	
Q2-2-4	18015SW-3111	Washer (4@)				12	
Q2-2-5	GP-037776-00	Fixing Block (A) for Bearing	Mar,25,08 ~ Apr,14,08	X		4	
	GP-037776-01		Apr,14,08 ~ May,26,08	△			
	GP-037776-02		May,26,08 ~	△			
Q2-2-6	07016SC-7113	Hex.Socket Bolt(M4*L12)				8	
Q2-2-7	18014SW-3115	Spring Washer (@4-No2)				8	
Q2-2-8	18015SW-3111	Washer (4@)				8	
Q2-2-9	15077BR-B001	Ball Bearing (LR606NPPU)				16	
Q2-2-10	18062CW-A021	Rail Guide Pin (B)				16	
Q2-2-11	GP-006546-00	FELT W	Dec,21,04 ~	X		4	
Q2-2-12	10510800B000	ROLLER PIN				4	
Q2-2-13	18107CW-B001	ROLLER				4	
Q2-2-14	18106PR-B001	ROLLER BRACKET				4	
Q2-2-15	18015SW-3111	WASHER (4@)				8	
Q2-2-16	18014SW-3115	SPRING WASHER (@4-NO2)				8	
Q2-2-17	02023SC-7113	HEX.SOCKET BOLT (M4*L8)				8	
Q2-2-18	GP-006161-00	Frame E [L=1659]	Dec,09,04 ~ Feb,20,07	X		1	
	GP-006161-01		Feb,20,07 ~ May,23,07	△			
	GP-006161-02		May,23,07 ~ Jul,25,07	△			
	GP-006161-03		Jul,25,07 ~	△			
Q2-2-19	10000600I004	Frame Guide Rail Plate				2	
Q2-2-20	10000700I000	Insert Bushing				6	
Q2-2-21	10000800I000	Insert Bushing Washer				6	
Q2-2-22	18014SC-7113	Truss Screw (M4*L9)				6	
Q2-2-23	16014SW-4115	Spring Washer (@6)				6	
Q2-2-24	08057SW-1111	Washer (@6)				6	
Q2-2-25	AS-001418-00	FRAME E ENDCAP(A)SET	Oct,26,04 ~ Apr,01,05	X		1	
	AS-001418-01		Apr,01,05 ~ Feb,20,07	△			
	AS-001418-02		Feb,20,07 ~ May,23,07	△			
	AS-001418-03		May,23,07 ~	△			
Q2-2-26	AS-001419-00	FRAME E ENDCAP B SET	Oct,26,04 ~ Apr,01,05	X		1	
	AS-001419-01		Apr,01,05 ~ Feb,20,07	△			

Q2

This diagram illustrates the exploded view of the Q2-2-1 assembly. The main components are the Q2-2-1 frame, the Q2-2-2 frame, and the Q2-2-3 frame. The assembly sequence is indicated by the part numbers and their positions relative to the main frame. Key components include:

- Q2-2-1**: The main frame assembly, consisting of the Q2-2-1 frame, Q2-2-2 frame, and Q2-2-3 frame.
- Q2-2-2**: The Q2-2-2 frame, which includes the Q2-2-2-1, Q2-2-2-2, and Q2-2-2-3 sub-assemblies.
- Q2-2-3**: The Q2-2-3 frame, which includes the Q2-2-3-1, Q2-2-3-2, and Q2-2-3-3 sub-assemblies.
- Q2-2-4**: The Q2-2-4 frame, which includes the Q2-2-4-1, Q2-2-4-2, and Q2-2-4-3 sub-assemblies.
- Q2-2-5**: The Q2-2-5 frame, which includes the Q2-2-5-1, Q2-2-5-2, and Q2-2-5-3 sub-assemblies.
- Q2-2-6**: The Q2-2-6 frame, which includes the Q2-2-6-1, Q2-2-6-2, and Q2-2-6-3 sub-assemblies.
- Q2-2-7**: The Q2-2-7 frame, which includes the Q2-2-7-1, Q2-2-7-2, and Q2-2-7-3 sub-assemblies.
- Q2-2-8**: The Q2-2-8 frame, which includes the Q2-2-8-1, Q2-2-8-2, and Q2-2-8-3 sub-assemblies.
- Q2-2-9**: The Q2-2-9 frame, which includes the Q2-2-9-1, Q2-2-9-2, and Q2-2-9-3 sub-assemblies.
- Q2-2-10**: The Q2-2-10 frame, which includes the Q2-2-10-1, Q2-2-10-2, and Q2-2-10-3 sub-assemblies.
- Q2-2-11**: The Q2-2-11 frame, which includes the Q2-2-11-1, Q2-2-11-2, and Q2-2-11-3 sub-assemblies.
- Q2-2-12**: The Q2-2-12 frame, which includes the Q2-2-12-1, Q2-2-12-2, and Q2-2-12-3 sub-assemblies.
- Q2-2-13**: The Q2-2-13 frame, which includes the Q2-2-13-1, Q2-2-13-2, and Q2-2-13-3 sub-assemblies.
- Q2-2-14**: The Q2-2-14 frame, which includes the Q2-2-14-1, Q2-2-14-2, and Q2-2-14-3 sub-assemblies.
- Q2-2-15**: The Q2-2-15 frame, which includes the Q2-2-15-1, Q2-2-15-2, and Q2-2-15-3 sub-assemblies.
- Q2-2-16**: The Q2-2-16 frame, which includes the Q2-2-16-1, Q2-2-16-2, and Q2-2-16-3 sub-assemblies.
- Q2-2-17**: The Q2-2-17 frame, which includes the Q2-2-17-1, Q2-2-17-2, and Q2-2-17-3 sub-assemblies.
- Q2-2-18**: The Q2-2-18 frame, which includes the Q2-2-18-1, Q2-2-18-2, and Q2-2-18-3 sub-assemblies.
- Q2-2-19**: The Q2-2-19 frame, which includes the Q2-2-19-1, Q2-2-19-2, and Q2-2-19-3 sub-assemblies.
- Q2-2-20**: The Q2-2-20 frame, which includes the Q2-2-20-1, Q2-2-20-2, and Q2-2-20-3 sub-assemblies.
- Q2-2-21**: The Q2-2-21 frame, which includes the Q2-2-21-1, Q2-2-21-2, and Q2-2-21-3 sub-assemblies.
- Q2-2-22**: The Q2-2-22 frame, which includes the Q2-2-22-1, Q2-2-22-2, and Q2-2-22-3 sub-assemblies.
- Q2-2-23**: The Q2-2-23 frame, which includes the Q2-2-23-1, Q2-2-23-2, and Q2-2-23-3 sub-assemblies.
- Q2-2-24**: The Q2-2-24 frame, which includes the Q2-2-24-1, Q2-2-24-2, and Q2-2-24-3 sub-assemblies.
- Q2-2-25**: The Q2-2-25 frame, which includes the Q2-2-25-1, Q2-2-25-2, and Q2-2-25-3 sub-assemblies.
- Q2-2-26**: The Q2-2-26 frame, which includes the Q2-2-26-1, Q2-2-26-2, and Q2-2-26-3 sub-assemblies.
- Q2-2-27**: The Q2-2-27 frame, which includes the Q2-2-27-1, Q2-2-27-2, and Q2-2-27-3 sub-assemblies.
- Q2-2-28**: The Q2-2-28 frame, which includes the Q2-2-28-1, Q2-2-28-2, and Q2-2-28-3 sub-assemblies.

Note

Q2

R. Index

Part No.	Part Name	Page	Ref.No
04002200H000	Mes Shaft Bracket	33	D-3-8
01000300B004	TABLE SUPPORT ANGLE "K"	83	K1-1-19
01000700H004	Table Support(D)(L=349.5)	83	K1-1-5
01000700H004	Table Support(D) (L=349.5)	83	K1-1-15
01001100H00	Ball Bearing (6004Zz)	20	B-5-2
01001100H000	Ball Bearing (6005Zz)	36	E-1-24
01001500B000	Spool Stand (L=280)	11	A1-1-6
01-001S-NET1	Fixing Screw (M3xL6)	100	M-4-26
01-002B-AU12	FAN Cover	95	M-2-20
01-002B-OT10	Pressing Plate for LCD	99	M-4-10
01-002M-AU12	Fixing Screw for Fan	95	M-2-18
01-003B-SW63	DOOR LOCK	100	M-4-19
01-003S-BT01	Caution Sticker	94	M-1-20
01-004S-BT01	Fan Cleaning Sticker	95	M-2-15
01006SC-4113	Hex. Socket Bolt (M10*L50)	14	A2-1-2
01007SW-1111	Washer (@10)	14	A2-1-4
01008SW-9115	Spring Washer (@10)	11	A1-1-12
01008SW-9115	Spring Washer (@10)	14	A2-1-3
01008SW-9115	Spring Washer (@10)	14	A2-1-13
01-016A-DU33	Speaker	99	M-4-24
01029BR-A001	Ball Bearing(6004ZZ)	38	E-2-7
01100210B000	Hook Shaft	12	A1-2-7
01100400B000	I Bolt(Set)	11	A1-1-3
01100400H000	Bearing Cover	12	A1-2-17
01101300A000	Hook Shaft Collar	16	B-1-4
01101700U000	Low Shaft Gear	12	A1-2-13
01101800B000	Mes Adjusting Bushing	34	D-4-13
01101900U000	Hook Shaft Gear	12	A1-2-11
01102000B000	Bearing Bushing	12	A1-2-14
01-102B-OT10	Insulation Bush(B)	99	M-4-31
01111100B009	TABLE SUPPORT ANGLE "A-1"	14	A2-1-9
0120000B000	Mes Driving Crank Assy	34	D-4-22
01300100H000	Oil Pump Set	28	C-6-1
01300200H000	Oil Pump Adapter	28	C-6-5
01300300H000	Oil Pump Hose Insert	27	C-5-1
01300300H000	Oil Pump Hose Insert	27	C-5-9
01300300H000	Bed Oil Hose Insert	27	C-5-17
01300300H000	Oil Pump Hose Insert	28	C-6-6
01300300H000	Oil Pump Hose Insert	28	C-6-17
01300400H000	Oil Pump Compression Sleeve	27	C-5-2
01300400H000	Oil Pump Compression Sleeve	27	C-5-10
01300400H000	Bed Oil Compression Sleeve	27	C-5-18
01300400H000	Oil Pump Compression Sleeve	28	C-6-7
01300400H000	Oil Pump Compression Sleeve	28	C-6-18
01300500H000	Oil Pump Compression Bushing	27	C-5-3
01300500H000	Oil Pump Compression Bushing	27	C-5-11
01300500H000	Bed Oil Compression Bushing	27	C-5-19
01300500H000	Oil Pump Compression Bushing	28	C-6-8
01300500H000	Oil Pump Compression Bushing	28	C-6-19
01300600H000	Oil Pump Hose (@4)	28	C-6-9
01300900H000	Mos Metering Valve	27	C-5-16
01301000H000	Valve Junction Connect Hose	27	C-5-22
01301100H000	Bed Oil Supply Hose "A"	27	C-5-20

Part No.	Part Name	Page	Ref.No
01301200H000	Bed Oil Supply Hose "B"	27	C-5-21
01301500H000	Bed Oil Supply Hose Holder	27	C-5-24
01301600H000	Oil Supply Nipple	27	C-5-23
01302210H000	Stop Valve (1/8)	28	C-6-12
01302400H000	Stop Valve Adapter Hose (@4)	28	C-6-16
01302400H000	Stop Valve Adapter Hose (@4)	28	C-6-20
01302600H000	Stop Valve Adapter	28	C-6-15
01302700U000	Mos Metering Valve Junction	27	C-5-12
01303700H000	Tension Plate Pin	42	F-1-31
01303800H000	Oil Hose @4	27	C-5-8
01303900H000	Distribution Junction	27	C-5-4
02-0000-EMB1	Head On/Off S/W Board (9,15C)	49	G-2-14
02000100T000	MAGNETIC SWITCH SET	90	L-1-22
02000400B000	CABLE COVER HOLDER	92	L-2-6
02000910T000	MAGNETIC S/W FIXED BRACKET	90	L-1-20
02001300T000	BRACKET STOPPER (CE)	90	L-1-21
02-001A-UI12	Color Change Board (9C)	46	F-4-17
02-001B-SW67	Switch Cover	98	M-3-26
02001DC-A001	Brand Mark	109	P-1-8
02002PM-D092	Top Shaft Cover "B"	110	P-2-9
02002SC-7119	Pluss Screw (M4*L8)	60	H1-6-49
02002SC-7119	Pluss Screw (M4*L8)	71	H2-6-49
02002SC-7119	Pluss Screw (M4*L8)	109	P-1-9
02003MC-8118	UNDER THREAD PRESSER SCREW	34	D-4-8
02004BR-T121	Hook Shaft Space	12	A1-2-8
02-009A-8180	Ball Bearing (6004NR)	54	H1-2-16
02-009A-8180	Ball Bearing (6004NR)	54	H1-2-22
02-009A-8180	BALL BEARING 6004NR	61	H1-7-18
02-009A-8180	Ball Bearing 6004NR	61	H1-7-21
02-009A-8180	Ball Bearing (6004NR)	65	H2-2-16
02-009A-8180	Ball Bearing (6004NR)	65	H2-2-22
02-009A-8180	BALL BEARING 6004NR	72	H2-7-18
02-009A-8180	Ball Bearing 6004NR	72	H2-7-21
02009SC-A001	Side Cover Screw	19	B-4-5
02009SC-A001	Side Cover Screw	23	C-1-6
02009SC-A001	Bracket Screw	77	I-3-9
02010AF-3123	Hex.Socket Bolt(M4*L12)	112	Q1-1-23
02010AF-3123	Hex.Socket Bolt(M4*L12)	117	Q2-1-23
02010SC-3123	Truss Screw (M4*L8)	49	G-2-7
02010SC-3123	Truss Screw (M4*L8)	75	I-1-55
02010SC-3123	TRUSS SCREW (M4*L8)	80	J-1-3
02010SC-3123	Truss Screw (M4*L8)	103	N-2-22
02010SC-3123	Truss Screw (M4*L8)	104	N-3-22
02010SC-3123	Truss Screw (M4*L8)	109	P-1-18
02014SC-7113	Hex. Socket Bolt (M4*L5)	42	F-1-33
02014SC-7113	Hex. Socket Bolt (M4*L5)	78	I-4-20
02014SC-7113	Hex. Socket Bolt (M4*L5)	110	P-2-2
02015SC-7113	Hex.Socket Bolt(M4*L10)	16	B-1-11
02015SC-7113	Driving Lever Pin Screw	18	B-3-9

Part No.	Part Name	Page	Ref.No
02015SC-7113	Hex.Socket Bolt (M4*L10)	19	B-4-8
02015SC-7113	Hex. Socket Bolt (M4*L10)	32	D-2-2
02015SC-7113	Hex. Socket Bolt (M4*L10)	34	D-4-16
02015SC-7113	Hex. Socket Bolt (M4*L10)	34	D-4-20
02015SC-7113	Hex. Socket Bolt (M4*L10)	43	F-2-36
02015SC-7113	HEX.SOCKET BOLT(M4*L10)	46	F-4-11
02015SC-7113	Hes. Socket Bpllt (M4*L10)	48	G-1-2
02015SC-7113	C.S Screw (M4*L10)	48	G-1-4
02015SC-7113	Hex. Socket Bolt (M4*L10)	59	H1-6-3
02015SC-7113	HEX.SOCKET BOLT(M4*L10)	70	H2-6-3
02015SC-7113	Hex.Socket Bolt(M4*L10)	75	I-1-39
02015SC-7113	Hex.Socket Bolt(M4*L10)	81	J-2-11
02015SC-7113	Hex. Socket Bolt (M4*L10)	110	P-2-3
02015SC-7113	Hex. Socket Bolt (M4*L10)	110	P-2-5
02017PM-A001	Cable Ring	92	L-2-10
02021PM-AC00	Top Shaft Cover "A"	110	P-2-8
02022PR-UK01	Upper Shaft Cover "B" Bracket	42	F-1-32
02023ET-A001	Top Shaft Cover Magnet	110	P-2-10
02023SC-7113	Hex. Socket Bolt (M4*L8)	19	B-4-19
02023SC-7113	Hex.Socket Bolt(M4 x L8)	20	B-5-8
02023SC-7113	Hex. Socket Bolt (M4*L8)	26	C-4-3
02023SC-7113	Hex. Socket Bolt (M4*L8)	28	C-6-11
02023SC-7113	Hex. Socket Bolt (M4*L8)	33	D-3-10
02023SC-7113	Hex.Socket Bolt (M4*L8)	36	E-1-19
02023SC-7113	Hex.Socket Screw (M4xL8)	38	E-2-17
02023SC-7113	Hex. Socket Bolt (M4*L8)	43	F-2-30
02023SC-7113	HEX.SOCKET BOLT (M4*L8)	46	F-4-9
02023SC-7113	Hex.Socket Bolt (M4*L8)	49	G-2-10
02023SC-7113	Hex. Socket Bolt (M4*L8)	50	G-3-2
02023SC-7113	Position Adjusting Screw	52	H1-1-29
02023SC-7113	Hex.Socket Bolt(M4*L12)	55	H1-3-5
02023SC-7113	Plus Screw (M3*L8)	56	H1-4-29
02023SC-7113	Hex. Socket Bolt (M4*L8)	59	H1-6-25
02023SC-7113	Hex. Socket Bolt (M4*L8)	60	H1-6-53
02023SC-7113	Position Adjusting Screw	63	H2-1-29
02023SC-7113	Hex.Socket Bolt(M4*L12)	66	H2-3-5
02023SC-7113	Plus Screw (M3*L8)	67	H2-4-30
02023SC-7113	Hex. Socket Bolt (M4*L8)	70	H2-6-25
02023SC-7113	Hex. Socket Bolt (M4*L8)	71	H2-6-53
02023SC-7113	Hex.Socket Bolt (M4*L8)	75	I-1-51
02023SC-7113	Hex.Socket Bolt (M4*L8)	76	I-2-2
02023SC-7113	Hex. Socket Bolt (M4*L8)	78	I-4-11
02023SC-7113	Hex. Socket Bolt (M4*L8)	78	I-4-18
02023SC-7113	Truss Screw (M4*L8)	90	L-1-18
02023SC-7113	Hex.Socket Bolt(M4*L8)	114	Q1-2-2
02023SC-7113	HEX.SOCKET BOLT (M4*L8)	114	Q1-2-17
02023SC-7113	Hex.Socket Bolt(M4*L8)	119	Q2-2-2
02023SC-7113	HEX.SOCKET BOLT (M4*L8)	119	Q2-2-17
02025PR-A001	Bobbin Stand Bracket	109	P-1-10

R. Index

Part No.	Part Name	Page	Ref.No
02026EL-UK01	START S/W	87	K2-2-30
02026SC-A001	Stand	106	O-1-17
02026SC-A001	Bobbin Stand	109	P-1-11
02027EL-UK01	STOP S/W	87	K2-2-31
02028SW-9115	Spring Washer (@4)	20	B-5-15
02028SW-9115	Spring Washer (@4)	59	H1-6-26
02028SW-9115	Spring Washer (@4)	60	H1-6-54
02028SW-9115	Spring Washer (@4)	70	H2-6-26
02028SW-9115	Spring Washer (@4)	71	H2-6-54
02028SW-9115	Spring Washer (@4)	80	J-1-4
02028SW-9115	Spring Washer (@4)	81	J-2-7
02028SW-9115	Spring Washer (@4)	81	J-2-12
02028SW-9115	Spring Washer (@4)	109	P-1-15
02029SN-9311	Hex. Nut (M4-No2)	103	N-2-10
02029SN-9311	Hex. Nut (M4-No2)	104	N-3-10
02029SN-9311	Hex. Nut (M4)	109	P-1-14
02030SW-B001	Bearing Case Washer	20	B-5-4
02031SC-7113	Hex. Socket Screw (M5*L10)	20	B-5-3
02031SC-7113	Hex.Socket Screw (M5*L10)	43	F-2-35
02031SC-7113	Hex. Socket Screw (M5*L10)	84	K1-2-15
02031SC-7113	Hex. Socket Screw (M5*L10)	87	K2-2-17
02031SC-7113	Hex. Socket Screw (M5*L10)	102	N-1-5
02031SC-7113	Hex. Socket Screw (M5*L10)	102	N-1-16
02031SC-7113	Hex. Socket Bolt (M5*L10)	109	P-1-12
02038SC-9131	Plus Screw (M5*L10)	90	L-1-3
02044SC-3123	Truss Screw (M5*L8)	25	C-3-12
02044SC-3123	Truss Screw (M5 x L8)	38	E-2-19
02044SC-3123	Truss Screw (M5*L8)	90	L-1-5
02044SC-3123	Truss Screw (M5*L10)	90	L-1-25
02044SC-3123	Truss Screw (M5*L8)	109	P-1-2
02044SC-3123	Truss Screw (M5*L8)	109	P-1-4
02044SC-3123	Truss Screw (M5*L8)	109	P-1-7
02054PR-A001	Main Motor Pulley Cover	38	E-2-18
02058AD-AB00	Cable Cover (A)	102	N-1-1
02059AD-AH21	Cable Cover (C)	102	N-1-3
02060AD-AH21	Cable Cover (B)	102	N-1-2
02065SC-3328	Tapping Screw (M3*L10)	102	N-1-8
02086PR-UI12	Top Shaft Cover(L)	110	P-2-1
02087SC-4329	Tapping Screw (@5*L25)	11	A1-1-13
02087SC-4329	Tapping Screw (@5*L25)	14	A2-1-14
02097ET-B001	Model Name Plate	109	P-1-17
02321SN-A001	HEX. NUT (M16)	87	K2-2-25
02325SC-A021	HEX. BOLT (M16*L150)	87	K2-2-26
02331CW-A001	TABLE SUPPORT BASE SET	87	K2-2-27
02332RB-A001	TABLE SUPPORT RUBBER(B)	87	K2-2-28
03-0000-EMB1	Head On/Off S/W Board (6,12C)	49	G-2-14
03000100I000	Oil Supply Sensor Stopper Collar	38	E-2-3
03000110H000	Upper Shaft Bearing Collar	20	B-5-5
03000200I000	Oil Supply Sensor Plate	38	E-2-1
03000210BDK0	Low Shaft "B" [2053mm]	38	E-2-15
03000400I000	Low Shaft "A"[225mm]	38	E-2-12
03000500U000	Oil Tube Pin	26	C-4-5

Part No.	Part Name	Page	Ref.No
03002700H000	Return Spring	74	I-1-36
03002700T000	Bearing Collar	68	H2-4-43
03002800H000	Return Spring Stopper Washer	75	I-1-37
03002900H000	Return Spring Fix Pin Washer	75	I-1-40
03003000H000	Return Spring Fix Pin	75	I-1-38
03003100H000	Upper Thread Hook Motor Unit	74	I-1-1
03003300H000	Cam Shaft Fixing Block	74	I-1-6
03003500H000	Motor Driving Cam Shaft	74	I-1-10
03003910H000	Upper Thread Driving Plate	74	I-1-17
03003SC-4113	Pulley Box Screw [M8×L35]	36	E-1-2
03003SC-4113	Hex. Socket Bolt "B"(M8*L35)	44	F-3-2
03004400H000	Motor Driving Connect Bearing	74	I-1-26
03004500H000	Connecting Plate Pin Washer	74	I-1-28
03004800H000	Connecting Plate Knuckle	74	I-1-31
03005210H000	Collar "A"	36	E-1-25
03005210H000	COLLAR "A"	54	H1-2-17
03005210H000	Collar "A"	61	H1-7-22
03005210H000	COLLAR "A"	65	H2-2-17
03005210H000	Collar "A"	72	H2-7-22
03005600H000	ANGLE DISK	36	E-1-15
03005710H000	Angle Plate Base @20	36	E-1-16
03005800H000	Indicator	36	E-1-18
03005MC-3123	TRUSS SCREW (M3*L5)	76	I-2-7
03006400IDK0	Top Shaft "B" [1493.5mm]	37	E-1-40
03006520HDK0	Top Shaft "C" [855mm]	37	E-1-40
03006610HDK0	Top Shaft "D"[970mm]	37	E-1-40
03006910HDK0	Low Shaft "D" [2308mm]	38	E-2-15
03006MC-3123	Truss Screw (M3*L6)	18	B-3-31
03006MC-9123	TRUSS SCREW(M3*L6) SUS	46	F-4-16
03007000HEK0	UPPER THREAD DRIVING SHAFT A	75	I-1-41
03007100HHI0	UPPER THREAD DRIVING SHAFT B	75	I-1-42
03007200HEK0	UPPER THREAD DRIVING SHAFT C	75	I-1-43
03007200HHI0	UPPER THREAD DRIVING SHAFT C	75	I-1-44
03007300H000	Upper Thread Shaft Coupling	75	I-1-45
03007410HDK0	Top Shaft "E" [1400mm]	37	E-1-40
03007500H000	Low Coupling	38	E-2-13
03007SC-A001	Cam Base Screw	17	B-2-7
03008000H000	Ball Bearing 689 (Ntn)	18	B-3-15
03008100K000	Needle Bar Drive Bearing Bush	18	B-3-16
03008300H000	Connecting Plate Pin	74	I-1-27
03008600H000	Motor Cover Fixing Bracket	75	I-1-50
03013EL-T121	Encoder Set	25	C-3-1

Part No.	Part Name	Page	Ref.No
03016SC-4113	Hex.Socket Screw (M5*L15)	36	E-1-33
03016SC-4113	Hex. Socket Bolt (M5*L15)	39	E-3-18
03016SC-4113	Screw	54	H1-2-21
03016SC-4113	Hex. Socket Bolt (M5*L15)	58	H1-5-11
03016SC-4113	Screw	65	H2-2-21
03016SC-4113	Hex. Socket Bolt (M5*L15)	68	H2-4-44
03016SC-4113	Hex. Socket Bolt (M5*L15)	69	H2-5-11
03016SC-4113	Hex. Socket Bolt (M5*L15)	74	I-1-22
03016SC-4113	Hex. Socket Bolt (M5*L15)	81	J-2-5
03016SC-4113	Hex. Socket Bolt (M5*L15)	102	N-1-15
03020SC-A001	Drive Pin Screw 11/64,N40,L8	16	B-1-3
03020SC-A001	Drive Pin Screw 11/64,N40,L8	18	B-3-18
03020SC-A001	Drive Pin Screw (11/64,N40,L8)	44	F-3-13
03020SC-A001	Drive Pin Screw (11/64,N40,L8)	45	F-3-36
03022SC-4517	Hex. Socket Set Screw (M4*L5)	16	B-1-13
03022SC-4517	Hex. Socket Set Screw (M4*L5)	41	F-1-29
03022SC-4517	Hex.Socket Screw (M4*L5)	52	H1-1-16
03022SC-4517	Hex.Socket Screw (M4*L5)	56	H1-4-18
03022SC-4517	Hex.Socket Screw (M4*L5)	63	H2-1-16
03022SC-4517	Hex.Socket Screw (M4*L5)	67	H2-4-18
03023SC-A001	Connecting Rod Stud	18	B-3-2
03025SW-1211	Washer (@6)	18	B-3-4
03025SW-1211	Washer (@6)	28	C-6-4
03025SW-1211	Washer (@6)	30	D-1-9
03025SW-1211	Washer (Ø8)	37	E-1-39
03025SW-1211	Washer (@6)	44	F-3-27
03026SW-9115	Spring Washer (@6)	18	B-3-5
03026SW-9115	Spring Washer (@6)	28	C-6-3
03026SW-9115	Spring Washer (@6)	30	D-1-8
03026SW-9115	Spring Washer (@6)	44	F-3-26
03026SW-9115	Spring Washer (@6)	52	H1-1-10
03026SW-9115	Spring Washer (@6)	56	H1-4-12
03026SW-9115	Spring Washer (@6)	63	H2-1-10
03026SW-9115	Spring Washer (@6)	67	H2-4-12
03026SW-9115	Spring Washer (@6)	68	H2-4-46
03026SW-9115	Spring Washer	74	I-1-33
03026SW-9115	Spring Washer (@6)	90	L-1-13
03027SN-A001	Stud Nut	18	B-3-6
03031SN-A001	Pin. Nut (11/64,N=40)	48	G-1-6
03031SN-A001	Pin. Nut (11/64,N=40)	48	G-1-10
03031SN-A001	Pin. Nut (11/64,N=40)	81	J-2-16
03033CW-A001	Driver Pin	18	B-3-23
03034SW-A001	Reciprocator Washer	18	B-3-10
03039PR-B001	Stopper Bracket	18	B-3-27
03040SC-A001	Stopper Bracket Screw	18	B-3-22
03041PR-B001	Reciprocator Stopper	18	B-3-26
03045SP-B001	Jump Spring	18	B-3-28
03046CW-B001	Jump Spring Guide	18	B-3-29
03048SW-A001	Reciprocator Washer	18	B-3-21
03050SC-4517	Hex. Socket Set Screw (M3*L3)	19	B-4-13
03050SC-4517	Hex. Socket Set Screw (M3*L3)	34	D-4-6
03053SF-A001	Felt "B"	18	B-3-17
03056CL-B001	Head Rail Holder	21	B-6-5

R. Index

Part No.	Part Name	Page	Ref.No
03057SC-A001	Head Rail Holder Screw	19	B-4-17
03057SC-A001	Head Rail Holder Screw	21	B-6-6
03057SC-A001	Head Rail Holder Screw (11/64,L10)	34	D-4-2
03062ET-A001	Code Clip	45	F-3-38
03062PR-UK01	Side Cover "B3"	19	B-4-1
03065SC-A001	Guard Plate Screw	24	C-2-3
03065SC-A001	Guard Plate Screw	24	C-2-6
03065SC-A001	GUARD PLATE SCREW	55	H1-3-18
03065SC-A001	GUARD PLATE SCREW	58	H1-5-28
03065SC-A001	GUARD PLATE SCREW	66	H2-3-18
03065SC-A001	Guard Plate Screw	69	H2-5-28
03068LM-BB00	Lm Guide Block Set 12C	23	C-1-1
03069LM-B002	Lm Guide Block Set 9C	23	C-1-1
03071SC-7113	Hex. Socket Bolt (M3*L10)	33	D-3-6
03071SC-A001	Hex.Socket Bolt (M3*L15)	23	C-1-2
03072MC-4113	Hex. Socket Bolt (M8*L28)	21	B-6-2
03100410H000	Top Shaft Drive Pulley	36	E-1-32
03100410H000	Main Motor Pulley	39	E-3-17
03100600H000	Main Motor Guide	39	E-3-12
03200200I000	Pulley For Low Shaft	38	E-2-8
03200300I000	Tension Adjusting Roller	36	E-1-6
03200400I000	ROLLER BEARING	36	E-1-7
03200500I000	Idler Shaft	36	E-1-11
03200600I000	Idler Bush	36	E-1-9
03200700I000	C-Ring (#20)	36	E-1-8
03200800I000	Timing Belt (B300 S5M 625)	36	E-1-34
03201100I000	Collar "B" @20	36	E-1-20
03300604U000	Take-Up Guide Rail 12C L=339	23	C-1-3
03301200A000	Bushing	16	B-1-17
03301800U000	Needle Bar Drive Pin	16	B-1-1
03302100A000	Pin Collar	16	B-1-12
03302600I000	Arm Guide Plate	21	B-6-7
03302900H000	Needle Case (38419)	17	B-2-4
03303300H000	Lever Pin	18	B-3-7
03303800I000	Arm Guard Plate(R)	24	C-2-5
03304100I000	Thread Holding Lever Ass'y	24	C-2-7
03304200I000	Lever Spring	24	C-2-8
03304300I000	Lever Spring Bush.	24	C-2-9
03304400I000	Thread Holding Push Plate	24	C-2-10
03500100I000	Upper Thread Catcher Base	76	I-2-1
03500210H000	Base Cover	76	I-2-6
03500300I000	UPPER THREAD CATCHER	76	I-2-8
03500400H000	Upper Catcher Connect Pin	76	I-2-9
03500500H000	Upper Catcher Driving Lever	76	I-2-12
03500600H000	Driving Lever Pin	76	I-2-13
03500700H000	Driving Lever Pin Collar	76	I-2-14
03500800H000	Driving Lever Pin Washer	76	I-2-16
03500900H000	Clutch Block	76	I-2-17
03501000H000	Clutch Stud Screw	76	I-2-18
03501100H000	Clutch Spring	76	I-2-19
03501200H000	Clutch Dial	76	I-2-20

Part No.	Part Name	Page	Ref.No
03700400H000	Mes Driving Link	30	D-1-11
03700500H000	Mes Driving Link Screw	30	D-1-12
03700600H000	Mes Shaft Driving Clamp	30	D-1-13
03700700H000	Mes Driving Shaft (@10*L121)	30	D-1-15
03700800H000	Mes Driving Shaft Guide	30	D-1-16
03701000H000	Ball Bearing (6001Z)	30	D-1-28
03701100H000	Mes Driving Shaft Bush	30	D-1-18
03701200BT00	MOTOR DRIVING NOB	30	D-1-29
038A0000I000	Drive Lever "A,B" Set	16	B-1-18
04000100B000	Cam Roller End Seal "A"	58	H1-5-27
04000100B000	Cam Roller End Seal "A"	69	H2-5-27
04000100H000	X-Lm Guide Support Plate (A)	52	H1-1-22
04000100H000	X-Lm Guide Support Plate (A)	63	H2-1-22
04000200B000	CAM ROLLER END SEAL B	55	H1-3-17
04000200B000	Cam Roller End Seal "B"	58	H1-5-27
04000200B000	CAM ROLLER END SEAL B	66	H2-3-17
04000200B000	Cam Roller End Seal "B"	69	H2-5-27
04000200H000	X-Lm Guide Support Plate (B)	52	H1-1-23
04000200H000	X-Lm Guide Support Plate (B)	63	H2-1-23
04000200HHI0	Mes Driving Shaft "D"	31	D-1-40
04000400B000	X-TIMING PULLEY (S5M)	53	H1-1-37
04000400B000	X-TIMING PULLEY (S5M)	57	H1-4-39
04000400B000	X-TIMING PULLEY (S5M)	64	H2-1-37
04000400B000	X-TIMING PULLEY (S5M)	68	H2-4-38
04000500I000	X Moving Plate	55	H1-3-4
04000500I000	X Moving Plate	66	H2-3-4
04000630I000	BEARING (6905ZZ)	52	H1-1-33
04000630I000	Needle Bearing (Nk18/16A)	57	H1-4-35
04000630I000	BEARING (6905ZZ)	63	H2-1-33
04000630I000	Needle Bearing (Nk18/16A)	68	H2-4-34
04000650I000	TIMING PULLEY BRACKET (L)	52	H1-1-31
04000650I000	TIMING PULLEY BRACKET (L)	57	H1-4-33
04000650I000	TIMING PULLEY BRACKET (L)	63	H2-1-31
04000650I000	TIMING PULLEY BRACKET (L)	67	H2-4-32
04000660I000	TIMING PULLEY BRACKET (R)	52	H1-1-32
04000660I000	TIMING PULLEY BRACKET (R)	57	H1-4-34
04000660I000	TIMING PULLEY BRACKET (R)	63	H2-1-32
04000660I000	TIMING PULLEY BRACKET (R)	68	H2-4-33
04000700B009	Y-Drive Timing Belt "A"	69	H2-5-2
04000700F000	Sensor Perception Plate X,Y	55	H1-3-6
04000700F000	Sensor Perception Plate X,Y	66	H2-3-6
04000800B009	Y-Drive Timing Belt "B"	69	H2-5-2
04000800H000	Sensor Plate "Y"	58	H1-5-5
04000800H000	Sensor Plate"C"	69	H2-5-5
04000900B009	Y-Adjusting Shaft	67	H2-4-22
04000900I000	Y-Axis Bearing Block (Rear)	58	H1-5-3
04000900I000	Y-Axis Bearing Block (Rear)	69	H2-5-3
04001000H000	Mes Driving Box Cover	32	D-2-8
04001000I004	X Driving Pulley Shaft	54	H1-2-19
04001000I004	X Driving Pulley Shaft	65	H2-2-19
04001100BT00	MES DRIVING CRANK	30	D-1-1
04001700B009	Idler (A)	68	H2-4-40

Part No.	Part Name	Page	Ref.No
04001700H000	Driving Shaft Coupling	65	H2-2-26
04001800B009	Idler Shaft (A)	68	H2-4-42
04001800I000	X Motor Base	54	H1-2-9
04001800I000	X Motor Base	65	H2-2-9
04001900B009	Idler Base (A)	68	H2-4-41
04-001A-SW60	Color Change Board 12C	46	F-4-17
04002000B009	Idler Base (B)	68	H2-4-41
04002000B009	Idler Shaft (B)	68	H2-4-42
04002100B009	Idler (B)	68	H2-4-40
04002200I000	Y-MOTER BASE	61	H1-7-7
04002200I000	Y-MOTER BASE	72	H2-7-7
04003500B000	Bearing Stopper Collar "A"	54	H1-2-23
04003500B000	Needle Bearing Collar	61	H1-7-19
04003500B000	Bearing Stopper Collar "A"	65	H2-2-23
04003500B000	Needle Bearing Collar	72	H2-7-19
04003500I000	NEEDLE BEARING COLLAR	52	H1-1-34
04003500I000	NEEDLE BEARING COLLAR	57	H1-4-36
04003500I000	NEEDLE BEARING COLLAR	63	H2-1-34
04003500I000	NEEDLE BEARING COLLAR	68	H2-4-35
04-003S-AU10	Warning Sticker	94	M-1-21
04004AF-A001	Needle Plate Screw	78	I-4-26
04004MC-4517	Hex.Socket Bolt (M4×L4)	36	E-1-10
04007SC-A001	Cushion Cover Screw	78	I-4-25
04008PR-A001	Hook Base Cover	78	I-4-27
04010MC-7113	Hex.Socket Bolt (M4*L10)	48	G-1-3
04012AF-A001	Hook Shaft Bush Screw (15/64-28)	12	A1-2-10
04012AF-A001	Hook Shaft Bush Screw	16	B-1-5
04014SC-4517	Hex.Socket Set Screw(M5*L5)	11	A1-1-5
04014SC-4517	Hex.Socket Set Screw(M5*L5)	74	I-1-9
04014SC-4517	Hex.Socket Set Screw(M5*L5)	74	I-1-11
04014SC-4517	Hex.Socket Set Screw(M5*L5)	76	I-2-15
04014SC-4517	Hex. Socket Set Screw (M5*L6)	90	L-1-11
04016AF-A001	Cam Collar Screw	12	A1-2-15
04016AF-A001	Cam Collar Screw	44	F-3-9
04016MC-4113	CAM ROLLER GUIDE FIXED SCREW	55	H1-3-2
04016MC-4113	Cam Roller Guide Fixed Screw	56	H1-4-4
04016MC-4113	CAM ROLLER GUIDE FIXED SCREW	66	H2-3-2
04016MC-4113	Cam Roller Guide Fixed Screw	67	H2-4-4
04019CW-T121	Pin Stud Screw	16	B-1-10
04020AF-T121	Roller For Take-Up Gear-B	16	B-1-9
04021BR-T121	Needle Bearing Kt367N (Iko)	16	B-1-8
04026BR-A001	Ball Bearing 6003zz	12	A1-2-16
04028SC-A001	Stud Bolt(M10*L69)	12	A1-2-2
04029SW-A001	Stud Bolt Washer (@8)	12	A1-2-3
04029SW-A001	Stud Bolt Washer(S) (@8)	21	B-6-4
04029SW-A001	Stud Bolt Washer (@8)	30	D-1-6
04029SW-A001	Pulley Box Washer [Ø8]	36	E-1-4
04029SW-A001	Washer (Ø8)	36	E-1-13
04029SW-A001	Stud Bolt Washer(S) (@8)	39	E-3-4
04029SW-A001	Stud Bolt Washer(S) (@8)	39	E-3-9
04029SW-A001	Stud Bolt Washer(S) (@8)	39	E-3-11
04029SW-A001	Stud Bolt Washer (@8)	44	F-3-4

R. Index

Part No.	Part Name	Page	Ref.No
04029SW-A001	Stud Bolt Washer (@8)	52	H1-1-5
04029SW-A001	Stud Bolt Washer(S) (@8)	52	H1-1-26
04029SW-A001	Stud Bolt Washer(S) (@8)	54	H1-2-8
04029SW-A001	Stud Bolt Washer(S) (@8)	54	H1-2-12
04029SW-A001	Stud Bolt Washer(S) (@8)	54	H1-2-15
04029SW-A001	Stud Bolt Washer (@8)	56	H1-4-7
04029SW-A001	Stud Bolt Washer (@8)	59	H1-6-13
04029SW-A001	Stud Bolt Washer(S) (@8)	61	H1-7-10
04029SW-A001	Stud Bolt Washer(S) (@8)	61	H1-7-13
04029SW-A001	Stud Bolt Washer(S) (@8)	61	H1-7-17
04029SW-A001	Stud Bolt Washer (@8)	63	H2-1-5
04029SW-A001	Stud Bolt Washer(S) (@8)	63	H2-1-26
04029SW-A001	Stud Bolt Washer(S) (@8)	65	H2-2-8
04029SW-A001	Stud Bolt Washer(S) (@8)	65	H2-2-12
04029SW-A001	Stud Bolt Washer(S) (@8)	65	H2-2-15
04029SW-A001	Stud Bolt Washer (@8)	67	H2-4-7
04029SW-A001	Stud Bolt Washer (@8)	70	H2-6-13
04029SW-A001	Stud Bolt Washer(S) (@8)	72	H2-7-10
04029SW-A001	Stud Bolt Washer(S) (@8)	72	H2-7-13
04029SW-A001	Stud Bolt Washer(S) (@8)	72	H2-7-17
04029SW-A001	Stud Bolt Washer (@8)	84	K1-2-7
04029SW-A001	Stud Bolt Washer (@8)	87	K2-2-7
04030SW-A001	Stud Bolt Washer (L) (@8)	12	A1-2-4
04032SN-A001	Hex. Nut (M8)	12	A1-2-6
04032SN-A001	Hex. Nut (M8-NO2)	39	E-3-6
04032SN-A001	Hex. Nut (M8)	59	H1-6-10
04032SN-A001	Hex. Nut (M8)	70	H2-6-10
04032SN-A001	Hex. Nut (M8)	74	I-1-32
04032SN-A001	Hex. Nut (M8)	84	K1-2-5
04032SN-A001	Hex. Nut (M8)	87	K2-2-5
04033AF-D002	Rotary Hook Set	78	I-4-1
04034AF-A001	Bobbin Case Set	78	I-4-2
04035AF-A001	Bobbin	78	I-4-3
04037SC-A001	Picker Bracket Screw (11/64-40)	33	D-3-2
04100000ID0D	X-Roller Plate Assy	53	H1-1-39
04100100BH01	Guard Plate For Timing Belt (L=564)	52	H1-1-2
04100100BH0A	Guard Plate For Timing Belt (L=964)	52	H1-1-2
04100100ID00	X Axis Frame	52	H1-1-1
04100100ID00	X Axis Frame	63	H2-1-1
04100200H000	X-Driving Pulley Shaft	64	H2-1-39
04100330I000	Timing PULLEY(72-S5M-050)	54	H1-2-28
04100330I000	Timing PULLEY(72-S5M-050)	61	H1-7-27
04100330I000	Timing PULLEY(72-S5M-050)	65	H2-2-28
04100330I000	Timing PULLEY(72-S5M-050)	72	H2-7-27
04100410I000	Timing BELT (50-S5M-475)	54	H1-2-30
04100410I000	Timing BELT (50-S5M-475)	61	H1-7-29
04100410I000	Timing BELT (50-S5M-475)	65	H2-2-30
04100410I000	Timing BELT (50-S5M-475)	72	H2-7-29
04104300B000	Timing Pulley Driving Pin "A" (Belt:35)	56	H1-4-17
04104300B000	Timing Pulley Driving Pin "A" (Belt:35)	67	H2-4-17
04104400B000	Timing Pulley Driving Pin "B"	52	H1-1-15
04104400B000	Timing Pulley Driving Pin "B" (Belt:48)	56	H1-4-17
04104400B000	Timing Pulley Driving Pin "B"	63	H2-1-15

Part No.	Part Name	Page	Ref.No
04104400B000	Timing Pulley Driving Pin "B" (Belt:48)	67	H2-4-17
04105100B000	X BELT CATCHER PLATE (B)	55	H1-3-10
04105100B000	X BELT CATCHER PLATE (B)	63	H2-1-2
04105100B000	X BELT CATCHER PLATE (B)	66	H2-3-10
04200000I00I	Y-Cam Roller Plate Assy	64	H2-1-40
04200100B004	Guard Plate For Timing Belt B	56	H1-4-2
04200100I004	Y-Axis Frame L=638	56	H1-4-1
04200100I004	Y-Axis Frame L=638	67	H2-4-1
04200200I000	Y-Driving Pulley Shaft	61	H1-7-25
04200200I000	Y-Driving Pulley Shaft	72	H2-7-25
04200400B000	Y Adjusting Shaft Guide (A)	56	H1-4-23
04200400B000	Y Adjusting Shaft Guide (A)	67	H2-4-23
04200500B000	Y Adjusting Shaft Guide (B)	56	H1-4-20
04200500B000	Y Adjusting Shaft Guide (B)	67	H2-4-20
04200600B000	Adjusting Shaft Stopper	56	H1-4-26
04200600B000	Adjusting Shaft Stopper	67	H2-4-26
04202400B000	Timing Pulley Tension Base	52	H1-1-6
04202400B000	Timing Pulley Tension Base	56	H1-4-8
04202400B000	Timing Pulley Tension Base	63	H2-1-6
04202400B000	Timing Pulley Tension Base	67	H2-4-8
04202400B000	Y-Axis Feed Plate	69	H2-5-29
04205000B000	BELT CATCHER PLATE (B)	69	H2-5-18
04300100B004	Guard Plate For Timing Belt A	56	H1-4-2
04302300B000	Timing Pulley Tension Base(N) (Belt:35)	56	H1-4-8
04302300B000	Timing Pulley Tension Base(N) (Belt:35)	67	H2-4-8
04304900B000	BELT CATCHER PLATE (A)	69	H2-5-18
04400200B000	FIXED MES	34	D-4-4
04400310B000	UNDER THREAD PRESSER	34	D-4-7
04500200B000	TIMING ULLEY B(18-S5M-32F)	67	H2-4-14
04600100B000	TIMING PULLEY D(18-S5M-32F)	52	H1-1-12
04600100B000	TIMING PULLEY D(18-S5M-32F)	63	H2-1-12
04600100B000	TIMING PULLEY D(18-S5M-32F)	67	H2-4-14
05000200U000	Take-Up Lever Drive Pin	16	B-1-15
05000210T000	TRANSFORMER (EMT25V) 1A/25.5V	90	L-1-19
05007SC-7113	Hex.Socket Bolt (M3*L5)	24	C-2-13
05008MC-4517	Hex. Socket Bolt (M5*L8)	74	I-1-7
05008SC-4113	Hex.Socket Bolt (M4*L16)	39	E-3-13
05008SC-4113	Hex.Socket Bolt (M4*L16)	41	F-1-27
05008SC-4113	Hex. Socket Bolt (M4*L16)	74	I-1-35
05009SW-1111	Washer(@4)	48	G-1-17
05009SW-1111	Washer(@4)	59	H1-6-27
05009SW-1111	Washer(@4)	60	H1-6-55
05009SW-1111	Washer(@4)	70	H2-6-27
05009SW-1111	Washer(@4)	71	H2-6-55
05014SC-7113	Hex. Socket Bolt (M4*L25)	28	C-6-13
05014SC-7113	Hex. Socket Bolt (M4*L25)	41	F-1-3
05015CW-A001	Head Base Pin(@5*L15)	41	F-1-4
05015MC-4113	Hex. Socket Bolt (M5*L15)	20	B-5-6
05016SN-1211	Nut (@4)	49	G-2-8
05019SC-A001	Needle Bar Cover Screw (M5*L6)	41	F-1-5
05021SF-A001	Felt	41	F-1-9
05022SW-A001	Spring Shoe Washer	41	F-1-8
05023RB-A001	Needle Bar Cushion Rubber "A"	41	F-1-10

Part No.	Part Name	Page	Ref.No
05024RB-A001	Needle Bar Cushion Rubber "B"	41	F-1-11
05026SC-4113	Stopper Screw (9/64-11.5)	41	F-1-15
05028SC-4113	Holder Screw (9/64-L8)	41	F-1-13
05028SC-A001	Holder Screw	60	H1-6-43
05028SC-A001	Holder Screw	71	H2-6-43
05029BM-A001	Presser Foot Set	41	F-1-17
05031AF-A001	Mes Shaft Bracket Bush	33	D-3-7
05031AF-A001	Presser Foot Guide Bush	41	F-1-19
05032RB-A001	Presser Foot Cushion Rubber"B	41	F-1-24
05033PR-T121	Take-Up Lever	43	F-2-21
05033RB-A001	Presser Foot Adjusting Rubber	41	F-1-25
05034RB-A001	Presser Foot Adjusting Rubber	41	F-1-26
05035PM-T121	Take-Up Lever Boss (9C)	43	F-2-23
05035RB-A001	Presser Foot Cushion Rubber"A	41	F-1-20
05036AF-A001	Needle Fixed Holder	41	F-1-21
05037DB-A001	Needle (Db-K5, #11)	41	F-1-22
05041SC-A001	Guide Rail Screw	23	C-1-4
05041SC-A001	Guide Rail Serew	43	F-2-32
05057SN-3211	Hex. Nut (M3)	46	F-4-21
05060SC-8118	Screw (M3*L3)	43	F-2-16
05062SC-A001	Thread Guide (L) Screw	21	B-6-8
05062SC-A001	Thread Guide (L) Screw	43	F-2-5
05063RB-A001	Magnetic Rubber "A"	41	F-1-30
05070SC-3123	Head Face Plate (U) Screw	43	F-2-3
05070SC-3123	Thread Guide (L) Screw	43	F-2-8
05070SC-3123	Thread Guide (L) Screw	43	F-2-19
05100100B000	Switch Bar @19*@22 L6300	103	N-2-12
05100100B000	Switch Bar @19*@22 L6300	104	N-3-12
05100300B000	Switch Bar Cap	103	N-2-13
05100300B000	Switch Bar Cap	104	N-3-13
05100800B000	S/W Bar Return Spring Guide	103	N-2-5
05100800B000	S/W Bar Return Spring Guide	104	N-3-5
05363SC-A001	Needle Fixed Screw (A/S)	41	F-1-23
05452CM-A001	Eyelet "A"	43	F-2-2
05452CM-A001	Eyelet "A"	43	F-2-18
05452CM-A001	EYELET "A"	48	G-1-7
05452CM-A001	Thread Guide Bushing	106	O-1-12
05642RB-A001	Magnetic Rubber "B"	43	F-2-7
05651PR-A002	Head Face Plate (L) Set 9C	43	F-2-6
06000010B000	Table Connecting Plate (Set)	84	K1-2-12
06000010B000	Table Connecting Cover(D)	86	K2-1-12
06000100B009	Table Support(A) (L=1754)	14	A2-1-6
06000200B009	Table Support(B) (L=1051)	86	K2-1-11
06000200BTZI	TABLE SUPPORT ANGLE "C-1"	86	K2-1-16
06000300B009	Table Support(C) (L=371.5)	14	A2-1-7
06000400B009	Table Support(D) (L=730)	86	K2-1-10
06000500B009	Table Support(E) (L=360)	86	K2-1-13
06000600B009	Table Support(F) (L=664)	14	A2-1-8
06000700B009	Table Support(G) (L=325)	86	K2-1-14
06000800B009	Table Support(H) (L=376)	86	K2-1-15
06000900B009	Table Support(I) (L=293)	14	A2-1-10
06000900B009	Table Support(I) (L=293)	86	K2-1-17

R. Index

Part No.	Part Name	Page	Ref.No
06000900BUYK	TABLE SUPPORT ANGLE "K"	86	K2-1-18
06001100B000	TABLE CONNECTING PLATE "C"	84	K1-2-17
06001100B000	TABLE CONNECTING PLATE "C"	87	K2-2-13
06001200B000	TABLE SPACE PLATE "C"	84	K1-2-18
06001200B000	TABLE SPACE PLATE "C"	87	K2-2-14
06-001C-SE50	Fixing Screw for Trimming Driver Radiator(A)	97	M-3-10
06-001C-SE50	Fixing Screw for Drive	98	M-3-22
06003SW-2111	Washer (@4)	19	B-4-9
06003SW-2111	Washer (@4)	19	B-4-18
06003SW-2111	Washer (@4)	33	D-3-11
06003SW-2111	Washer (@4)	34	D-4-3
06003SW-2111	Washer (@4)	41	F-1-28
06003SW-2111	Washer (4@-S)	49	G-2-11
06003SW-2111	Washer (@4)	78	I-4-21
06003SW-2111	Washer (@4)	81	J-2-8
06003SW-2111	Washer (@4)	81	J-2-13
06003SW-2111	Washer (@4)	109	P-1-16
06008SW-4013	E-Ring (@5)	19	B-4-11
06009PR-A001	Jump Clutch Plate Spring	19	B-4-14
06010AF-8118	Plus Screw (M3*L4)	78	I-4-9
06010SC-8118	Plus Screw (M3*L4)	19	B-4-15
06010SC-8118	Plus Screw (M3*L4)	46	F-4-22
06010SC-8118	Plus Screw (M3*L4)	77	I-3-8
06011SW-2111	Washer (@3)	19	B-4-16
06011SW-2111	Washer (@3)	24	C-2-14
06011SW-2111	Washer (@3)	25	C-3-4
06011SW-2111	Washer (@3)	30	D-1-27
06011SW-2111	Washer (@3)	32	D-2-7
06011SW-2111	Washer (@3)	44	F-3-23
06011SW-2111	Washer (@3)	55	H1-3-9
06011SW-2111	Washer (@3)	56	H1-4-14
06011SW-2111	Washer (@3)	58	H1-5-26
06011SW-2111	Washer (@3)	66	H2-3-9
06011SW-2111	Washer (@3)	69	H2-5-26
06012CW-A001	Jump Clutch	19	B-4-12
06014SN-9111	Hex.Nut	19	B-4-21
06020MC-8119	PLUSS SCREW (M6*L20)	84	K1-2-4
06020MC-8119	PLUSS SCREW (M6*L20)	87	K2-2-4
06025MC-7113	Hex. Socket Bolt (M6*L25)	30	D-1-7
06025MC-7113	Hex.Socket Bolt (M6*L25)	61	H1-7-8
06025MC-7113	Hex.Socket Bolt (M6*L25)	61	H1-7-15
06025MC-7113	Hex.Socket Bolt (M6*L25)	72	H2-7-8
06025MC-7113	Hex.Socket Bolt (M6*L25)	72	H2-7-15
06025MC-7113	Hex. Socket Bolt (M6*L25)	74	I-1-3
06060MC-4517	Hex. Socket Set Screw (M6*L6)	12	A1-2-12
07-001A-SW60	Color Change Board 6C	46	F-4-17
07003SC-A001	Take-Up Lever Screw (12C)	43	F-2-24
07-004S-SM5S	Fixing Screw for SMPS Connect Board(Set)	94	M-1-8
07-004S-SM5S	Fixing Screw for Digital SMPS(Set)	94	M-1-9
07-004S-SM5S	Fixing Screw for SMPS Bracket(A)(Set)	94	M-1-10
07-004S-SM5S	Fixing Screw for 24V SMPS(Set)	94	M-1-13
07-004S-SM5S	Fixing Screw for SMPS Bracket(B)(Set)	94	M-1-14
07-004S-SM5S	Fixing Screw for Connect Plate(Set)	95	M-2-1

Part No.	Part Name	Page	Ref.No
07-004S-SM5S	Fixing Screw Noise Filter(Set)	95	M-2-3
07-004S-SM5S	Fixing Screw For Connect Board(Set)	95	M-2-5
07-004S-SM5S	Ground Screw for Connect Plate(Set)	95	M-2-7
07-004S-SM5S	Fixing Screw for Surge Protector(Set)	96	M-2-22
07-004S-SM5S	Fixing Screw for Driver Fixing Plate(Set)	97	M-3-2
07-004S-SM5S	Fixing Screw for J/B Fixing Bracket(Set)	97	M-3-8
07-004S-SM5S	Fixing Screw for Trimming Driver Bracket A(Set)	97	M-3-16
07-004S-SM5S	Fixing Screw for Drive Fixing Bracket A(Set)	98	M-3-23
07-004S-SM5S	Screw for Fixing Bracket for OP	99	M-4-3
07-004S-SM5S	Rear Cover Fixing Screw (M4xL10)	100	M-4-21
07005BM-T121	Take-Up Lever Set	43	F-2-20
07-005S-SM5S	CPU Board Screw (SET) (M3xL10)	99	M-4-17
07-005S-SM5S	IO Board Fixing Screw (SET)	99	M-4-21
07009SC-4517	Hex.Socket Set Screw (M5*L6)	43	F-2-28
07016SC-4113	Hex.Socket Bolt (M4 x L12)	20	B-5-14
07016SC-7113	Hex. Socket Bolt (M4*L12)	81	J-2-6
07016SC-7113	Hex.Socket Bolt (M4*L12)	114	Q1-2-6
07016SC-7113	Hex.Socket Bolt (M4*L12)	119	Q2-2-6
07018SC-8118	Plus Screw (M3*L8)	77	I-3-4
07035SC-7113	Hex.Scoket Bolt (M3*L6)	24	C-2-11
07035SC-7113	Bracket Screw (M3*L6)	25	C-3-2
07035SC-7113	BRACKET SCREW (M3*L6)	30	D-1-25
07035SC-7113	Bracket Screw (M3*L6)	58	H1-5-25
07035SC-7113	Bracket Screw (M3*L6)	69	H2-5-25
07035SC-7113	Bracket Screw (M3*L6)	74	I-1-13
07102CM-A001	Eyelet "C" (6C)	43	F-2-22
08000100B009	Y-Axis Rail Guide	70	H2-6-2
08000100BEK0	COLOR CHANGE SHAFT "B"(L1958)	45	F-3-28
08000200B009	V-Rail Bracket	70	H2-6-1
08000700B000	Bracket	60	H1-6-48
08000700B000	Bracket	71	H2-6-48
080008031000	TENSION PLATE COVER (9C)	50	G-3-8
080008041000	TENSION PLATE COVER (12C)	50	G-3-8
08-002M-SW67	Stud for Trimming Driver(A)	98	M-3-34
08003202B000	Cover Plate (R) 6C	50	G-3-3
08003203B000	Cover Plate (R) 9C	50	G-3-3
08003204B000	Cover Plate (R) 12C	50	G-3-3
08006SC-8118	Hex.Socket Screw (M3xL5)	36	E-1-23
08006SC-8118	Hex.Socket Bolt (M3*L5)	38	E-2-2
08006SC-8118	Hex.Socket Screw(M3xL5)	38	E-2-6
08011SC-8118	Screw (M2*L4)	49	G-2-4
08011SW-1111	Spring Washer (@3-S)	25	C-3-3
08012CW-T121	Connecting Plate Stud Screw	78	I-4-14
08013CL-B001	Movable Mes	34	D-4-10
08014FU-B001	Movable Mes Shaft (New)	34	D-4-9
08014SC-A001	Plus Screw (M3*L8)	34	D-4-11
08015PM-A001	Bushing	78	I-4-16
08017SC-B001	Screw (M3*L5)	34	D-4-12
08022SC-A001	Lever Stud	34	D-4-18
08023CW-A001	Mes Shaft Cramp	34	D-4-19
08025PR-B001	Mes Connecting Lever	34	D-4-17
08041SW-1111	Washer (@8-S)	59	H1-6-7
08041SW-1111	Washer (@8-S)	59	H1-6-12

Part No.	Part Name	Page	Ref.No
08041SW-1111	Washer (@8-S)	70	H2-6-7
08041SW-1111	Washer (@8-S)	70	H2-6-12
08044SR-4013	E-Ring (@8)	46	F-4-5
08049SP-A001	Lever Return Spring	33	D-3-9
08057SW-1111	Washer (@6)	44	F-3-17
08057SW-1111	Washer (@6)	52	H1-1-11
08057SW-1111	Washer (@6)	56	H1-4-13
08057SW-1111	Washer (@6)	63	H2-1-11
08057SW-1111	Washer (@6)	67	H2-4-13
08057SW-1111	Washer (@6)	68	H2-4-47
08057SW-1111	Washer (@6)	74	I-1-5
08057SW-1111	Washer (@6)	75	I-1-49
08057SW-1111	Washer (@6)	84	K1-2-10
08057SW-1111	Washer (@6)	86	K2-1-22
08057SW-1111	Washer (@6)	87	K2-2-10
08057SW-1111	Washer (@6)	90	L-1-14
08057SW-1111	Washer (@6)	114	Q1-2-24
08057SW-1111	Washer (@6)	119	Q2-2-24
08062SC-4113	Hex.Socket Bolt (M5*L20)	54	H1-2-2
08062SC-4113	Hex.Socket Bolt (M5*L20)	61	H1-7-2
08062SC-4113	Hex.Socket Bolt (M5*L20)	65	H2-2-2
08062SC-4113	Hex.Socket Bolt (M5*L20)	72	H2-7-2
08062SC-7113	Hex. Socket Bolt (M5*L20)	30	D-1-14
08065CW-A001	Stopper Collar	30	D-1-19
08067RB-A001	O-Ring (@10)	30	D-1-21
08070SW-9115	Spring Washer (@8)	54	H1-2-3
08070SW-9115	Spring Washer (@8)	61	H1-7-3
08070SW-9115	Spring Washer (@8)	65	H2-2-3
08070SW-9115	Spring Washer (@8)	72	H2-7-3
08076SC-7113	Hex. Socket Bolt (M5*L12)	25	C-3-6
08076SC-7113	Hes.Socket Bolt (M5*L15)	91	L-1-28
08076SC-7113	Hex. Socket Bolt (M5*L12)	92	L-2-7
08080MC-4113	HEX.SOCKET BOLT (M8*L80)	39	E-3-10
08087SC-7113	Hex.Socket Bolt (M8*L25)	54	H1-2-6
08087SC-7113	Hex.Socket Bolt (M8*L25)	54	H1-2-10
08087SC-7113	Hex.Socket Bolt (M8*L25)	65	H2-2-6
08087SC-7113	Hex.Socket Bolt (M8*L25)	65	H2-2-10
08088PR-B001	Mes Driving Box Cover	83	K1-1-6
08088PR-B001	Mes Driving Box Cover	86	K2-1-5
08091SC-7113	Hex.Socket Bolt (M6×L20)	36	E-1-29
08091SC-7113	Hex.Socket Bolt (M8×L10)	37	E-1-37
08091SC-7113	Hex.Socket Bolt (M6*L20)	54	H1-2-27
08091SC-7113	Hex.Socket Bolt (M6*L20)	61	H1-7-6
08091SC-7113	Hex.Socket Bolt (M6*L20)	72	H2-7-6
08091SC-7113	Hex. Socket Bolt (M6*L20)	75	I-1-47
08091SC-7113	Hex. Socket Bolt (M6*L20)	84	K1-2-8
08091SC-7113	Hex. Socket Bolt (M6*L20)	87	K2-2-8
08091SC-7113	Hex. Socket Bolt (M6*L20)	90	L-1-12
08098SC-8118	Plus Screw (M3*L4.5)	34	D-4-5
08101003B000	Cam Shaft (6,9C)	45	F-3-34
08101100B000	Cam Bushing	44	F-3-10
08101500B000	Half Turn Bushing	45	F-3-32
08101500B000	Half Turn Bushing	46	F-4-13

R. Index

Part No.	Part Name	Page	Ref.No
08101700B000	Half Turn Film	46	F-4-4
08101SC-8329	Tapping Screw (M3*L16)	83	K1-1-7
08101SC-8329	Tapping Screw (@3*L16)	83	K1-1-9
08101SC-8329	Tapping Screw (M3*L16)	83	K1-1-13
08101SC-8329	Tapping Screw (M3*L16)	83	K1-1-23
08101SC-8329	Tapping Screw (M3*L16)	86	K2-1-6
08101SC-8329	Tapping Screw (@3*L16)	86	K2-1-8
08101SC-8329	Tapping Screw (M3*L16)	86	K2-1-26
08101SC-8329	Tapping Screw (M3*L16)	86	K2-1-30
08102900B000	Motor Gear	46	F-4-2
08103203B000	Guide Shaft	45	F-3-33
08106200B000	Magnet Holder Spacer	44	F-3-21
08110FH-B001	Mes Driving Crank	34	D-4-15
08113SC-A001	Collar Screw (11/64, L6)	33	D-3-4
08113SC-A001	Collar Screw (11/64, L6)	34	D-4-14
08113SC-A001	Collar Screw (11/64, L6)	75	I-1-46
08200503A000	Take-Up Lever Shaft (9C)	43	F-2-27
08200800A000	Take-Up Lever Shaft Bush(R)	43	F-2-26
08201304H000	Head Rail	42	F-1-34
08202000A000	Tension Plate Holder (6,9C)	48	G-1-15
08202000I000	Tension Plate Holder (12C)	48	G-1-15
08203000A000	Take-Up Lever Shaft Bush(L)	43	F-2-25
08300003I000	TENSION UNIT Assy (9C)	48	G-1-19
08300102I000	TENSION UNIT (6C)	48	G-1-1
08300103I000	TENSION UNIT (9C)	48	G-1-1
08300104I000	TENSION UNIT (12C)	48	G-1-1
08300202I000	BOARD BASE (6C)	49	G-2-9
08300203I000	BOARD BASE (9C)	49	G-2-9
08300204I000	BOARD BASE (12C)	49	G-2-9
08300302I000	CONNECTION PLATE (6C)	50	G-3-4
08300303I000	CONNECTION PLATE "A" (9C)	50	G-3-4
08300304I000	CONNECTION PLATE (12C)	50	G-3-4
08300400A000	Lamp Cover	49	G-2-16
08300403I000	CONNECTION PLATE "B" (9C)	50	G-3-4
08300702I000	Roller Base Ass'Y (6C)	49	G-2-2
08300703I000	Roller Base Ass'Y (9C)	49	G-2-2
08300704I000	Roller Base Ass'Y (12C)	49	G-2-2
08308300B000	Thread Detecting Wheel Stud	49	G-2-5
08310000B000	Tension Adjusting Set	48	G-1-14
08320000I000	SUB TENSION ADJUSTING SET	48	G-1-5
08400010B000	Y-Axis Feed Plate "D"	59	H1-6-34
08400010B000	Y-Axis Feed Plate "D"	70	H2-6-34
08400010B004	Main V-Rail Assy	60	H1-6-56
08500000I000	Wiper Assy	76	I-2-22
08600003B000	Upper Thread Presser Base Assy	77	I-3-11
09000200H000	TOP SHAFT COVER BRACKET (L)	110	P-2-7
09000300B000	Magnet Sticker	45	F-3-37
09000400B000	Guide Bush (A)	90	L-1-10
09000500B000	Emergency Switch Plate	90	L-1-16
09000600B000	ON/OFF S/W BOX COVER	90	L-1-4
09000700B000	BALLAST	102	N-1-14
09001100BT00	Magnetic Switch (SET) (1@)	103	N-2-24
09001110BT00	Magnetic Switch (SET)	103	N-2-24

Part No.	Part Name	Page	Ref.No
09001400BT00	CEMENT RESISTANCE (4.7/20W)	90	L-1-23
09005SC-3123	Hex.Socket Bolt(M4*L10)	43	F-2-10
09005SC-3123	Truss Screw (M3*L6)	48	G-1-9
09005SC-3123	Toothed Lock Washer	48	G-1-12
09005SC-3123	Truss Screw (M3*L6)	49	G-2-15
09005SC-3123	Truss Screw (M3*L6)	50	G-3-5
09005SC-3123	Truss Screw (M3*L6)	59	H1-6-28
09005SC-3123	Truss Screw (M3*L6)	70	H2-6-28
09005SC-3123	SCREW(M3*L6)	87	K2-2-32
09007SC-7113	Hex. Socket Bolt (M3*L12)	32	D-2-6
09-023C-SC53	Q.C Passed Sticker	94	M-1-17
09-023C-SC53	QC Passed Sticker	99	M-4-35
09026PR-AB00	Upper Thread Presser Base 12C	77	I-3-1
09027ET-AB00	Velcro 12C	77	I-3-2
09029PR-AB00	Presser Base Cover 12C	77	I-3-3
09030PR-A002	Upper Thread Presser Base 9C	77	I-3-1
09031ET-A002	Velcro 9C	77	I-3-2
09033PR-A002	Presser Base Cover 9C	77	I-3-3
09034PR-AE00	Upper Thread Presser Base 6C	77	I-3-1
09035ET-AE00	Velcro 6C	77	I-3-2
09037PR-AE00	Presser Base Cover 6C	77	I-3-3
09038CW-A001	Thread Presser Space	77	I-3-5
09040PR-A001	Bracket (L)	77	I-3-6
09041PR-A001	Bracket (R)	77	I-3-7
09044PR-A001	Upper Thread Holder Disk "A" Set	77	I-3-10
09200100B000	Washer (Pvc)	102	N-1-23
096440C-8119	Spring Adjusting Screw	43	F-2-13
096440N-3211	Spring Adjusting Nut (9/64,N40)	43	F-2-14
10000100A000	Thread Guide (L=200)	80	J-1-6
10000200B000	Spool Plate Washer	80	J-1-5
10000600I004	Frame Guide Rail Plate	114	Q1-2-19
10000600I004	Frame Guide Rail Plate	119	Q2-2-19
10000700I000	Insert Bushing	114	Q1-2-20
10000700I000	Insert Bushing	119	Q2-2-20
10000800I000	Insert Bushing Washer	114	Q1-2-21
10000800I000	Insert Bushing Washer	119	Q2-2-21
10001AF-A001	Picker	78	I-4-19
10-001C-AT10	Insulation Bush(A)	99	M-4-31
10-002S-SW66	IO Board 겹치나사 (SET) (M3XL8)	99	M-4-34
10-003M-PT01	Fixing Screw for Front Cover(Truss)	94	M-1-19
10-003M-PT01	Fixing Screw for Side Cover(Truss)	95	M-2-19
10-003M-PT01	Fixing Screw for Rear Cover(Truss)	98	M-3-28
10-003M-PT01	Fixing Screw (M4xL8)	100	M-4-14
10-003S-SW66	Spring Washer	95	M-2-9
10-004A-SW70	FDD	100	M-4-25
10004CW-A001	Picker Holder	78	I-4-17
10-004M-SW68	Fixing Screw for Trimming Driver Radiator(B)	97	M-3-12
10-004S-SW66	Washer	95	M-2-10
10006FU-A001	Picker Connecting Crank	78	I-4-15
10009EL-A002	UPPER THREAD CATCHER SOL.	24	C-2-12
10010SC-8119	Plus Screw (M3*L5)	78	I-4-5
10011SC-8119	PLUS SCREW (M3*L6)	115	Q1-2-27
10011SC-8119	PLUS SCREW (M3*L6)	120	Q2-2-27

Part No.	Part Name	Page	Ref.No
10011SP-A001	Sol. Spring	78	I-4-6
10-012M-PT10	Stud for Joint Board	97	M-3-6
10-012M-PT10	Stud for Trimming Driver(B)	97	M-3-14
10012RB-A001	Cushion Washer	78	I-4-7
10013PM-A001	Picker Sol. Cover	78	I-4-4
10013PM-A001	Picker Sol. Cover	78	I-4-8
10015PR-A001	Picker Sol. Base	78	I-4-10
10-016M-SW66	Fixing Screw for Transformer A	95	M-2-8
10017RB-A001	Picker Stopper	33	D-3-5
10019PR-A001	Connecting Link	78	I-4-12
10-021M-SW66	Fixing Screw for Joint Board(Set)	97	M-3-7
10-021M-SW66	Fixing Screw for Trimming Driver (Set)	97	M-3-15
10021SC-A001	Sol. Stud Screw	78	I-4-13
10-027C-SC53	Magnet	44	F-3-20
10-028S-SC53	Screw for Pressing Plate (M3xL7)	99	M-4-12
10-028S-SC53	Speaker Fixing Screw	99	M-4-25
10-028S-SC53	Fixing Screw for SB DDC Radiator(SET) (M3xL7)	99	M-4-29
10-028S-SC53	Inverter Fixing Plate (M3xL7)	99	M-4-33
10-042M-AU10	Fixing Screw for Trimming Driver BracketB(Set)	97	M-3-17
10-042M-AU10	Fixing Screw for Drive Fixing Bracket B(Set)	98	M-3-24
10-072S-SW70	Fixing Screw for External Concept	95	M-2-14
10200103B000	Head Face Plate (U) 9C	43	F-2-1
10300003A000	THREAD GUIDE (M) SET (9C)	43	F-2-4
10400003B000	Thread Guide(L) Set	43	F-2-11
10400304B000	Spring Holder	43	F-2-15
10500200B000	FELT ATTACHMENT	113	Q1-1-36
10500200B000	FELT ATTACHMENT	118	Q2-1-36
10500300B000	FRONT FELT (A)	113	Q1-1-37
10500300B000	FRONT FELT (A)	118	Q2-1-37
10500700IDK0	Frame (A) [L=6276]	112	Q1-1-1
10500700IDK0	Frame (A) [L=6276]	117	Q2-1-1
10500800IDK0	Frame (B) [L=6276]	112	Q1-1-2
10500800IDK0	Frame (B) [L=6276]	117	Q2-1-2
10500900I004	Frame (D) [L=939]	112	Q1-1-3
10500900I004	Frame (D) [L=939]	117	Q2-1-3
10501410IDK0	Frame (C-1) [L=6121]	112	Q1-1-11
10501410IDK0	Frame (C-1) [L=6121]	117	Q2-1-11
10501510IDK0	Frame (C-2) [L=6176]	112	Q1-1-13
10501510IDK0	Frame (C-2) [L=6176]	117	Q2-1-13
10501610I004	Frame (C-3) [L=838.5]	112	Q1-1-15
10501610I004	Frame (C-3) [L=838.5]	117	Q2-1-15
10501710I004	Frame (C-4) [L=838.5]	112	Q1-1-17
10501710I004	Frame (C-4) [L=838.5]	117	Q2-1-17
10501800ID00	Frame Guide Rail Plate A [L=439]	112	Q1-1-20
10501800ID00	Frame Guide Rail Plate A [L=439]	117	Q2-1-20
10501900I000	Felt(A)	112	Q1-1-35
10501900I000	Felt(A)	117	Q2-1-35
10507400B000	Roller Position Adjusting Pin	60	H1-6-50
10507400B000	Roller Position Adjusting Pin	71	H2-6-50
1051001BEK9	Frame Assy	118	Q2-1-45
10510800B000	ROLLER PIN	114	Q1-2-12
10510800B000	ROLLER PIN	119	Q2-2-12
10600100H000	Angle Frame	81	J-2-9

R. Index

Part No.	Part Name	Page	Ref.No
10600403BHI0	Angle "C"	81	J-2-3
10600513BHI0	Angle "D"	81	J-2-4
10600600H000	Angle Base	81	J-2-10
10601403BHI0	Spool Plate A	80	J-1-1
10601503BHI0	Spool Plate B	80	J-1-2
10700003BHIO	Spool Plate Assy	80	J-1-14
11009EL-A001	Jumping Sol.	19	B-4-20
11009PR-B001	Thread Breakage Detecting Plat	48	G-1-8
11009SC-A001	Stud Screw	50	G-3-6
11012PR-B001	Thread Guide	43	F-2-9
11012PR-B001	Thread Guide (New)	48	G-1-11
11012PR-B001	Thread Guide (New)	48	G-1-11
11012PR-B001	Thread Guide (New)	48	G-1-11
11014SN-1211	Hex. Nut (M3)	48	G-1-13
11014SN-1211	Hex. Nut (M3)	76	I-2-11
11019SW-9115	Spring Washer (@3)	30	D-1-26
11019SW-9115	Spring Washer (3@)	55	H1-3-8
11019SW-9115	Spring Washer (3@)	58	H1-5-7
11019SW-9115	Spring Washer (3@)	66	H2-3-8
11019SW-9115	Spring Washer(@3)	69	H2-5-7
11019SW-9115	Spring Washer (@3)	76	I-2-10
11019SW-9115	Spring Washer (@3)	92	L-2-5
11021SC-4113	Hex. Socket Bolt (M4*L35)	103	N-2-7
11021SC-4113	Hex. Socket Bolt (M4*L35)	104	N-3-7
11029SC-4113	Hex. Socket Bolt (M4*L20)	48	G-1-16
11029SC-4113	Hex. Socket Bolt (M4*L20)	48	G-1-18
11029SC-4113	Hex. Socket Bolt (M4*L20)	76	I-2-21
11031PR-AB00	Cover Plate 12C	50	G-3-1
11032PR-A002	Cover Plate 9C	50	G-3-1
11033PR-AE00	Cover Plate 6C	50	G-3-1
11046PR-AB00	Cable Support Plate	43	F-2-29
11047PR-A002	Cable Support Plate	43	F-2-29
11049SC-A001	Board Stud Bolt	92	L-2-2
11075PM-B001	Thread Sensor Roller(B1)Set	49	G-2-1
11083CW-B001	Thread Detecting Wheel Stud	49	G-2-5
11101200T000	Upper Dead Point Stopper	41	F-1-14
120001003BHI9	Membrane Switch	46	F-4-14
12000100BHI0	Cable Cover (D)	102	N-1-4
12000100H000	Rubber For Body Support	109	P-1-19
12000110B000	NEEDEL PLATE SET	78	I-4-22
12000200B000	CABLE COVER PLATE	102	N-1-7
12000200B009	TABLE SUPPORT BAR B	87	K2-2-19
12000200B009	TABLE SUPPORT BAR B	87	K2-2-24
12000400B000	NEEDLE PLATE ATTACHMENT	78	I-4-24
12000610F000	Body Cover (B)	109	P-1-3
12001100I000	BEAM SIDE COVER	109	P-1-1
12001110BT00	Body Cover (D)	109	P-1-6
12002000I000	X-Y Axis Servo Motor Cover	54	H1-2-31
12002000I000	Y-Axis Servo Motor Cover A	61	H1-7-30
12002000I000	X-Y Axis Servo Motor Cover	65	H2-2-31
12002000I000	Y-Axis Servo Motor Cover A	72	H2-7-30
12009SC-A001	Spool Post	80	J-1-9
12010000B009	TABLE SUPPORT BAR BRACKET	87	K2-2-20

Part No.	Part Name	Page	Ref.No
12010SN-1211	Hex.Nut (M5-No2)	80	J-1-12
12012PM-A001	Spool Holder	80	J-1-7
12012-PM-A001	Spool Holder	106	O-1-5
12013SC-A001	Spool Plate Fixing Bolt(M8*L22)	11	A1-1-7
12014SC-A001	Spool Stand Bolt	11	A1-1-4
12019AD-A021	Angle "A"	81	J-2-1
12020AD-A021	Angle "B"	81	J-2-2
12042PM-A001	Eyelet	81	J-2-18
12049SF-A001	Felt	80	J-1-13
12052SF-A001	Spool Sponge	80	J-1-8
12100310B000	Body Cover (C)	109	P-1-5
12101000I000	Bearing Cover (A)	36	E-1-22
12101100I000	Bearing Cover (B)	38	E-2-5
12300900I000	Mount	11	A1-1-2
13006BM-AB00	Color Change Cam Ass'Y 12C	44	F-3-5
13007BM-AC00	Color Change Cam Ass'Y 9C	44	F-3-5
13008BM-AE00	Color Change Cam Ass'Y	44	F-3-5
13008GA-A001	Color Change Cam Gear	44	F-3-7
13009SF-AB00	Cam Shaft (12C)	45	F-3-34
13018PR-A001	Half Turn Film Washer "A" (T2.3)	46	F-4-6
13019PR-A001	Half Turn Film Washer "B" (T1)	46	F-4-7
13023EL-A001	Half Turn Sensor	46	F-4-24
13025PM-A001	Sensor Cover	46	F-4-10
13028MT-A001	Color Change Motor Unit	46	F-4-1
13030SC-4517	Hex. Socket Set Screw (M4*L8)	46	F-4-3
13031SH-AB00	Guide Shaft 12C	45	F-3-33
13034AD-A001	Color Change Block	44	F-3-11
13035BR-A001	Guide Bushing	44	F-3-12
13036PR-A001	Magnet Holder	44	F-3-19
13042SN-1111	Hex. Nut (M6*T5-R)	30	D-1-22
13042SN-1111	Hex. Nut (M6*T5-R)	44	F-3-18
13042SN-1111	Hex. Nut (M6*T5-R)	44	F-3-25
13042SN-1111	Hex. Nut (M6*T5-R)	45	F-3-29
13042SN-1111	Hex. Nut (M6*T5-R)	74	I-1-20
13042SN-1111	Hex. Nut (M6*T5-R)	74	I-1-30
13042SN-1111	Hex. Nut (M6*T5-R)	84	K1-2-11
13042SN-1111	Hex. Nut (M6*T5-R)	87	K2-2-11
13044SR-4013	E-Ring (@4)	44	F-3-16
13044SR-4013	E-Ring (@4)	78	I-4-28
13048SC-A001	Bracket"A" Screw	110	P-2-4
13052PR-AB00	Membrane Switch Cover 12C	46	F-4-15
13053PR-A005	Membrane Switch Cover 6,9C	46	F-4-15
13054SC-3123	Truss Screw (M3*L8)	106	O-1-19
13059ET-AB00	Board Cover 12C	46	F-4-19
13060ET-A005	Board Cover 6,9C	46	F-4-19
13061SC-8119	Plus Screw (M3*L10)	46	F-4-20
13061SC-8119	Plus Screw (M3*L10)	74	I-1-15
14002SC-7113	Hex.Socket Bolt (M6*L15)	30	D-1-2
14002SC-7113	Hex.Socket Set Screw(M6*L15)	53	H1-1-36

Part No.	Part Name	Page	Ref.No
14002SC-7113	Hex.Socket Bolt (M6*L15)	57	H1-4-38
14002SC-7113	Hex.Socket Set Screw(M6*L15)	63	H2-1-36
14002SC-7113	Hex.Socket Bolt (M6*L15)	68	H2-4-37
14003SC-4113	Hex. Socket Bolt (M8*L25)	30	D-1-4
14006SC-4113	Hex. Socket Bolt (M8*L15)	59	H1-6-22
14006SC-4113	Hex. Socket Bolt (M8*L15)	70	H2-6-22
14006SC-7113	Hex.Socket Bolt (M8×L10)	36	E-1-12
14006SC-7113	Hex.Socket Set Screw(M8*L15)	56	H1-4-27
14006SC-7113	Hex.Socket Set Screw(M8*L15)	59	H1-6-14
14006SC-7113	HEX.SOCKET SET SCREW(M8*L15)	67	H2-4-27
14006SC-7113	Hex.Socket Set Screw(M8*L15)	70	H2-6-14
14027SC-4113	Hex.Socket Bolt (M8*L30)	39	E-3-7
14046SC-7113	Hex.Socket Bolt (M6*L30)	28	C-6-2
14046SC-7113	Hex. Socket Bolt (M6*L30)	68	H2-4-48
14058CW-A001	Collar "A"	38	E-2-10
14060AF-4517	Hex.Socket Screw(M6*L6)	30	D-1-17
14060AF-4517	Hex.Socket Screw(M6*L6)	30	D-1-30
14060AF-4517	Hex.Socket Screw(M6*L6)	36	E-1-21
14060AF-4517	Hex.Socket Screw(M6*L6)	36	E-1-26
14060AF-4517	Hex.Socket Bolt (M6*L6)	38	E-2-4
14060AF-4517	Hex.Socket Screw(M6*L6)	38	E-2-11
14060AF-4517	HEX.SOCKET SCREW(M6*L6)	44	F-3-6
14060AF-4517	HEX.SOCKET SCREW(M6*L6)	52	H1-1-35
14060AF-4517	Hex.Socket Screw(M6*L6)	53	H1-1-38
14060AF-4517	Hex.Socket Screw(M6*L6)	54	H1-2-18
14060AF-4517	Hex.Socket Screw(M6*L6)	54	H1-2-24
14060AF-4517	HEX.SOCKET SCREW(M6*L6)	57	H1-4-37
14060AF-4517	Hex.Socket Screw(M6*L6)	57	H1-4-40
14060AF-4517	Hex.Socket Set Screw(M5*L5)	61	H1-7-20
14060AF-4517	Hex.Socket Screw(M6*L6)	61	H1-7-23
14060AF-4517	HEX.SOCKET SCREW(M6*L6)	63	H2-1-35
14060AF-4517	Hex.Socket Screw(M6*L6)	64	H2-1-38
14060AF-4517	Hex.Socket Screw(M6*L6)	65	H2-2-18
14060AF-4517	Hex.Socket Screw(M6*L6)	65	H2-2-24
14060AF-4517	HEX.SOCKET SCREW(M6*L6)	68	H2-4-36
14060AF-4517	Hex.Socket Screw(M6*L6)	68	H2-4-39
14060AF-4517	Hex.Socket Set Screw(M5*L5)	72	H2-7-20
14060AF-4517	Hex.Socket Screw(M6*L6)	72	H2-7-23
14061AF-4517	Hex.Socket Screw(M8*L8)	36	E-1-31
14061AF-4517	Hex.Socket Screw(M8*L8)	38	E-2-9
14061AF-4517	Hex.Socket Screw(M8*L8)	54	H1-2-29
14061AF-4517	Hex.Socket Set Screw (M8*L8)	56	H1-4-25
14061AF-4517	Hex.Socket Screw(M8*L8)	61	H1-7-28
14061AF-4517	Hex.Socket Screw(M8*L8)	65	H2-2-29
14061AF-4517	Hex.Socket Set Screw (M8*L8)	67	H2-4-25
14061AF-4517	Hex.Socket Screw(M8*L8)	72	H2-7-28
14064SN-7311	Hex.Nut (M6-No3)	52	H1-1-21
14064SN-7311	HEX.NUT (M6-NO3)	63	H2-1-21
14068SC-4113	Hex. Socket Bolt (M10*L35)	14	A2-1-5
15001BR-B001	Cam Roller Baearing	55	H1-3-11
15001BR-B001	Cam Roller Baearing	58	H1-5-19
15001BR-B001	Cam Roller Baearing	66	H2-3-12
15001BR-B001	Cam Roller Bearing	69	H2-5-19

R. Index

Part No.	Part Name	Page	Ref.No
15002CW-B001	Cam Roller Stud (A)	55	H1-3-12
15002CW-B001	Cam Roller Stud (A)	58	H1-5-21
15002CW-B001	Cam Roller Stud (A)	66	H2-3-11
15002CW-B001	Cam Roller Stud (A)	69	H2-5-21
15003CW-B001	Cam Roller Stud (B)	55	H1-3-13
15003CW-B001	Cam Roller Stud (B)	58	H1-5-20
15003CW-B001	Cam Roller Stud (B)	66	H2-3-13
15003CW-B001	Cam Roller Stud (B)	69	H2-5-20
15017SC-4113	Hex. Socket Bolt (M8*L45)	52	H1-1-3
15017SC-4113	Hex. Socket Bolt (M8*L45)	56	H1-4-5
15017SC-4113	Hex. Socket Bolt (M8*L45)	63	H2-1-3
15017SC-4113	Hex. Socket Bolt (M8*L45)	67	H2-4-5
15019SC-4113	Hex. Socket Bolt (M8*L40)	39	E-3-2
15019SC-4113	Hex. Socket Bolt (M8*L40)	52	H1-1-3
15019SC-4113	Hex. Socket Bolt (M8*L40)	54	H1-2-13
15019SC-4113	Hex. Socket Bolt (M8*L40)	56	H1-4-5
15019SC-4113	Hex. Socket Bolt (M8*L40)	61	H1-7-11
15019SC-4113	Hex. Socket Bolt (M8*L40)	63	H2-1-3
15019SC-4113	Hex. Socket Bolt (M8*L40)	65	H2-2-13
15019SC-4113	Hex. Socket Bolt (M8*L40)	67	H2-4-5
15019SC-4113	Hex. Socket Bolt (M8*L40)	72	H2-7-11
15020SC-4113	Hex.Socket Bolt (M8*L50)	52	H1-1-24
15020SC-4113	Hex. Socket Bolt (M8X150)	59	H1-6-5
15020SC-4113	Hex.Socket Bolt (M8*L50)	63	H2-1-24
15020SC-4113	Hex. Socket Bolt (M8X150)	70	H2-6-5
15026DC-A001	Timing Pulley Tension Bracket (N)	56	H1-4-10
15026DC-A001	Timing Pulley Tension Bracket (N)	67	H2-4-10
15-026M-1000	Cable Tie	100	M-4-22
15027DC-A001	Timing Pulley Bracket (W)	52	H1-1-8
15027DC-A001	Timing Pulley Bracket (W)	56	H1-4-10
15027DC-A001	Timing Pulley Bracket (W)	63	H2-1-8
15027DC-A001	Timing Pulley Bracket (W)	67	H2-4-10
15028SC-1111	Hex. Bolt (M6*L20)	52	H1-1-9
15028SC-1111	Hex. Bolt (M6*L20)	56	H1-4-11
15028SC-1111	Hex. Bolt (M6*L20)	63	H2-1-9
15028SC-1111	Hex. Bolt (M6*L20)	67	H2-4-11
15029SN-3211	Nut(M4)	20	B-5-17
15030AD-B021	Y Cam Roller Guide Rail L=633	56	H1-4-3
15030AD-B021	Y Cam Roller Guide Rail L=633	67	H2-4-3
15033CW-B001	Y-Adjusting Shaft	56	H1-4-22
15037AD-BC11	X-Lm Guide Rail	55	H1-3-1
15037AD-BC11	X-Lm Guide Rail	66	H2-3-1
15042BR-A001	Needle Bearing (1210zz)	52	H1-1-13
15042BR-A001	Needle Bearing (1210zz)	56	H1-4-15
15042BR-A001	Needle Bearing (1210zz)	63	H2-1-13
15042BR-A001	Needle Bearing (1210zz)	67	H2-4-15
15042SC-3123	TRUSS SCREW (M4*L6)	32	D-2-9
15042SC-3123	Truss Screw (M4*L6)	106	O-1-9
15043BT-A101	BELT	66	H2-3-3
15045EL-UK01	Bid(Large)	31	D-1-41
15046ET-T121	Wire Holder	28	C-6-10
15046RB-A001	Driving Pin Washer	52	H1-1-14
15046RB-A001	Driving Pin Washer	56	H1-4-16

Part No.	Part Name	Page	Ref.No
15046RB-A001	Driving Pin Washer	63	H2-1-14
15046RB-A001	Driving Pin Washer	67	H2-4-16
15048BT-AC00	X-Driver Timing Belt (L1130)	55	H1-3-3
15048BT-AC30	X-Driver Timing Belt (L1730)	55	H1-3-3
15050BT-A021	Y-Drive Timing Belt "A" 5M*L1865 (W:35)	58	H1-5-2
15051BT-A021	Y-Drive Timing Belt "B" 5M*L1865 (W:48)	58	H1-5-2
15055PR-A001	Tension Rivet Plate (W)	52	H1-1-17
15055PR-A001	Tension Rivet Plate (W)	56	H1-4-19
15055PR-A001	Tension Rivet Plate (W)	63	H2-1-17
15055PR-A001	Tension Rivet Plate (W)	67	H2-4-19
15056PR-A001	Tension Plate (W)	52	H1-1-18
15056PR-A001	Tension Plate (W)	63	H2-1-18
15058SC-1211	Hex. Bolt (M6*L58)	52	H1-1-20
15058SC-1211	Hex. Bolt (M6*L58)	63	H2-1-20
15064SC-A001	C.S Screw (M3*L3.5)	12	A1-2-18
15067SC-A001	Hex.Socket Bolt (M4*L7)	58	H1-5-4
15067SC-A001	Hex.Socket Bolt (M4*L7)	69	H2-5-4
15071BM-A001	V-Roller Guide Set	70	H2-6-33
15074CW-B001	Rail Guide Pin "A"	60	H1-6-45
15074CW-B001	Rail Guide Pin "A"	71	H2-6-45
15074SC-A001	Stopper Stud	58	H1-5-14
15074SC-A001	Stopper Stud	69	H2-5-14
15075CW-B001	Rail Guide Pin "B"	60	H1-6-46
15075CW-B001	Rail Guide Pin "B"	71	H2-6-46
15076CW-A031	Rail Guide Pin "C' (L19.1)	60	H1-6-44
15076CW-A031	Rail Guide Pin "C' (L19.1)	71	H2-6-44
15077BR-B001	Ball Bearing (Lr606Nppu)	58	H1-5-9
15077BR-B001	Ball Bearing (Lr606Nppu)	58	H1-5-15
15077BR-B001	Ball Bearing (Lr606Nppu)	60	H1-6-37
15077BR-B001	Ball Bearing(Lr606Nppu)	69	H2-5-9
15077BR-B001	Ball Bearing (Lr606Nppu)	69	H2-5-15
15077BR-B001	Ball Bearing (Lr606Nppu)	71	H2-6-37
15077BR-B001	Ball Bearing (LR606NPPU)	114	Q1-2-9
15077BR-B001	Ball Bearing (LR606NPPU)	119	Q2-2-9
15077SW-2111	Washer (@8)	11	A1-1-8
15077SW-2111	Washer (@8)	59	H1-6-23
15077SW-2111	Washer (@8)	60	H1-6-35
15077SW-2111	Washer (@8)	70	H2-6-23
15077SW-2111	Washer (@8)	71	H2-6-35
15078SW-8113	Tooghed Lock Washer(@8)	60	H1-6-36
15078SW-8113	Tooghed Lock Washer (@8)	71	H2-6-36
15079SN-2311	Rail Guide Shaft Nut	60	H1-6-38
15079SN-2311	Rail Guide Shaft Nut	71	H2-6-38
15089SC-7119	C.S Screw (M4*L12)	52	H1-1-19
15089SC-7119	C.S SCREW (M4*L10)	63	H2-1-19
15090SC-B001	Hex.Socket Set Screw (M6*L10)	52	H1-1-7
15090SC-B001	Hex.Socket Set Screw (M6*L10)	56	H1-4-9
15090SC-B001	Hex.Socket Set Screw (M6*L10)	63	H2-1-7
15090SC-B001	Hex.Socket Set Screw (M6*L10)	67	H2-4-9
15091RB-A001	Rubber Cap (B)	59	H1-6-32
15091RB-A001	Rubber Cap (B)	70	H2-6-32
15092CW-A031	Stopper Washer	60	H1-6-41
15092CW-A031	Stopper Washer	71	H2-6-41

Part No.	Part Name	Page	Ref.No
15092RB-B001	Rubber Cap (A)	59	H1-6-31
15092RB-B001	Rubber Cap (A)	70	H2-6-31
15093AD-B001	Table Support	59	H1-6-15
15093AD-B001	Table Support	70	H2-6-15
15094AD-B001	Table Support	59	H1-6-20
15094AD-B001	Table Support(B)	70	H2-6-20
15095AD-B001	Spacer	59	H1-6-4
15095AD-B001	Spacer	70	H2-6-4
15095SW-3115	Spring Washer (@8)	12	A1-2-5
15095SW-3115	Spring Washer (@8)	21	B-6-3
15095SW-3115	Spring Washer (@8)	30	D-1-5
15095SW-3115	Pulley Box Spring Washer [Ø8]	36	E-1-3
15095SW-3115	Spring Washer (Ø8)	36	E-1-14
15095SW-3115	Spring Washer (@8)	39	E-3-3
15095SW-3115	Spring Washer (@8)	39	E-3-8
15095SW-3115	Spring Washer (@8)	44	F-3-3
15095SW-3115	Spring Washer (@8)	52	H1-1-4
15095SW-3115	Spring Washer (@8)	52	H1-1-25
15095SW-3115	Spring Washer (@8)	54	H1-2-7
15095SW-3115	Spring Washer (@8)	54	H1-2-11
15095SW-3115	Spring Washer (@8)	54	H1-2-14
15095SW-3115	Spring Washer (@8)	56	H1-4-6
15095SW-3115	Spring Washer (@8)	59	H1-6-6
15095SW-3115	Spring Washer (@8)	59	H1-6-11
15095SW-3115	Spring Washer (@8)	61	H1-7-9
15095SW-3115	Spring Washer (@8)	61	H1-7-12
15095SW-3115	Spring Washer (@8)	61	H1-7-16
15095SW-3115	Spring Washer (@8)	63	H2-1-4
15095SW-3115	Spring Washer (@8)	63	H2-1-25
15095SW-3115	Spring Washer (@8)	65	H2-2-7
15095SW-3115	Spring Washer (@8)	65	H2-2-11
15095SW-3115	Spring Washer (@8)	65	H2-2-14
15095SW-3115	SPRING WASHER (@8)	67	H2-4-6
15095SW-3115	SPRING WASHER (@8)	70	H2-6-6
15095SW-3115	SPRING WASHER (@8)	70	H2-6-11
15095SW-3115	Spring Washer (@8)	72	H2-7-9
15095SW-3115	Spring Washer (@8)	72	H2-7-12
15095SW-3115	Spring Washer (@8)	72	H2-7-16
15095SW-3115	Spring Washer (@8)	84	K1-2-6
15095SW-3115	Spring Washer (@8)	87	K2-2-6
15096CW-B001	Stud Bolt	59	H1-6-9
15096CW-B001	Stud Bolt	70	H2-6-9
15097PR-B001	Stud Bracket	59	H1-6-8
15097PR-B001	Stud Bracket	70	H2-6-8
15098CW-A001	RAIL GUIDE PIN "B"	58	H1-5-8
15098CW-A001	Rail Guide Pin "B"	58	H1-5-16
15098CW-A001	Rail Guide Pin"B"	69	H2-5-8
15098CW-A001	Rail Guide Pin "B"	69	H2-5-16
15104AF-A021	Y-Axis Rail Guide	59	H1-6-2
15106BR-A001	Flange Bearing (1280Zz)	60	H1-6-39
15106BR-A001	Flange Bearing (1280Zz)	71	H2-6-39
15107AD-B021	V-Rail Bracket	59	H1-6-1
15112PR-A001	L/M Guide Plate "A-2"	56	H1-4-32

R. Index

Part No.	Part Name	Page	Ref.No
15112PR-A001	L/M Guide Plate "A-2"	67	H2-4-2
15130AF-A001	Roller Guide	60	H1-6-40
15130AF-A001	Roller Guide	71	H2-6-40
15133CW-B001	Roller	60	H1-6-51
15133CW-B001	Roller	71	H2-6-51
15134BM-B001	Roller Bracket Ass'Y	60	H1-6-47
15134BM-B001	Roller Bracket Ass'Y	71	H2-6-47
15137PR-A001	Rail Guide Shaft Bracket	60	H1-6-42
15137PR-A001	Rail Guide Shaft Bracket	71	H2-6-42
15159SR-4013	E-Ring (3@)	60	H1-6-52
15159SR-4013	E-Ring (3@)	71	H2-6-52
15163SC-3123	Truss Screw (M3*L12)	46	F-4-25
16004CW-A021	Table Support (C) (L=490)	11	A1-1-10
16005CW-A021	Table Support (A) (L=1400)	11	A1-1-9
16005RB-A001	Table Support End Cap (L)	11	A1-1-15
16005RB-A001	Table Support End Cap (L)	14	A2-1-16
16006CW-A021	Table Support (B) (L=740)	83	K1-1-14
16007CW-A021	Table Support (E) (L=450)	83	K1-1-16
16008CW-A021	Table Support (G) (L=315)	83	K1-1-18
16009SC-4113	Hex. Socket Screw (M10*L25)	11	A1-1-11
16009SC-4113	Hex. Socket Screw (M10*L25)	14	A2-1-12
16009SC-4113	Hex. Socket Bolt	86	K2-1-20
16010SC-8330	Tapping Screw (M6*L25)	59	H1-6-19
16010SC-8330	Tapping Screw (M6*L25)	70	H2-6-19
16010SC-8330	Tapping Screw (M6*L25)	84	K1-2-16
16010SC-8330	Tapping Screw (M6*L25)	87	K2-2-18
16013CW-A001	Table Support (E) (L=320)	84	K1-2-1
16013CW-A001	Table Support (E) (L=320)	87	K2-2-1
16014CW-A001	Table Support Bracket "A"	84	K1-2-2
16014CW-A001	Table Support Bracket "A"	87	K2-2-2
16014SW-4115	Spring Washer (@8)	11	A1-1-14
16014SW-4115	Spring Washer (@8)	14	A2-1-15
16014SW-4115	Spring Washer (Ø8)	37	E-1-38
16014SW-4115	Spring Washer (@8)	74	I-1-4
16014SW-4115	Spring Washer (@8)	74	I-1-19
16014SW-4115	Spring Washer (@8)	75	I-1-48
16014SW-4115	Spring Washer (@6)	84	K1-2-9
16014SW-4115	Spring Washer (@6)	86	K2-1-21
16014SW-4115	Spring Washer (@6)	87	K2-2-9
16014SW-4115	Spring Washer (@6)	114	Q1-2-23
16014SW-4115	Spring Washer (@6)	119	Q2-2-23
16017CW-A021	Table Support (F) (L=170)	83	K1-1-17
16018SW-1111	Washer (@4)	20	B-5-16
16018SW-1111	Washer (@5)	25	C-3-8
16018SW-1111	Washer (@5)	27	C-5-7
16018SW-1111	Washer (@5)	27	C-5-15
16018SW-1111	Washer (@5)	58	H1-5-22
16018SW-1111	Washer (@5)	69	H2-5-22
16018SW-1111	Washer (@5)	92	L-2-9
16018SW-1111	Washer (@5)	102	N-1-18
16021CW-A001	Stud Bolt	84	K1-2-3
16021CW-A001	Stud Bolt	87	K2-2-3
16028SC-7113	Hex. Socket Bolt (M5*L25)	27	C-5-5

Part No.	Part Name	Page	Ref.No
16028SC-7113	Hex. Socket Bolt (M5*L25)	27	C-5-13
16035LA-A001	Low Shaft Coupling Cover B	83	K1-1-8
16035LA-A001	Low Shaft Coupling Cover B	86	K2-1-7
16043BM-A021	Table Connecting Plate (Set)	87	K2-2-12
16047BM-A021	TABLE SUPPORT BASE SET (L)	87	K2-2-19
16047PR-A021	TABLE SUPPORT PLATE	87	K2-2-22
16048RB-A021	TABLE SUPPORT PLATE RUBBER	87	K2-2-21
16049CW-A021	TABLE SUPPORT PLATE PIN	87	K2-2-23
16050CW-A021	TABLE SUPPORT BAR	87	K2-2-24
16055MT-UK06	PULSE MOTOR (103H8223-5114) (100 under)	30	D-1-31
16059MT-E131	Y MOTOR (103H8222-5212) (120 over)	30	D-1-31
16059SC-7113	Hex.Socket Bolt (M6*L12)	56	H1-4-21
16059SC-7113	Hex.Socket Bolt (M6*L12)	56	H1-4-24
16059SC-7113	HEX.SOCKET BOLT (M6*L12)	67	H2-4-21
16059SC-7113	Hex.Socket Bolt (M6*L12)	67	H2-4-24
17006SH-A001	Low Shaft "C"[1808mm]	38	E-2-15
17029SH-AF01	Mes Driving Shaft "C"	31	D-1-39
17032SH-AC01	Mes Driving Shaft "A"	31	D-1-37
17032SH-AC01	Mes Driving Shaft "B"	31	D-1-38
17032SH-AC01	COLOR CHANGE SHAFT "B"	45	F-3-28
17051SN-A001	Mes Driving Shaft Joint	31	D-1-36
17051SN-A001	Mes Driving Shaft Joint	45	F-3-31
17053SN-1111	Hex. Nut (M6*T5-L)	30	D-1-23
17053SN-1111	Hex. Nut (M6*T5-L)	45	F-3-30
17054SH-AB00	COLOR CHANGE SHAFT "A"	44	F-3-24
17055SH-A005	COLOR CHANGE SHAFT "A"	44	F-3-24
17067SH-AE00	COLOR CHANGE SHAFT "C"(L1192)	45	F-3-28
17068SH-A004	COLOR CHANGE SHAFT "D"(L1915)	45	F-3-28
18003SH-D092	Color Change Shaft	43	F-2-33
18009EL-WH06	Wheel Sensor Board (6C)	49	G-2-6
18011BM-A021	Clip [L=750mm]	113	Q1-1-44
18011BM-A021	Clip [L=750mm]	118	Q2-1-44
18014SC-7113	Hex. Socket Bolt (M4*L9)	68	H2-4-45
18014SC-7113	Hex.Socket Bolt(M4*L10)	112	Q1-1-6
18014SC-7113	Hex.Socket Bolt(M4*L10)	112	Q1-1-8
18014SC-7113	Hex.Socket Bolt(M4*L10)	112	Q1-1-10
18014SC-7113	Truss Screw (M4*L9)	112	Q1-1-21
18014SC-7113	Truss Screw (M4*L9)	114	Q1-2-22
18014SC-7113	Hex.Socket Bolt(M4*L10)	117	Q2-1-6
18014SC-7113	Hex.Socket Bolt(M4*L10)	117	Q2-1-8
18014SC-7113	Hex.Socket Bolt(M4*L10)	117	Q2-1-10
18014SC-7113	Truss Screw (M4*L9)	117	Q2-1-21
18014SC-7113	Truss Screw (M4*L9)	119	Q2-2-22
18014SW-3115	Spring Washer (@4)	20	B-5-9
18014SW-3115	Spring Washer (@4-No2)	39	E-3-14
18014SW-3115	Spring Washer (@4-No2)	55	H1-3-16
18014SW-3115	Spring Washer (@4-No2)	66	H2-3-16
18014SW-3115	Spring Washer (@4-No2)	75	I-1-52
18014SW-3115	Spring Washer (@4-No2)	76	I-2-3
18014SW-3115	Spring Washer (@4-No2)	103	N-2-8
18014SW-3115	Spring Washer (@4-No2)	104	N-3-8
18014SW-3115	Spring Washer (@4)	112	Q1-1-25
18014SW-3115	Spring Washer (@4-No2)	112	Q1-1-29

Part No.	Part Name	Page	Ref.No
18014SW-3115	Spring Washer (@4-No2)	114	Q1-2-3
18014SW-3115	Spring Washer (@4-No2)	114	Q1-2-7
18014SW-3115	SPRING WASHER (@4-NO2)	114	Q1-2-16
18014SW-3115	Spring Washer (@4)	117	Q2-1-25
18014SW-3115	Spring Washer (@4-No2)	117	Q2-1-29
18014SW-3115	Spring Washer (@4-No2)	119	Q2-2-3
18014SW-3115	Spring Washer (@4-No2)	119	Q2-2-7
18014SW-3115	SPRING WASHER (@4-NO2)	119	Q2-2-16
18015SW-3111	Washer (@4)	20	B-5-10
18015SW-3111	WASHER (4@)	26	C-4-6
18015SW-3111	Washer (4@)	28	C-6-14
18015SW-3111	Washer (4@)	39	E-3-15
18015SW-3111	WASHER (4@)	46	F-4-8
18015SW-3111	Washer (4@-S)	46	F-4-12
18015SW-3111	Washer (4@-S)	55	H1-3-15
18015SW-3111	Washer (4@-S)	58	H1-5-24
18015SW-3111	Washer (4@-S)	66	H2-3-15
18015SW-3111	Washer (4@-S)	69	H2-5-24
18015SW-3111	Washer (4@-S)	75	I-1-53
18015SW-3111	Washer (4@-S)	76	I-2-4
18015SW-3111	Washer (4@)	103	N-2-9
18015SW-3111	Washer (4@)	104	N-3-9
18015SW-3111	Washer (4@)	112	Q1-1-26
18015SW-3111	Washer (4@)	112	Q1-1-30
18015SW-3111	Washer (4@)	114	Q1-2-4
18015SW-3111	Washer (4@)	114	Q1-2-8
18015SW-3111	WASHER (4@)	114	Q1-2-15
18015SW-3111	Washer (4@)	117	Q2-1-26
18015SW-3111	Washer (4@)	117	Q2-1-30
18015SW-3111	Washer (4@)	119	Q2-2-4
18015SW-3111	Washer (4@)	119	Q2-2-8
18015SW-3111	WASHER (4@)	119	Q2-2-15
18033PR-UK01	OIL TUBE GUIDE	26	C-4-7
18033SC-3123	Truss Screw (M5*L6)	54	H1-2-32
18033SC-3123	Truss Screw (M5*L6)	58	H1-5-18
18033SC-3123	Truss Screw (M5*L6)	61	H1-7-31
18033SC-3123	Truss Screw (M5*L6)	65	H2-2-32
18033SC-3123	Truss Screw (M5*L6)	72	H2-7-31
18036CW-UK06	Oil Tank Cover Support	25	C-3-11
18045ET-UK01	Oil Hose L=160	26	C-4-4
18047SC-7113	Hex. Socket Bolt (M5*L15)	30	D-1-20
18047SC-7113	Hex. Socket Bolt (M5*L15)	30	D-1-32
18047SC-7113	Hex. Socket Bolt (M5*L15)	59	H1-6-16
18047SC-7113	Hex. Socket Bolt (M5*L15)	70	H2-6-16
18048SW-3115	Spring Washer (@5)	25	C-3-7
18048SW-3115	Spring Washer (@5)	27	C-5-6
18048SW-3115	Spring Washer (@5)	27	C-5-14
18048SW-3115	SPRING WASHER (5@)	30	D-1-33
18048SW-3115	SPRING WASHER (5@)	32	D-2-3
18048SW-3115	Spring Washer (@5)	33	D-3-3
18048SW-3115	Spring Washer (5@)	55	H1-3-14
18048SW-3115	Spring Washer (@5)	58	H1-5-12
18048SW-3115	Spring Washer (@5)	58	H1-5-23

R. Index

Part No.	Part Name	Page	Ref.No
18048SW-3115	Spring Washer (5@)	59	H1-6-17
18048SW-3115	Spring Washer (5@)	66	H2-3-14
18048SW-3115	SPRING WASHER (5@)	69	H2-5-12
18048SW-3115	Spring Washer (@5)	69	H2-5-23
18048SW-3115	Spring Washer (5@)	70	H2-6-17
18048SW-3115	Spring Washer (@5)	74	I-1-23
18048SW-3115	Spring Washer (@5)	80	J-1-11
18048SW-3115	Spring Washer (@5)	81	J-2-15
18048SW-3115	Spring Washer (@5)	84	K1-2-14
18048SW-3115	Spring Washer (@5)	87	K2-2-16
18048SW-3115	Spring Washer (@5)	92	L-2-3
18048SW-3115	Spring Washer (@5)	92	L-2-8
18048SW-3115	Spring Washer (@5)	102	N-1-17
18049SW-3111	WASHER (@5)	30	D-1-34
18049SW-3111	WASHER (@5)	32	D-2-4
18049SW-3111	Stud Bolt Washer(S) (@8)	54	H1-2-4
18049SW-3111	Washer (@5)	59	H1-6-18
18049SW-3111	Stud Bolt Washer(S) (@8)	61	H1-7-4
18049SW-3111	Stud Bolt Washer(S) (@8)	65	H2-2-4
18049SW-3111	Washer (@5)	70	H2-6-18
18049SW-3111	Stud Bolt Washer(S) (@8)	72	H2-7-4
18049SW-3111	Washer (@5)	74	I-1-24
18049SW-3111	Washer (@5)	80	J-1-10
18049SW-3111	Washer (@5)	84	K1-2-13
18049SW-3111	Washer (@5)	87	K2-2-15
18049SW-3111	Washer (@5)	102	N-1-6
18049SW-3111	Washer (@5)	109	P-1-13
18050AF-A001	X-Axis Guide Rail (L400)	112	Q1-1-22
18050AF-A001	X-Axis Guide Rail (L400)	117	Q2-1-22
18051CW-AC30	X-Axis Guide Rail (L700)	112	Q1-1-22
18051CW-AC30	X-Axis Guide Rail (L700)	117	Q2-1-22
18062CW-A021	Rail Guide Pin (B)	114	Q1-2-10
18062CW-A021	Rail Guide Pin (B)	119	Q2-2-10
18062SF-A001	Y-Axis Sash (L) Felt	58	H1-5-1
18062SF-A001	Y-Axis Sash (L) Felt	69	H2-5-1
18068SF-AE00	Front Felt(H)	112	Q1-1-31
18068SF-AE00	Front Felt(H)	117	Q2-1-31
18071SF-A001	Rear Felt (K) (L=135)	112	Q1-1-33
18071SF-A001	Rear Felt (K) (L=135)	117	Q2-1-33
18072SF-AD00	Rear Felt (L) (L=105)	112	Q1-1-34
18072SF-AD00	Rear Felt (L) (L=105)	117	Q2-1-34
18084PR-A001	Clip [L=300mm]	113	Q1-1-38
18084PR-A001	Clip [L=300mm]	118	Q2-1-38
18086PR-B001	Frame Clip Support	113	Q1-1-39
18086PR-B001	Frame Clip Support	118	Q2-1-39
18106PR-B001	ROLLER BRACKET	114	Q1-2-14
18106PR-B001	ROLLER BRACKET	119	Q2-2-14
18107CW-B001	ROLLER	114	Q1-2-13
18107CW-B001	ROLLER	119	Q2-2-13
18111CW-B001	Frame "E" Roller	58	H1-5-17
18111CW-B001	Frame "E" Roller	69	H2-5-17
18151SN-8311	Cap Nut(@4)	112	Q1-1-24
18151SN-8311	Cap Nut(@4)	117	Q2-1-24

Part No.	Part Name	Page	Ref.No
18153SC-3123	Truss Screw (M4*L12)	106	O-1-7
18153SC-3123	Truss Screw (M4*L12)	107	O-2-2
18154SC-9134	Plus Screw (M3*L8)	92	L-2-4
19002SC-1330	Tapping Screw (4*L16-No1)	103	N-2-2
19002SC-1330	Tapping Screw (4*L16-No1)	103	N-2-15
19002SC-1330	Tapping Screw (4*L16-No1)	104	N-3-2
19002SC-1330	Tapping Screw (4*L16-No1)	104	N-3-15
19005SC-8118	Plus Screw (M3*L20)	103	N-2-20
19005SC-8118	Plus Screw (M3*L20)	104	N-3-20
19012SP-B001	Return Spring	103	N-2-4
19012SP-B001	Return Spring	104	N-3-4
19021PM-B001	S/W Bar Guide	103	N-2-6
19021PM-B001	S/W Bar Guide	104	N-3-6
20-002B-SW70	Connecting Pressing Plate Sponge	99	M-4-11
20-006A-SW70	LCD	99	M-4-5
20009EL-B001	LAMP (32W)	102	N-1-19
20009EL-WH09	Wheel Sensor Board (9C)	49	G-2-6
20009EL-WH12	Wheel Sensor Board (12C)	49	G-2-6
20009PR-A001	Reflecting (2)	102	N-1-21
20011PR-A001	Reflecting (1)	102	N-1-20
20014ET-A001	Lamp Socket	102	N-1-11
20015PR-A001	Lamp Structure B	102	N-1-13
21002SC-8119	Plus Screw (M3-L8)	36	E-1-17
22006SC-7113	Hex. Socket Bolt (M3*L8)	27	C-5-25
22006SC-7113	HEX. SOCKET BOLT (M3*L8)	44	F-3-22
22006SC-7113	Hex. Socket Bolt (M3*L8)	55	H1-3-7
22006SC-7113	Hex. Socket Bolt (M3*L8)	58	H1-5-6
22006SC-7113	Hex. Socket Bolt (M3*L8)	66	H2-3-7
22006SC-7113	Hex.Socket Bolt(M3*L8)	69	H2-5-6
22015SC-9134	SCREW(M3*L6)	87	K2-2-33
22025SC-9134	Screw (M4*L10)	45	F-3-39
22025SC-9134	Screw (M4*L10)	102	N-1-22
22027EL-A001	Inverter	99	M-4-30
24029ET-A001	Main Power S/W	90	L-1-1
24031AF-B001	Motor Driver [SANYO : PY2A050AF]	39	E-3-16
24032ET-A001	Power Plug(3P)	90	L-1-7
25105ET-B001	Encoder Connector	25	C-3-9
27033SC-7113	Hex.Socket Bolt (M5xL20)	38	E-2-14
27076SC-8119	Hex.Socket Bolt (M3*L12)	37	E-1-36
32046SP-T121	HOLDER FOR OIL HOSE	26	C-4-8
AS-000449-00	Lamp Ass.Y	102	N-1-9
AS-000451-00	Lamp Ass.Y	102	N-1-10
AS-000556-00	SUB TENSION ADJUSTING SET(NEW)	81	J-2-14
AS-000557-00	SUB TENSION ADJUSTING SET	81	J-2-17
AS-000858-00	Upper Thread Holding Set	24	C-2-4
AS-000864-00	Color Change Box Assy	45	F-3-40
AS-000864-01	Color Change Box Assy	45	F-3-40
AS-000864-02	Color Change Box Assy	45	F-3-40
AS-000864-03	Color Change Box Assy	45	F-3-40
AS-000864-04	Color Change Box Assy	45	F-3-40
AS-000867-00	Color Change Box Cover Assy	46	F-4-28
AS-000867-01	Color Change Box Cover Assy	46	F-4-28
AS-000878-00	Y-Cam Roller Guide Plate Assy	57	H1-4-41

Part No.	Part Name	Page	Ref.No
AS-001418-00	FRAME E ENDCAP(A)SET	114	Q1-2-25
AS-001418-00	FRAME E ENDCAP(A)SET	119	Q2-2-25
AS-001418-01	FRAME E ENDCAP(A)SET	114	Q1-2-25
AS-001418-01	RAME E ENDCAP(A)SET	119	Q2-2-25
AS-001418-02	FRAME E ENDCAP(A)SET	114	Q1-2-25
AS-001418-02	FRAME E ENDCAP(A)SET	119	Q2-2-25
AS-001418-03	FRAME E ENDCAP(A)SET	114	Q1-2-25
AS-001418-03	FRAME E ENDCAP(A)SET	119	Q2-2-25
AS-001419-00	FRAME E ENDCAP B SET	114	Q1-2-26
AS-001419-00	FRAME E ENDCAP B SET	119	Q2-2-26
AS-001419-01	FRAME E ENDCAP B SET	114	Q1-2-26
AS-001419-01	FRAME E ENDCAP B SET	119	Q2-2-26
AS-001419-02	FRAME E ENDCAP B SET	115	Q1-2-26
AS-001419-02	FRAME E ENDCAP B SET	120	Q2-2-26
AS-001419-03	FRAME E ENDCAP B SET	115	Q1-2-26
AS-001419-03	FRAME E ENDCAP B SET	120	Q2-2-26
AS-003759-00	Roller Bracket Assy	60	H1-6-57
AS-003951-00	Thread Control Device Ass'y	106	O-1-11
AS-004111-00	MES CAM DRIVING BOX Assy	31	D-1-42
AS-004167-00	Jump Set	19	B-4-6
AS-004174-00	NEEDLE DRIVING CAM SET	16	B-2-1
AS-004174-01	NEEDLE DRIVING CAM SET	16	B-2-1
AS-004284-00	Transformer Ass'y(Set)	95	M-2-1
AS-004284-01	Transformer Ass'y(Set)	95	M-2-1
AS-004337-00	FDD Box (㊄)	100	M-4-23
AS-004493-00	MAIN DRIVING PULLEY BOX Assy	37	E-1-41
AS-004571-00	Laser Assy	20	B-5-18
AS-004691-01	Table(Set)	83	K1-1-1
AS-004766-00	Bar Switch Sensor A Assy	103	N-2-29
AS-004766-01	Bar Switch Sensor A Assy	103	N-2-29
AS-004767-00	Bar Switch Sensor B Assy	104	N-3-27
AS-004808-00	Bed Assy	12	A1-2-19
AS-004808-01	Bed Assy	12	A1-2-19
AS-004809-00	Needle Bar Reeciprocator Set	18	B-3-19
AS-004809-01	Needle Bar Reeciprocator Set	18	B-3-19
AS-004809-02	Needle Bar Reeciprocator Set	18	B-3-19
AS-004811-00	Head Assy	42	F-1-35
AS-004811-01	Head Assy	42	F-1-35
AS-004904-00	V-Roller Guide Set	59	H1-6-33
AS-005257-00	Needle Bar Drive Lever Assy	18	B-3-32
AS-005257-01	Needle Bar Drive Lever Assy	18	B-3-32
AS-005259-00	Beam & Body	14	A2-1-1
AS-005259-01	Beam & Body	14	A2-1-1
AS-005607-00	Table(Set)	86	K2-1-1
AS-005695-00	Frame Assy	113	Q1-1-45
AS-005696-00	Beam & Body	11	A1-1-1
AS-006810-00	Angle Assy	81	J-2-19
AS-008142-00	Picker Assy	78	I-4-29
AS-008153-00	X Motor Base Assy	54	H1-2-35
AS-008153-01	X Motor Base Assy	54	H1-2-35
AS-008191-00	Main Motor Assy	39	E-3-20
AS-008193-00	Y-Motor - Base	61	H1-7-34
AS-008193-01	Y-Motor - Base	61	H1-7-34

R. Index

Part No.	Part Name	Page	Ref.No
AS-008580-00	Bracket Fixed Plate Assy	53	H1-1-40
AS-008634-00	MES MOUNTING BASE Assy	34	D-4-21
AS-008636-00	Y-Motor Base Assy	65	H2-2-35
AS-008813-00	Bracket Fixed Plate Assy	57	H1-4-42
AS-008813-00	Bracket Fixed Plate D Assy	64	H2-1-41
BD-000168-00	SURGE PROTECTOR	90	L-1-8
BD-000168-00	Surge Protector	96	M-2-21
BD-000168-01	SURGE PROTECTOR	90	L-1-8
BD-000168-01	Surge Protector	96	M-2-21
BD-000168-02	SURGE PROTECTOR	90	L-1-8
BD-000168-02	Surge Protector	96	M-2-21
BD-000177-00	OFFSET S/W BOARD	87	K2-2-34
BD-000232-00	Thread Sensing Board	92	L-2-1
BD-000232-01	Thread Sensing Board	92	L-2-1
BD-000232-02	Thread Sensing Board	92	L-2-1
BD-000232-03	Thread Sensing Board	92	L-2-1
BD-000232-04	Thread Sensing Board	92	L-2-1
BD-000232-05	Thread Sensing Board	92	L-2-1
BD-000232-06	Thread Sensing Board	92	L-2-1
BD-000232-07	Thread Sensing Board	92	L-2-1
BD-000232-08	Thread Sensing Board	92	L-2-1
BD-000232-09	Thread Sensing Board	92	L-2-1
BD-000232-10	Thread Sensing Board	92	L-2-1
BD-000232-11	Thread Sensing Board	92	L-2-1
BD-000232-12	Thread Sensing Board	92	L-2-1
BD-000232-13	Thread Sensing Board	92	L-2-1
BD-000232-14	Thread Sensing Board	92	L-2-1
BD-000244-00	Trimming Driver(B)	97	M-3-13
BD-000244-00	Trimming Driver(A)	98	M-3-33
BD-000244-01	Trimming Driver(B)	97	M-3-13
BD-000244-01	Trimming Driver(A)	98	M-3-33
BD-000244-02	Trimming Driver(B)	97	M-3-13
BD-000244-02	Trimming Driver(A)	98	M-3-33
BD-000244-03	Trimming Driver(B)	97	M-3-13
BD-000244-03	Trimming Driver(A)	98	M-3-33
BD-000244-04	Trimming Driver(B)	97	M-3-13
BD-000244-04	Trimming Driver(B)	97	M-3-13
BD-000244-04	Trimming Driver(A)	98	M-3-33
BD-000244-05	Trimming Driver(A)	98	M-3-33
BD-000256-00	Shunt Board	90	L-1-26
BD-000256-01	Shunt Board	90	L-1-26
BD-000256-02	Shunt Board	90	L-1-26
BD-000256-03	Shunt Board	90	L-1-26
BD-000256-04	Shunt Board	90	L-1-26
BD-000256-05	Shunt Board	90	L-1-26
BD-000256-06	Shunt Board	90	L-1-26
BD-000256-07	Shunt Board	90	L-1-26
BD-000299-00	CPU Board	99	M-4-14
BD-000301-00	Joint Board(A), Joint Board(B)	97	M-3-3 M-3-4
BD-000301-01	Joint Board(A), Joint Board(B)	97	M-3-3 M-3-4
BD-000301-02	Joint Board(A), Joint Board(B)	97	M-3-3 M-3-4
BD-000301-03	Joint Board(A), Joint Board(B)	97	M-3-3 M-3-4
BD-000301-04	Joint Board(A), Joint Board(B)	97	M-3-3 M-3-4

Part No.	Part Name	Page	Ref.No
BD-000301-05	Joint Board(A), Joint Board(B)	97	M-3-3 M-3-4
BD-000301-06	Joint Board(A), Joint Board(B)	97	M-3-3 M-3-4
BD-000301-07	Joint Board(A), Joint Board(B)	97	M-3-3 M-3-4
BD-000301-08	Joint Board(A), Joint Board(B)	97	M-3-3 M-3-4
BD-000301-09	Joint Board(A), Joint Board(B)	97	M-3-3 M-3-4
BD-000301-10	Joint Board(A), Joint Board(B)	97	M-3-3 M-3-4
BD-000304-00	MS Top Board	90	L-1-27
BD-000304-01	MS Top Board	90	L-1-27
BD-000304-02	MS Top Board	91	L-1-27
BD-000304-03	MS Top Board	91	L-1-27
BD-000304-04	MS Top Board	91	L-1-27
BD-000323-00	SMPS Connect Board	94	M-1-6
BD-000346-00	C-KEY Board	100	M-4-7
BD-000347-01	F-KEY Board	100	M-4-2
BD-000364-00	IO Board	99	M-4-19
BD-000365-00	Connect Board	95	M-2-4
BD-000365-01	Connect Board	95	M-2-4
BD-00396-01	Xy-Sensor Ass'Y (Tlp1204)	32	D-2-5
BE-000027-00	Top Shaft Drive Belt	39	E-3-19
CA-000321-00	Bar Sensor Cable	103	N-2-27
CA-000321-00	Bar Sensor Cable	104	N-3-25
CA-000322-00	Bar S/W To Joint Board Cable	103	N-2-26
CA-000322-00	Bar S/W To Joint Board Cable	104	N-3-24
CA-000324-00	X-Sensor To Joint Board	52	H1-1-30
CA-000324-00	X-Sensor To Joint Board	63	H2-1-30
CA-000325-00	Y-Sensor To Joint Board Cable	56	H1-4-31
CA-000325-00	Y-Sensor To Joint Board Cable	67	H2-4-31
CA-000328-00	Color Change Motor To Joint Board	46	F-4-27
CA-000328-01	Color Change Motor To Joint Board	46	F-4-27
CA-000334-00	STEP MOTOR DRIVE POWER	31	D-1-35
CA-000334-01	STEP MOTOR DRIVE POWER	31	D-1-35
CA-000334-02	STEP MOTOR DRIVE POWER	31	D-1-35
CA-000411-00	Needle Position To Joint B/D	46	F-4-23
CA-000411-01	Needle Position To Joint B/D	46	F-4-23
CA-000702-00	Main Power S/W Cable	91	L-1-29
CA-000702-01	Main Power S/W Cable	91	L-1-29
CA-000717-00	Upper Thread Hook Motor To Joint Board Cable	75	I-1-58
CA-000718-00	Wiper Sensor To Joint Board Cable	75	I-1-57
CA-000917-00	I/O S/W Connecting Connector	103	N-2-25
CA-000917-01	I/O S/W Connecting Connector	103	N-2-25
CA-000918-00	MS Top Board Cable	103	N-2-23
CA-000918-00	MS Top Board Cable	104	N-3-23
CA-000918-01	MS Top Board Cable	103	N-2-23
CA-000918-01	MS Top Board Cable	104	N-3-23
CA-001053-00	X-Motor To Control Box X-Driver Cable	54	H1-2-33
CA-001053-00	X-Motor To Control Box X-Driver Cable	65	H2-2-33
CA-001054-00	X-Motor To Encoder Cable To X-Driver Cable	54	H1-2-34
CA-001054-00	X-Motor To Encoder Cable To X-Driver Cable	65	H2-2-34
CA-001055-00	Y-Motor To Control Box Y Driver Cable	61	H1-7-32
CA-001055-00	Y-Motor To Control Box Y Driver Cable	72	H2-7-32
CA-001056-00	Y-Motor Encoder To Y Driver Cable	61	H1-7-33
CA-001056-00	Y-Motor Encoder To Y Driver Cable	72	H2-7-33
CA-001088-02	FDD Connecting Cable	100	M-4-28

Part No.	Part Name	Page	Ref.No
CL-000353-00	Cam Collar	44	F-3-8
CO-27-01	CAM FROM RETURN SENSOR	32	D-2-10
DMPD3-000002	Motor	54	H1-2-1
DMPD3-000002	Motor	61	H1-7-1
DMPD3-000002	X-Y Motor (P20B10100Dxs)	65	H2-2-1
DMPD3-000002	Motor	72	H2-7-1
DMPEI-000001	Main Motor (SFAM-1000-001)	39	E-3-1
EP-000015-00	24V SMPS	94	M-1-11
EP-000030-00	FAN	99	M-4-22
EP-000046-00	Transformer	95	M-2-1
EP-000046-01	Transformer	95	M-2-1
EP-000047-00	Noise Filter	95	M-2-2
EP-000048-00	Fan	95	M-2-17
EP-000049-00	Fuse Holder	95	M-2-12
EP-000050-00	External Concept	95	M-2-13
EP-000050-01	External Concept	95	M-2-13
EP-000067-00	SENSOR	37	E-1-35
EP-000067-00	X-Sensor	52	H1-1-28
EP-000067-00	Xy-Sensor	56	H1-4-28
EP-000067-00	X-Sensor	63	H2-1-28
EP-000067-00	Xy-Sensor Ass'Y	67	H2-4-28
EP-000067-00	SENSOR	74	I-1-14
EP-000067-00	Sensor	103	N-2-19
EP-000067-00	Sensor	104	N-3-19
EP-000078-00	Transformer A'ssy	106	O-1-6
EP-000079-00	On / Off Switch	107	O-2-3
EP-000080-00	Push Switch (Start)	107	O-2-8
EP-000081-00	Push Switch (Stop)	107	O-2-9
EP-000082-00	Switch (Select)	107	O-2-5
EP-000083-00	VR	107	O-2-7
EP-000095-00	PCB (DW-BW01)	106	O-1-8
EP-000124-00	Y-Driver	97	M-3-18
EP-000124-00	X-Driver	97	M-3-19
EP-000124-00	Main Driver	98	M-3-20
EP-000131-00	Laser	20	B-5-13
EP-008025-00	Perception Sensor Bracket X,Y	56	H1-4-30
EP-008035-00	Perception Sensor Bracket X,Y	67	H2-4-29
GP-0007472-00	Digital SMPS	94	M-1-3
GP-003620-00	Oil Tank Cover	25	C-3-10
GP-003620-01	Oil Tank Cover	25	C-3-10
GP-003620-02	Oil Tank Cover	25	C-3-10
GP-003620-03	Oil Tank Cover	25	C-3-10
GP-003757-00	TABLE SUPPORT END CAP	11	A1-1-16
GP-003757-00	TABLE SUPPORT END CAP	14	A2-1-17
GP-004228-00	TABLE CONNECTING COVER	86	K2-1-9
GP-005179-00	THREAD BREAKAGE DETECT WHEEL	49	G-2-3
GP-005184-00	SENSOR SENSING ADJUSTING RING	74	I-1-8
GP-005184-01	SENSOR SENSING ADJUSTING RING	74	I-1-8
GP-005239-00	Color Change Box 6,9C	44	F-3-1
GP-005239-01	Color Change Box 6,9C	44	F-3-1
GP-005239-02	Color Change Box 6,9C	44	F-3-1
GP-005242-00	Half Turn Gear	45	F-3-35

R. Index

Part No.	Part Name	Page	Ref.No
GP-005242-01	Half Turn Gear	45	F-3-35
GP-005255-00	Color Change Box 12C	44	F-3-1
GP-005255-01	Color Change Box 12C	44	F-3-1
GP-005255-02	Color Change Box 12C	44	F-3-1
GP-005282-00	Frame E [L=1659]	114	Q1-2-18
GP-005282-01	Frame E [L=1659]	114	Q1-2-18
GP-005282-02	Frame E [L=1659]	114	Q1-2-18
GP-005282-03	Frame E [L=1659]	114	Q1-2-18
GP-006144-00	X-Coupling Cover	86	K2-1-23
GP-006161-00	Frame E [L=1659]	119	Q2-2-18
GP-006161-01	Frame E [L=1659]	119	Q2-2-18
GP-006161-02	Frame E [L=1659]	119	Q2-2-18
GP-006161-03	Frame E [L=1659]	119	Q2-2-18
GP-006299-00	ADJUSTING BLOCK FOR BEARING	58	H1-5-10
GP-006299-00	ADJUSTING BLOCK FOR BEARING	69	H2-5-10
GP-006323-00	X-Motor Coupling Cover	83	K1-1-10
GP-006323-01	X-Motor Coupling Cover	83	K1-1-10
GP-006538-00	Y-Coupling Cover A	83	K1-1-20
GP-006538-00	Y-Coupling Cover A	86	K2-1-28
GP-006540-00	Y-Coupling Cover C	83	K1-1-21
GP-006540-00	Y-Coupling Cover C	86	K2-1-29
GP-006545-00	FELT V	115	Q1-2-28
GP-006545-00	FELT V	120	Q2-2-28
GP-006546-00	FELT W	114	Q1-2-11
GP-006546-00	FELT W	119	Q2-2-11
GP-006642-00	Main Motor Bracket	39	E-3-5
GP-006655-00	Top Shaft "A" [190mm]	36	E-1-27
GP-006914-00	Roller Bracket	59	H1-6-24
GP-006914-00	Roller Bracket	70	H2-6-24
GP-006914-01	Roller Bracket	59	H1-6-24
GP-006914-01	Roller Bracket	70	H2-6-24
GP-006914-02	Roller Bracket	59	H1-6-24
GP-006914-02	Roller Bracket	70	H2-6-24
GP-006917-00	Guide Roller	59	H1-6-30
GP-006917-00	Guide Roller	70	H2-6-30
GP-006917-01	Guide Roller	59	H1-6-30
GP-006917-01	Guide Roller	70	H2-6-30
GP-007190-00	BEARING CONNECTING BLOCK B	114	Q1-2-1
GP-007190-00	BEARING CONNECTING BLOCK B	119	Q2-2-1
GP-007190-01	BEARING CONNECTING BLOCK B	114	Q1-2-1
GP-007190-01	BEARING CONNECTING BLOCK B	119	Q2-2-1
GP-007190-02	BEARING CONNECTING BLOCK B	114	Q1-2-1
GP-007190-02	BEARING CONNECTING BLOCK B	119	Q2-2-1
GP-007216-00	Needle Bar Return Spring	41	F-1-7
GP-007216-01	Needle Bar Return Spring	41	F-1-7
GP-007325-00	Arm Guard Plate (R)	24	C-2-2
GP-008025-00	Sensor Bracket X,Y	52	H1-1-27
GP-008025-00	Sensor Bracket X,Y	63	H2-1-27
GP-008534-00	Stud Bolt	46	F-4-18
GP-008536-00	Encoder Base	25	C-3-5
GP-008997-00	Needle Plate	78	I-4-23
GP-009003-00	Lamp Socket Fixed Plate	102	N-1-12
GP-009111-00	Corner Guide (DL)	113	Q1-1-41

Part No.	Part Name	Page	Ref.No
GP-009111-00	Corner Guide(DL)	118	Q2-1-41
GP-009111-01	Corner Guide(DL)	113	Q1-1-41
GP-009111-01	Corner Guide(DL)	118	Q2-1-41
GP-009112-00	Corner Guide(DR)	113	Q1-1-40
GP-009112-00	Corner Guide(DR)	118	Q2-1-40
GP-009112-01	Corner Guide(DR)	113	Q1-1-40
GP-009112-01	Corner Guide(DR)	118	Q2-1-40
GP-009112-02	Corner Guide(DR)	113	Q1-1-40
GP-009112-02	Corner Guide(DR)	118	Q2-1-40
GP-009113-00	Corner Guide(EL)	113	Q1-1-43
GP-009113-00	Corner Guide(EL)	118	Q2-1-43
GP-009114-00	Corner Guide(ER)	113	Q1-1-42
GP-009114-00	Corner Guide(ER)	118	Q2-1-42
GP-009431-00	Side Cover	95	M-2-16
GP-009431-01	Side Cover	95	M-2-16
GP-009433-00	Fixing Bracket for Trimming Driver	97	M-3-11
GP-009434-00	Fixing Bracket for Drive	98	M-3-21
GP-009435-00	SMPS Bracket(B)	94	M-1-12
GP-009435-01	SMPS Bracket(B)	94	M-1-12
GP-009441-00	Rear Cover	98	M-3-25
GP-009442-00	Fixing Bracket for Joint Board	97	M-3-5
GP-009442-01	Fixing Bracket for Joint Board	97	M-3-5
GP-009442-02	Fixing Bracket for Joint Board	97	M-3-5
GP-009445-00	Driver Fixing Plate	97	M-3-1
GP-009445-01	Driver Fixing Plate	97	M-3-1
GP-009445-02	Driver Fixing Plate	97	M-3-1
GP-009448-00	Fixing Bracket for Core(A)	95	M-2-1
GP-009450-00	Fixing Bracket for Core(B)	95	M-2-1
GP-009451-00	Fixing Bracket for Connect Plate	95	M-2-1
GP-009453-00	Copper Plate for SMPS(A)	94	M-1-15
GP-009453-00	Copper Plate for SMPS(B)	95	M-2-1
GP-009454-00	Copper Plate for SMPS(B)	94	M-1-16
GP-009454-00	Copper Plate for SMPS(A)	95	M-2-1
GP-009455-00	Base Rubber	94	M-1-5
GP-009589-00	Oil Tank Ass'Y	26	C-4-1
GP-009590-00	Oil Tank Felt	26	C-4-2
GP-009831-00	Main Driver Sticker	98	M-3-32
GP-009832-00	X-Driver Sticker	98	M-3-30
GP-009833-00	Y-Driver Sticker	98	M-3-29
GP-009902-00	Emergency Switch Holder(A) [L=268]	90	L-1-15
GP-009936-00	Front Felt (O-1) (L=82.5)	112	Q1-1-32
GP-009936-00	Front Felt (O-1) (L=82.5)	117	Q2-1-32
GP-010089-00	Table Support Connecting Bar B	14	A2-1-11
GP-010089-00	Table Support Connecting Bar B	86	K2-1-19
GP-010089-01	Table Support Connecting Bar B	14	A2-1-11
GP-010089-01	Table Support Connecting Bar B	86	K2-1-19
GP-010089-02	Table Support Connecting Bar B	14	A2-1-11
GP-010089-02	Table Support Connecting Bar B	86	K2-1-19
GP-010089-03	Table Support Connecting Bar B	14	A2-1-11
GP-010089-03	Table Support Connecting Bar B	86	K2-1-19
GP-010149-00	Fixing Bracket for Core(D)	95	M-2-1
GP-010233-00	Bar S/W Support	103	N-2-14
GP-010233-00	Bar S/W Support	104	N-3-14

Part No.	Part Name	Page	Ref.No
GP-010262-00	Pulley Bracket Cover	38	E-2-16
GP-010263-00	Pulley Box Cover Stud	36	E-1-5
GP-010409-00	Bushing Nut(C)	112	Q1-1-19
GP-010409-00	Bushing Nut(C)	117	Q2-1-19
GP-010609-00	Rotary Hook Support	33	D-3-1
GP-010656-00	Fixing Stud for SB DDC Radiator	99	M-4-28
GP-010736-00	Stud for SMPS Connect Board	94	M-1-7
GP-010764-00	Thread Guide (L) 9C	43	F-2-12
GP-010772-00	Thread Hook Spring (9C)	43	F-2-17
GP-011913-00	Drive Lever "A" Set	16	B-1-6
GP-011914-00	Take-Up Driving Lever "B"	16	B-1-7
GP-011929-00	Needle Bar	41	F-1-6
GP-011931-00	Needle Bar Guide Rail (9C)	43	F-2-31
GP-011932-00	Needle Bar Driving Cam	17	B-2-2
GP-011932-01	Needle Bar Driving Cam	17	B-2-2
GP-011933-00	Bearing Case	20	B-5-1
GP-011933-01	Bearing Case	20	B-5-1
GP-011938-00	Take-Up Lever Cam Base	17	B-2-5
GP-011938-01	Take-Up Lever Cam Base	17	B-2-5
GP-011944-00	Head Rail	42	F-1-34
GP-011944-01	Head Rail	42	F-1-34
GP-011945-00	Color Change Bracket "B"	43	F-2-34
GP-011946-00	Color Change Bracket	110	P-2-6
GP-011947-00	Head	41	F-1-1
GP-011947-01	Head	41	F-1-1
GP-011947-02	Head	41	F-1-1
GP-011947-03	Head	41	F-1-1
GP-011947-04	Head	41	F-1-1
GP-011947-05	Head	41	F-1-1
GP-012130-00	OFFSET S/W BOX	87	K2-2-35
GP-012131-00	FIXING PLATE FOR OFFSET S/W BOX	88	K2-2-36
GP-012729-00	Radiator for Trimming Driver	97	M-3-9
GP-013117-00	NEEDLE BAR DRIVING SHAFT	18	B-3-13
GP-013196-00	Support Bracket	59	H1-6-21
GP-013196-00	ROLLER BRACKET SUPPORT	70	H2-6-21
GP-013331-00	Connecting Bracket for Laser	20	B-5-11
GP-013331-01	Connecting Bracket for Laser	20	B-5-11
GP-013332-00	Fixing Bracket for Laser	20	B-5-12
GP-013585-00	Side Cover "A"	19	B-4-3
GP-013585-01	Side Cover "A"	19	B-4-3
GP-013586-00	Jump Sol. Bracket	19	B-4-22
GP-013587-00	Needle Bar Driving Shaft Bush	18	B-3-30
GP-013587-01	Needle Bar Driving Shaft Bush	18	B-3-30
GP-013744-00	Control Box	94	M-1-2
GP-013744-01	Control Box	94	M-1-2
GP-013744-02	Control Box	94	M-1-2
GP-013747-00	Fixing Bracket for Core(C)	95	M-2-1
GP-013747-01	Fixing Bracket for Core(C)	95	M-2-1
GP-013748-00	Connect Plate	95	M-2-1
GP-013749-00	SMPS Bracket(A)	94	M-1-4
GP-013752-00	Jumping Sol. Base Plate	19	B-4-2
GP-013752-01	Jumping Sol. Base Plate	19	B-4-2
GP-013756-00	Needle Bar Reciprocator	18	B-3-20

R. Index

Part No.	Part Name	Page	Ref.No
GP-013758-00	Arm Guard Plate (L)	24	C-2-1
GP-013762-00	Needle Driving Shaft Driver	18	B-3-25
GP-013762-01	Needle Driving Shaft Driver	18	B-3-25
GP-013762-02	Needle Driving Shaft Driver	18	B-3-25
GP-013762-03	Needle Driving Shaft Driver	18	B-3-25
GP-013763-00	Presser Foot	41	F-1-18
GP-014274-00	Pulley for Upper Shaft Ass'y	36	E-1-30
GP-014274-01	Pulley for Upper Shaft Ass'y	36	E-1-30
GP-014250-00	Bar Switch Box (B)	103	N-2-1
GP-014251-00	Regulatory Rod	103	N-2-3
GP-014251-00	Regulatory Rod	104	N-3-3
GP-014252-00	Bar Switch Sensing Ring	103	N-2-11
GP-014252-00	Bar Switch Sensing Ring	104	N-3-11
GP-014253-00	Bar Switch Sensor Bracket	103	N-2-16
GP-014253-00	Bar Switch Sensor Bracket	104	N-3-16
GP-014254-00	Bar Switch Box Cover(C)	104	N-3-21
GP-014255-00	Bar Switch Holder Spacer	103	N-2-28
GP-014255-00	Bar Switch Holder Spacer	104	N-3-26
GP-014341-03	CPU Board Fixing Stud	99	M-4-16
GP-014343-00	Fixing Bracket for OP	100	M-4-13
GP-014343-01	Fixing Bracket for OP	100	M-4-13
GP-014345-03	Base Plate	99	M-4-2
GP-014345-03	Base Plate	100	M-4-12
GP-014346-00	Rubber For Support Base	106	O-1-18
GP-014348-03	Front Cover	100	M-4-1
GP-014349-00	Rear Cover	100	M-4-18
GP-014350-03	LCD Cover	99	M-4-4
GP-014351-00	Connector Cover	100	M-4-20
GP-014354-00	Bobbin Shaft	106	O-1-15
GP-014354-01	Bobbin Shaft	106	O-1-15
GP-014354-02	Bobbin Shaft	106	O-1-15
GP-014354-03	Bobbin Shaft	106	O-1-15
GP-014356-00	Button (Number Key)	100	M-4-8
GP-014357-00	Button (DOWN,UP Key)	100	M-4-9
GP-014359-00	Button (F-Speed Key)	100	M-4-10
GP-014360-01	Button (START,STOP Key)	100	M-4-3
GP-014361-00	Insulation Bush(A)	99	M-4-13
GP-014361-00	Insulation Bush(A)	99	M-4-18
GP-014362-00	Insulation Bush(B)	99	M-4-15
GP-014362-00	Insulation Bush(B)	99	M-4-20
GP-014363-00	Spool Support Base	106	O-1-3
GP-014365-00	Spool Support Base Sponge	106	O-1-4
GP-014366-00	Spool Post	106	O-1-2
GP-014368-00	Antenna Bar	107	O-2-11
GP-014369-00	Antenna Bar Hanger	107	O-2-10
GP-014370-00	Tension Control Holder	106	O-1-10
GP-014441-01	FDD Box	100	M-4-24
GP-014442-01	Cable Fixing Rubber	100	M-4-29
GP-014677-00	VR Knob	107	O-2-6
GP-014678-00	Fuse Holder	107	O-2-4
GP-014869-01	Cover	107	O-2-1
GP-014870-00	Base	106	O-1-1
GP-014871-00	Motor Bracket	106	O-1-14

Part No.	Part Name	Page	Ref.No
GP-014899-00	Bar Switch Box (A)	104	N-3-1
GP-014931-00	Jump Sol. Cover	19	B-4-7
GP-015067-01	Angle Bushing	100	M-4-5
GP-015068-02	Button (F Key)	100	M-4-4
GP-015069-00	Button (Move Key)	100	M-4-11
GP-015085-00	UPPER THREAD HOOK SENSOR BASE	74	I-1-12
GP-015257-00	MES CAM DRIVING BOX	30	D-1-3
GP-015264-00	Limit Sensor Base	32	D-2-1
GP-015264-01	Limit Sensor Base	32	D-2-1
GP-015265-00	Limit Sensor Plate	30	D-1-24
GP-015265-01	Limit Sensor Plate	30	D-1-24
GP-015700-00	Main Power S/W Bracket	90	L-1-2
GP-015970-00	Input voltage Sticker	95	M-2-6
GP-016274-00	Inside Sticker	98	M-3-31
GP-016274-01	Inside Sticker	98	M-3-31
GP-016393-00	Bar Switch Box Cover(B)	103	N-2-21
GP-017097-00	Laser Support Connecting Bracket	20	B-5-7
GP-017097-01	Laser Support Connecting Bracket	20	B-5-7
GP-017097-02	Laser Support Connecting Bracket	20	B-5-7
GP-017156-00	Y-Coupling Cover	83	K1-1-22
GP-017156-00	Y-Coupling Cover	86	K2-1-27
GP-017235-00	SB DDC Radiator	99	M-4-26
GP-017239-00	SB DDC Radiator Sheet	99	M-4-27
GP-017824-00	TABLE CONNECTING COVER	83	K1-1-2
GP-017824-01	TABLE CONNECTING COVER	83	K1-1-2
GP-017827-00	L.M Guide Cover A	83	K1-1-11
GP-017827-01	L.M Guide Cover A	83	K1-1-11
GP-017828-00	L.M Guide Cover C	83	K1-1-12
GP-019021-00	Insulation Bush(A)	99	M-4-7
GP-019022-00	Insulation Bush(B)	99	M-4-8
GP-020300-00	Y-Axis Timing Pulley	61	H1-7-26
GP-020300-00	Y-Axis Timing Pulley	72	H2-7-26
GP-020301-00	Driving Shaft Coupling	54	H1-2-26
GP-020301-00	Driving Shaft Coupling	61	H1-7-5
GP-020301-00	Hex.Socket Bolt(M6*L20)	65	H2-2-27
GP-020301-00	Driving Shaft Coupling	72	H2-7-5
GP-020301-01	Driving Shaft Coupling	54	H1-2-26
GP-020301-01	Driving Shaft Coupling	61	H1-7-5
GP-020301-01	Hex.Socket Bolt(M6*L20)	65	H2-2-27
GP-020301-01	Driving Shaft Coupling	72	H2-7-5
GP-020301-02	Driving Shaft Coupling	54	H1-2-26
GP-020301-02	Driving Shaft Coupling	61	H1-7-5
GP-020301-02	Hex.Socket Bolt(M6*L20)	65	H2-2-27
GP-020301-02	Driving Shaft Coupling	72	H2-7-5
GP-020302-00	X-Motor Bracket	54	H1-2-5
GP-020302-00	X-Motor Bracket	65	H2-2-5
GP-020304-00	Y-Motor Bracket	61	H1-7-14
GP-020304-00	Y-Motor Bracket	72	H2-7-14
GP-020674-00	Side Cover "B"	19	B-4-4
GP-020674-01	Side Cover "B"	19	B-4-4
GP-020679-00	Upper Thread Hook Motor Cover	75	I-1-54
GP-020679-01	Upper Thread Hook Motor Cover	75	I-1-54

Part No.	Part Name	Page	Ref.No
GP-020802-00	MAIN DRIVING PULLEY BOX	36	E-1-1
GP-020802-01	MAIN DRIVING PULLEY BOX	36	E-1-1
GP-020802-02	MAIN DRIVING PULLEY BOX	36	E-1-1
GP-020802-03	MAIN DRIVING PULLEY BOX	36	E-1-1
GP-020831-00	Arm Top Cover	23	C-1-5
GP-020831-01	Arm Top Cover	23	C-1-5
GP-020913-00	Needle Bar Drive Lever	18	B-3-1
GP-020913-01	Needle Bar Drive Lever	18	B-3-1
GP-020915-00	Presser Foot Pressure Spring	41	F-1-16
GP-020915-01	Presser Foot Pressure Spring	41	F-1-16
GP-020960-00	TAKE-UP LEVER DRIVER CAM	17	B-2-6
GP-020960-01	TAKE-UP LEVER DRIVER CAM	17	B-2-6
GP-020960-02	TAKE-UP LEVER DRIVER CAM	17	B-2-6
GP-020960-03	TAKE-UP LEVER DRIVER CAM	17	B-2-6
GP-021058-00	X-LM Guide Cover B	86	K2-1-24
GP-021059-00	X-LM Guide Cover C	86	K2-1-25
GP-021059-01	X-LM Guide Cover C	86	K2-1-25
GP-021205-00	Arm	21	B-6-1
GP-021205-01	Arm	21	B-6-1
GP-021205-02	Arm	21	B-6-1
GP-021267-00	TABLE CONNECTING COVER	86	K2-1-2
GP-021698-00	Noise Filter Box	90	L-1-24
GP-021754-00	Driving Plate Block"C"	74	I-1-21
GP-022424-00	Spacer	76	I-2-5
GP-022424-01	Spacer	76	I-2-5
GP-026495-00	Front Cover	94	M-1-18
GP-030400-00	Corner Guide (A)	112	Q1-1-5
GP-030400-00	Corner Guide (A)	117	Q2-1-5
GP-030400-01	Corner Guide (A)	112	Q1-1-5
GP-030400-01	Corner Guide (A)	117	Q2-1-5
GP-032699-00	Rotary Hook Base (Bevel)	12	A1-2-1
GP-032699-01	Rotary Hook Base (Bevel)	12	A1-2-1
GP-032699-02	Rotary Hook Base (Bevel)	12	A1-2-1
GP-037044-00	Hook Shaft Bush	12	A1-2-9
GP-037737-00	Corner Guide (C)	112	Q1-1-9
GP-037737-00	Corner Guide (C)	117	Q2-1-9
GP-037776-00	Fixing Block (A) for Bearing	114	Q1-2-5
GP-037776-00	Fixing Block (A) for Bearing	119	Q2-2-5
GP-037776-01	Fixing Block (A) for Bearing	114	Q1-2-5
GP-037776-01	Fixing Block (A) for Bearing	119	Q2-2-5
GP-037776-02	Fixing Block (A) for Bearing	114	Q1-2-5
GP-037776-02	Fixing Block (A) for Bearing	119	Q2-2-5
GP-037798-00	Frame (G) [L=939]	112	Q1-1-4
GP-037798-00	Frame (G) [L=939]	117	Q2-1-4
GP-037803-00	Corner Guide (B)	112	Q1-1-7
GP-037803-00	Corner Guide (B)	117	Q2-1-7
GP-037813-00	Fixing Block (C) for Bearing	112	Q1-1-27
GP-037813-00	Fixing Block (C) for Bearing	117	Q2-1-27
GP-038684-00	MES MOUNTING BASE	34	D-4-1
GP-044599-00	COUPLING @20	36	E-1-28
GP-044599-00	COUPLING @20	54	H1-2-20

R. Index

Part No.	Part Name	Page	Ref.No
GP-044599-00	COUPLING @20	61	H1-7-24
GP-044599-00	COUPLING @20	65	H2-2-20
GP-044776-00	Needle Bar Holder	41	F-1-12
GP-044784-00	Needle Bar Drive Rink	18	B-3-11
GP-044787-00	MOTOR DRIVING CONNECT PLATE	74	I-1-25
GP-044788-00	Connecting Rod	17	B-2-3
GP-046540-00	MOTOR BASE	74	I-1-2
GP-046540-01	MOTOR BASE	74	I-1-2
GP-052861-00	Reflecting (2)	102	N-1-21
GP-052862-00	Reflecting (1)	102	N-1-20
LWP-BK0003-00	Return Spring Stopper	74	I-1-34
LWP-BK0003-01	Return Spring Stopper	74	I-1-34
MH-01	MAIN POWER PLUG TO NFB INPUT	90	L-1-6
MH-20	Half Turn Sensor Cable	46	F-4-26
MH-28	Plate Led S/W Board Cable	49	G-2-12
MH-38	Wheel Earth 9C	50	G-3-7
MH-35-01	Sensor Board/Adjusting Plate Cable	49	G-2-13
MO-000029-00	Motor Ass'y	106	O-1-13
PN-000133-00	Roller Pin	59	H1-6-29
PN-000133-00	Roller Pin	70	H2-6-29
PN-000232-00	Jump Clutch Pin	19	B-4-10
PN-000232-01	Jump Clutch Pin	19	B-4-10
PN-000726-00	Mes Link Pin	30	D-1-10
RL-000001-00	Roller	44	F-3-15
PL-000054-00	X-Y Driving Shaft Timing Pulley	54	H1-2-25
PL-000054-00	X-Y Driving Shaft Timing Pulley	65	H2-2-25
SC-000173-00	Set Screw (M5*L4)	106	O-1-16
SC-000236-00	SCREW M4*L10	83	K1-1-3
SC-000236-00	SCREW M4*L10	86	K2-1-3
SC-000334-00	SCREW M4*L15	112	Q1-1-28
SC-000334-00	SCREW M4*L15	117	Q2-1-28
SC-000392-00	FAN Fixing Screw (M4xL30)	99	M-4-23
SC-000393-00	Fixing Screw for Transformer B	95	M-2-11
SC-000395-00	Fixing Screw for Switch Cover(Truss)	98	M-3-27
SC-000417-00	Head Rail Screw	41	F-1-2
SC-000460-00	Screw for Base Plate	99	M-4-9
SC-000545-00	FDD Fixing Screw (M3xL6)	100	M-4-27
SC-000629-00	Screw for LCD (M2×L8)	99	M-4-6
SC-000747-00	F-KEY Board Screw (ST2.9xL12)	100	M-4-6
SC-001605-00	Connecting Plate Stud Screw	74	I-1-29
SC-001729-00	STUD BOLT FOR DRIVING PLATE	74	I-1-16
SC-001729-01	STUD BOLT FOR DRIVING PLATE	74	I-1-16
SC-001729-02	STUD BOLT FOR DRIVING PLATE	74	I-1-16
SC-001903-00	Truss Screw (M4*L8)	112	Q1-1-12
SC-001903-00	Truss Screw (M4*L8)	112	Q1-1-14
SC-001903-00	Truss Screw (M4*L8)	112	Q1-1-16
SC-001903-00	Truss Screw (M4*L8)	112	Q1-1-18
SC-001903-00	Truss Screw (M4*L8)	117	Q2-1-12
SC-001903-00	Truss Screw (M4*L8)	117	Q2-1-14
SC-001903-00	Truss Screw (M4*L8)	117	Q2-1-16
SC-001903-00	Truss Screw (M4*L8)	117	Q2-1-18
SN-000164-00	TABLE INSERT NUT	83	K1-1-4

[illegible][illegible]