



PARTS BOOK

SPS/B-1306 Series SPS/B-1507 Series

Electronically Controlled
Pattern Sewing Machine
(Direct Drive Type)

PME-131125

SunStar CO., LTD.

Information

A. Parts Book 구성

Structure of Part Book

①
②
③
④
⑤
⑥
⑦
⑧
⑨

A Arm, Bed & Machine Body Mechanism
 앞, 베드 및 외장품 관계

Part No.	Parts No.	Note	Name of Parts	品名	Q'ty	Assembly No.
A-1	01-030C-1230		Arm	앞판	1	
A-2	01-030C-1230		Bed	베드	1	
A-3	01-030C-1230		Machine Body	기계체	1	
A-4	01-030C-1230		Machine Body	기계체	1	
A-5	01-030C-1230		Machine Body	기계체	1	
A-6	01-030C-1230		Machine Body	기계체	1	
A-7	01-030C-1230		Machine Body	기계체	1	
A-8	01-030C-1230		Machine Body	기계체	1	
A-9	01-030C-1230		Machine Body	기계체	1	
A-10	01-030C-1230		Machine Body	기계체	1	
A-11	01-030C-1230		Machine Body	기계체	1	
A-12	01-030C-1230		Machine Body	기계체	1	
A-13	01-030C-1230		Machine Body	기계체	1	
A-14	01-030C-1230		Machine Body	기계체	1	
A-15	01-030C-1230		Machine Body	기계체	1	
A-16	01-030C-1230		Machine Body	기계체	1	
A-17	01-030C-1230		Machine Body	기계체	1	
A-18	01-030C-1230		Machine Body	기계체	1	
A-19	01-030C-1230		Machine Body	기계체	1	
A-20	01-030C-1230		Machine Body	기계체	1	
A-21	01-030C-1230		Machine Body	기계체	1	
A-22	01-030C-1230		Machine Body	기계체	1	
A-23	01-030C-1230		Machine Body	기계체	1	
A-24	01-030C-1230		Machine Body	기계체	1	
A-25	01-030C-1230		Machine Body	기계체	1	
A-26	01-030C-1230		Machine Body	기계체	1	
A-27	01-030C-1230		Machine Body	기계체	1	
A-28	01-030C-1230		Machine Body	기계체	1	
A-29	01-030C-1230		Machine Body	기계체	1	
A-30	01-030C-1230		Machine Body	기계체	1	
A-31	01-030C-1230		Machine Body	기계체	1	
A-32	01-030C-1230		Machine Body	기계체	1	
A-33	01-030C-1230		Machine Body	기계체	1	
A-34	01-030C-1230		Machine Body	기계체	1	
A-35	01-030C-1230		Machine Body	기계체	1	
A-36	01-030C-1230		Machine Body	기계체	1	
A-37	01-030C-1230		Machine Body	기계체	1	
A-38	01-030C-1230		Machine Body	기계체	1	
A-39	01-030C-1230		Machine Body	기계체	1	
A-40	01-030C-1230		Machine Body	기계체	1	
A-41	01-030C-1230		Machine Body	기계체	1	
A-42	01-030C-1230		Machine Body	기계체	1	
A-43	01-030C-1230		Machine Body	기계체	1	
A-44	01-030C-1230		Machine Body	기계체	1	
A-45	01-030C-1230		Machine Body	기계체	1	
A-46	01-030C-1230		Machine Body	기계체	1	
A-47	01-030C-1230		Machine Body	기계체	1	
A-48	01-030C-1230		Machine Body	기계체	1	
A-49	01-030C-1230		Machine Body	기계체	1	
A-50	01-030C-1230		Machine Body	기계체	1	
A-51	01-030C-1230		Machine Body	기계체	1	
A-52	01-030C-1230		Machine Body	기계체	1	
A-53	01-030C-1230		Machine Body	기계체	1	
A-54	01-030C-1230		Machine Body	기계체	1	
A-55	01-030C-1230		Machine Body	기계체	1	
A-56	01-030C-1230		Machine Body	기계체	1	
A-57	01-030C-1230		Machine Body	기계체	1	
A-58	01-030C-1230		Machine Body	기계체	1	
A-59	01-030C-1230		Machine Body	기계체	1	
A-60	01-030C-1230		Machine Body	기계체	1	
A-61	01-030C-1230		Machine Body	기계체	1	
A-62	01-030C-1230		Machine Body	기계체	1	
A-63	01-030C-1230		Machine Body	기계체	1	
A-64	01-030C-1230		Machine Body	기계체	1	
A-65	01-030C-1230		Machine Body	기계체	1	
A-66	01-030C-1230		Machine Body	기계체	1	
A-67	01-030C-1230		Machine Body	기계체	1	
A-68	01-030C-1230		Machine Body	기계체	1	
A-69	01-030C-1230		Machine Body	기계체	1	
A-70	01-030C-1230		Machine Body	기계체	1	
A-71	01-030C-1230		Machine Body	기계체	1	
A-72	01-030C-1230		Machine Body	기계체	1	
A-73	01-030C-1230		Machine Body	기계체	1	
A-74	01-030C-1230		Machine Body	기계체	1	
A-75	01-030C-1230		Machine Body	기계체	1	
A-76	01-030C-1230		Machine Body	기계체	1	
A-77	01-030C-1230		Machine Body	기계체	1	
A-78	01-030C-1230		Machine Body	기계체	1	
A-79	01-030C-1230		Machine Body	기계체	1	
A-80	01-030C-1230		Machine Body	기계체	1	
A-81	01-030C-1230		Machine Body	기계체	1	
A-82	01-030C-1230		Machine Body	기계체	1	
A-83	01-030C-1230		Machine Body	기계체	1	
A-84	01-030C-1230		Machine Body	기계체	1	
A-85	01-030C-1230		Machine Body	기계체	1	
A-86	01-030C-1230		Machine Body	기계체	1	
A-87	01-030C-1230		Machine Body	기계체	1	
A-88	01-030C-1230		Machine Body	기계체	1	
A-89	01-030C-1230		Machine Body	기계체	1	
A-90	01-030C-1230		Machine Body	기계체	1	
A-91	01-030C-1230		Machine Body	기계체	1	
A-92	01-030C-1230		Machine Body	기계체	1	
A-93	01-030C-1230		Machine Body	기계체	1	
A-94	01-030C-1230		Machine Body	기계체	1	
A-95	01-030C-1230		Machine Body	기계체	1	
A-96	01-030C-1230		Machine Body	기계체	1	
A-97	01-030C-1230		Machine Body	기계체	1	
A-98	01-030C-1230		Machine Body	기계체	1	
A-99	01-030C-1230		Machine Body	기계체	1	
A-100	01-030C-1230		Machine Body	기계체	1	

①:관계 별 고유 코드

Unique code by mechanism

②:관계 별 고유 명칭

Unique name by mechanism

③:관계도

Explode view

④Ref.No:파트별 고유 식별 번호

Unique identification number by part

⑤Parts No.:고유 제품 코드

Unique Product code

Ex)

구분 Category	Code	비고 remarks
구 부품 Old part	01-030C-1230	
신 부품 New Part	AS-000000-00	조(組) 파트 Set parts
	GP-000000-00	기구적 파트 Instrumental parts
	EP-000000-00	전기적 파트 Electrical parts

⑥Note:공지사항 표기 및 메모

Refers to notice and memo

⑦품

명:파트의 고유 품명

Name of Part:Unique name of parts

⑧Q'ty :파트의 수량

The number of parts

⑨Assembly no.:조(組) 파트의 식별 번호

Unique identification number by set part

Warning

1. 조에 속한 파트는 개별 조립 시 제품의 파손 또는 재봉 불량 발생될 수 있어 해당 파트에 대한 주문 시에는 조 품목으로만 구입이 가능합니다.
2. 본 책자는 Parts Book으로 제작되었으므로 매뉴얼로 사용 불가합니다.
3. 사전 예고 없이 사양이 변경 될 수도 있습니다.

1. The parts classified as ass'y items may cause damage to the machine or bad sewing when they are separately assembled. Hence, when they are ordered, they can be purchased as ass'y items only.
2. This is a parts book. It cannot be used as a manual.
3. Parts are Subject to change in Design Without Prior Notice.

Note

- 썬스타 제품의 부품은 아래 인터넷주소로 접속하시어 신청할 수 있습니다.
<http://www.sunstarcs.com>
- 가입된 회원께서는 썬스타 포탈 사이트에 로그인후 필요한 부품을 신청할 수 있습니다.
- 부품관리-발주관리-발주등록 항목에서 부품번호와 신청수량을 입력하여 등록하시면 발주가 됩니다.
- 부품번호를 모르시는 경우 파츠북 조회를 클릭하시고 사용하는 기종을 검색하여 선택하시면 해당 기종의 파츠북을 조회할 수 있습니다.
- 파츠북은 관계별로 구분되어 있으며 관계를 알고 있다면 부품 찾기가 용이합니다.
- You can make an order for the parts of Sunstar machine to connect internet address.
<http://www.sunstarcs.com>
- You can request for parts you want after login if you are a registered member.
- In parts Management - Order Management - Order Registration entry, you can place an order by entering the part number and quantity.
- If you don't know the parts number, click the parts book menu bar.
In a download list, you can read parts book by searching model you use.
- This parts book is classified by the mechanism, therefore you can find part easily.

Pattern S/M Model

패턴 기종 구분

MACHINE MODEL

SPS/B-□□-HS-10

Sunstar Pattern System
썬스타 패턴 시스템

Series
시리즈

Sewing Area (XxY)
봉제범위 구분
1306 : 130mm x 60mm
1507 : 150mm x 70mm

Feed Frame Type
피이드 판 구분

10:Solenoid Type (전자식)
20:Pneumatic Monolithic Feeding
Frame (공압식 일체형 피이드 판)
22:Pneumatic Separately-Driven Feeding
Frame (공압식 분리형 피이드 판)

Stitch Type 사양 구분
S:Standard Stitch
P:Perfect Stitch

Material Type 용도 구분
G:General Material (일반용)
H:Heavy Material (후물용)

NOTE : Parts are Subject to change in Design Without Prior Notice.

1. 조에 속한 파트는 개별 조립 시 제품의 파손 또는 재봉 불량에 발생될 수 있어 해당 파트에 대한 주문 시에는 조 품목으로만 구입이 가능합니다.
2. 본 책자는 Parts Book으로 제작되었으므로 매뉴얼로 사용 불가합니다.
1. The parts classified as ass'y items may cause damage to the machine or bad sewing when they are separately assembled. Hence, when they are ordered, they can be purchased as ass'y items only.
2. This is a parts book. It cannot be used as a manual.

CONTENTS

목 차

 
A	Machine Body(1) Arm & Machine Body Parts 외장관계(1) 암 및 외장품 관계	8
B	Machine Body(2) Bed & Machine Body Parts 외장관계(2) 베드 및 외장품 관계	12
C	Upper Shaft Mechanism 상축 관계	14
D	Bobbin Winder & Hand Pulley Mechanism 실감기 및 핸드 풀리 관계	16
E	Lower Shaft Mechanism 하축 관계	18
F	Presser Foot Mechanism 노루발 관계	20
G	Presser Plate & Lowering Mechanism 누름판 및 수동 내림 관계	24
H	Thread Release & Thread Tension Mechanism 실늦추기 및 실 장력 조절 관계	26
I	Wiper Mechanism 와이퍼 관계	28
J	Thread Trimming Mechanism 사절 관계	30
K	X-Y Mechanism(1) X-Moving Mechanism X-Y 관계(1) X-이송 관계	34
L	X-Y Mechanism(2) Y-Moving Mechanism X-Y 관계(2) Y-이송 관계	36
M	Feed Mechanism 피이드 관계	38
M1	Feed Mechanism (Option) 피이드 관계 (선택사양)	40
N	Lubrication Mechanism 급유 관계	42
O	Table & Thread Stand 테이블 및 실패꽃이 관계	44
P	Accessories 액세서리 관계	46
Q	Control Box Mechanism 컨트롤 박스 관계	48
R	Operation Unit Mechanism 오퍼레이션 유닛 관계	52
S	Pedal Mechanism 페달 관계	
	① SPS/A-□□-□□-10(20)	54
	② SPS/A-□□-□□-21	56
	③ SPS/A-□□-□□-22	58
	④ SPS/A-□□-□□-22-1	60

T	Feed Mechanism - SPS/A-□□-HS(GS)-20(22) 피이드 관계	62
T1	Feed Mechanism (Option) - SPS/A-□□-HS(GS)-20(22) 피이드 관계 (선택사양)	64
U	Air Control Mechanism - SPS/A-□□-HS(GS)-20(22) 에어 제어 관계	66
V	SPS/A-□□-HP(GP) SPS/A-□□-HP(GP)	68
W	Exclusive Parts for SPS/B-1507 SPS/B-1507 전용부품 관계	70
X	Barcode Reader Mechanism (Option) 바코드 리더기 관계 (선택사양)	72
	Index 인덱스	74

A

Machine Body (1) Arm & Machine Body Parts

외장 관계(1) 암 및 외장품 관계

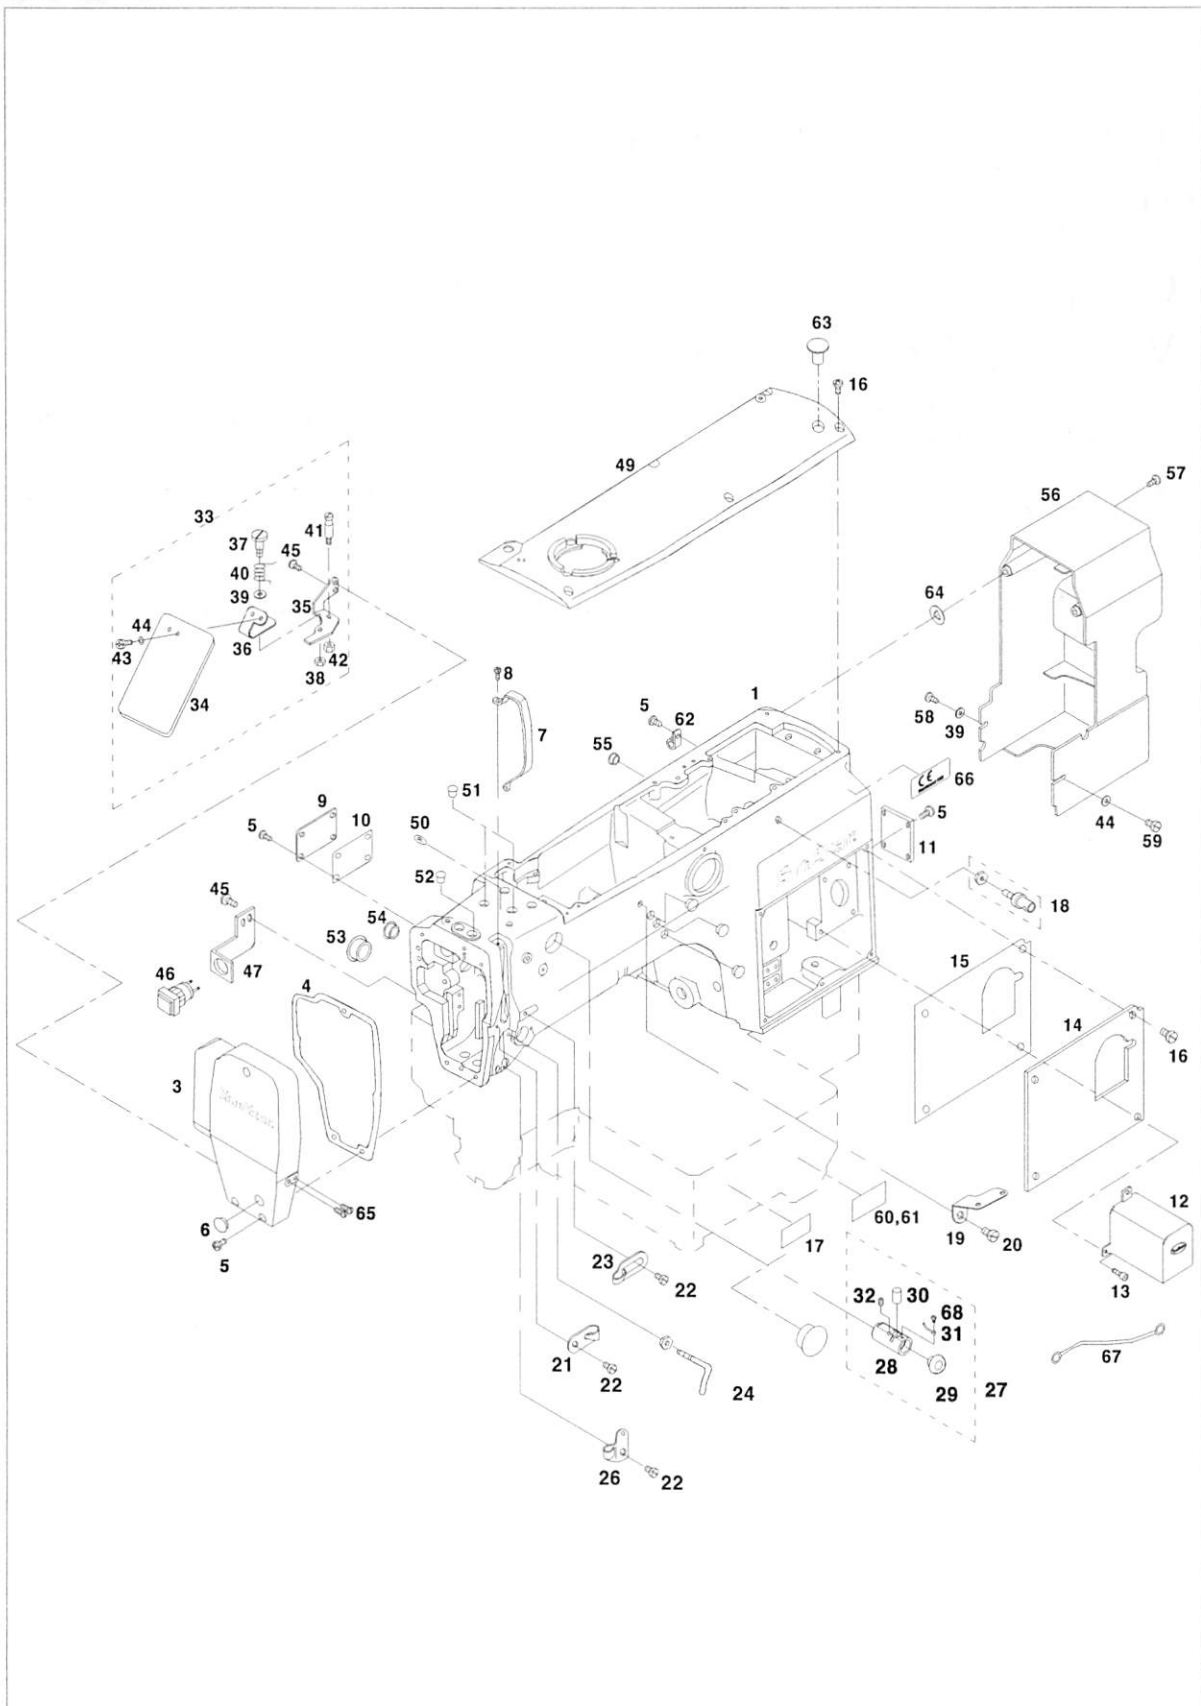




Ref. No.	Parts No.	Note	Name of Parts	품명	Q'ty	Applied
A-1	CAB-AA001505		Arm	아암	1	Apr.04.11
A-1-1	01S001S-306D		Arm&Bed Ass'y	암/베드(조)	1Set	Mar.02.11
A-3	CMB-LA001001		Face Plate	면판	1	
A-4	CMB-FC000602		Face Plate Gasket	면판 가스켓	1	Mar.08.12
A-5	DSC-BJ000200		Screw(11/64"n=40)	침나사	10	
A-6	DPK-CB000200		Rubber Cap For Face Plate	면판 고무마개	2	
A-7	CMB-LA000100		Thread Take Up Cover	실채기 커버	1	
A-8	DSC-BJ000300		Screw(9/64"n=40)	침나사	1	
A-9	CMB-LB000100		Left Cover	좌측 커버	1	
A-10	CMB-FC000200		Left Cover Gasket	좌측 커버 가스켓	1	
A-11	CMB-LB000200		Rear Cover	후면 커버	1	
A-12	CMB-LA002400		Y-Stepping Motor Cover	Y-스텝핑 모터 커버	1	
A-13	DSC-BG000100		Screw(M4×P0.7)	침나사	3	
A-14	CMB-LB003800		Right Cover	우측 커버	1	
A-15	CMB-FC001300		Right Cover Gasket	우측 커버 가스켓	1	
A-16	DSC-BF0008400		Screw(3/16"n=28)	침나사	10	
A-17	CMB-LD000200		Caution Sticker	경고 스티커	1	
A-18	CMB-HK000800		Thread Guide(A) Ass'y	실안내(A) (조)	1	
A-19	CMB-HK000900		Thread Guide(B)	실안내(B)	1	
A-20	DSC-BF000400		Screw(15/64"n=28)	침나사	1	
A-21	CMB-HK000200		Thread Guide(L)	실안내(좌)	1	
A-22	DSC-BA000100		Screw(9/64"n=40)	침나사	3	
A-23	CMB-HK000600		Thread Guide(R)	실안내(우)	1	
A-24	CMB-HK001100		Arm Thread Guide	암 실안내 겹이(조)	1	
A-26	CMB-HK000700		Thread Guide(U)	실안내(하)	1	
A-27	AMB-PS000200		Silicon Tank Ass'y	실리콘 급유 탱크(조)	1Set	
A-28	CMB-JB000100		Silicon Tank	실리콘 탱크	1	
A-29	CMB-JJ000100		Silicon Oil Window	실리콘 유창	1	
A-30	CMB-JL000101		Silicon Felt	실리콘 급유 felt	1	
A-31	CMB-BH000100		Felt Holder For Silicon Oil Supply	실리콘 급유 felt 잡이	1	
A-32	DSC-CB000700		Screw(11/64"n=40)	고정나사	1	
A-33	AMB-PS000100		Safety Plate Ass'y	안전판(조)	1Set	
A-34	CMB-BJ000100		Safety Plate	안전판	1	
A-35	CMB-BB000100		Safety Bracket	안전판 브라켓	1	
A-36	CMB-BG000100		Safety Plate Holder	안전판 홀더	1	
A-37	DSC-FA000100		Safety Plate Hinge Screw	안전판 단나사	1	
A-38	DSN-AA000300		Nut(11/64"n=40)	너트	1	
A-39	DWS-AA000400		Washer	와셔	1	
A-40	DSP-AC000100		Safety Plate Spring	안전판 스프링	1	
A-41	DSC-HD000100		Safety Plate Spring Hook	안전판 스프링 겹이	1	
A-42	DSN-AA000200		Nut(3/16"n=28)	너트	1	
A-43	DSC-BJ000200		Screw(11/64"n=40)	침나사	2	
A-44	DWS-AA000500		Washer	와셔	2	
A-45	DSC-BJ000200		Screw(11/64"n=40)	침나사	2	
A-46	GP-019553-00		Pause Switch	비상 스위치	1	
A-47	CMB-BB000200		Pause Switch Bracket	비상 스위치 브라켓	1	
A-49	CMB-LA004600		Top Cover	윗 뚜껑	1	
A-50	CMB-LD000100		Oil Sticker	오일 스티커	2	
A-51	DPK-CB000400		Arm Upper Part Rubber Cap	아암 상부 고무마개	1	
A-52	DPK-CB000400		Needle Bar Rubber Cap	바늘대 고무마개	1	
A-53	DPK-CB000100		Arm Left Part Rubber(L)	아암 좌측 고무마개(大)	2	
A-54	DPK-CB000200		Arm Left Part Rubber Cap(M)	아암 좌측 고무마개(中)	1	
A-55	DPK-CB000700		Arm Left Part Rubber Cap(S)	아암 좌측 고무마개(小)	7	
A-56	CMB-LA004700		Motor Cover	모터 커버	1	
A-57	DSC-BF002300		Screw(15/64"n=28)	침나사	2	
A-58	DSC-BF000700		Screw(15/64"n=28)	침나사	1	
A-59	DSC-BF003100		Screw(11/64"n=40)	침나사	1	


Note: HS → Heavy Material (후물용)
GS → General Material (일반용)

A

Machine Body (1) Arm & Machine Body Parts

  외장 관계(1) 암 및 외장품 관계

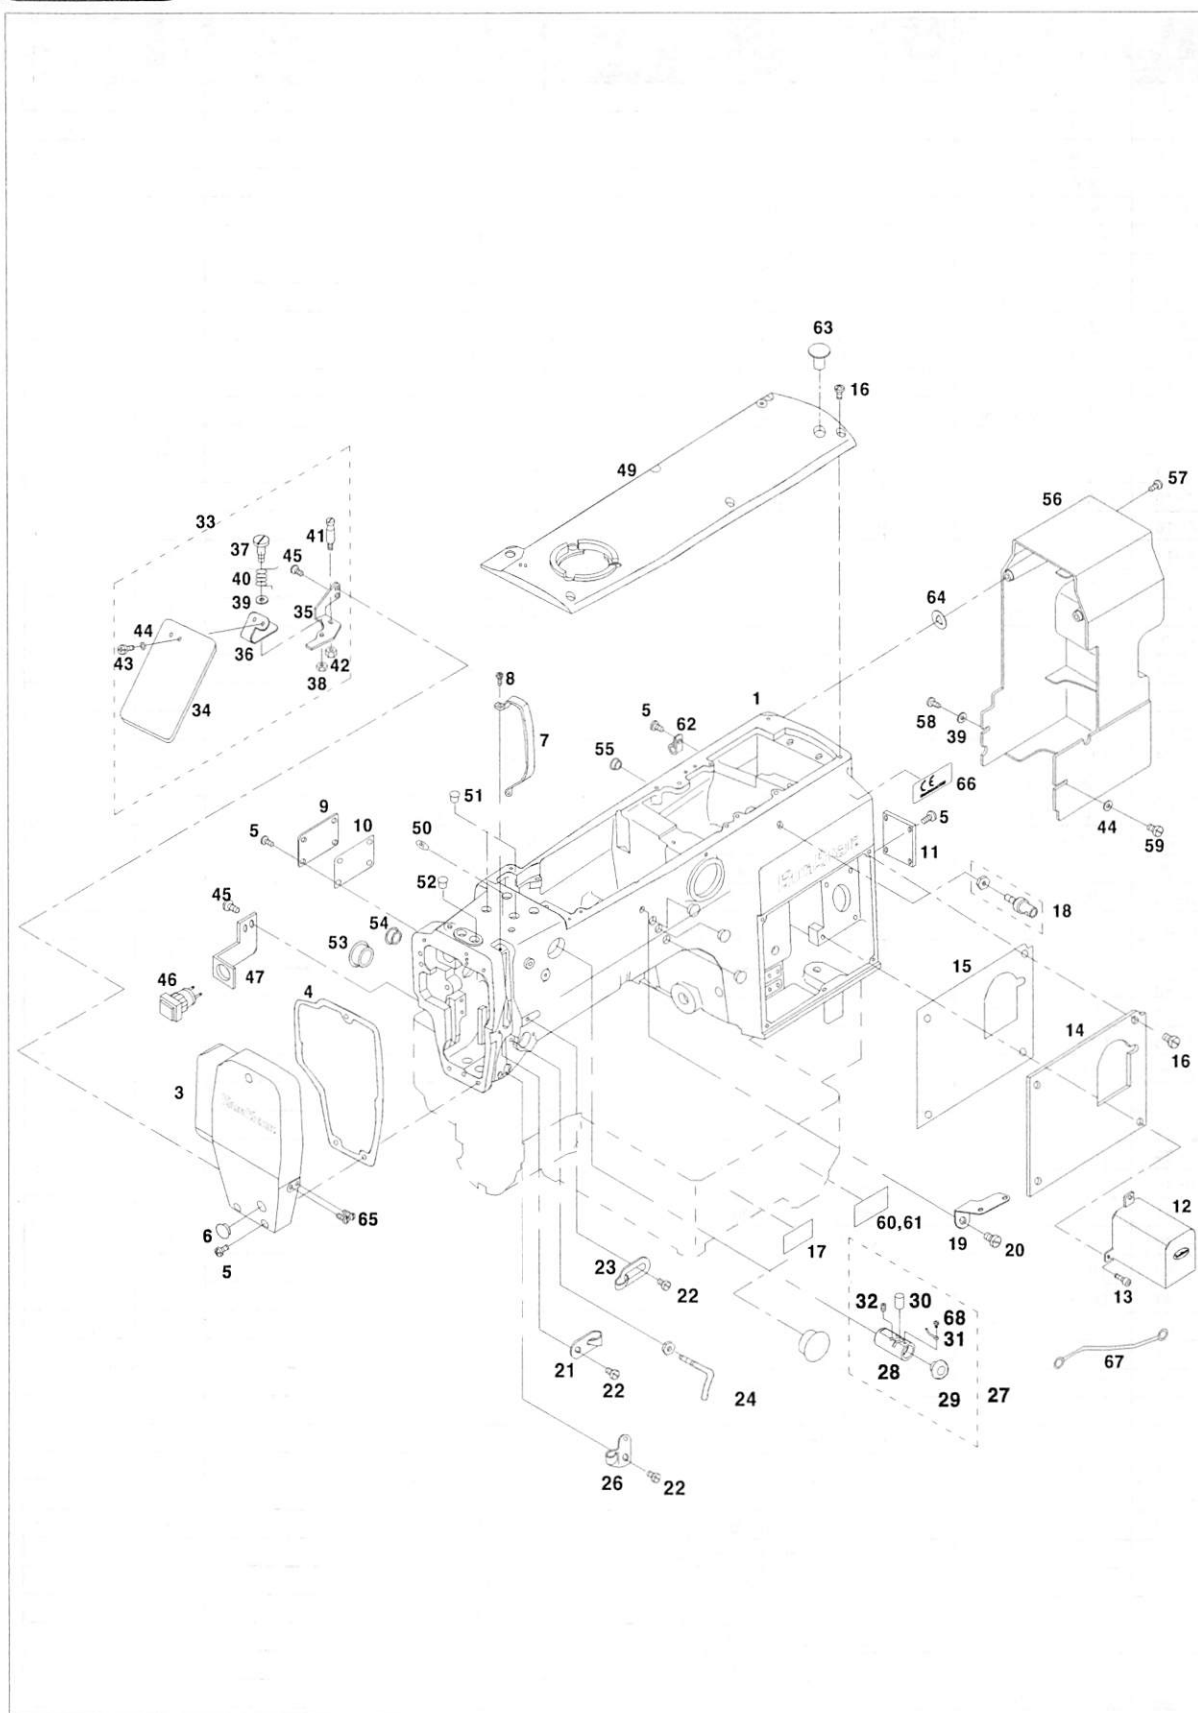


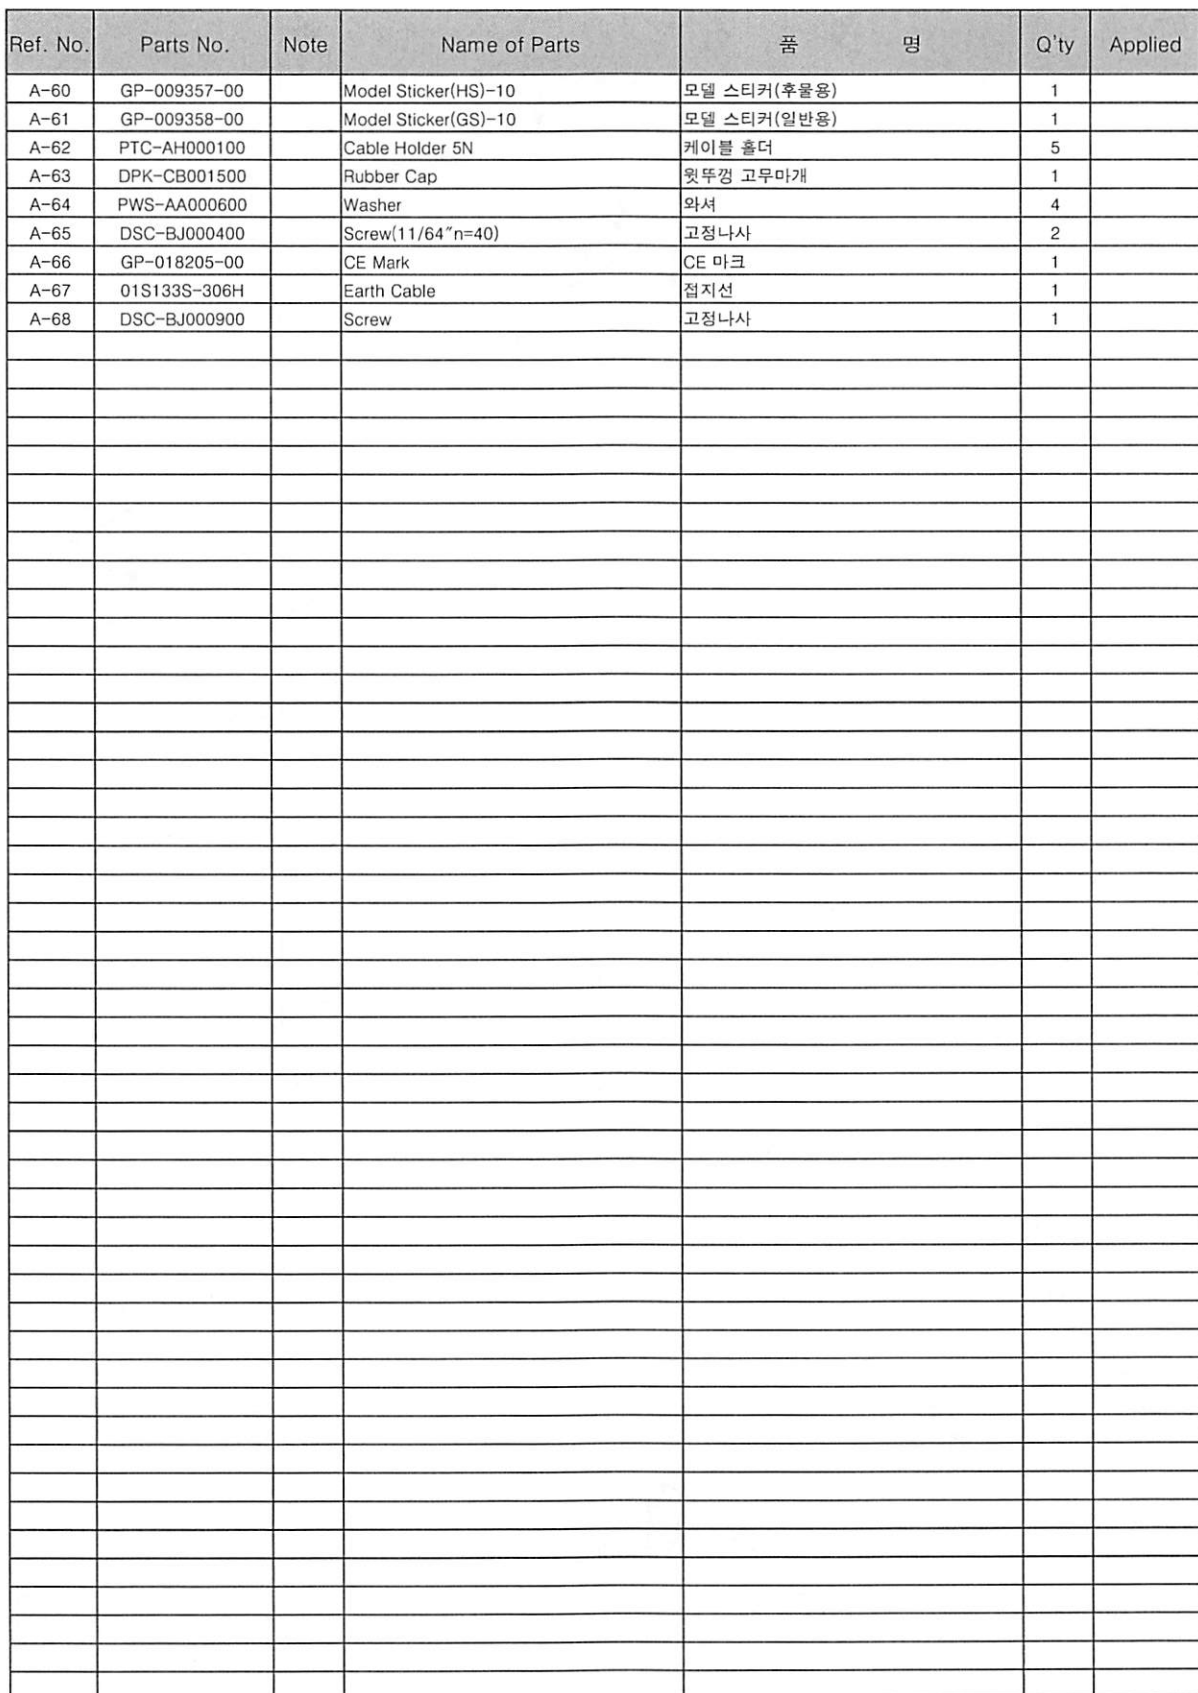


B

Machine Body (2) Bed & Machine Body Parts

 외장 관계(2) 베드 및 외장품 관계

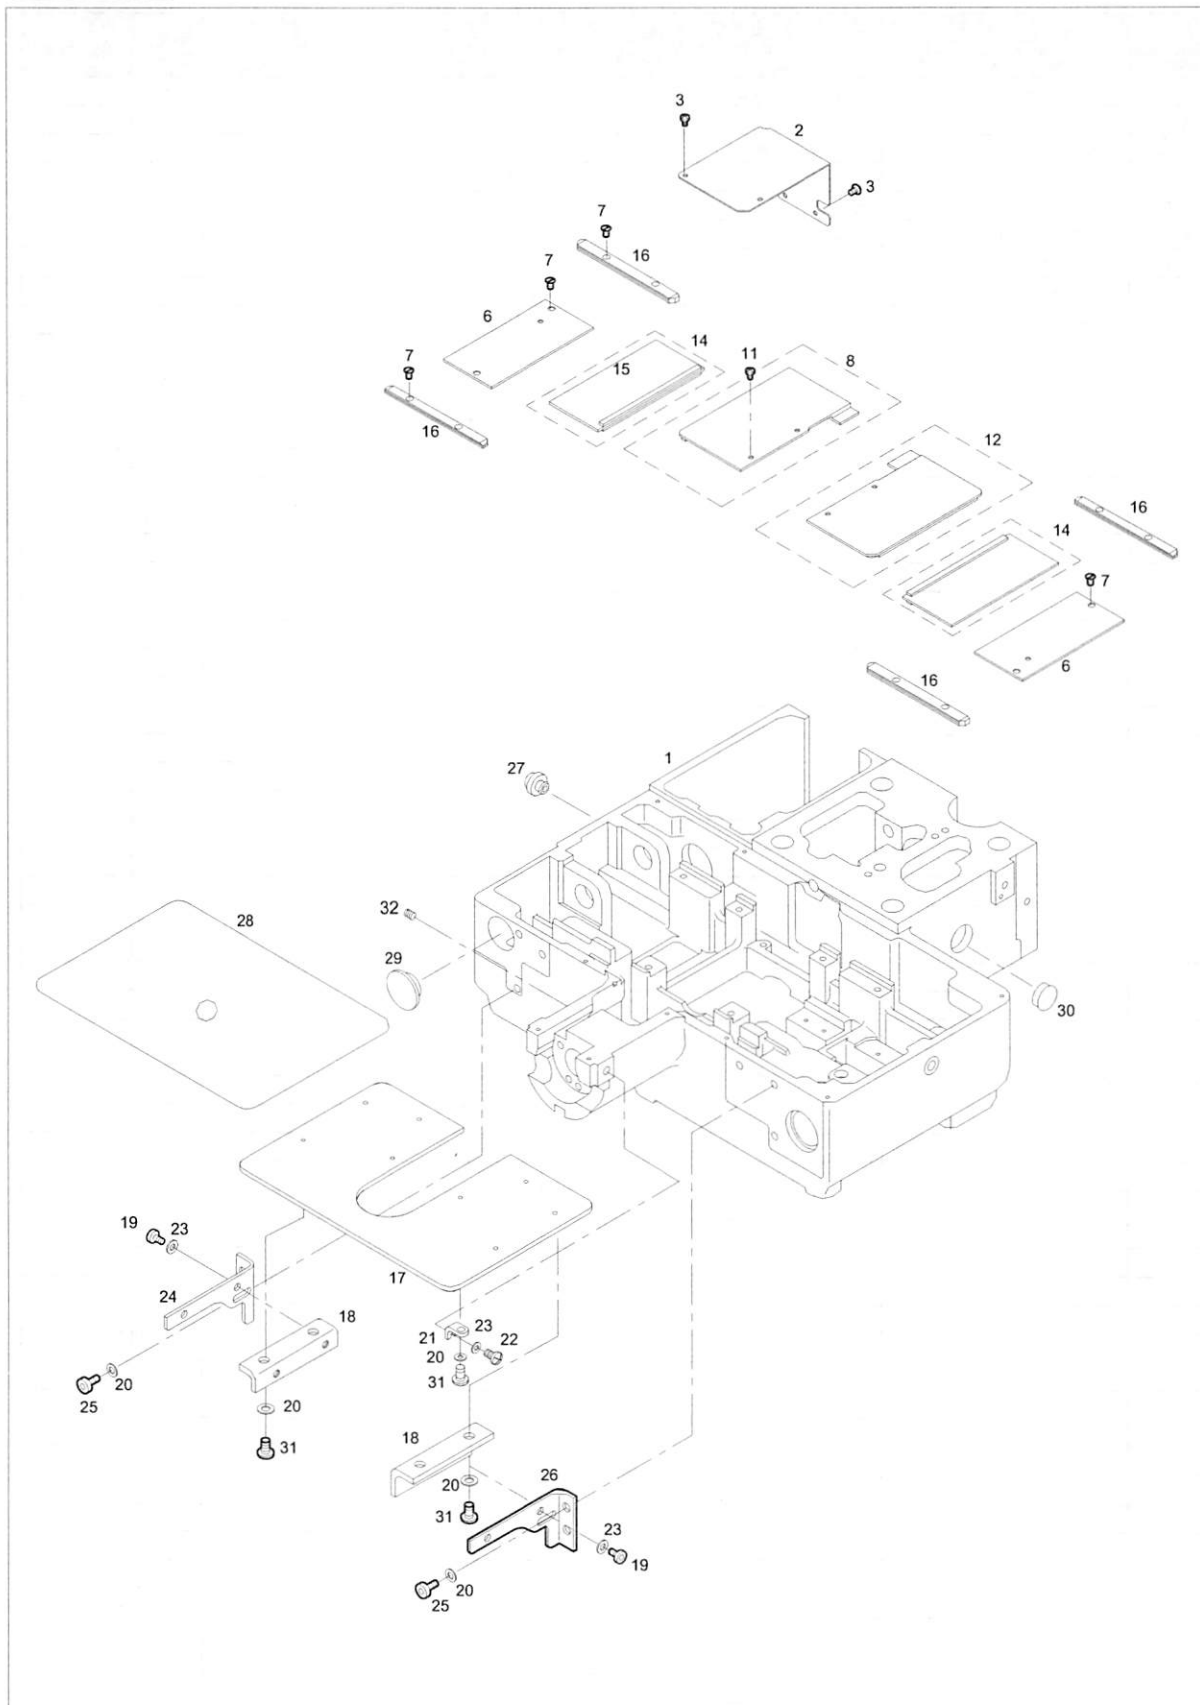

[illegible]

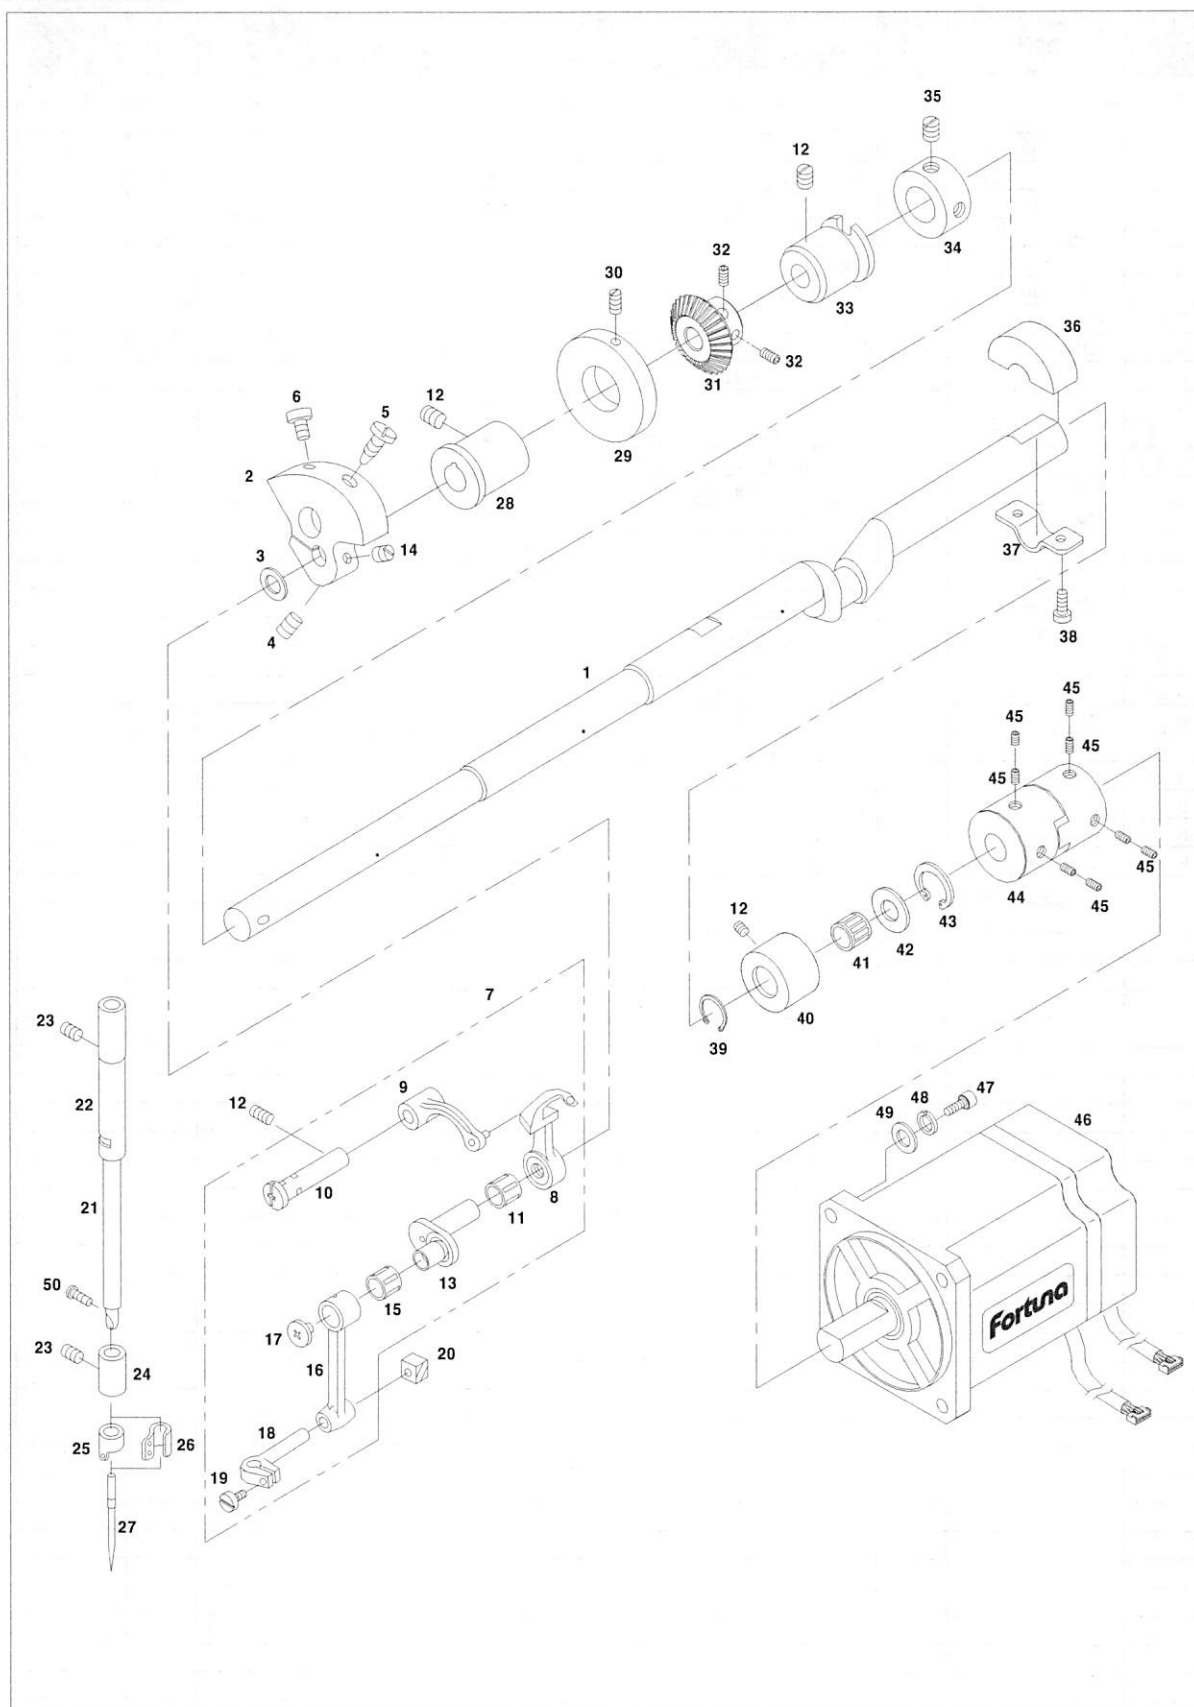 


Note: HS → Heavy Material (후물용)
 GS → General Material (일반용)

15

D

Bobbin Winder & Hand Pulley Mechanism

 실감기 및 핸드 풀리 관계

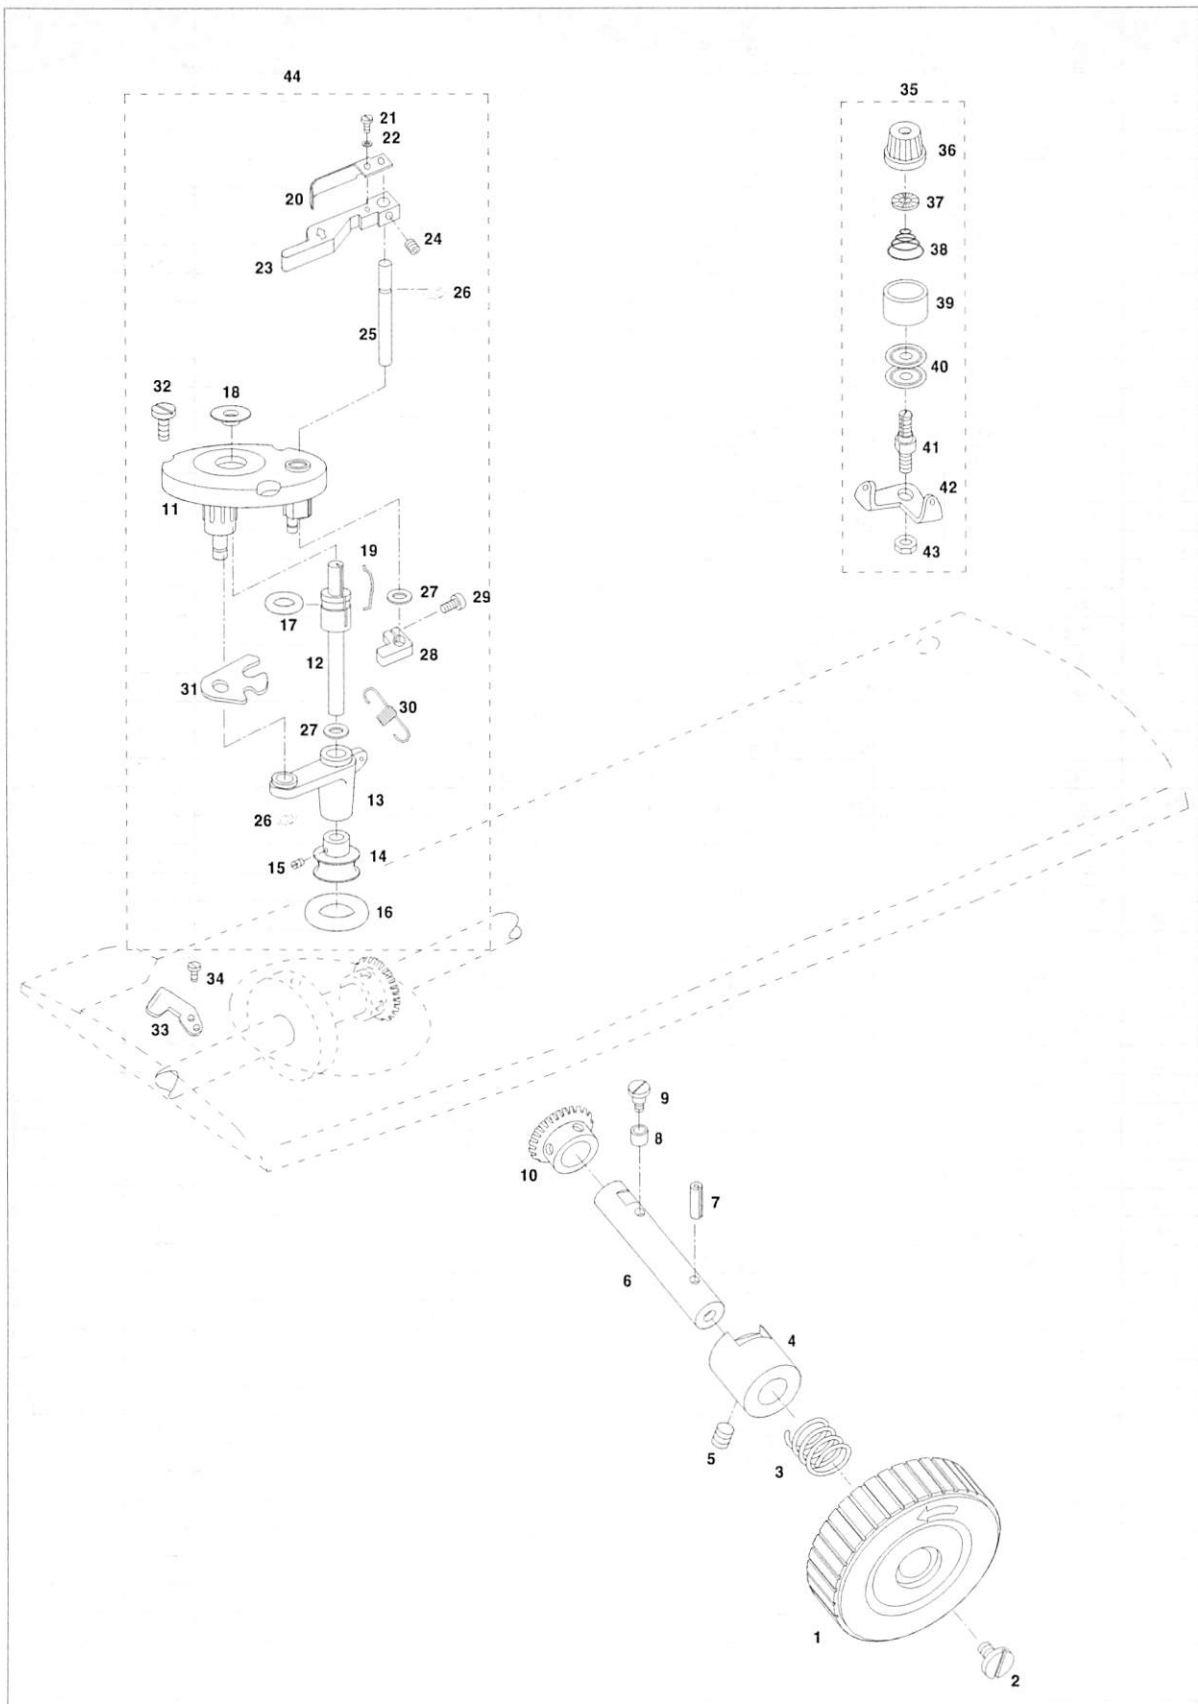


[illegible]




Lower Shaft Mechanism

 하축 관계

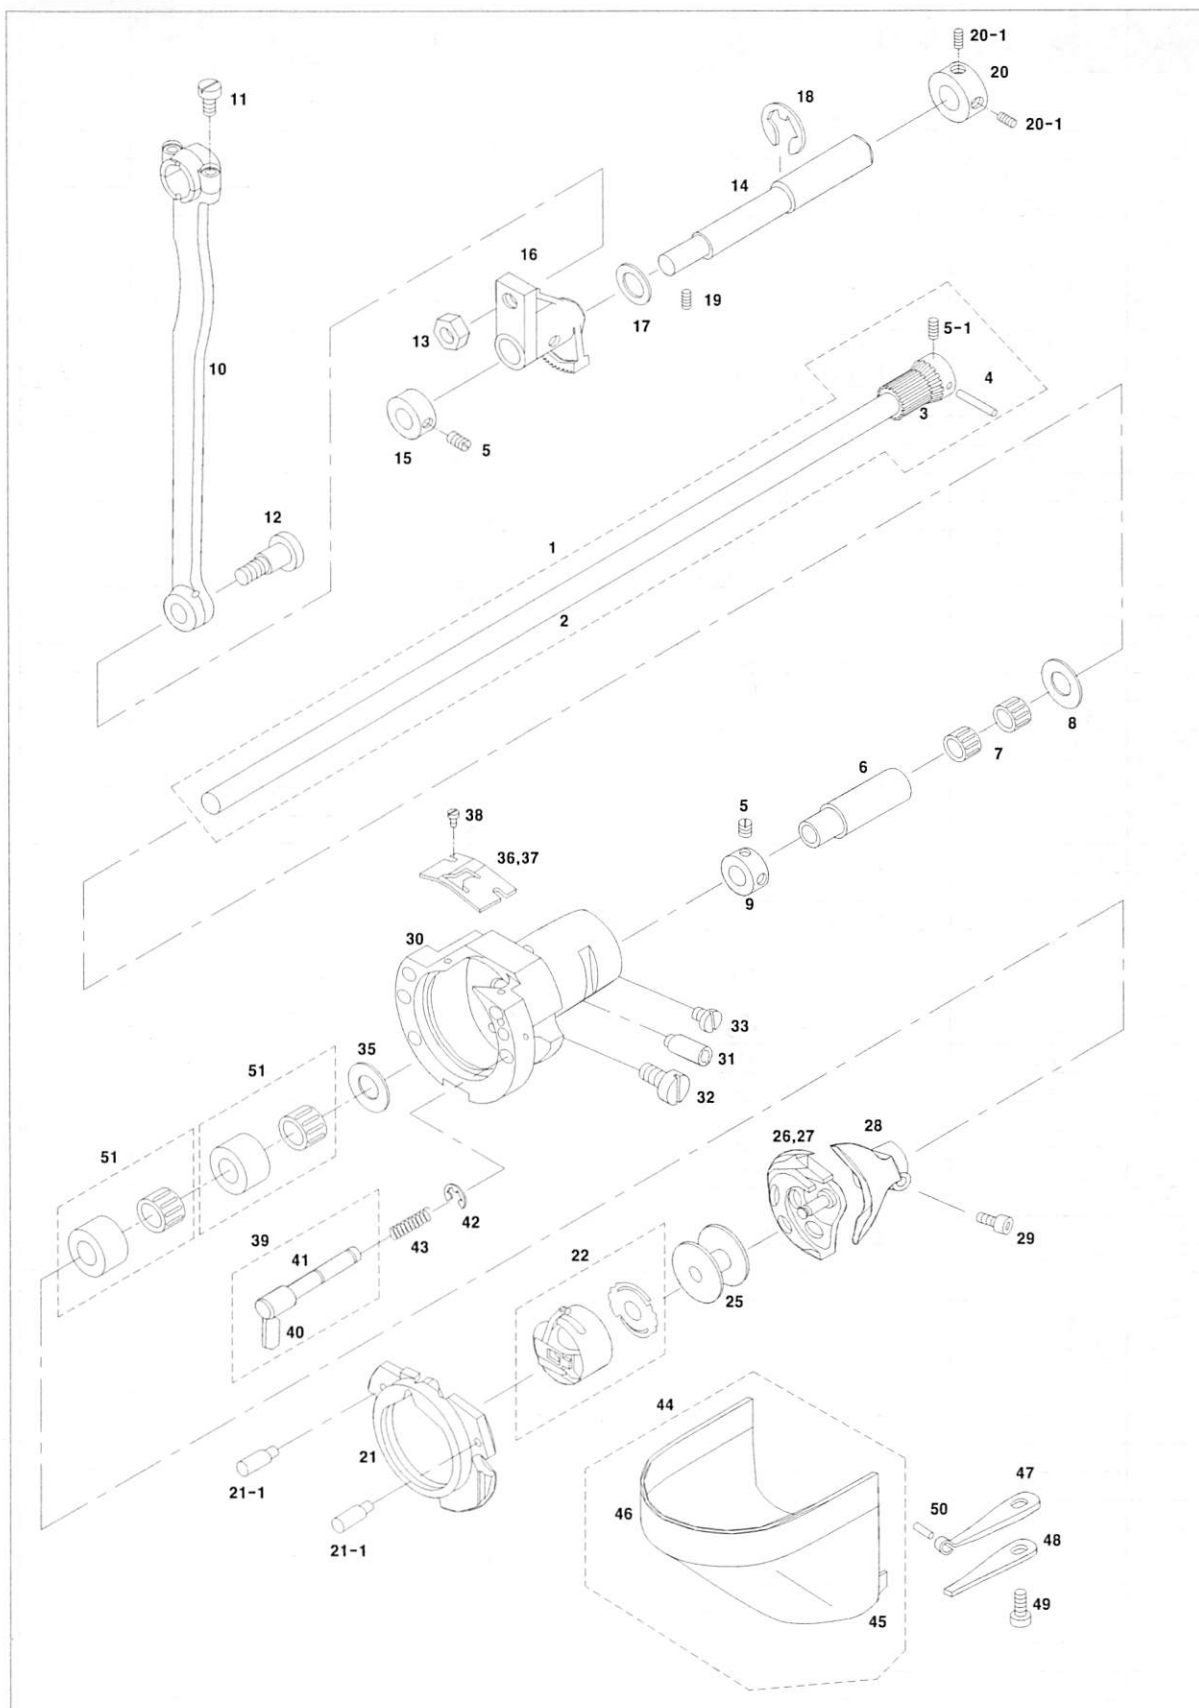

Ref. No.	Parts No.	Note	Name of Parts	품명	Q'ty	Applied
E-1	ALS-PS000400		Lower Shaft Ass'y	하축(조)	1	
E-2	CLS-KC000300		Lower Shaft	하축	1	
E-3	DGR-AA000100		Lower Shaft Gear	하축기어	1	
E-4	PPN-AA000100		Pin	평행핀($\phi 3 \times L19.5$)	1	
E-5	DSC-CB000700		Screw	침나사	4	
E-5-1	DSC-CB000600		Screw	고정나사	1	
E-6	DBS-DA000500		Lower Shaft Rear Bushing	하축 후 붓싱	1	
E-7	PBR-BA000300		Needle Bearing(KT81110)	니이들 베어링	2	
E-8	DWS-AA000800		Thrust Washer	트러스트 와셔	1	
E-9	DCL-AA000400		Lower Shaft Collar	하축 카라	1	
E-10	CLS-CC000100		Crank Rod	크랭크 로드	1	
E-11	DSC-BJ000400		Screw(1 1/64"n=40)	침나사	2	
E-12	DSC-FB000100		Crank Rod Hinge Screw	크랭크 로드 단나사	1	
E-13	DSN-AA000500		Nut(1/4"n=40)	너트	1	
E-14	CLS-KH000100		Oscillator Shaft	오실레이터 축	1	
E-15	DCL-AA000200		Oscillator Shaft Collar(L)	오실레이터 축 카라(좌)	1	
E-16	DGR-AA000200		Oscillator Shaft Gear	요동축 기어	1	
E-17	DWS-AA000700		Washer	오실 레이더 축 와셔	1	
E-18	PSR-AC000100		E-Ring	E-링(호칭경 9)	1	
E-19	DSC-CB000500		Screw(15/64"n=28)	고정나사	1	
E-20	DCL-AA000301		Oscillator Shaft Collar(R)	오실레이터 축 카라(우)	1	May.22.12
E-20-1	DSC-CB000400		Screw(1/4"n=40)	고정나사	2	
E-21	CHK-HQ000101		Shuttle Race Ring	셔틀 레이스 링	1	Jan.12.11
E-21-1	DPN-BB001100		Shuttle Race Ring Pin	셔틀 레이스 링 핀	2	
E-22	CHK-HC000100		Bobbin Case Ass'y	보빈 케이스(조)	1Set	
E-25	CHK-HB000100		Bobbin	보빈	1	
E-26	CHK-HA000100	HS	Shuttle(H)	셔틀(후물용)	1	
E-27	CHK-HA001600	GS	Shuttle(G)	셔틀(일반용)	1	
E-28	CHK-HP000100		Shuttle Driver	셔틀 드라이브	1	
E-29	PSC-AC000300		Screw(M4×P0.7)	침나사	1	
E-30	CHK-BD000100		Shuttle(L)	셔틀(大)	1	
E-31	CHK-CH000100		Shuttle Race Adjusting Shaft	셔틀 레이스 조절축	1	
E-32	DSC-BF000800		Screw(15/64"n=28)	침나사	1	
E-33	DSC-BF000900		Screw(11/64"n=40)	침나사	1	
E-35	DWS-AA000300		Shuttle Bearing Washer	셔틀 베어링 와셔	1	
E-36	CHK-BJ000100	HS	Plate for Separating Upper Thread(H)	윗실 분리 판(후물용)	1	
E-37	CHK-BJ000300	GS	Plate for Separating Upper Thread(G)	윗실 분리 판(일반용)	1	
E-38	DSC-BF001300		Screw(3/32"n=56)	침나사	2	
E-39	AHK-PS000100		Inner Hook Presser Shaft Ass'y	속가마 누름축(조)	2	
E-40	CHK-BJ000200		Inner Hook Presser Plate	속가마 누름대	2	
E-41	CHK-KZ000100		Inner Hook Presser Shaft	속가마 누름축	2	
E-42	PSR-AC000400		E-Ring	E-링(호칭경 3)	2	
E-43	DSP-AA000600		Inner Hook Spring	속가마 압력 스프링	2	
E-44	AMB-PS000600		Hook Cover Ass'y	훅 커버(조)	1Set	
E-45	CMB-BB000900		Hook Cover Hinge	훅 커버 힌지	1	
E-46	CMB-LA001400		Hook Cover	훅 커버	1	
E-47	DSP-AD000100		Hook Cover Plate Spring A	훅 커버 판 스프링 A	1	
E-48	DSP-AD000200		Hook Cover Plate Spring B	훅 커버 판 스프링 B	1	
E-49	DSC-BJ000200		Screw(1 1/64"n=40)	침나사	1	
E-50	PPN-AF000300		Spring Pin($\varnothing 2 \times l_{9.8}$)	스프링 핀	1	
E-51	PBR-BA000200		Needle Roll Bearing	니이들 베어링	2	

 Note: HS → Heavy Material (후물용)
GS → General Material (일반용)

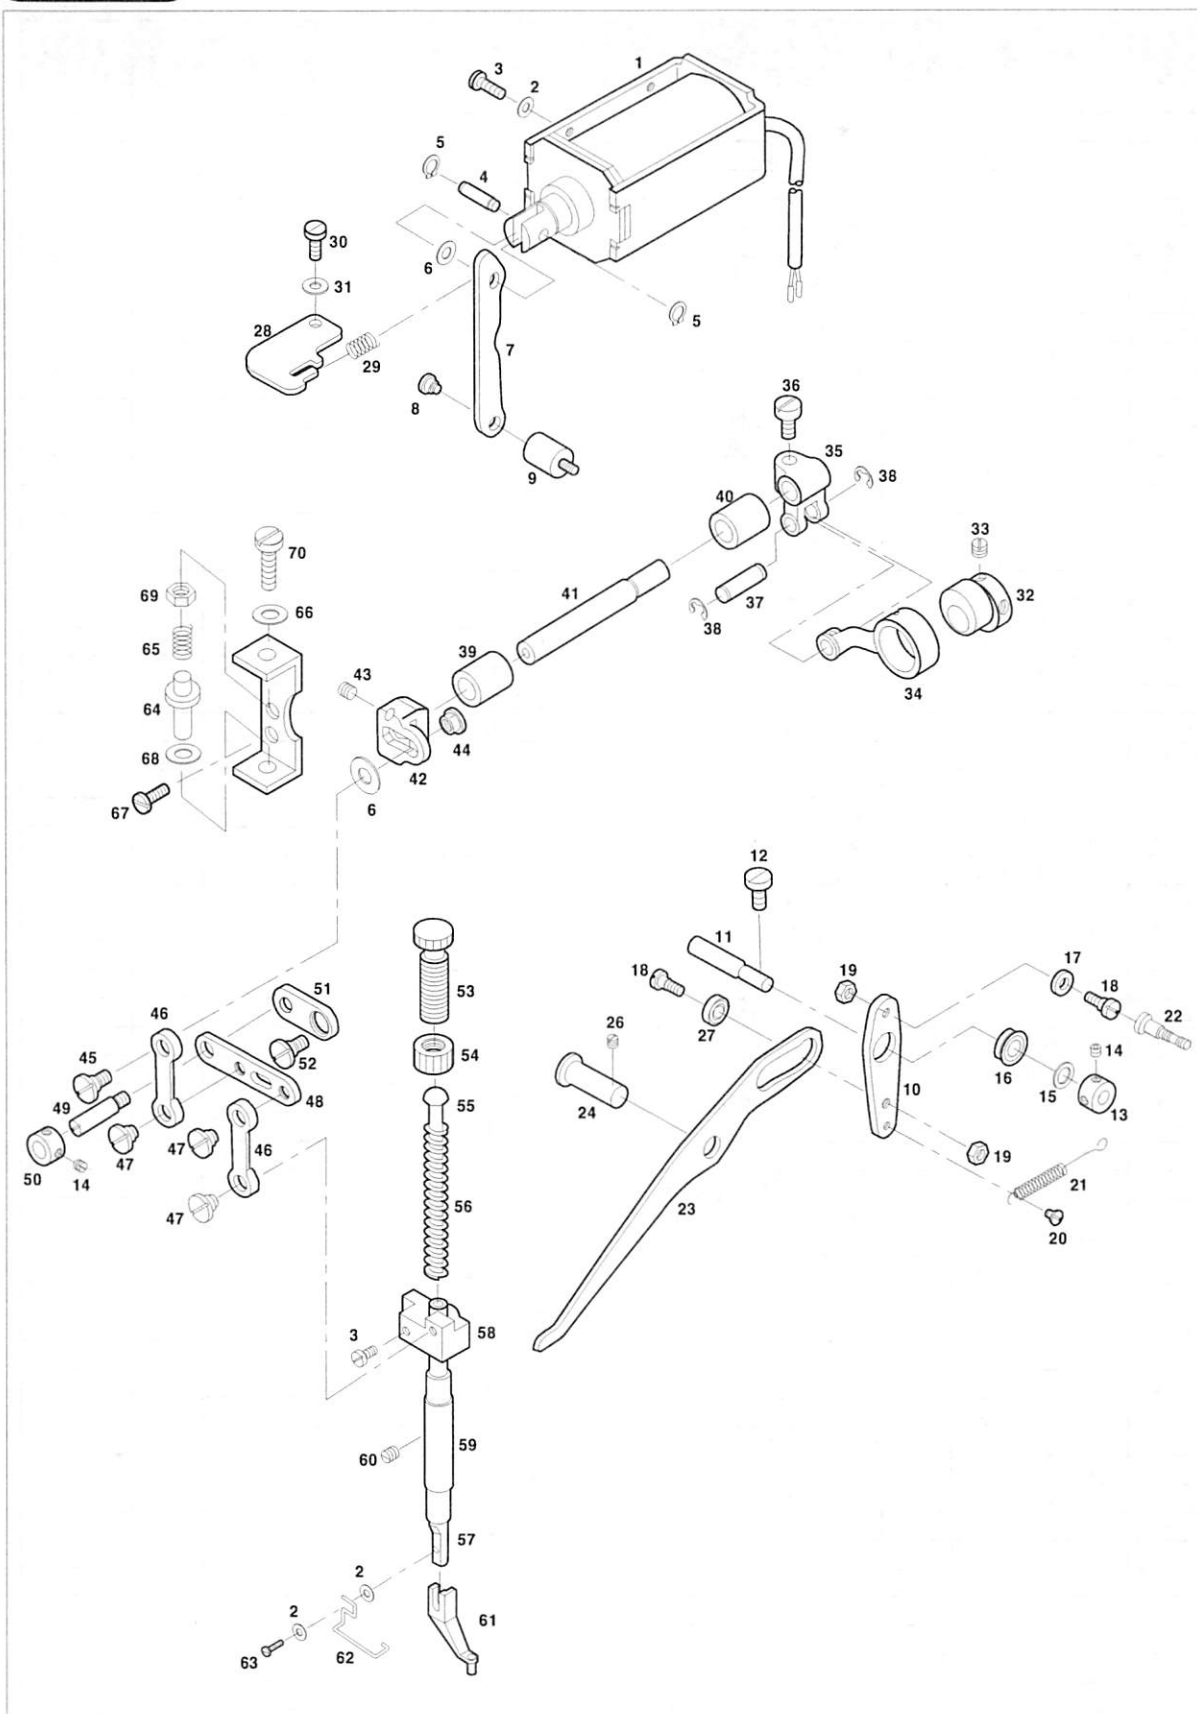


Ref. No.	Parts No.	Note	Name of Parts	품 명	Q'ty	Applied Period
F-1	DSD-AA000600		Presser Solenoid Ass'y	노루발 솔레노이드(조)	1Set	
F-2	DWS-AA001100		Washer	와셔	4	
F-3	DSC-BF001000		Screw(11/64"n=40)	침나사	4	
F-4	05S004S-306H		Solenoid Pin	솔레노이드 핀	1	
F-5	PSR-AG000100		Grip Ring	그립 링(호칭경5)	2	
F-6	DWS-AA002200		Washer	와셔	1	
F-7	CPM-CA000300		Lifting Link C	올림 링크 C	1	
F-8	DSC-FA002000		Lifting Link C Hinge Screw	올림 링크 C 지지 단나사	1	
F-9	DSC-HB000500		Lifting Link C Hinge Stud	올림 링크 C 지지 스터드	1	
F-10	CPM-CB000100		Lifting Link B	올림 링크 B	1	
F-11	CPM-KF000100		Lifting Link B Shaft	올림 링크 B 지지축	1	
F-12	DSC-BF000300		Screw(3/16"n=28)	침나사	1	
F-13	DCL-AA000800		Lifting Link B Shaft Collar	올림 링크 B 지지 축 카라	1	
F-14	DSC-CB000700		Screw(11/64"n=40)	고정나사	4	
F-15	DWS-AA001200		Washer	와셔	1	
F-16	PBR-AA001000		Radial Bearing(F687ZZ)	베어링	1	
F-17	CPM-CL000100		Lifting Link B Roller	올림 링크 B 로울러	1	
F-18	DSC-FA002100		Lifting Link B Hinge Screw	올림 링크 B 로울러 단나사	2	
F-19	DSN-AA000600		Nut(3/16"n=32)	너트	2	
F-20	DSC-FA002200		Lifting Link B Spring Hinge Screw	올림 링크 B 스프링 단나사	1	
F-21	DSP-AB000400		Lifting Link B Spring	올림 링크 B 인장 스프링	1	
F-22	DSC-HD000300		Spring Hook	스프링 걸이	1	
F-23	CPM-CM000200		Lifting Link A	올림 링크 A	1	
F-24	DPN-AD000900		Lifting Link A Hinge Shaft	올림 링크 A 힌지축	1	
F-26	DSC-CB000700		Screw(3/16"n=28)	고정나사	1	
F-27	PBR-AA000900		Bearing(686)	베어링	1	
F-28	CPM-BJ000100		Presser Solenoid Stopper	노루발 솔레노이드 스톱퍼	1	
F-29	DSP-AA001000		Stopper Spring	스톱퍼 스프링	1	
F-30	DSC-BA000500		Screw(3/16"n=28)	침나사	1	
F-31	DWS-AA000600		Washer	와셔	1	
F-32	CPB-DC000101		Presser Cam	노루발 구동 캠	1	Sep.17.12
F-33	DSC-CB000400		Screw(1/4"n=40)	고정나사	2	
F-34	CPB-CC000101		Presser Cam Connection Rod	노루발 구동 캠 연결 못드	1	Jul.01.09
F-35	CPB-CB000100		Presser Fork Crank	노루발 포크 크랭크	1	
F-36	DSC-BF000700		Screw(15/64"n=28)	침나사	1	
F-37	DPN-AA000300		Presser Cam Connection Rod Pin	노루발 구동 캠 연결 못드 핀	1	
F-38	PSR-AC000200		E-Ring	E 링 (호칭경5)	2	
F-39	DBS-DA001000		Presser Shaft Bushing A	노루발 구동축 붓싱 A	1	
F-40	DBS-DA001100		Presser Shaft Bushing B	노루발 구동축 붓싱 B	1	
F-41	CPB-KF000100		Presser Shaft	노루발 구동축	1	
F-42	CPB-CB000202		Presser Adjusting Arm	노루발 조절 아암	1	Feb.03.12
	CPB-CB000201		Presser Adjusting Arm	노루발 조절 아암	1	Nov.17.11
F-43	DSC-CB000400		Screw(1/4"n=40)	고정나사	1	
F-44	DSN-CF000100		Presser Adjusting Arm Nut	노루발 조절 아암 너트	1	
F-45	DSC-FA000500		Presser Adjusting Arm Hinge Screw	노루발 조절 아암 단나사	1	
F-46	CPB-CA000200		Presser Link	노루발 링크	2	
F-47	DSC-FA000400		Presser Link Hinge Screw	노루발 링크 단나사	3	
F-48	CPB-CA000300		Presser Driving Link	노루발 운동 링크	1	
F-49	DSC-FF000100		Presser Driving Link Hinge Screw	노루발 운동 링크 고정 단나사	1	
F-50	DCL-AA000400		Presser Driving Link Collar	노루발 운동 링크 카라	1	
F-51	CPB-CA000100		Position Link	위치 링크	1	
F-52	DSC-FA000300		Position Link Hinge Screw	위치 링크 고정 단나사	1	
F-53	DSC-HA000100		Presser Adjusting Screw	압력 조절 나사	1	
F-54	DSN-CC000100		Nut For Presser Adjusting Screw	압력 조절 나사 침너트	1	
F-55	CPB-KC000100		Presser Adjusting Bar	압력 조절 봉	1	
F-56	DSP-AA000200		Presser Adjusting Spring	압력 조절 스프링	1	
F-57	CPB-KB000100		Presser Bar	누름대	1	




Presser Foot Mechanism

 노루발 관계

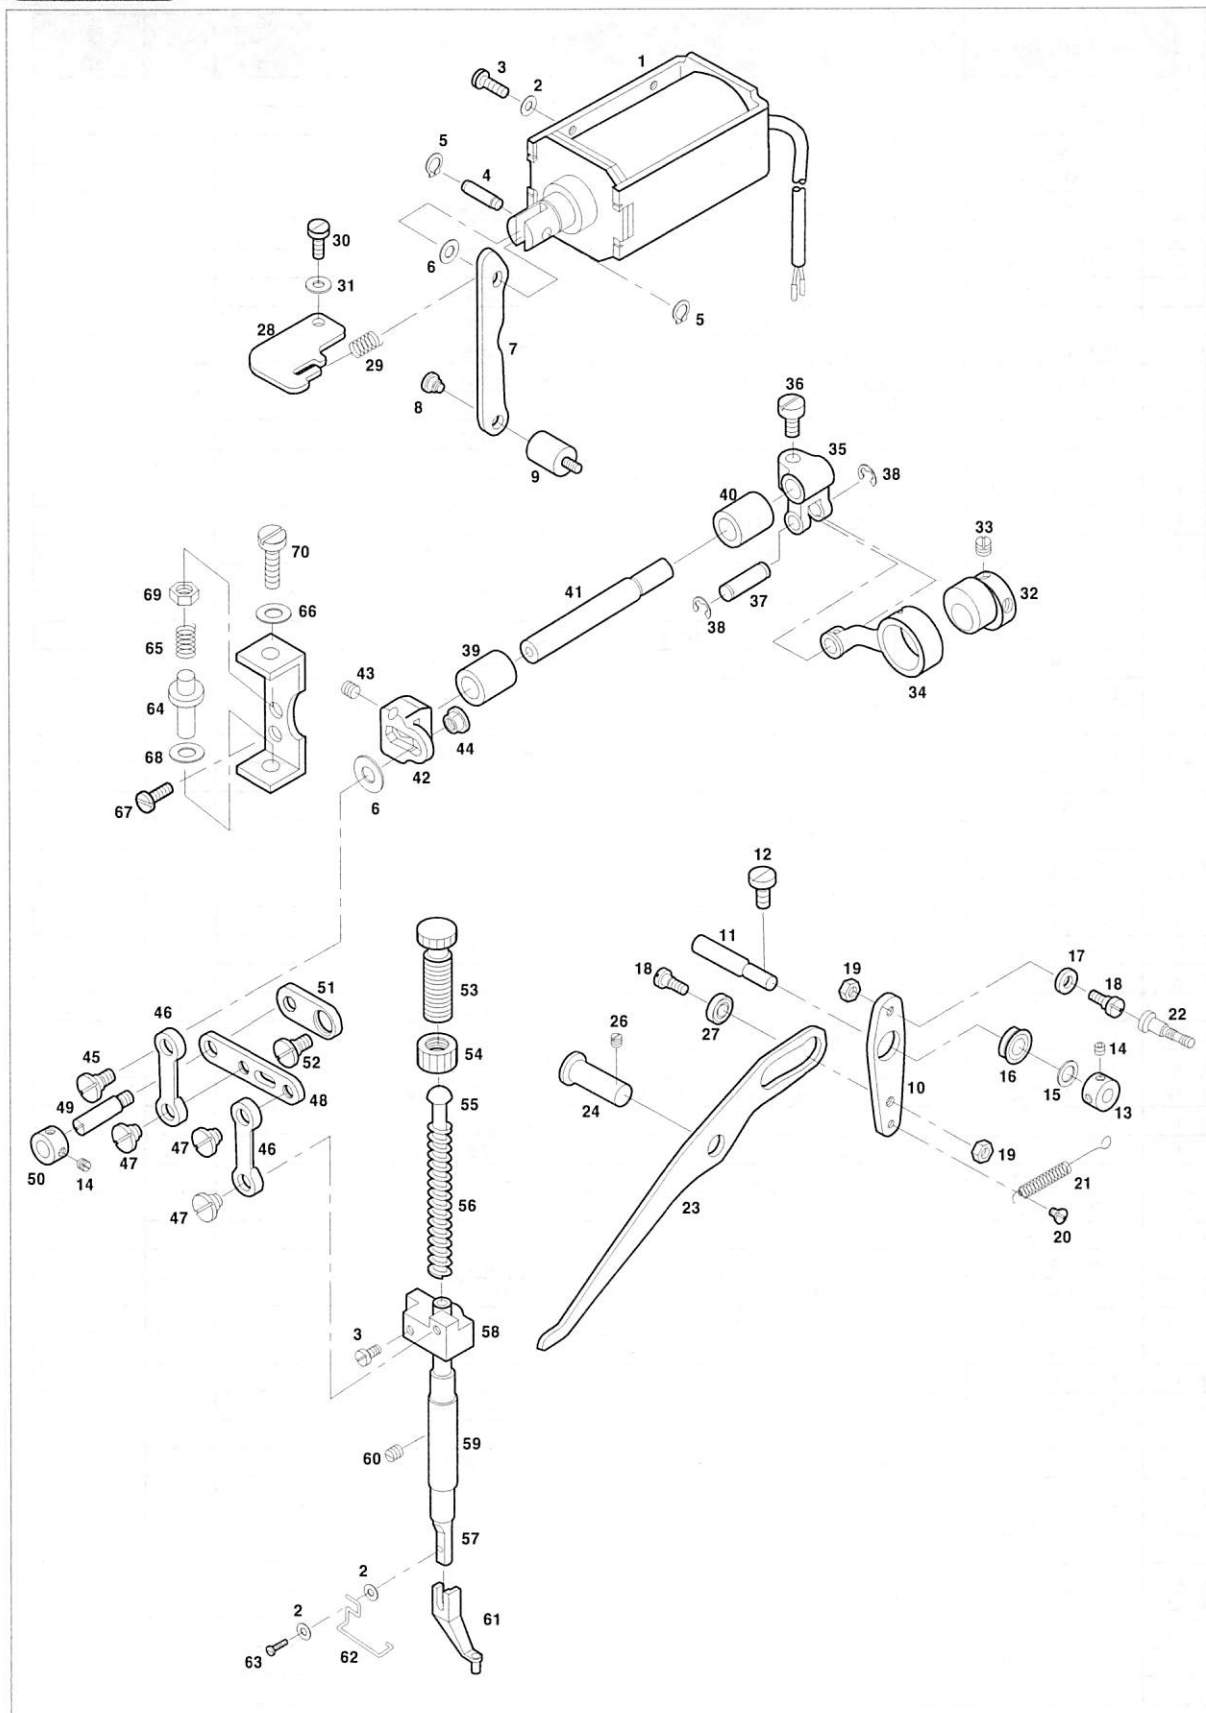

[illegible]

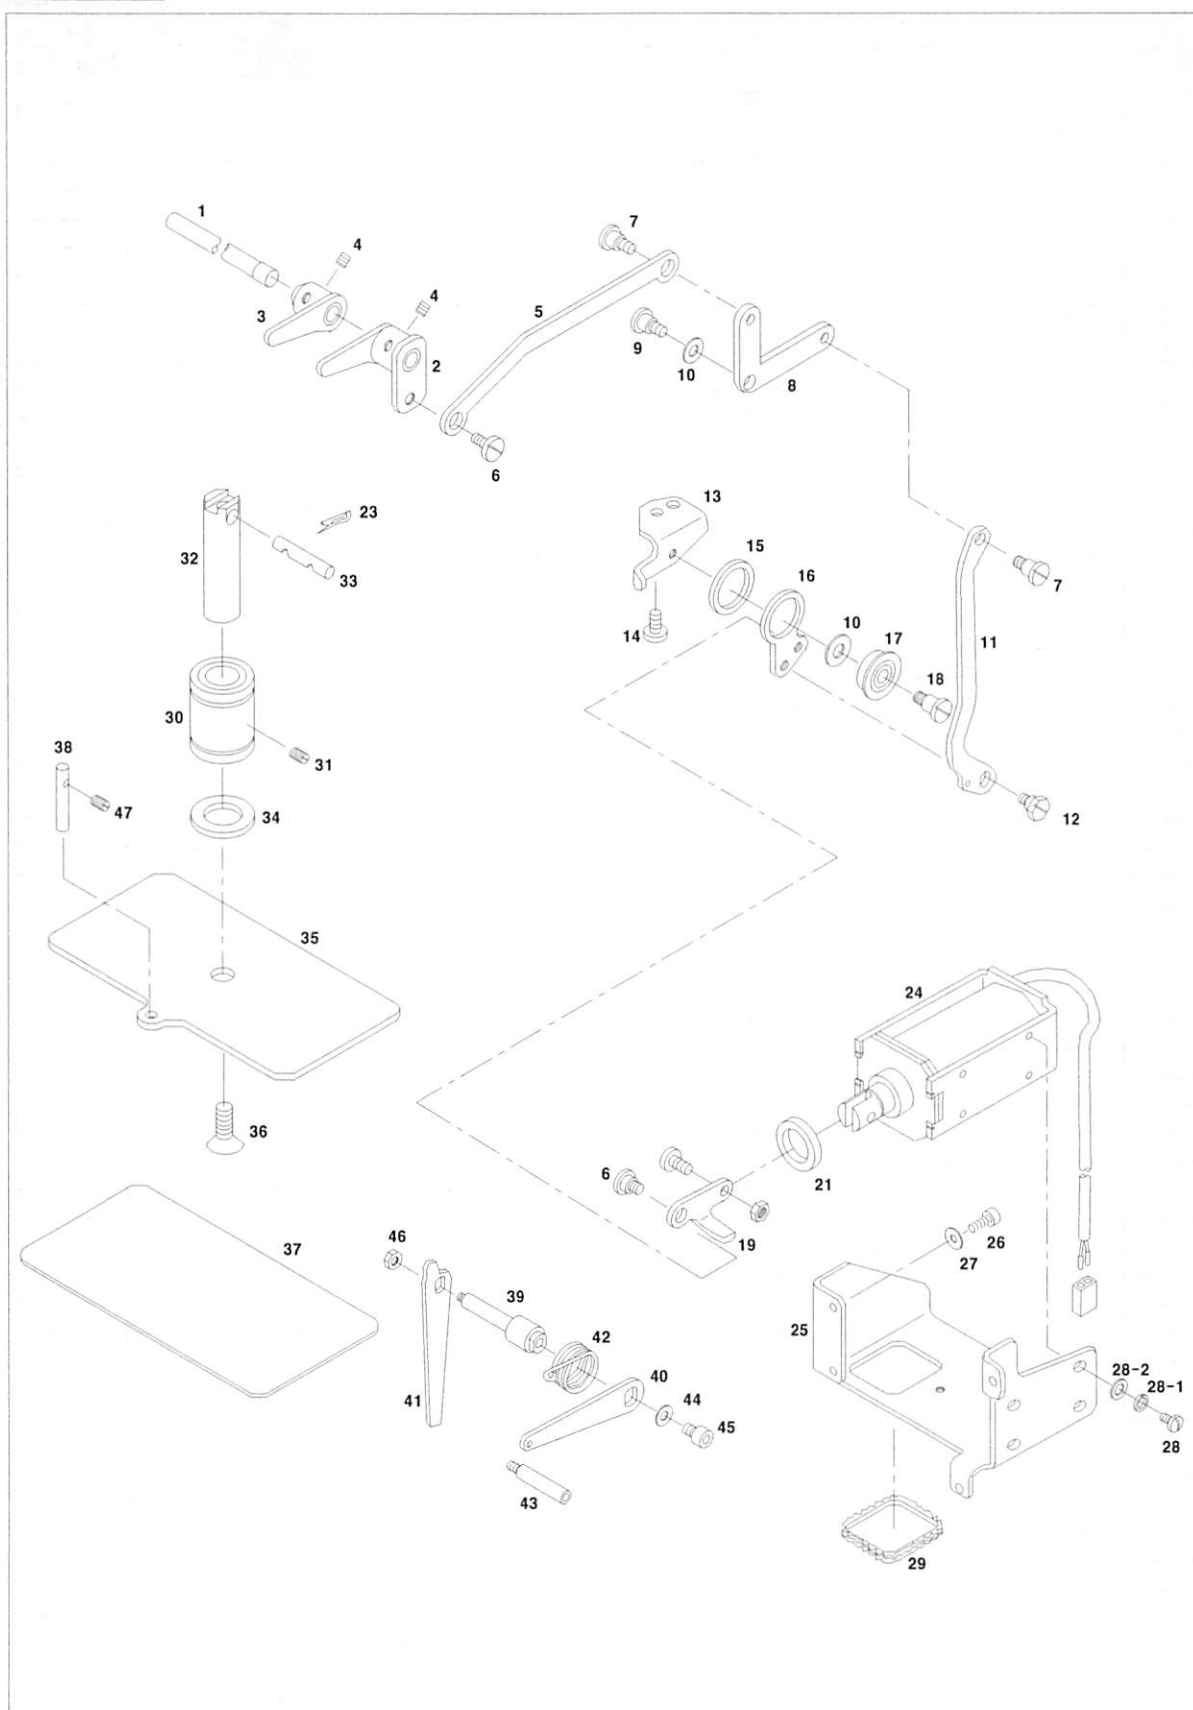 


[illegible]



Thread Release & Thread Tension Mechanism

 
실넷추기 및 실 장력 조절 관계

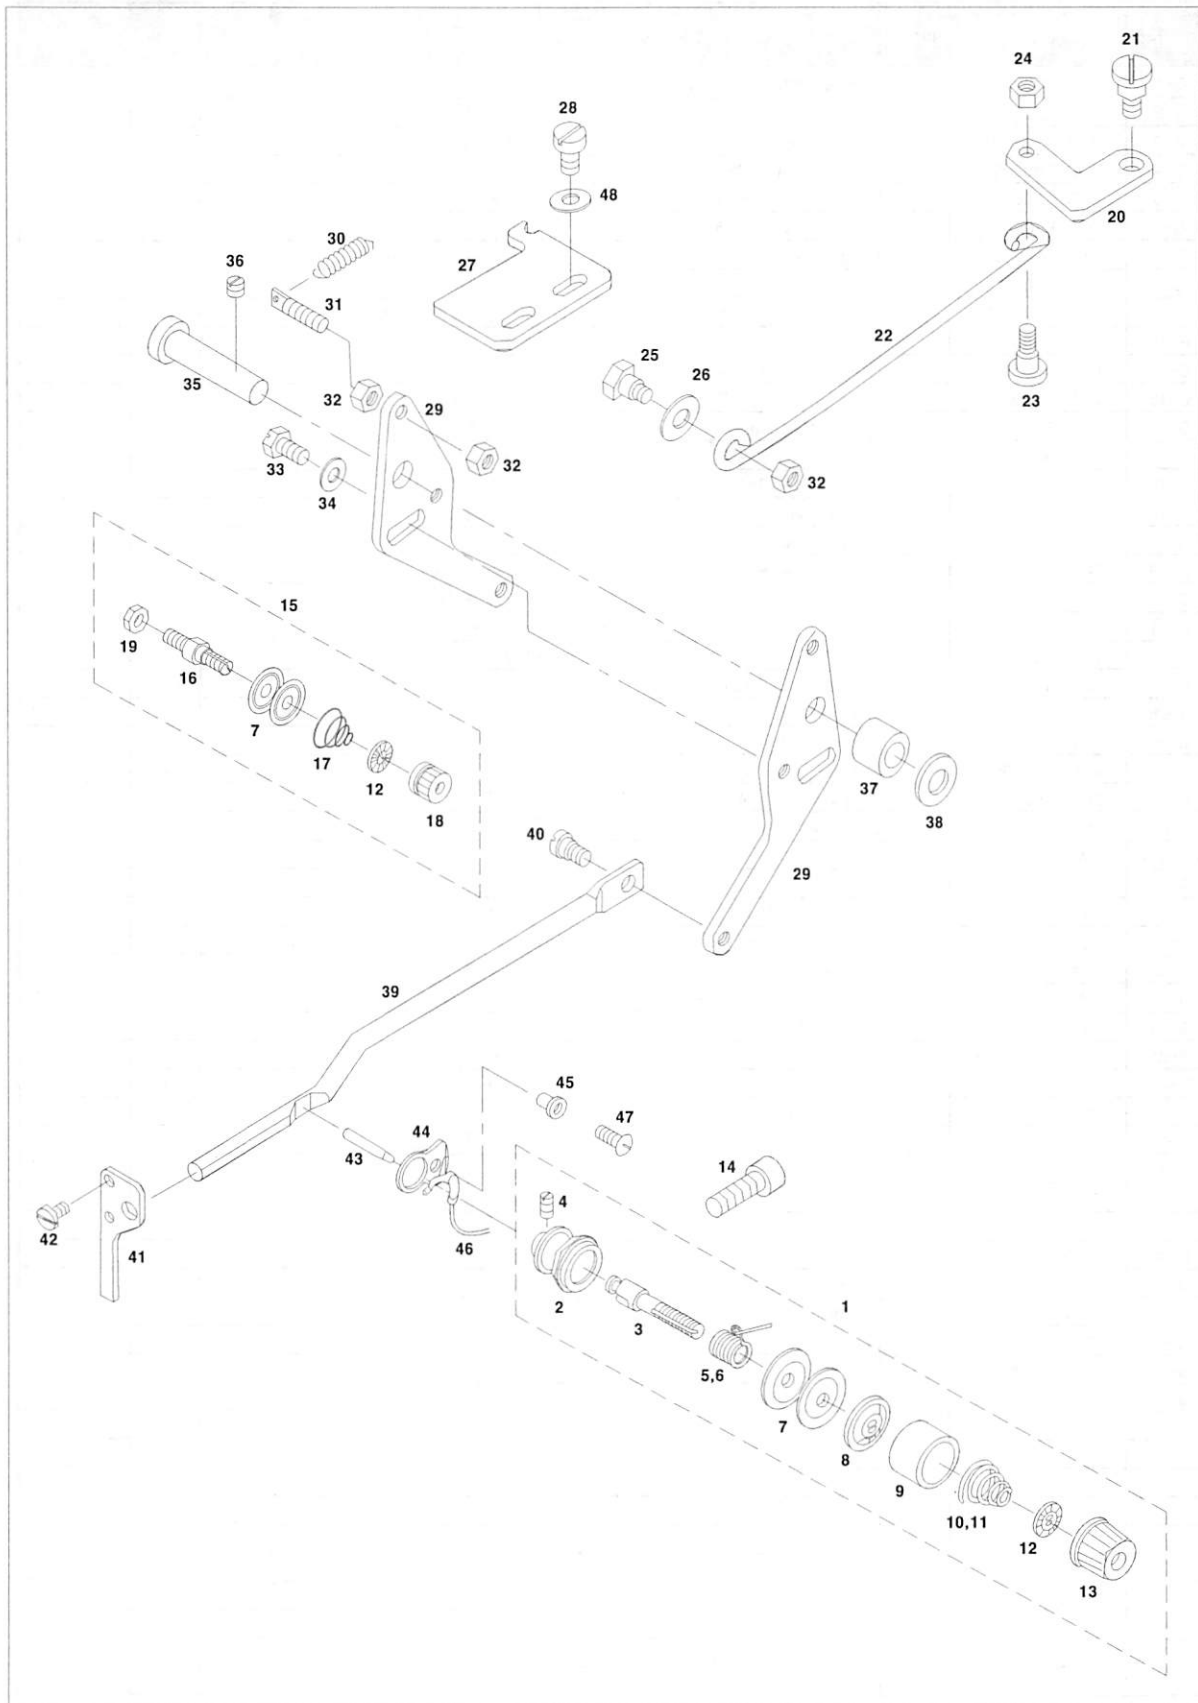



Wiper Mechanism

 와이퍼 관계

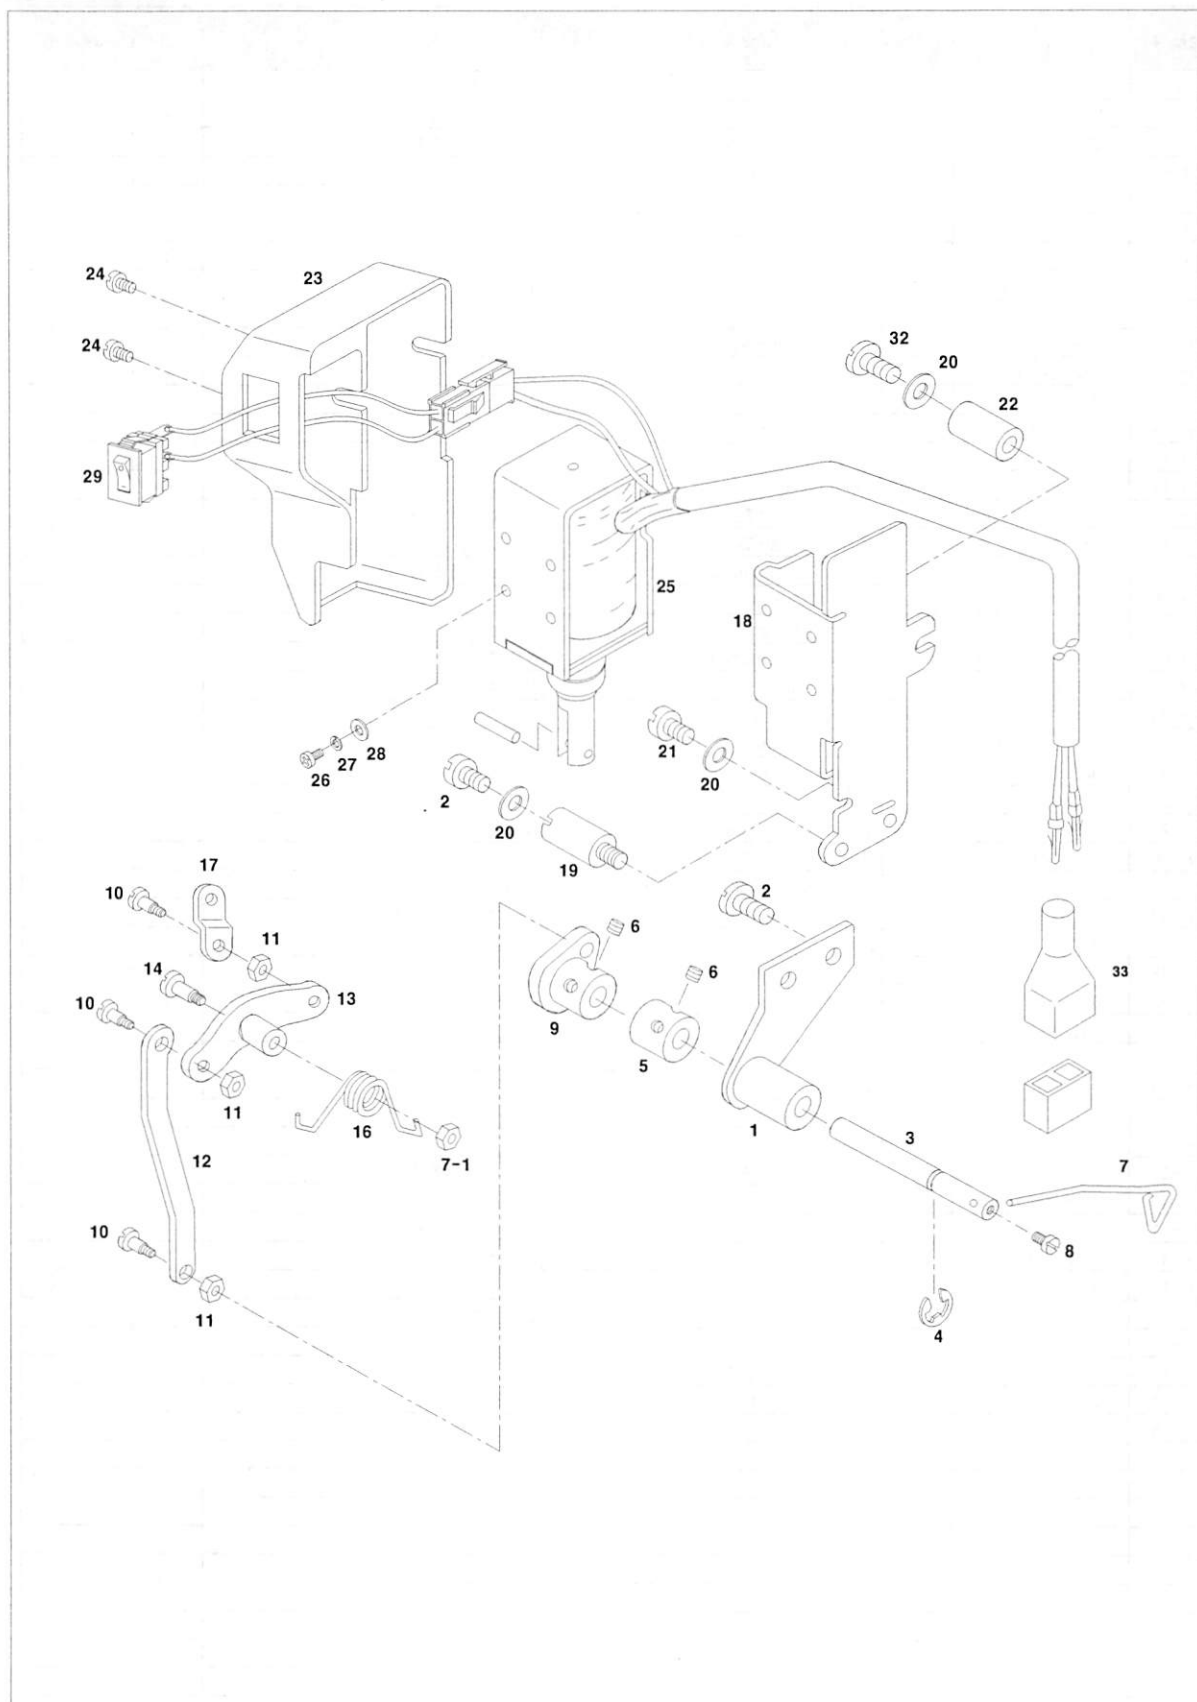


[illegible]



Thread Trimming Mechanism

 사절 관계

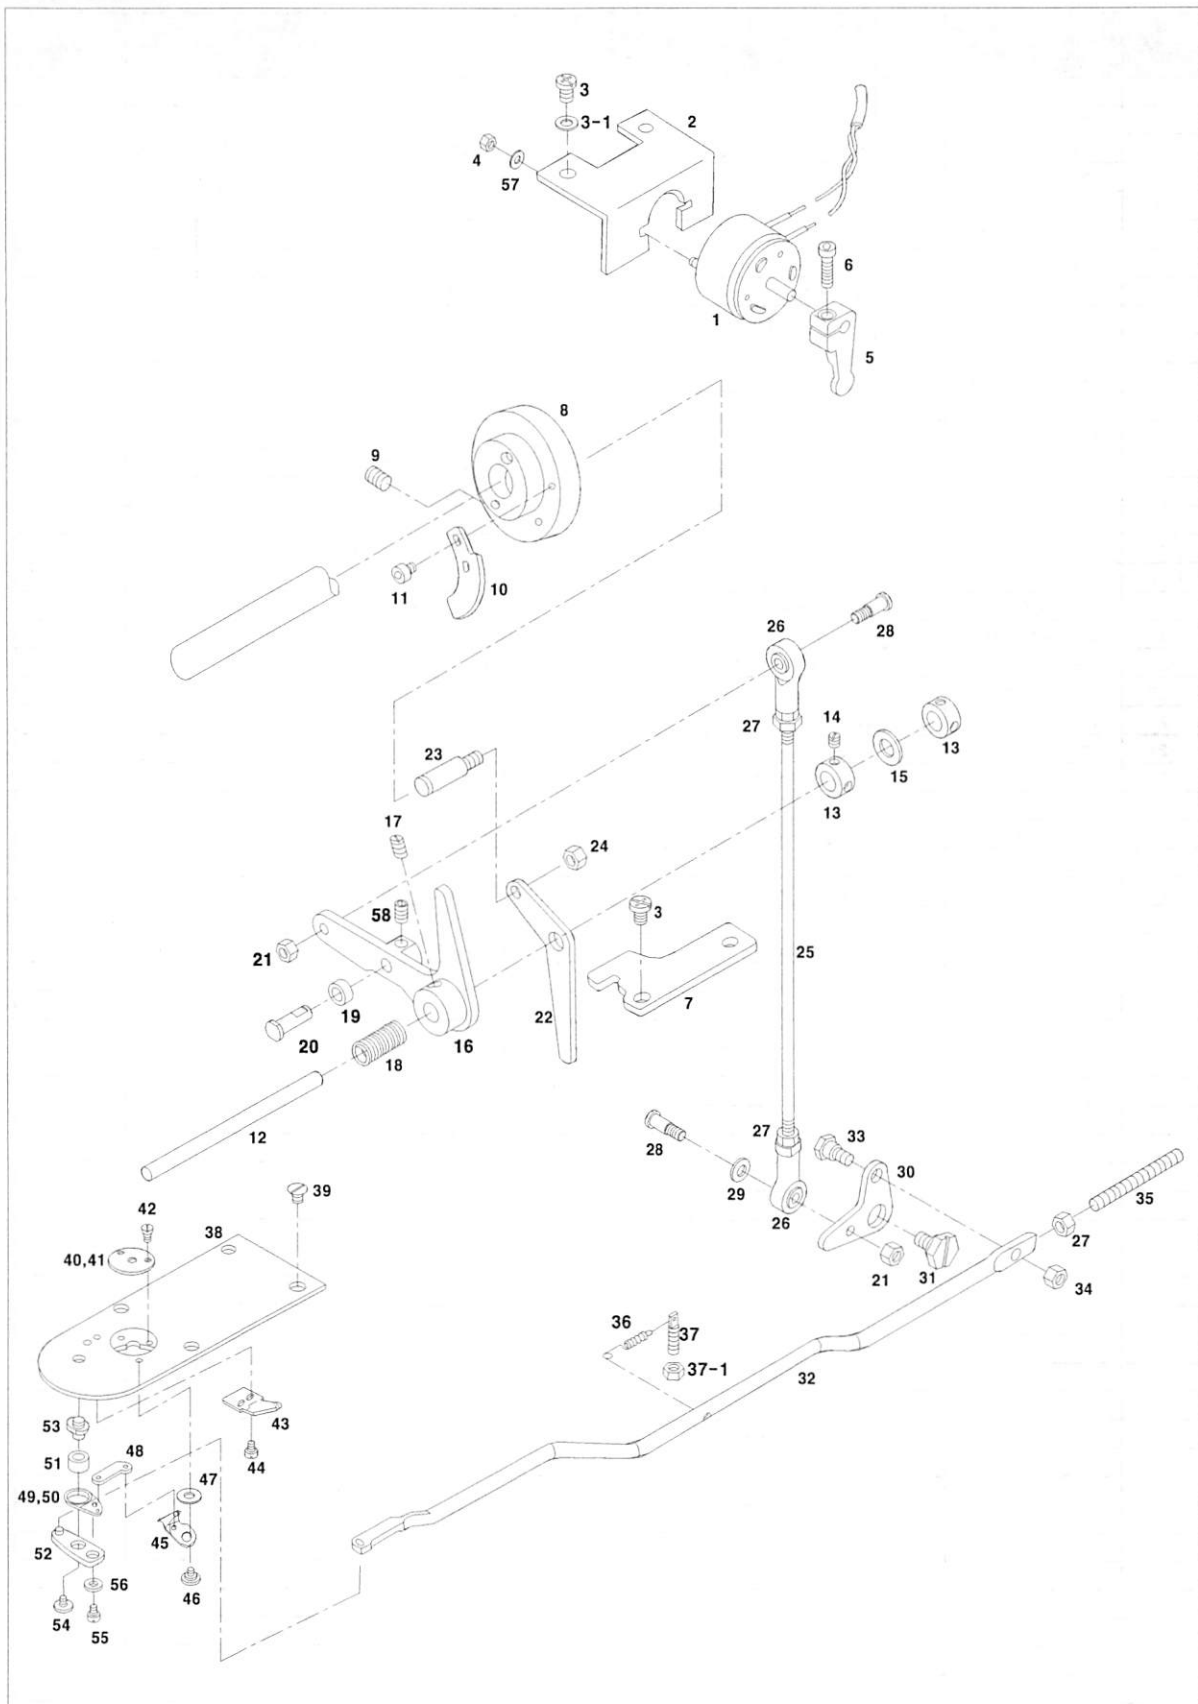


Ref. No.	Parts No.	Note	Name of Parts	품 명	Q'ty	Applied Period
J-1	DSD-AB000100		Thread Trimming Solenoid Ass'y	사절 솔레노이드(조)	1Set	
J-2	CTT-BB000101		Thread Trimming Solenoid Bracket	사절 솔레노이드 브라켓	1	Nov.23.11
J-3	DSC-BA000500		Screw(3/16"n=28)	침나사	4	
J-3-1	DWS-AA000600		Stopper Washer	스토퍼 침와셔	4	
J-4	DSN-AA000400		Nut(3/16"n=28)	너트	2	
J-5	CTT-CM000101		Rotating Link For 1	사절 솔레노이드 회전 링크	1	Mar.08.12
J-6	PSC-AC001400		Screw(M4×P0.7)	침나사	1	
J-7	CTT-BJ000101		Thread Trimming Driving Link Stopper	사절 구동 링크 스토퍼	1	
J-8	CTT-DG000100		Thread Trimming Cam	사절 캠	1	
J-9	DSC-CB000400		Screw(1/4"n=40)	고정나사	2	
J-10	CTT-BJ000300		Thread Release Notch	실 늦추기 노치	1	
J-11	PSC-AC001500		Screw(M4×P0.7)	침나사	2	
J-12	CTT-KC000100		Thread Trimming Shaft	사절 축	1	
J-13	DCL-AA000400		Thread Trimming Shaft Collar	사절 축 카라	2	
J-14	DSC-CB000700		Screw(15/64"n=28)	고정나사	2	
J-15	CTT-FB000100		Rubber Washer for 12	사절 축 고무 와셔	1	
J-16	CTT-CB000400		Thread Trimming Driving Link Ass'y	사절 구동 링크(조)	1Set	
J-17	DSC-CB000500		Screw(15/64"n=28)	고정나사	1	
J-18	DSP-AA000700		Spring for 12	사절 축 스프링	1	
J-19	CTT-CL000200		Thread Trimming Cam Roller	사절 캠 로울러	1	
J-20	DPN-AD000600		Thread Trimming Cam Roller Shaft	사절 캠 로울러 축	1	
J-21	DSN-AA000900		Nut(11/64"n=40)	너트	2	
J-22	CTT-CM000200		Thread Release Lever	실 늦추기 레버	1	
J-23	DSC-GA000100		Thread Release Lever Pin	실 늦추기 레버 핀	1	
J-24	DSN-AA000600		Nut(15/64"n=40)	너트	1	
J-25	CTT-CC000500		Thread Trimming Connecting Rod	사절 연결 로드	1	
J-26	PBR-GB000100		Rod End(R)	로드 엔드 "우"	2	
J-27	PSN-AA000200		Nut(M4×P0.8)	너트(도금)	3	
J-28	DSC-FD000100		Hinge Screw For 25	사절 연결 로드 단나사	2	
J-29	DWS-AA000600		Washer	와셔	1	
J-30	CTT-CB000100		Thread Trimming Connecting Link	사절 연결 링크	1	
J-31	DSC-FB000400		Hinge Screw For 30	사절 연결 링크 단나사	1	
J-32	CTT-CC000700		Thread Trimming Connecting Bar	사절 연결봉	1	
J-33	DSC-FB000300		Hinge Screw For 32	사절 연결봉 단나사	1	
J-34	DSN-AA000800		Nut(3/16"n=28)	너트	1	
J-35	DSC-AA000401		Link Stopper Screw	링크 스토퍼 나사	1	Jul.23.09
J-36	DSP-AB000300		Spring For 32	사절 연결봉 스프링	1	
J-37	DSC-HD000200		Spring Hooker	스프링 걸이	1	
J-37-1	DSN-AA000900		Spring Hooker Shaft Nut	스프링 걸이 축 나사 너트	1	
J-38	CTT-BJ000600		Needle Plate	침판	1	
J-39	DSC-BC000100		Screw(11/64"n=40)	침나사	4	
J-40	CTT-GL000101		Needle Plate Cover(H)	침판 커버(후물용)	1	Aug.17.12
J-41	CTT-GL000801		Needle Plate Cover(G)	침판 커버(일반용)	1	Aug.17.12
J-42	DSC-BB000300		Screw(M4×P0.5)	침나사	2	
J-43	CTT-NB000100		Fixed Mes	고정메스	1	
J-44	DSC-BF002000		Screw(9/64"n=40)	침나사	2	
J-45	ATT-PS000400		Moving Mes	동메스	1	Aug.16.12
J-46	DSC-FA001801		Hinge Screw For Moving Mes	동메스 단나사	1	
J-47	DWS-AA001700		Washer(t=0.4)	와셔(0.4)		
	DWS-AA001800		Washer(t=0.5)	와셔(0.5)		
	DWS-AA004000		Washer(t=0.6)	와셔(0.6)		
	DWS-AA004100		Washer(t=0.7)	와셔(0.7)		
J-48	CTT-CA000100		Moving Mes Link	동메스 링크	1	
J-49	ATT-PS000700		Thread Trimming Lever "B"(H)	사절레버 "B"(후물용)	1	
J-50	ATT-PS000800		Thread Trimming Lever "B"(G)	사절레버 "B"(일반용)	1	
J-51	CTT-CL000100		Thread Trimming Lever Ring	사절레버 링	1	

Note: HS → Heavy Material (후물용)
GS → General Material (일반용)



Thread Trimming Mechanism

 사절 관계

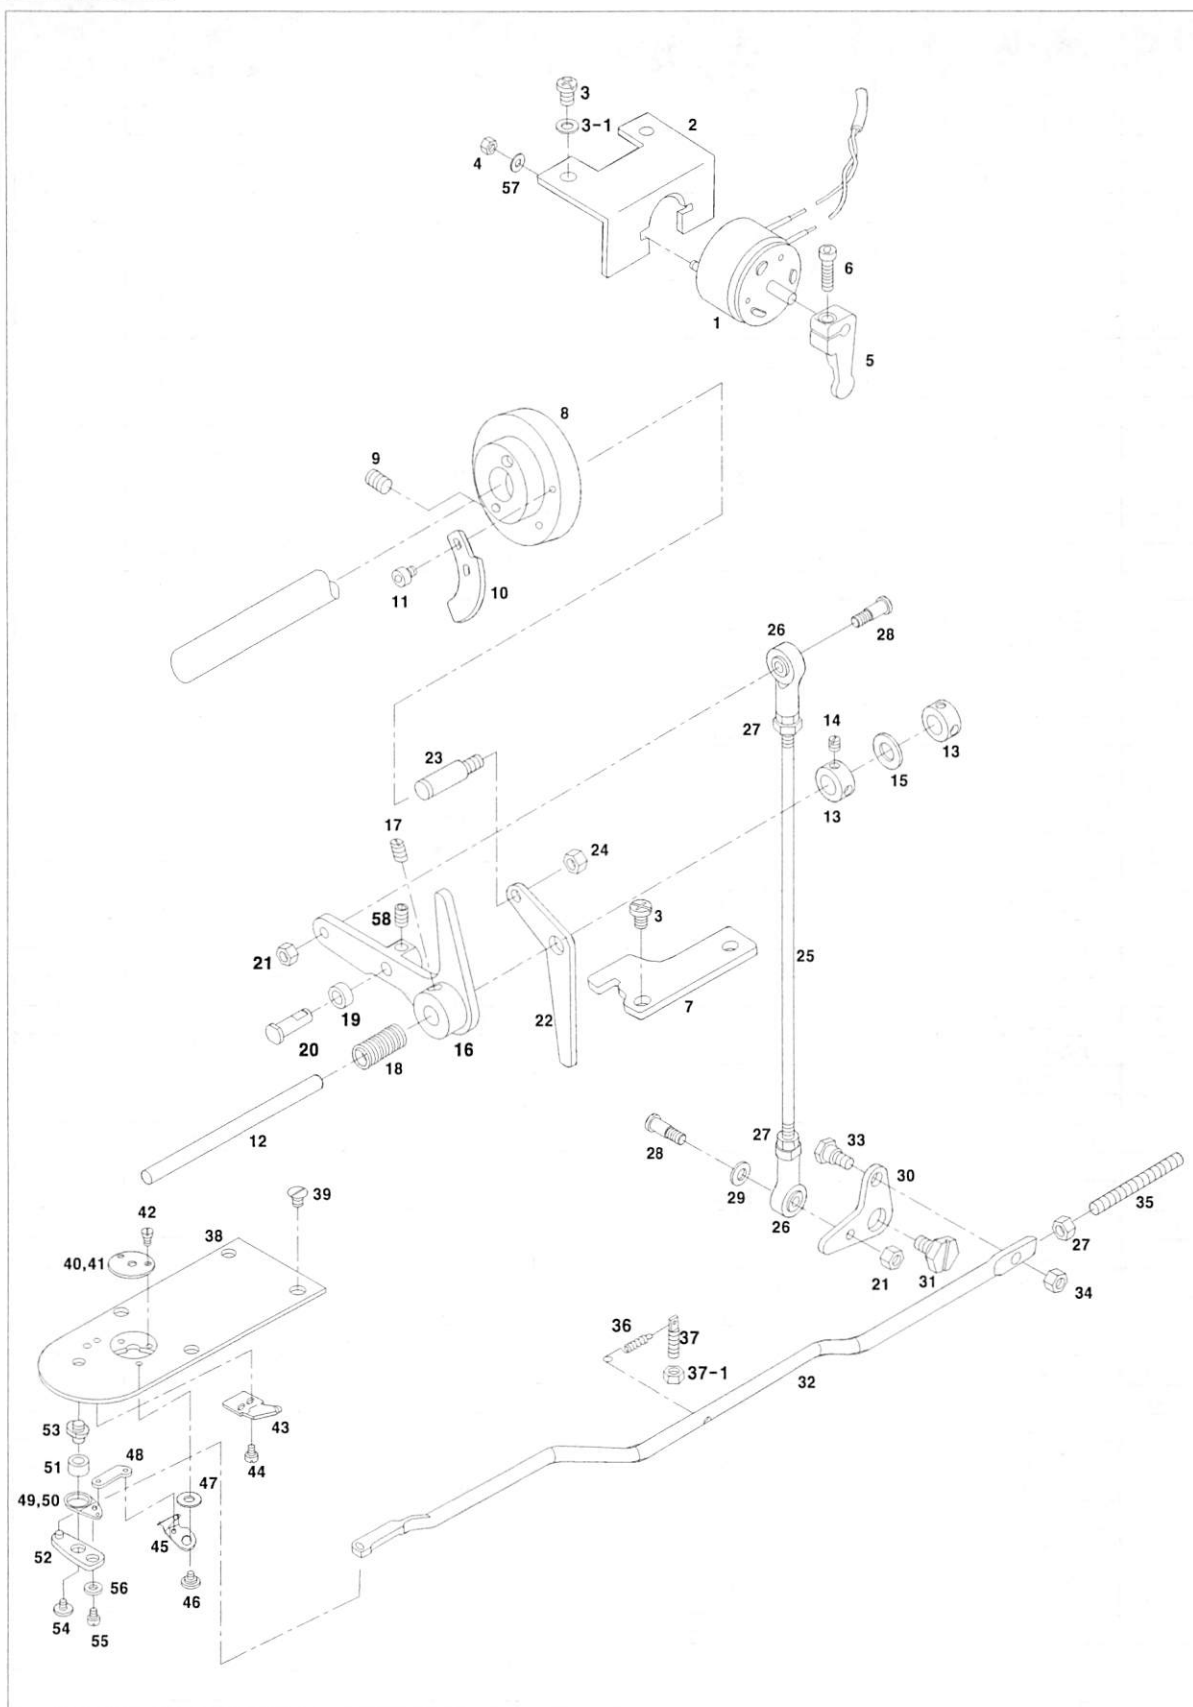

[illegible]

 
Note: HS → Heavy Material (후물용)

 
GS → General Material (일반용)

 
K

X-Y Mechanism (1) X-Moving Mechanism


X-Y 관계(1) X-이송 관계

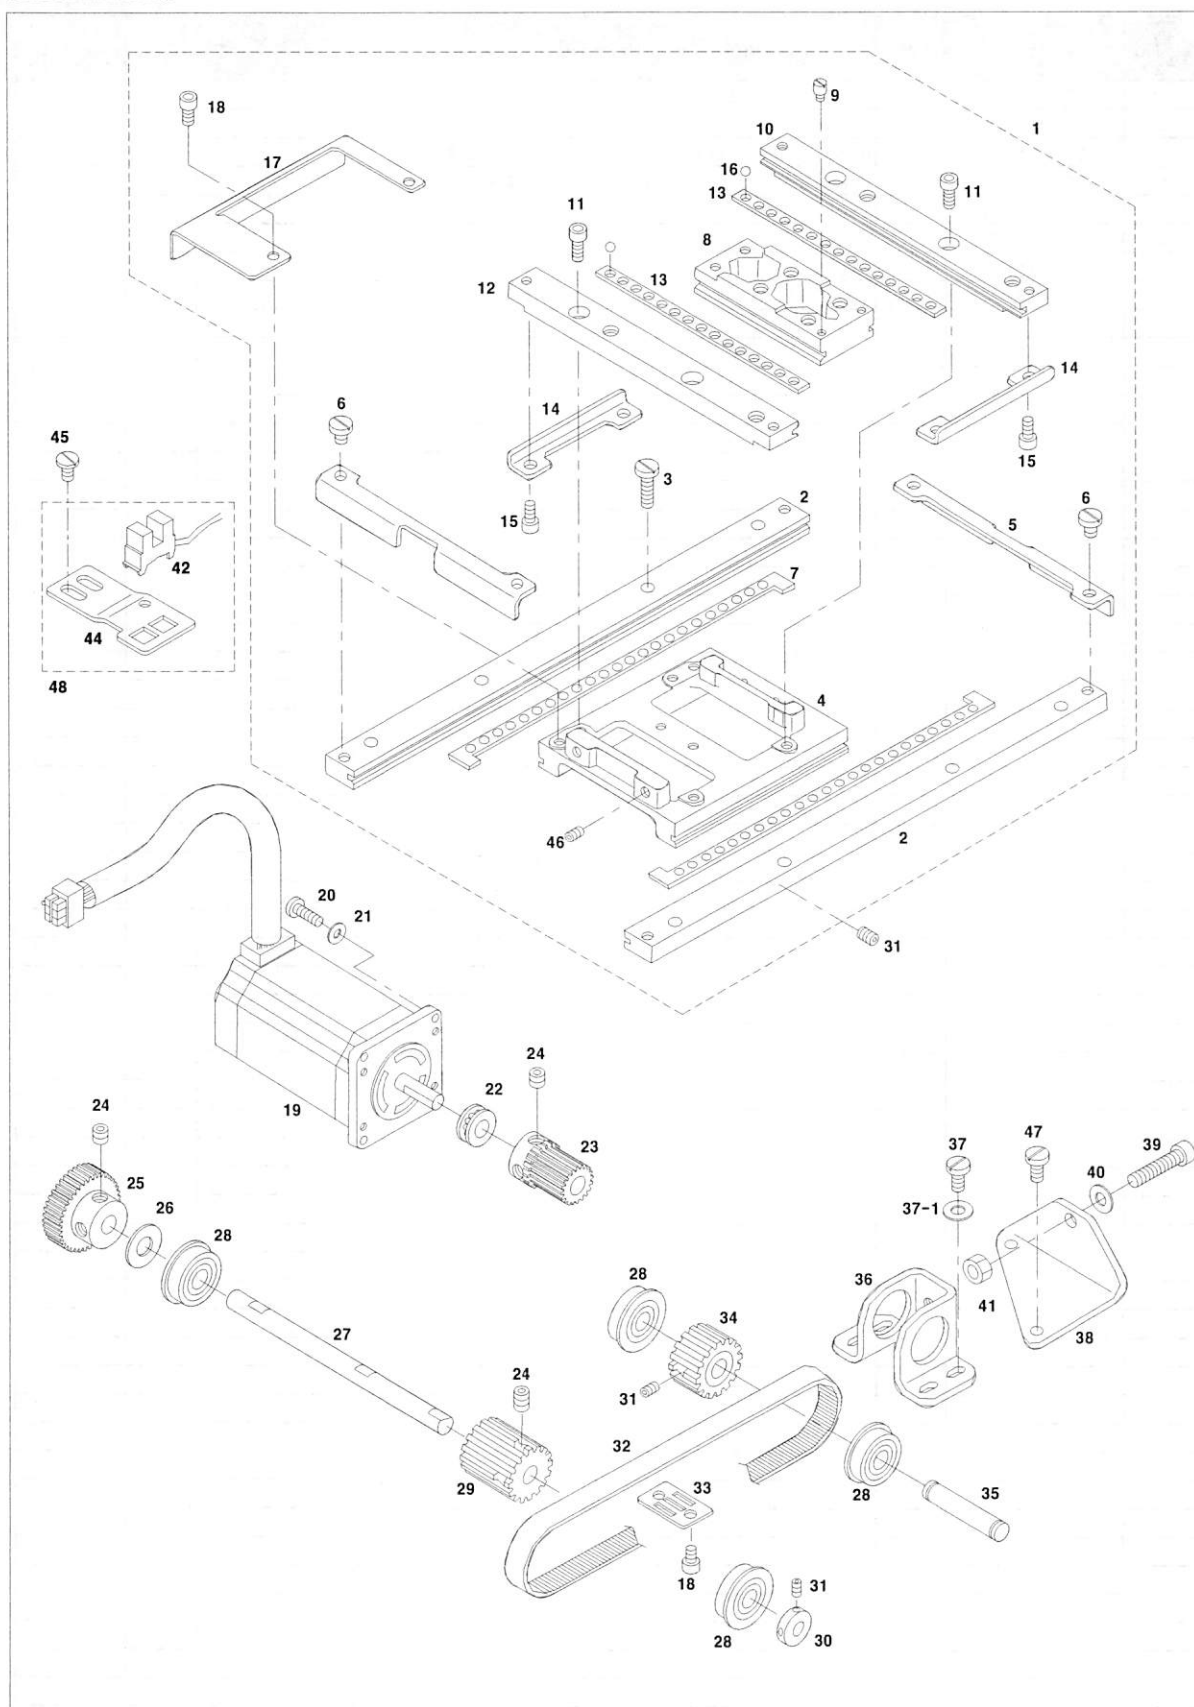

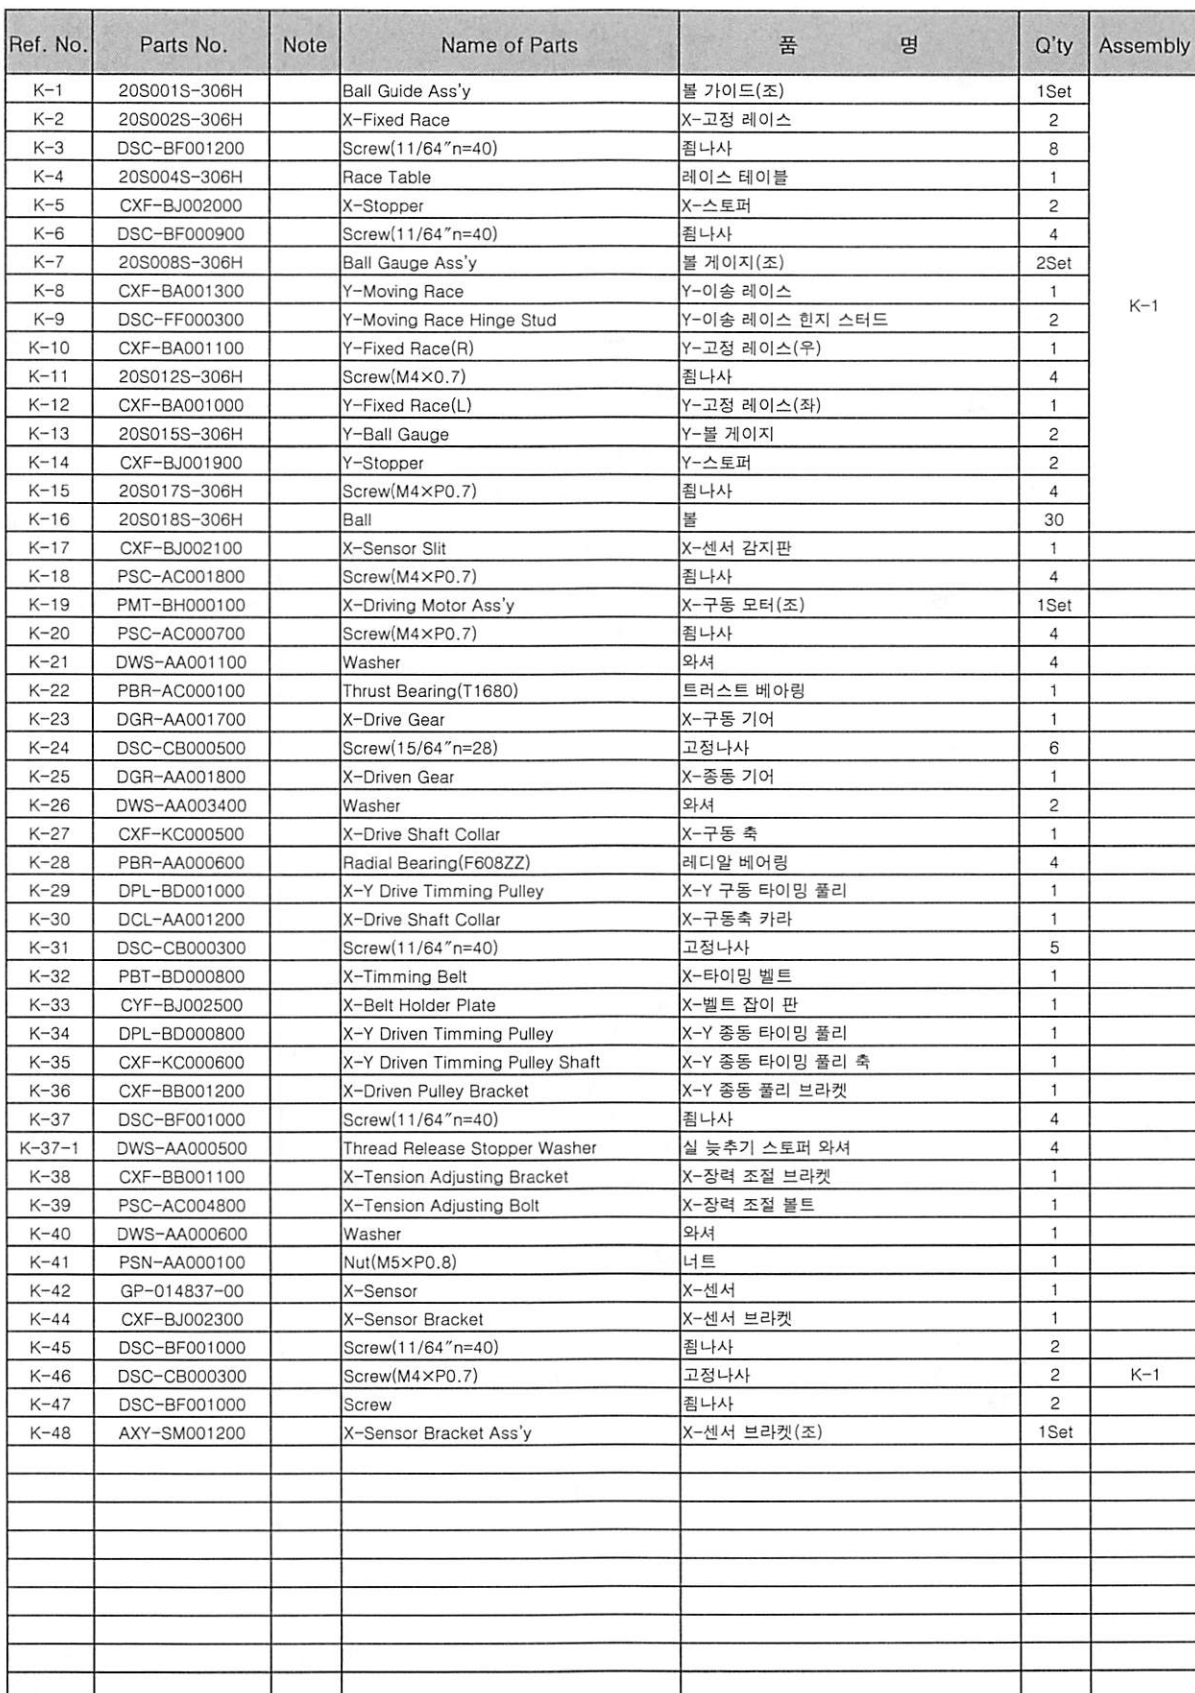




[illegible]

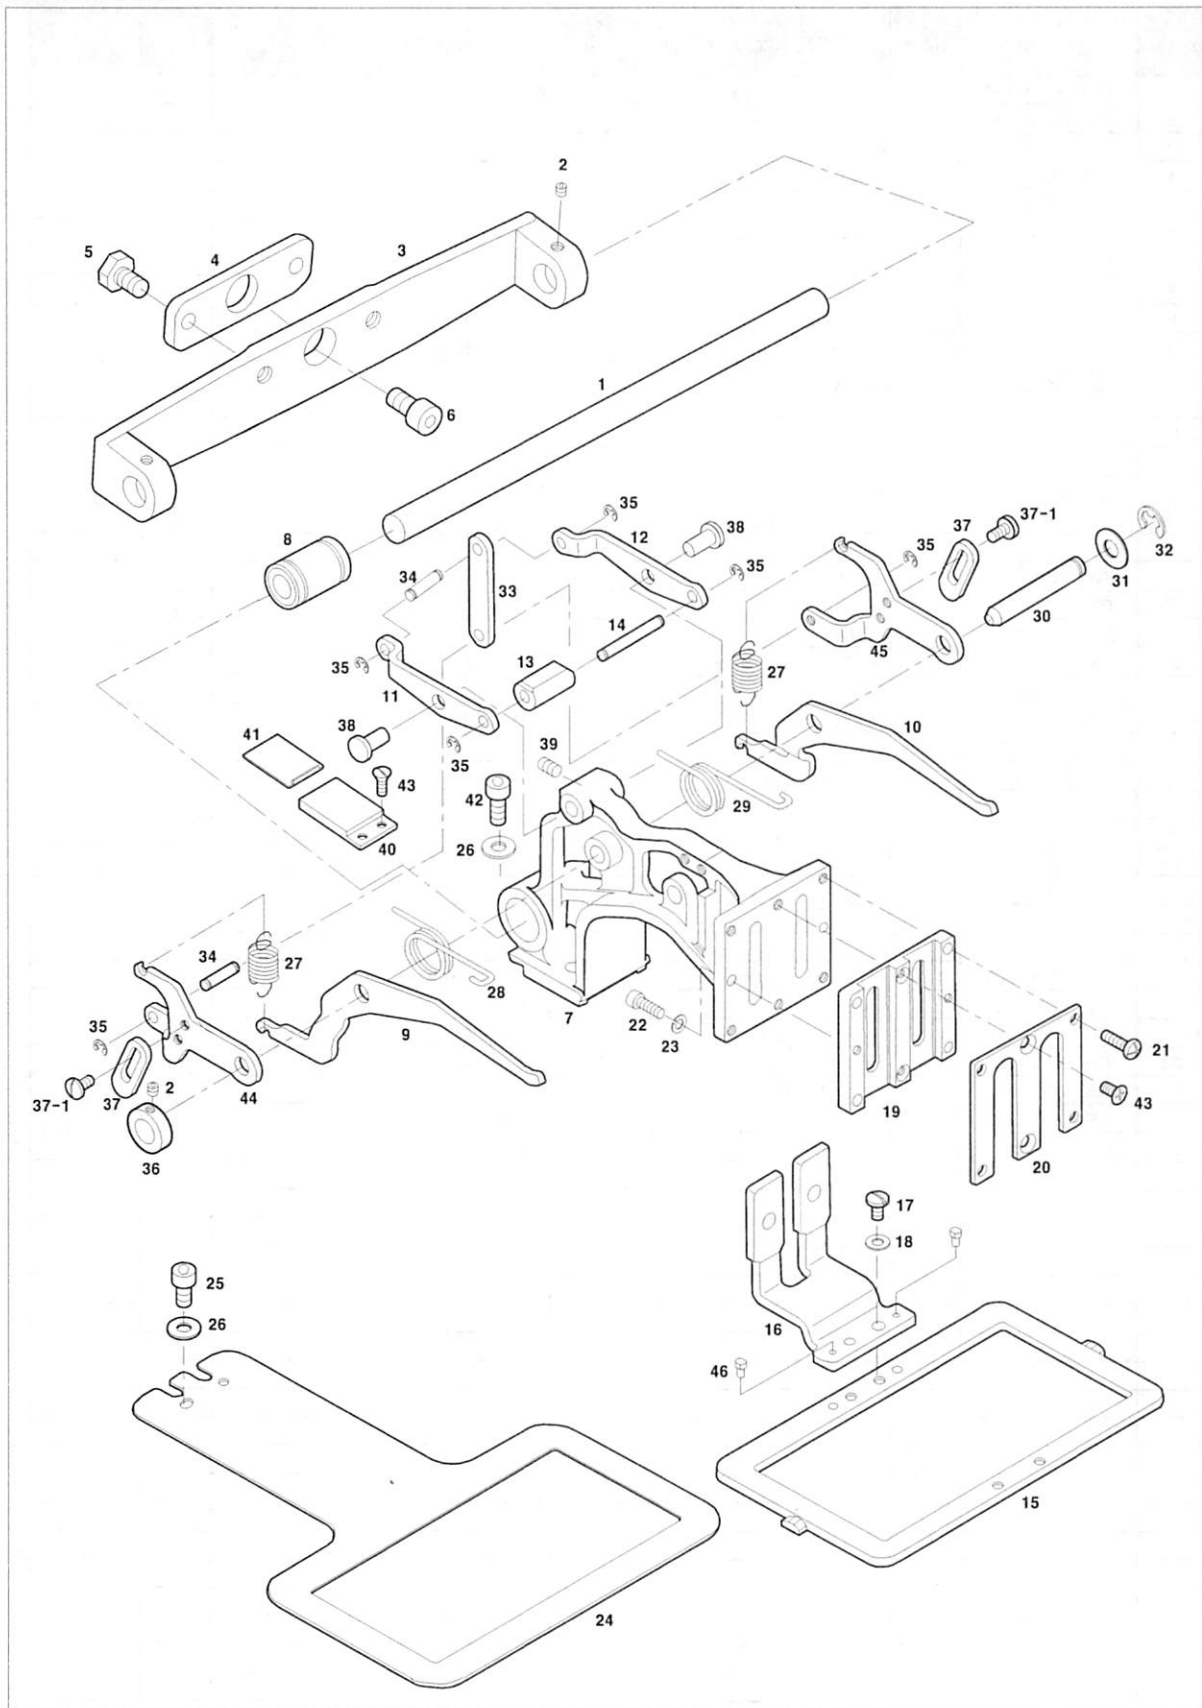 



[illegible]

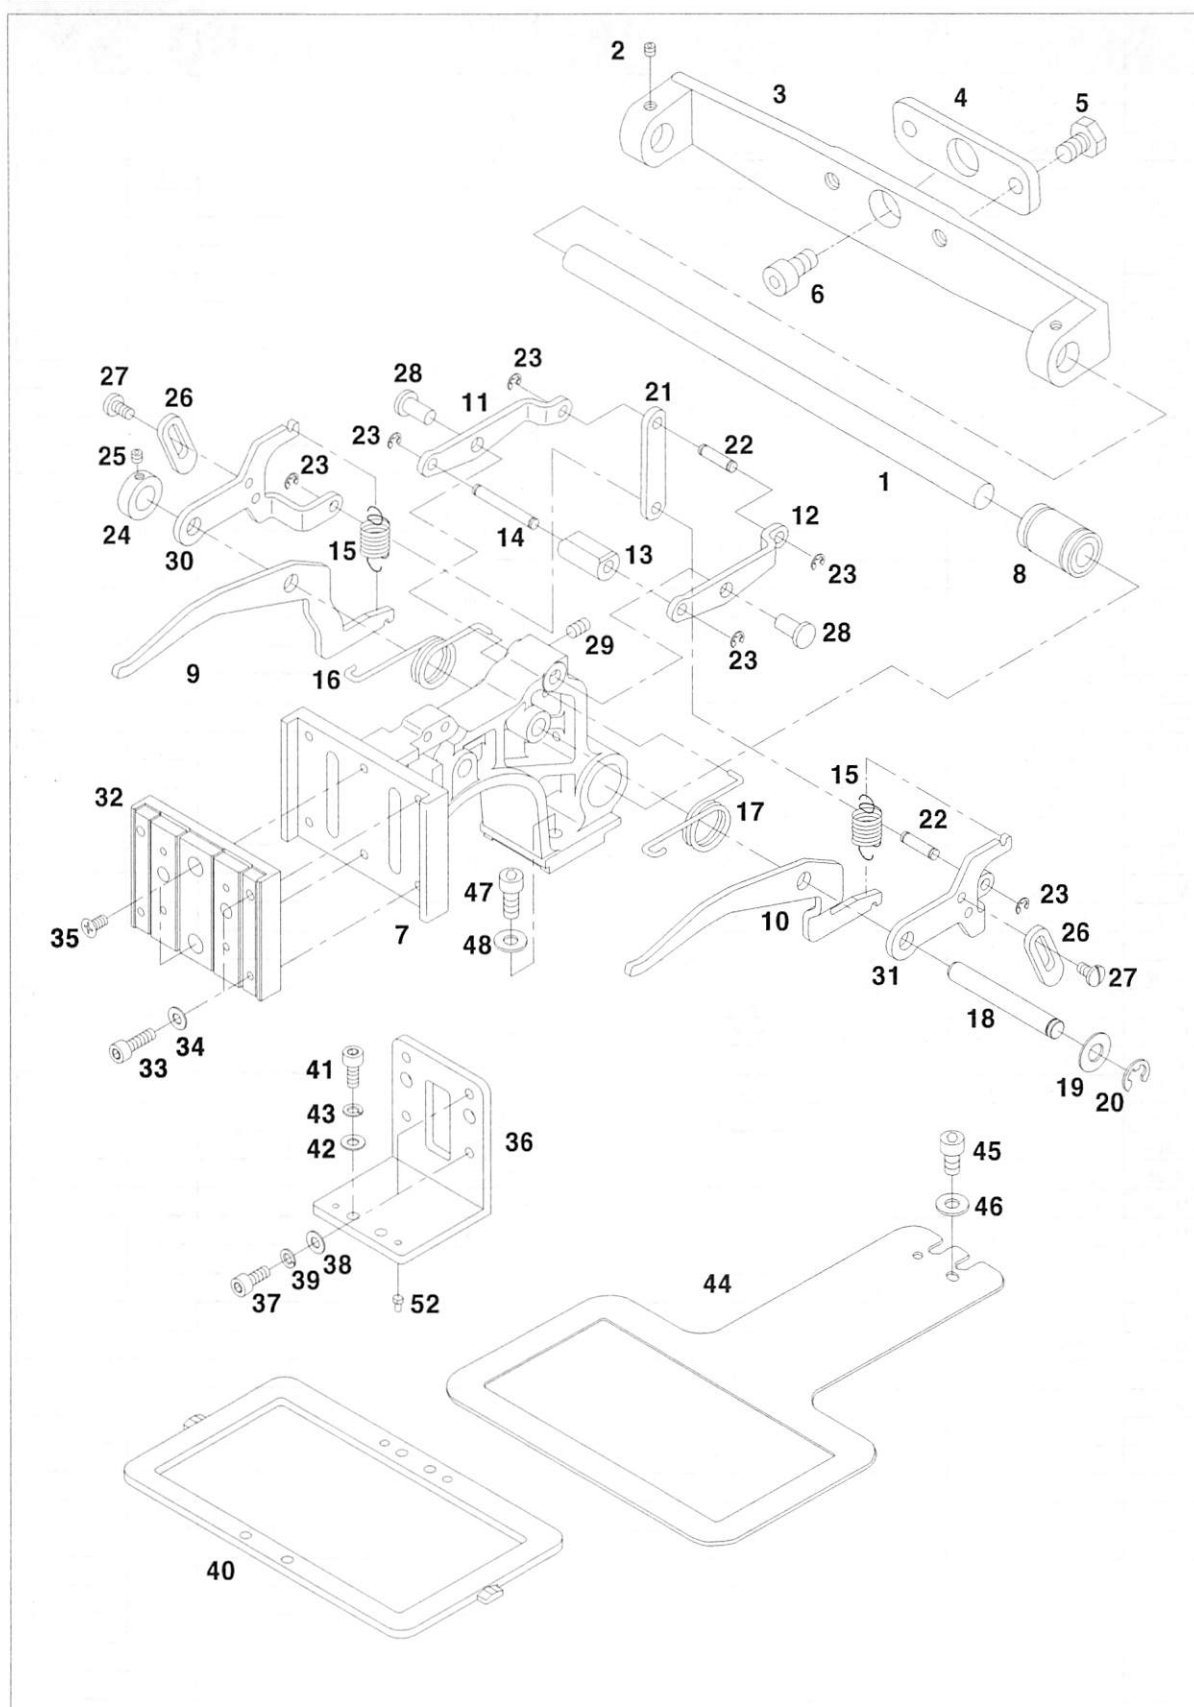 


Ref. No.	Parts No.	Note	Name of Parts	품 명	Q'ty	Applied
M1-1	CYF-KC000801		X-Guide Shaft	X-가이드 축	1	Jul.15.10
M1-2	DSC-CB000700		Screw(M6×P0.8)	가이드 축 고정나사(M5×P0.8)	2	
M1-3	CYF-BB001001		X-Guide Shaft Bracket	X-가이드 축 브라켓	1	Jul.12.10
M1-4	CYF-BB001100		Y-Moving Shaft Bracket	Y-이송축 브라켓	1	
M1-5	DSC-AA000800		Screw(15/64"n=28)	Y-이송축 브라켓 첩나사(15/64"n=28)	2	
M1-6	PSC-AC004600		Screw(M6×P10)	Y-이송축 첩나사(M6×L10)	1	
M1-7	CCP-BB000900		Feed Bracket	피이드 브라켓	1	
M1-8	PBR-FA000400		Ball Bush for X-Guide Shaft	X-가이드 축 볼 부시	1	
M1-9	CCP-CM000900		Lifting Lever(L)	올림 레버(좌)	1	
M1-10	CCP-CM001000		Lifting Lever(R)	올림 레버(우)	1	
M1-11	CCP-CM001100		Feed Bracket Driving Lever(L)	피이드 브라켓 작동레버(좌)	1	
M1-12	CCP-CM001200		Feed Bracket Driving Lever(R)	피이드 브라켓 작동레버(우)	1	
M1-13	CCP-CD000400		Slider	슬라이더	1	
M1-14	CCP-KC000200		Slider Shaft	슬라이더 축	1	
M1-15	DSP-AB000800		Lifting Lever Tension Spring	올림 레버 인장 스프링	2	
M1-16	DSP-AC000300		Lifting Lever Tension Spring(L)	올림 레버 토션 스프링(좌)	1	
M1-17	DSP-AC000400		Lifting Lever Tension Spring(R)	올림 레버 토션 스프링(우)	1	
M1-18	CCP-KC000300		Lifting Lever Shaft	올림 레버 축	1	
M1-19	DWS-AA001300		Washer	올림 레버 축 와셔	1	
M1-20	PSR-AC000900		E-Ring	올림 레버 축 E-링(Ø7)	1	
M1-21	CCP-CA000500		Connecting Link	연결 링크	1	
M1-22	DPN-AA000400		Connecting Link Shaft	연결 링크 축	2	
M1-23	PSR-AC000300		E-Ring	연결 링크 축 E-링(Ø4)	6	
M1-24	DCL-AA001500		Lifting Lever Shaft Collar	올림 레버 축 카라	1	
M1-25	DSC-CA000400		Screw(11/64"n=40)	카라 첩나사(11/64"n=40)	2	
M1-26	CCP-BJ001500		Lifting Lever Adjusting Plate	올림 레버 조정판	2	
M1-27	DSC-BF000900		Screw(11/64"n=40)	조정판 고정나사(11/64"n=40)	4	
M1-28	DPN-AD002400		Feed Bracket Action Lever Pin	피이드 브라켓 작동 레버 핀	2	
M1-29	DSC-CB000700		Screw(M5×P0.8)	핀 고정나사(M5 X P0.8)	2	
M1-30	CCP-CA000600		Feed Bracket Support Link(L)	피이드 브라켓 지지 링크(좌)	1	
M1-31	CCP-CA000700		Feed Bracket Support Link(R)	피이드 브라켓 지지 링크(우)	1	
M1-32	ACP-PS000500		Clamp Guide Ass'y	클램프 가이드(조)	1Set	
M1-33	PSC-AC005000		Screw(M6×L20)	클램프 가이드 첩나사A(M4×L20)	4	
M1-34	DWS-AA001100		Washer	첩나사A 와셔	4	
M1-35	PSC-AC003500		Screw(M4×L20)	클램프 가이드 첩나사B(M4×L20)	2	
M1-36	ACP-PS000400		Feed Plate Clamp Ass'y	피이드 판 클램프(조)	1Set	
M1-37	PSC-AD003500		Screw(M4×L12)	피이드 판 클램프 고정나사(M4×L12)	4	
M1-38	PWS-AA000200		Washer	고정나사 와셔	4	
M1-39	DWS-AA007300		Spring Washer	스프링 와셔	4	
M1-40	CGA-GK000601		Upper Feed Plate	상피이드 판	1	
M1-41	PSC-AC004100		Screw(M4×L10)	상피이드 판 고정나사(M4×L10)	4	
M1-42	PWS-AA000200		Washer	고정나사 와셔	4	
M1-43	DWS-AA007300		Spring Washer	스프링 와셔	4	
M1-44	CGA-GJ000901		Lower Feed Plate	하피이드 판	1	Jul.18.11
M1-45	PSC-AC004600		Screw(M6×L10)	하피이드 판 고정나사(M6×L10)	2	
M1-46	PWS-AA000600		Washer	고정나사 와셔	2	
M1-47	PSC-AC005800		Screw(M6×P1)	피이드 브라켓 고정나사(M6×P1)	2	
M1-48	PWS-AA000600		Washer	고정나사 와셔	2	
M1-49	AS-008065-00	*	Feed Plate Clamp Ass'y	피이드판 클램프(조)	1Set	
M1-50	CGA-GK001400	*	Upper Feed Plate	상피이드 판	1	
M1-51	CGA-GJ001601	*	Lower Feed Plate	하피이드 판	1	Jul.18.11
M1-52	DPN-BB000500		Pin	피이드 판 위치 제어핀	2	

  
Note: * → SPS/A-1507

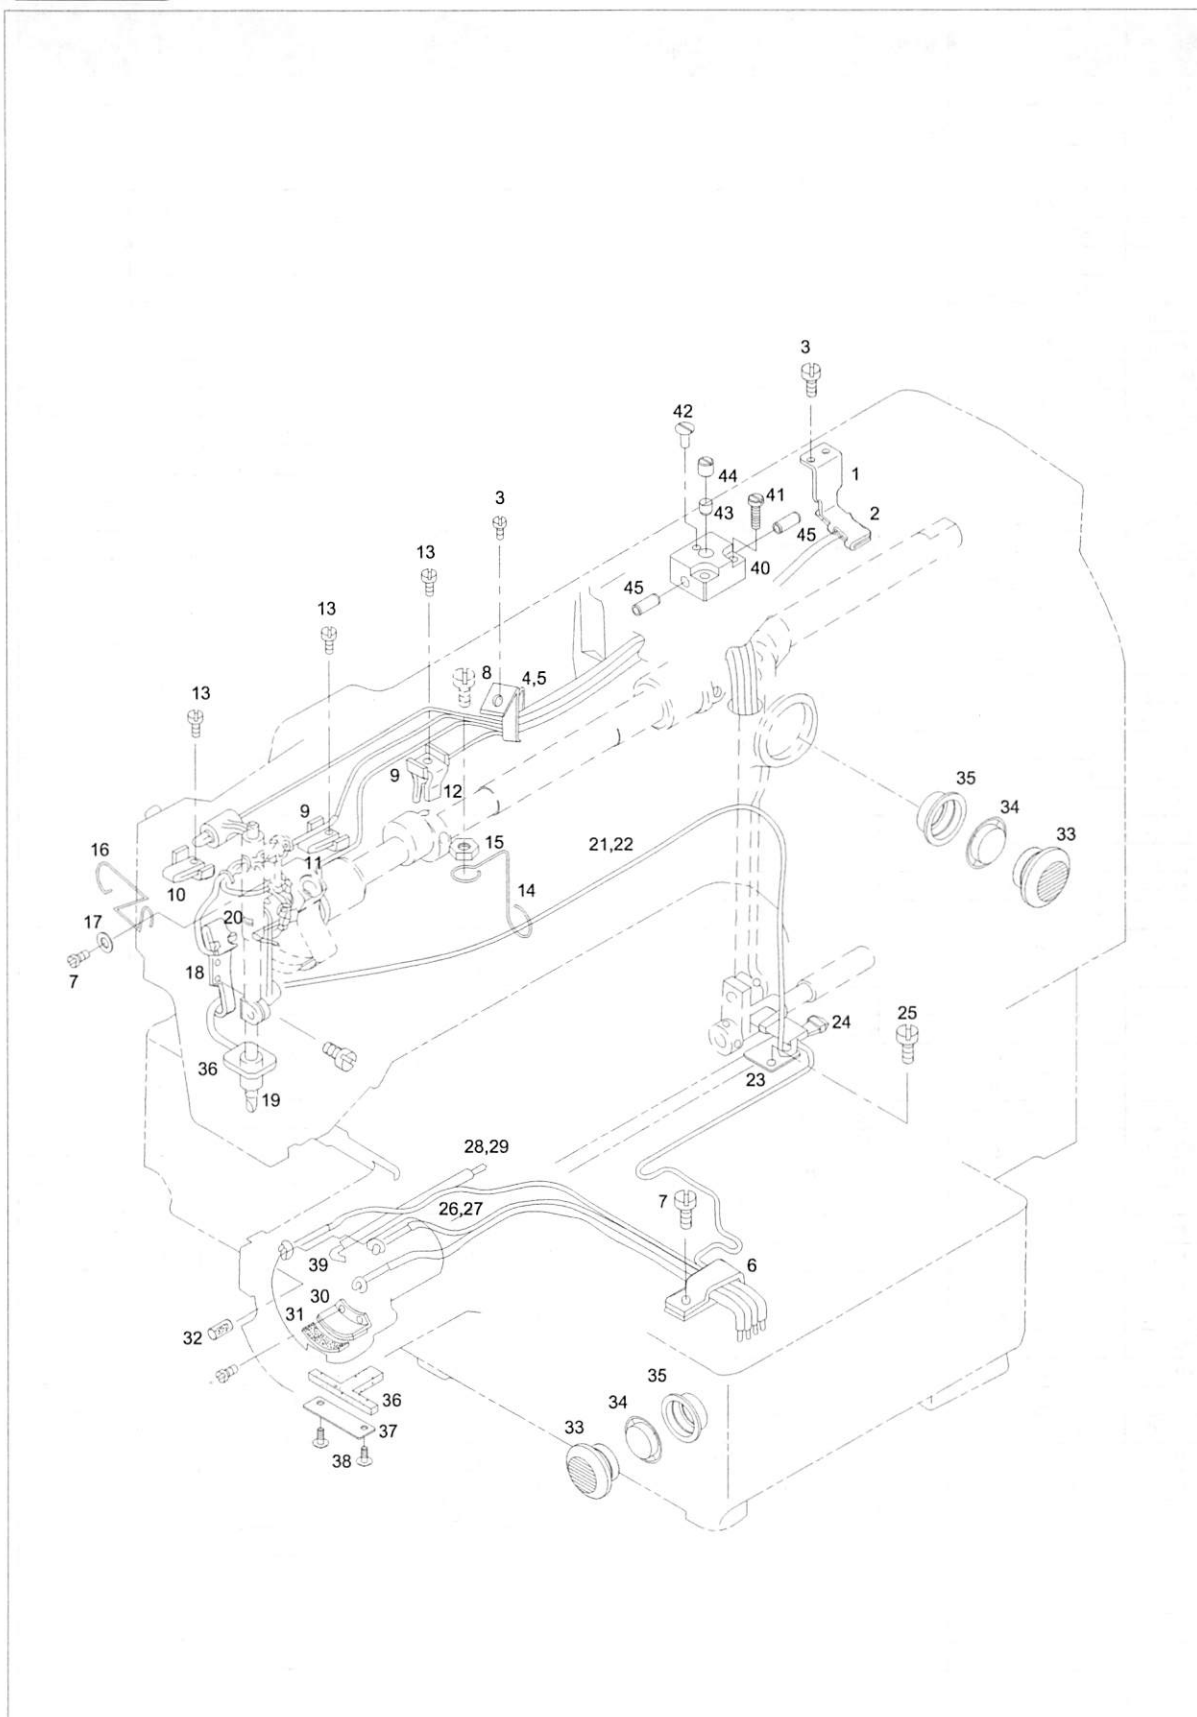

[illegible]

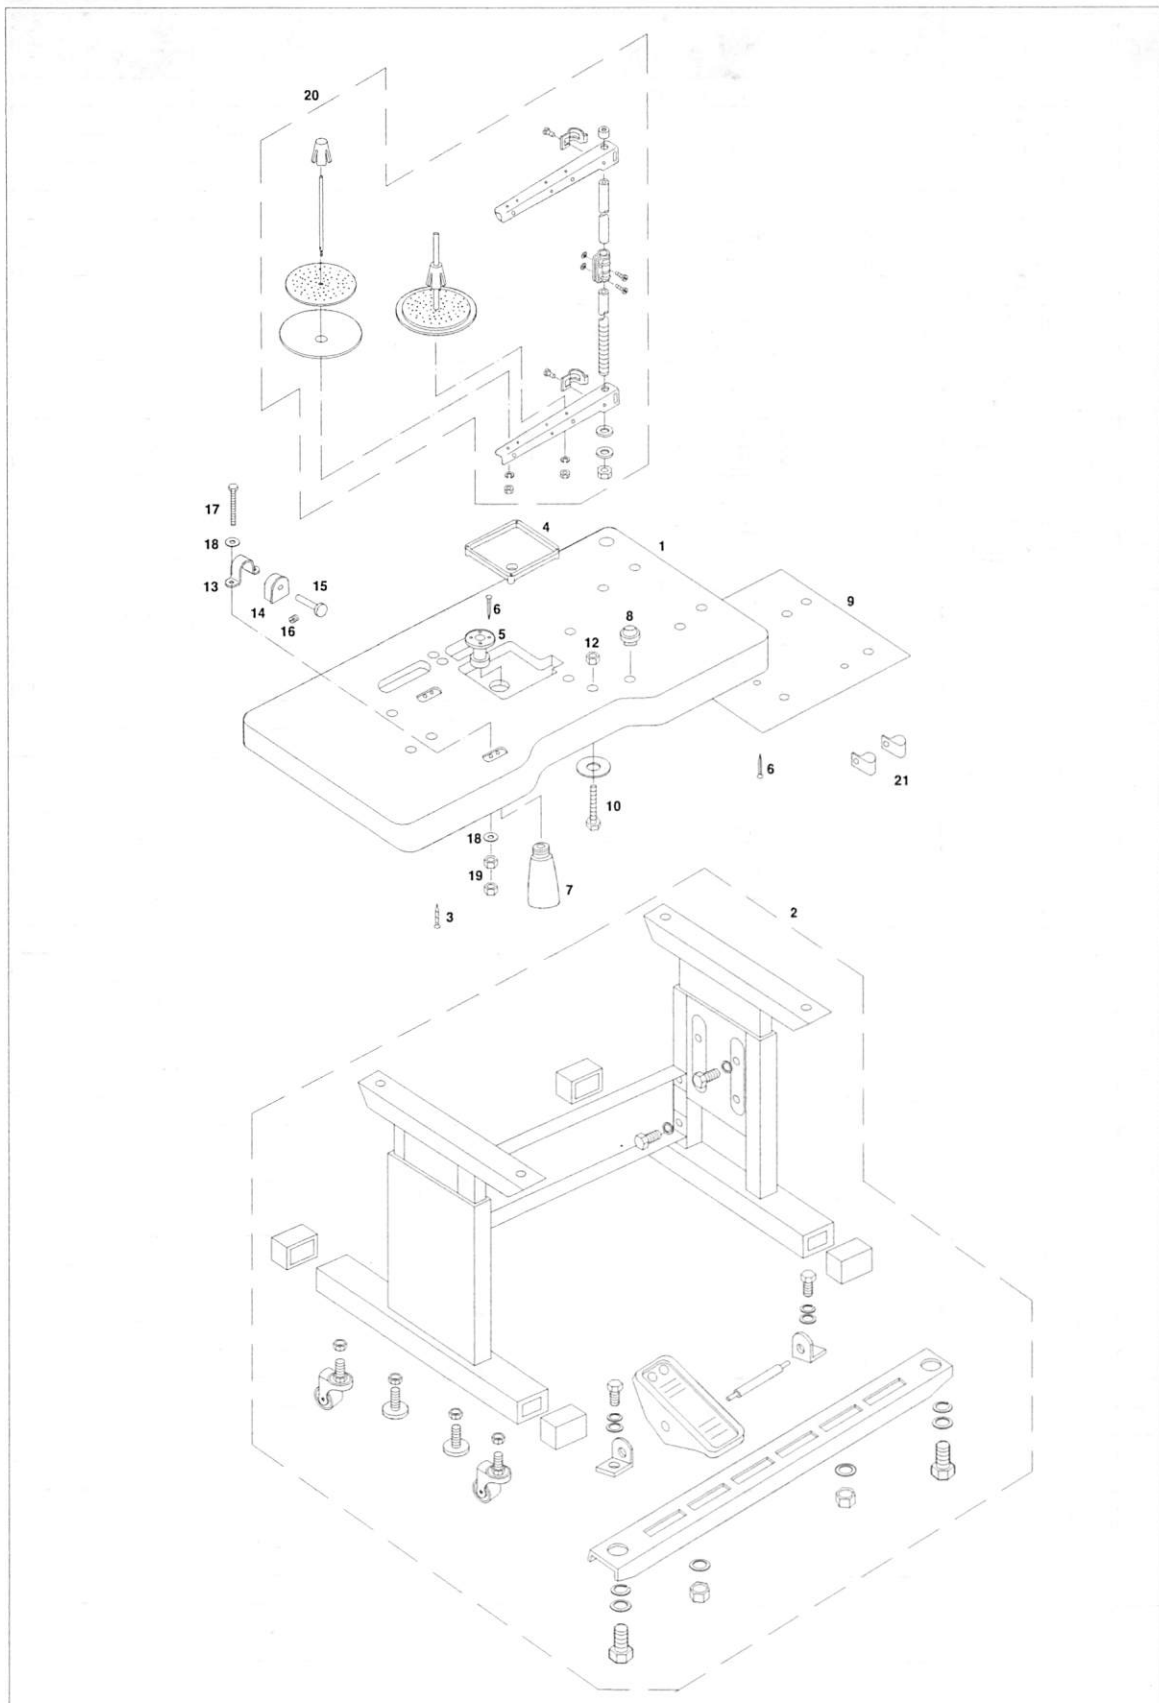 

[illegible]

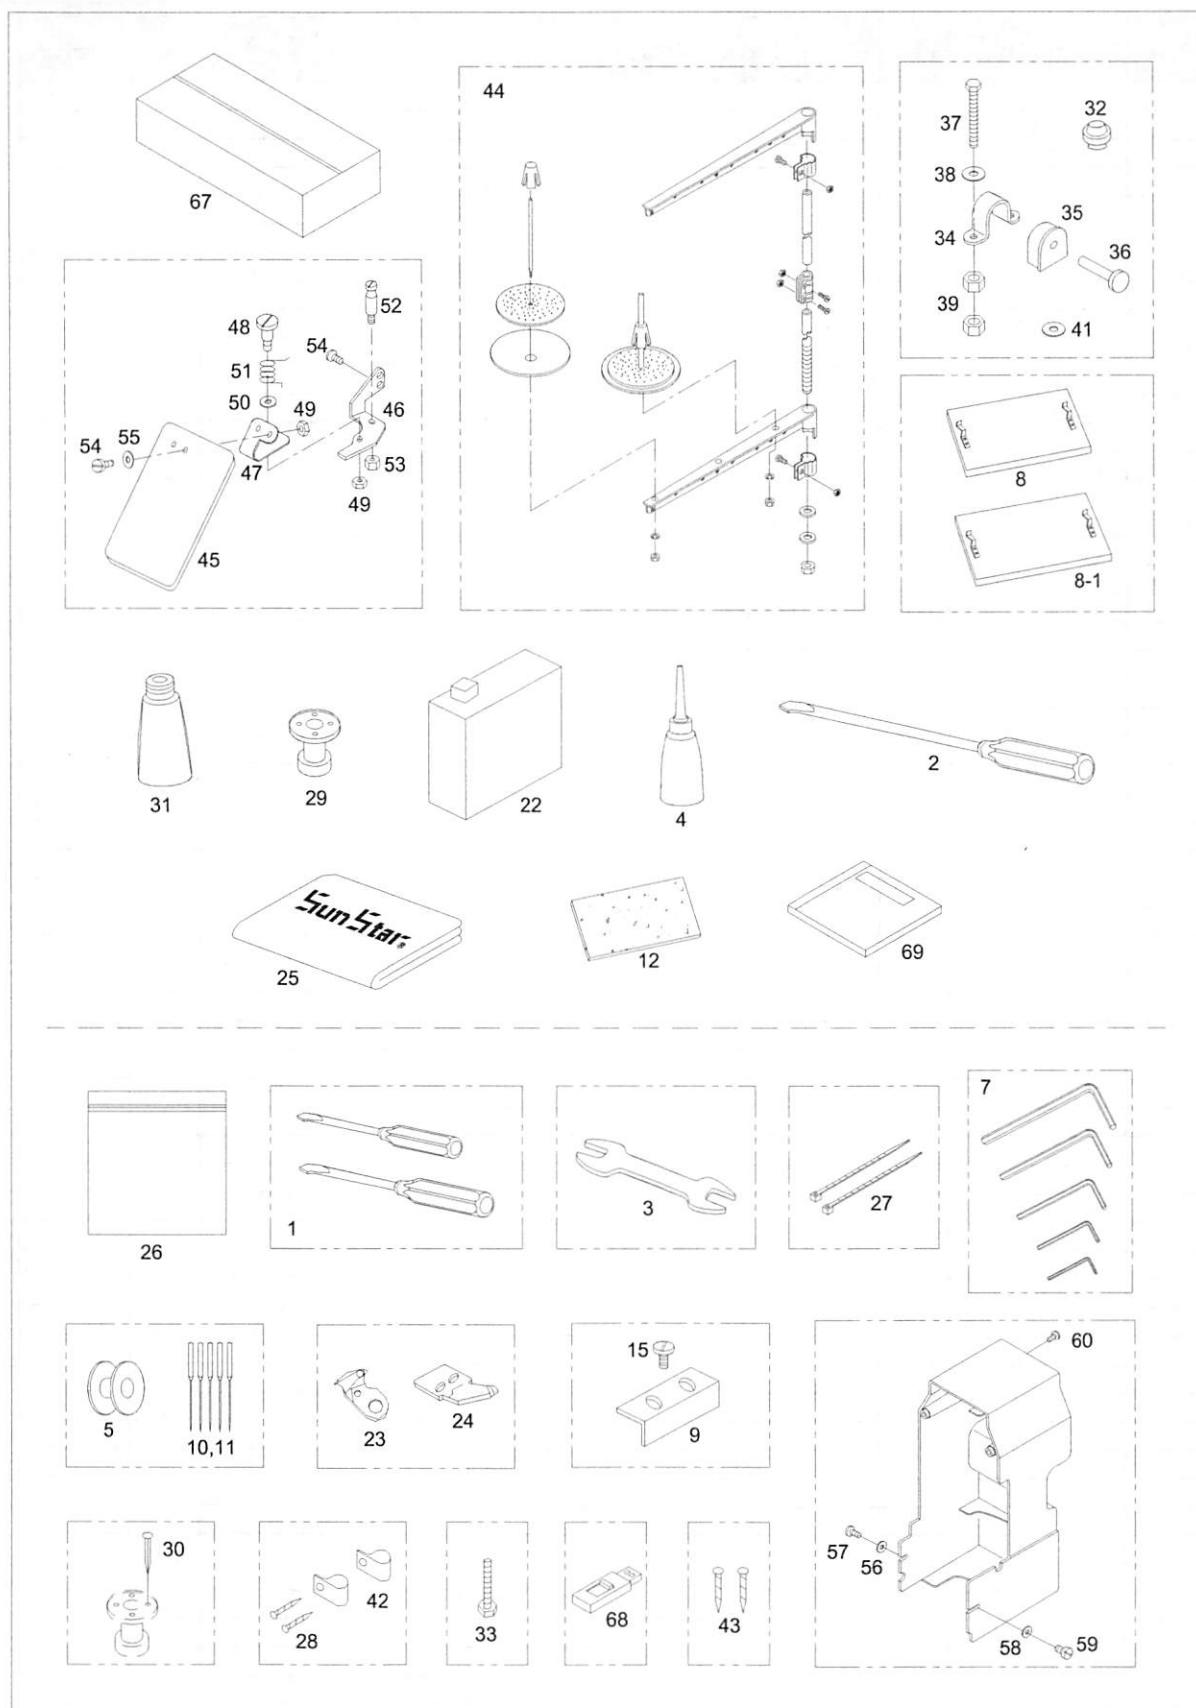 


Ref. No.	Parts No.	Note	Name of Parts	품 명	Q'ty	Assembly
P-1	PTL-BA000200		Driver(S), (M)	드라이버(小), (中)	1	
P-2	PTL-BA000100		Driver(L)	드라이버(大)	1	
P-3	PTL-CB000100		Spaner(9×10)	스패너	1	
P-4	CAC-JB000100		Oiler	오일 주유기	1	
P-5	CHK-HB000100		Bobbin	보빈	2	
P-7	PTL-AB000100		L-Shape Wrench	L-렌치(2mm)	1	
	PTL-AB000300		L-Shape Wrench	L-렌치(2.5mm)	1	
	PTL-AB000500		L-Shape Wrench	L-렌치(3mm)	1	
	PTL-AB000400		L-Shape Wrench	L-렌치(4mm)	1	
	PTL-AB000200		L-Shape Wrench	L-렌치(5mm)	1	
P-8	91S015S-306H		Plastic Blank Plate Ass'y	보조판(조)	1Set	
P-8-1	AS-000317-00		Plastic Blank Plate Ass'y(1507)	보조판(조)(1507전용)	1	
P-9	91S012S-306H		Plastic Plate Stopper	보조판 스토퍼	1	
P-10	006-00T-0011	HS	Needle(DP×17 #18)	바늘	5	
P-11	006-00T-0013	GS	Needle(DP×5 # 14)	바늘	5	
P-12	CAC-MG000100		Sponge	스폰지	1	
P-15	91S013S-306H		Screw(11/64"n=40)	침나사	2	
P-22	CAC-JB000200		Bottle of Oil	오일통	1	
P-23	ATT-PS000400		Moving Mes	동메스	1	
P-24	CTT-NB000100		Fixed Mes	고정메스	1	
P-25	CAC-MA000100		Head Cover	미싱커버	1	
P-26	91-001C-1230		Accessory Bag	액세서리 백	1	
P-27	PTC-AG000200		Tie	케이블 타이	5	
P-28	PSC-DD000200		Screw Nail	나사 못	2	
P-29	CST-BA000100		Bed Base	오일통 받이	1	
P-30	-		Nail	고정 못	10	
P-31	CST-JB000100		Oiler	오일 저장통	1	
P-32	CST-FD000800		Cushion Rubber	쿠션 고무	2	
P-33	PSC-AA000300		Bolt(M8×t65)	볼트	2	
P-34	CST-BB001000		Hinge	힌지 쇠	2	
P-35	CST-FF000200		Hinge Rubber	힌지 쇠 고무	2	
P-36	DPN-AD001400		Hinge Pin	힌지쇠 핀	2	
P-37	PSC-AA000500		Bolt(M8×t60)	볼트	4	
P-38	PWS-AA000600		Washer	와셔	4	
P-39	PSN-AA000900		Nut	너트	8	
P-41	PWS-AA000800		Washer	레이블 결합와셔	2	
P-42	90S017S-306H		Cable Holder	케이블 잡이	2	
P-43	91-002S-1067		Nail	못나사	2	
P-44	CST-MF000100		Thread Stand Ass'y	실대못이(조)	1Set	
P-45	CMB-BJ000100		Safety Plate	안전판	1	
P-46	CMB-BB000100		Safety Bracket	안전판 브라켓	1	
P-47	CMB-BG000100		Safety Plate Holder	안전판 홀더	1	
P-48	DSC-FA000100		Safety Plate Hinge Screw	안전판 단나사	1	
P-49	DSN-AA000300		Nut(11/64"n=40)	너트	3	
P-50	DWS-AA000300		Washer	와셔	1	
P-51	DSP-AC000100		Safety Plate Spring	안전판 스프링	1	
P-52	DSC-HD000100		Safety Plate Spring Hook	안전판 스프링 걸이	1	
P-53	DSN-AA000200		Nut(3/16"n=28)	너트	1	
P-54	DSC-BJ000200		Screw(11/64"n=40)	침나사	4	
P-55	DWS-AA000500		Washer	와셔	2	
P-56	PWS-AA000600		Washer	와셔	1	
P-57	DSC-BF000700		Screw(15/64"n=28)	침나사	1	
P-58	DWS-AA000600		Washer	와셔	1	
P-59	DSC-BF001000		Screw(11/64"n=40)	침나사	1	
P-60	DSC-BF002900		Screw(15/64"n=28)(도금)	침나사	2	
P-67	CAC-MD000200		Inner Box	인너박스	1	
P-68	EP-000497-00		USB Flash Drive	USB 플래시 드라이브	1	Oct.25.10
P-69	-		CD Manual	CD 매뉴얼	1	



Control Box Mechanism

 컨트롤 박스 관계

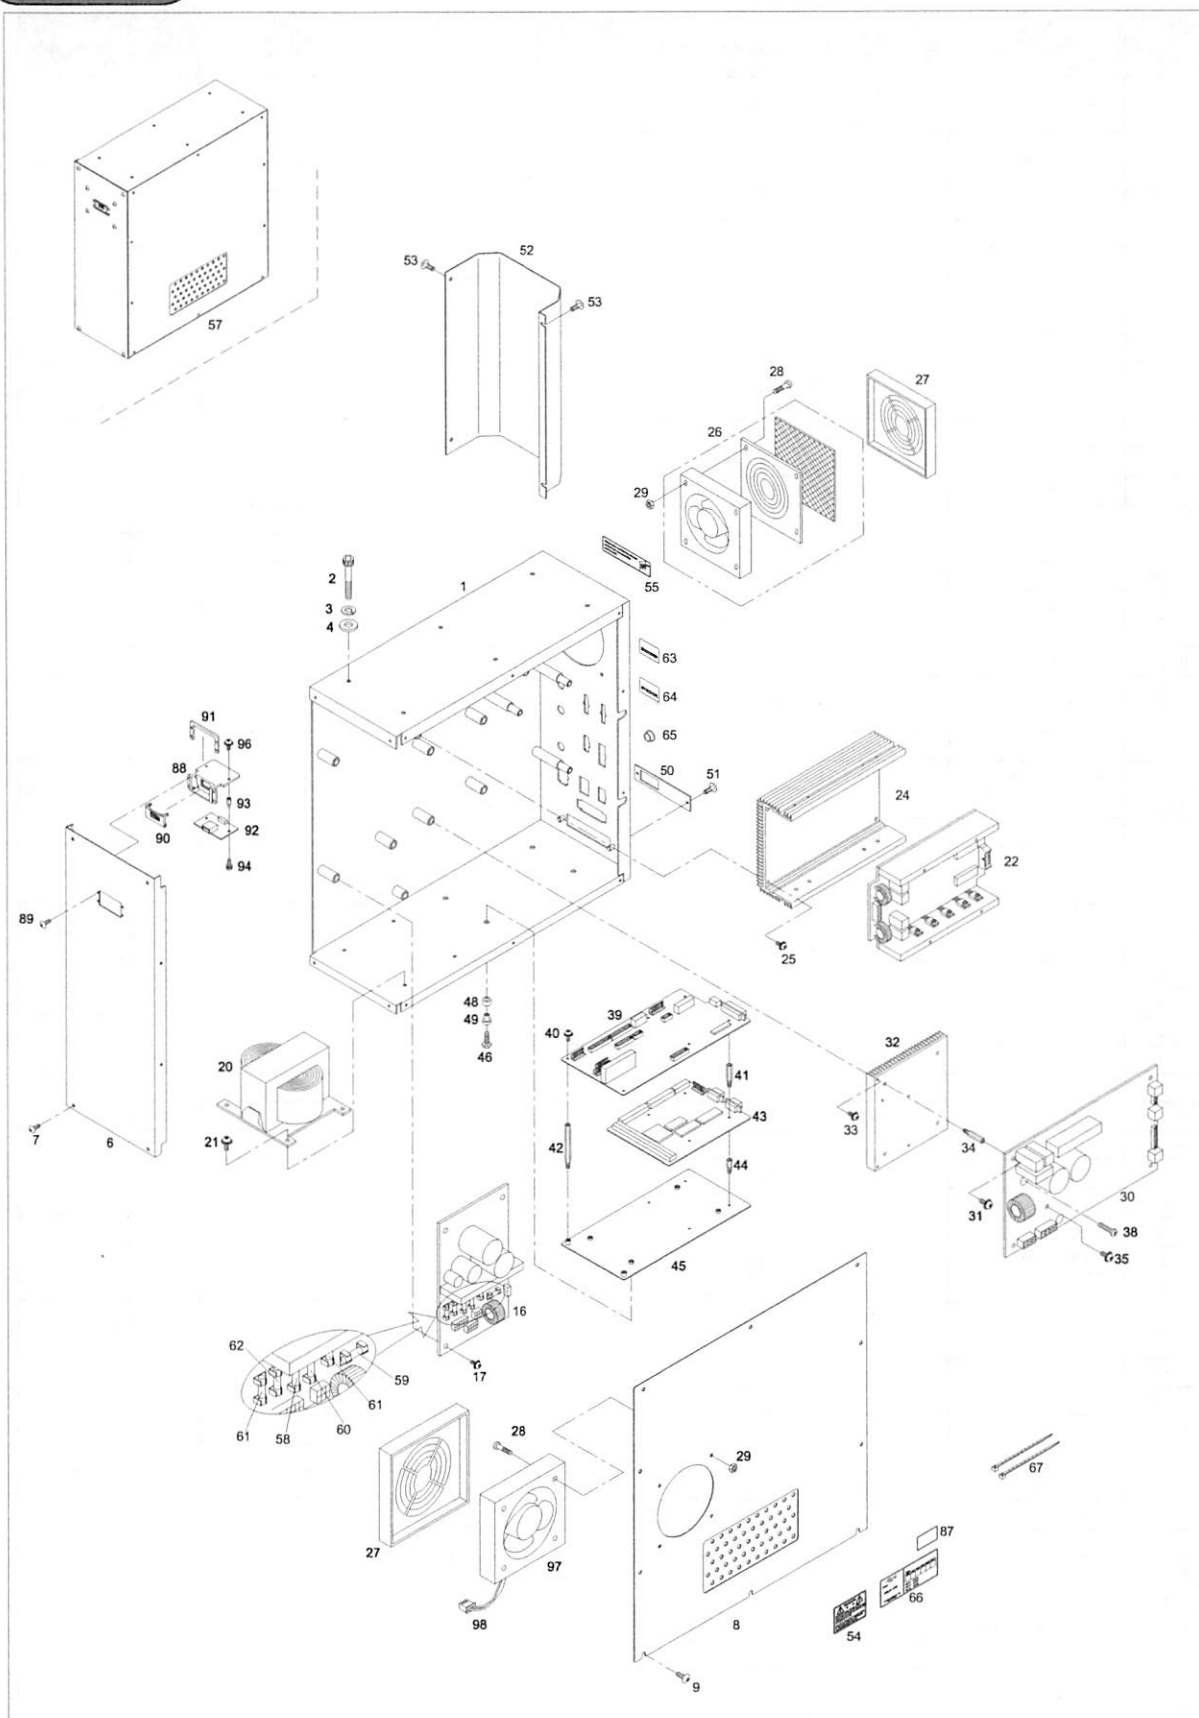


Ref. No.	Parts No.	Note	Name of Parts	품 명	Q'ty	Applied Period
Q-1	10-001A-PT01		Control Box	컨트롤 박스	1	
Q-2	10-001M-PT02		Bolt Control Box(M6×L45)	컨트롤 박스 조임 볼트(M6×L45)	6	
Q-3	10-003S-SW66		Spring Washer Control Box	컨트롤 박스 조임 스프링 와셔	6	
Q-4	91-001C-PT10		Flat Washer Control Box	컨트롤 박스 조임 평 와셔	6	
Q-6	GP-050297-00		Front Cover Control Box	컨트롤 박스 전면 커버	1	Oct.25.10
	10-002A-PT01		Front Cover Control Box	컨트롤 박스 전면 커버	1	
Q-7	10-003M-PT01		Screw Control Box	전면 커버 조임 나사	4	
Q-8	GP-057463-00		Cover Control Box	컨트롤 박스 커버	1	Jan.09.13
Q-9	10-003M-PT01		Screw Cover	컨트롤 박스 커버 조임 나사	8	
Q-16	BD-000961-00		Power Board Ass'y	파워보드(조)	1Set	Jan.06.11
	02-0000-PT18		Power Board Ass'y	파워보드(조)	1Set	
Q-17	SC-000683-00		Screw Ass'y (M4×L10)	파워보드 조임 나사(조)(M4×L10)	4Set	
Q-20	10-104A-PT18		Transformer	트랜스 포머	1	
Q-21	07-025S-3701		Screw Ass'y	트랜스 포머 조임 나사(조)	4Set	
Q-22	BD-000582-04		Step Board	스텝보드	1	Oct.31.11
	BD-000582-03		Step Board	스텝보드	1	Sep.01.10
Q-24	10-104A-PT10		X-Y Board Radiator	X-Y 보드 방열판	1	
Q-25	SC-000683-00		Screw(M4×L10)	방열판 침나사	4	
Q-26	EP-000291-00		Fan Ass'y	송풍기(조)	1Set	
Q-27	01-001B-CPT2		Fan Cover	송풍기 커버	2	
Q-28	01-002M-AU12		Bolt Fan (M4×0.7 L=35)	송풍기 조임 볼트	8	
Q-29	09-041S-3701		Nut Fan(M4)	송풍기 조임 너트	8	
Q-30	BD-000296-14		Main Driving Board Ass'y	주축 보드(조)	1Set	Aug.04.11
	BD-000296-12		Main Driving Board Ass'y	주축 보드(조)	1Set	Sep.18.10
Q-31	10-002S-SW66		Screw Ass'y For Main Driving Board (M3×0.5 L=7)	주축 보드 조임 볼트(조)	5Set	
Q-32	10-115A-PT10		Radiator Main	주축 방열판	1	
Q-33	SC-000683-00		Screw Ass'y (M4×L10)	주축 방열판 조임 나사(조)	4Set	
Q-34	10-012M-PT10		Stud Main Driving Board (3-5-15)	주축 보드 스테드(3-5-15)	2	
Q-35	SC-000683-00		Screw IPM (M4×0.7 L=10)	IPM 조임 나사(조)	2Set	
Q-38	10-003M-PT10		Screw Bridge Diode(M4×L16)	브릿지 다이오드 조임 나사	1	
Q-39	BD-000239-04		I/O Board Ass'y	I/O 보드(조)	1Set	Mar.28.12
	BD-000239-02		I/O Board Ass'y	I/O 보드(조)	1Set	Nov.04.11
	BD-001523-03	Option	I/O Board Ass'y -Barcode Reader	I/O 보드(조) -바코드 리더기	1Set	Jan.09.13
Q-40	SC-001099-00		Screw Ass'y I/O Board(M3×L7)	I/O 보드 조임 나사(조)	5Set	
Q-41	03-010A-PT10		Stud (3-5-37)	I/O 보드 스테드 (3-5-37)	4	
Q-42	03-011A-PT10		Stud (3-5-42)	I/O 보드 스테드 (3-5-42)	2	
Q-43	BD-000928-15	1306	486 CPU Board Ass'y	CPU 보드(조)	1Set	Aug.21.13
	BD-000855-00	1306	486 CPU Board Ass'y	CPU 보드(조)	1Set	Sep.15.09
	BD-000208-09	1306	CPU Board Ass'y	CPU 보드(조)	1Set	Apr.13.09
	BD-000208-08	1306	CPU Board Ass'y	CPU 보드(조)	1Set	Jan.18.09
	BD-000928-15	1507	486 CPU Board Ass'y	CPU 보드(조)	1Set	Aug.21.13
	BD-000856-00	1507	486 CPU Board Ass'y	CPU 보드(조)	1Set	Sep.15.09
	BD-000210-08	1507	CPU Board Ass'y	CPU 보드(조)	1Set	Jan.18.09
Q-44	08-002M-SW67		Stud CPU P.C.B (3-5-10)	CPU 보드 스테드(3-5-10)	4	
Q-45	GP-050302-00		Connecting Plate I/O & CPU	I/O, CPU 연결판	1	Jan.13.11
	10-003B-PT10		Connecting Plate I/O & CPU	I/O, CPU 연결판	1	
Q-46	15-022S-1000		Screw Connecting Plate	I/O, CPU 연결판 조임나사	4	
Q-48	10-006M-PT10		Isolation Bushing "B"	절연부싱"B"	4	
Q-49	10-005M-PT10		Isolation Bushing "A"	절연부싱"A"	4	
Q-50	GP-038188-00		Cover CPU P.C.B	CPU, P.C.B 커버	1	
Q-51	10-003M-PT01		Screw Ass'y For CPU P.C.B Cover	CPU, P.C.B 커버 조임 나사(조)	2Set	
Q-52	10-008A-PT10		Cover Connectors	컨넥터 커버	1	
Q-53	10-003M-PT01		Screw Ass'y For Connectors Cover	컨넥터 커버 조임 나사(조)	4Set	
Q-54	GP-011049-00		Sticker Caution	고전압 위험 스티커	1	
Q-55	01-004S-BT01		Sticker Replacing Filter	필터 교환 스티커	1	
Q-57	22-1811-PT01		Control Box Ass'y	컨트롤 박스 (조)	1Set	
Q-58	01-001C-ZIZA		Fuse 7A 250V	퓨즈 7A	1	





Control Box Mechanism

 컨트롤 박스 관계

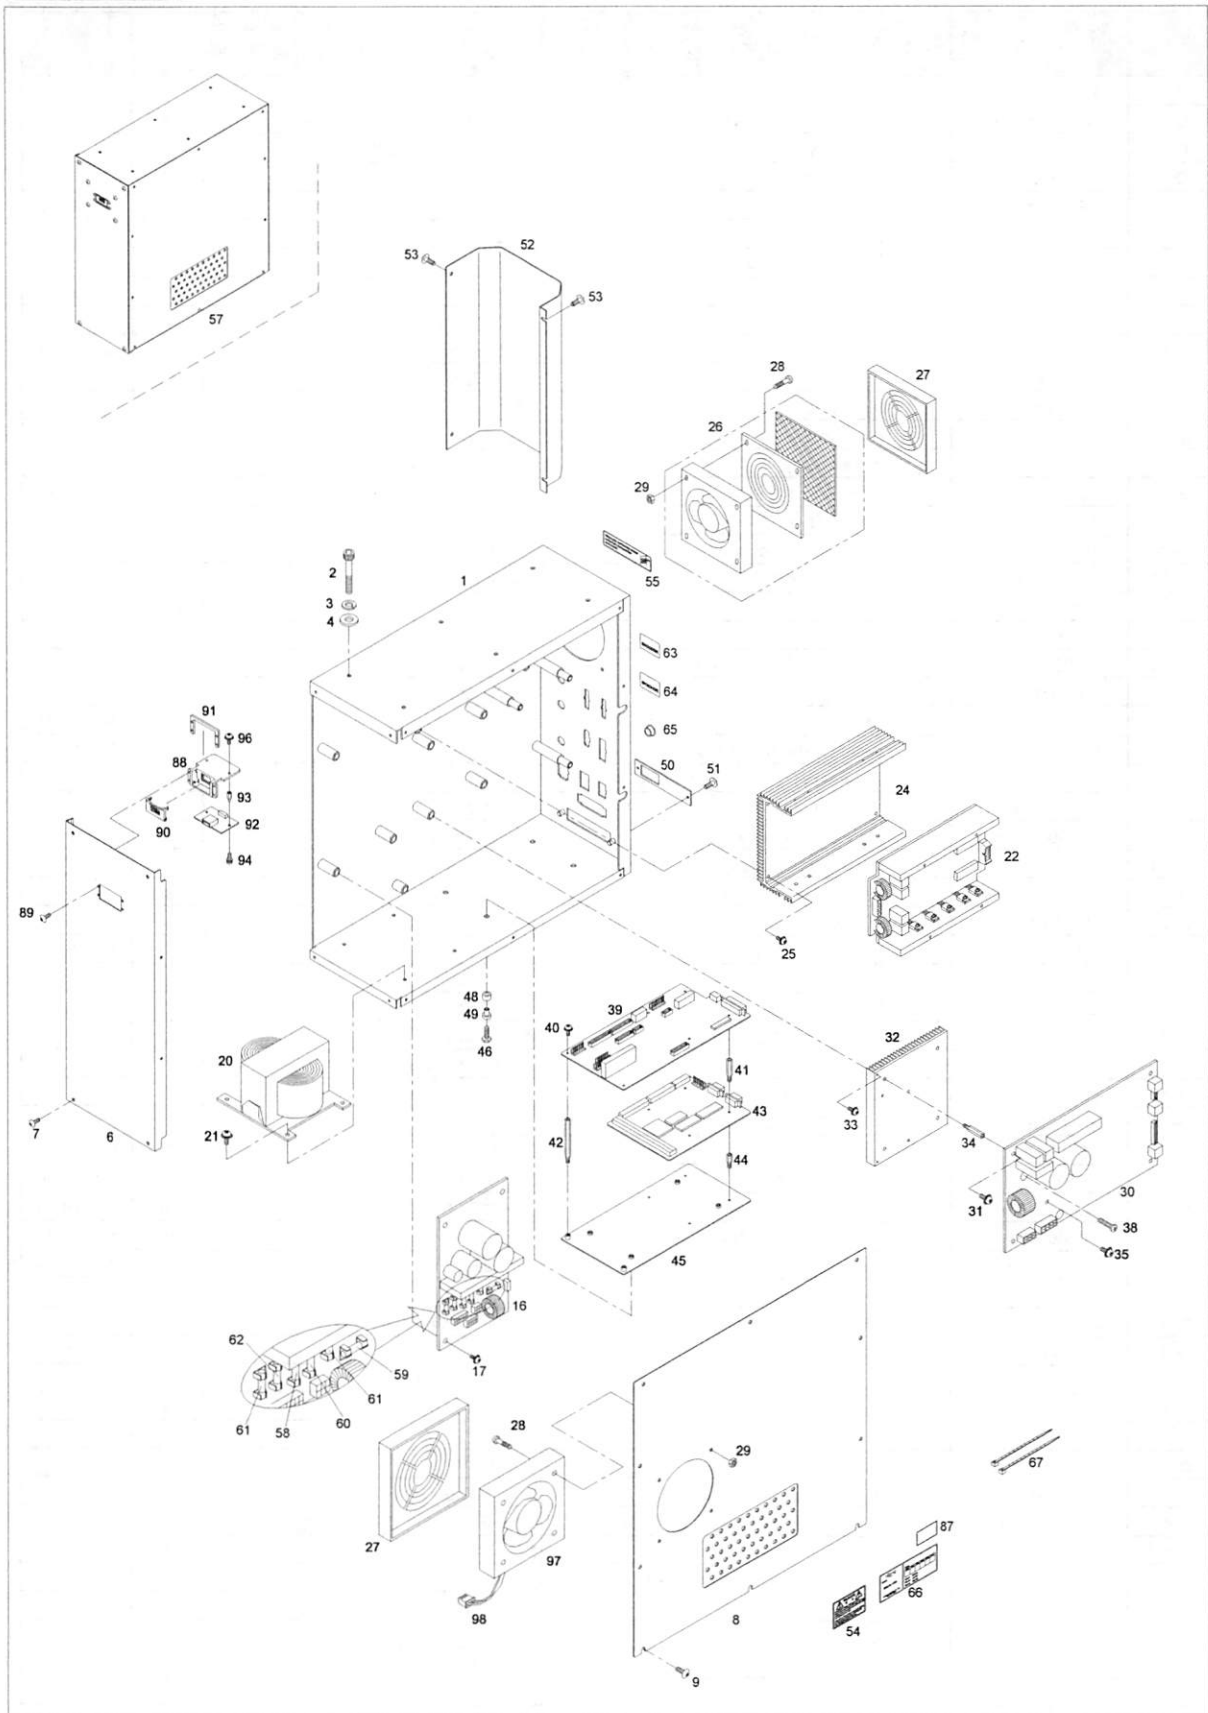

[illegible]

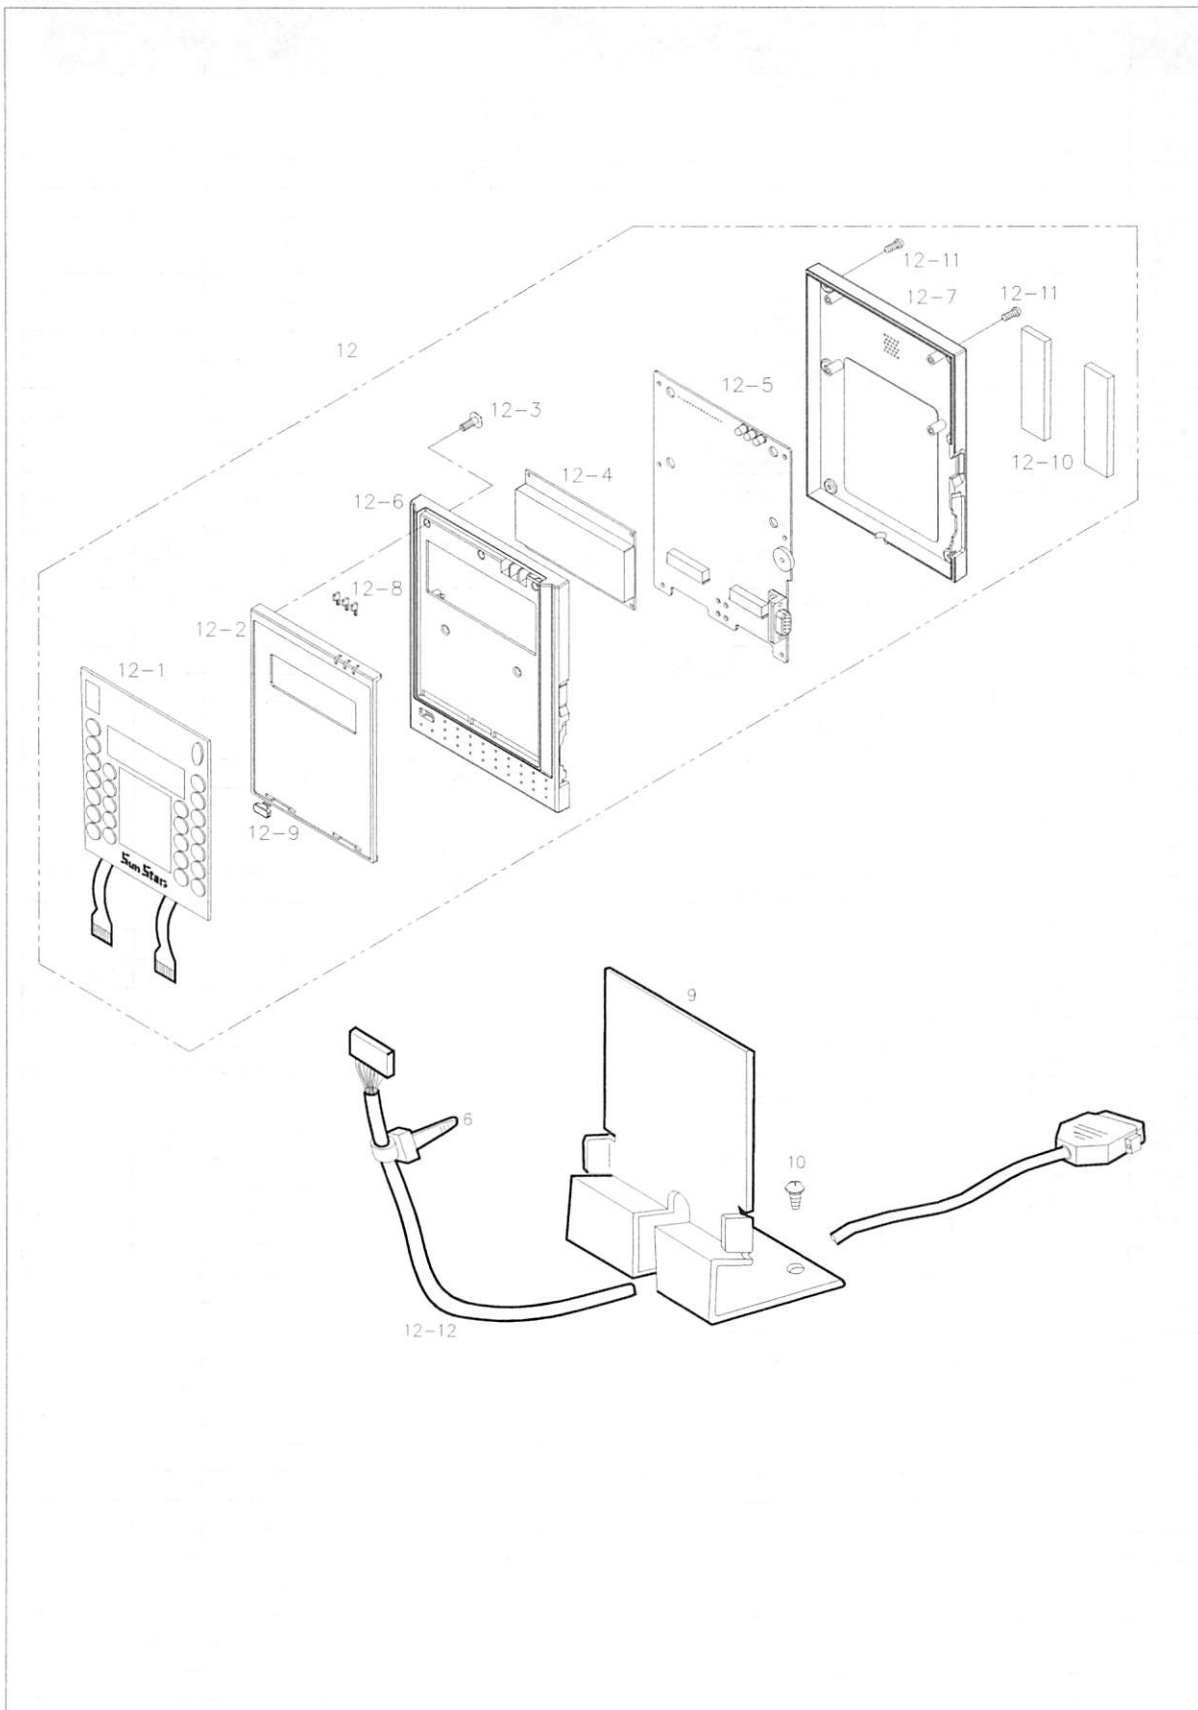 


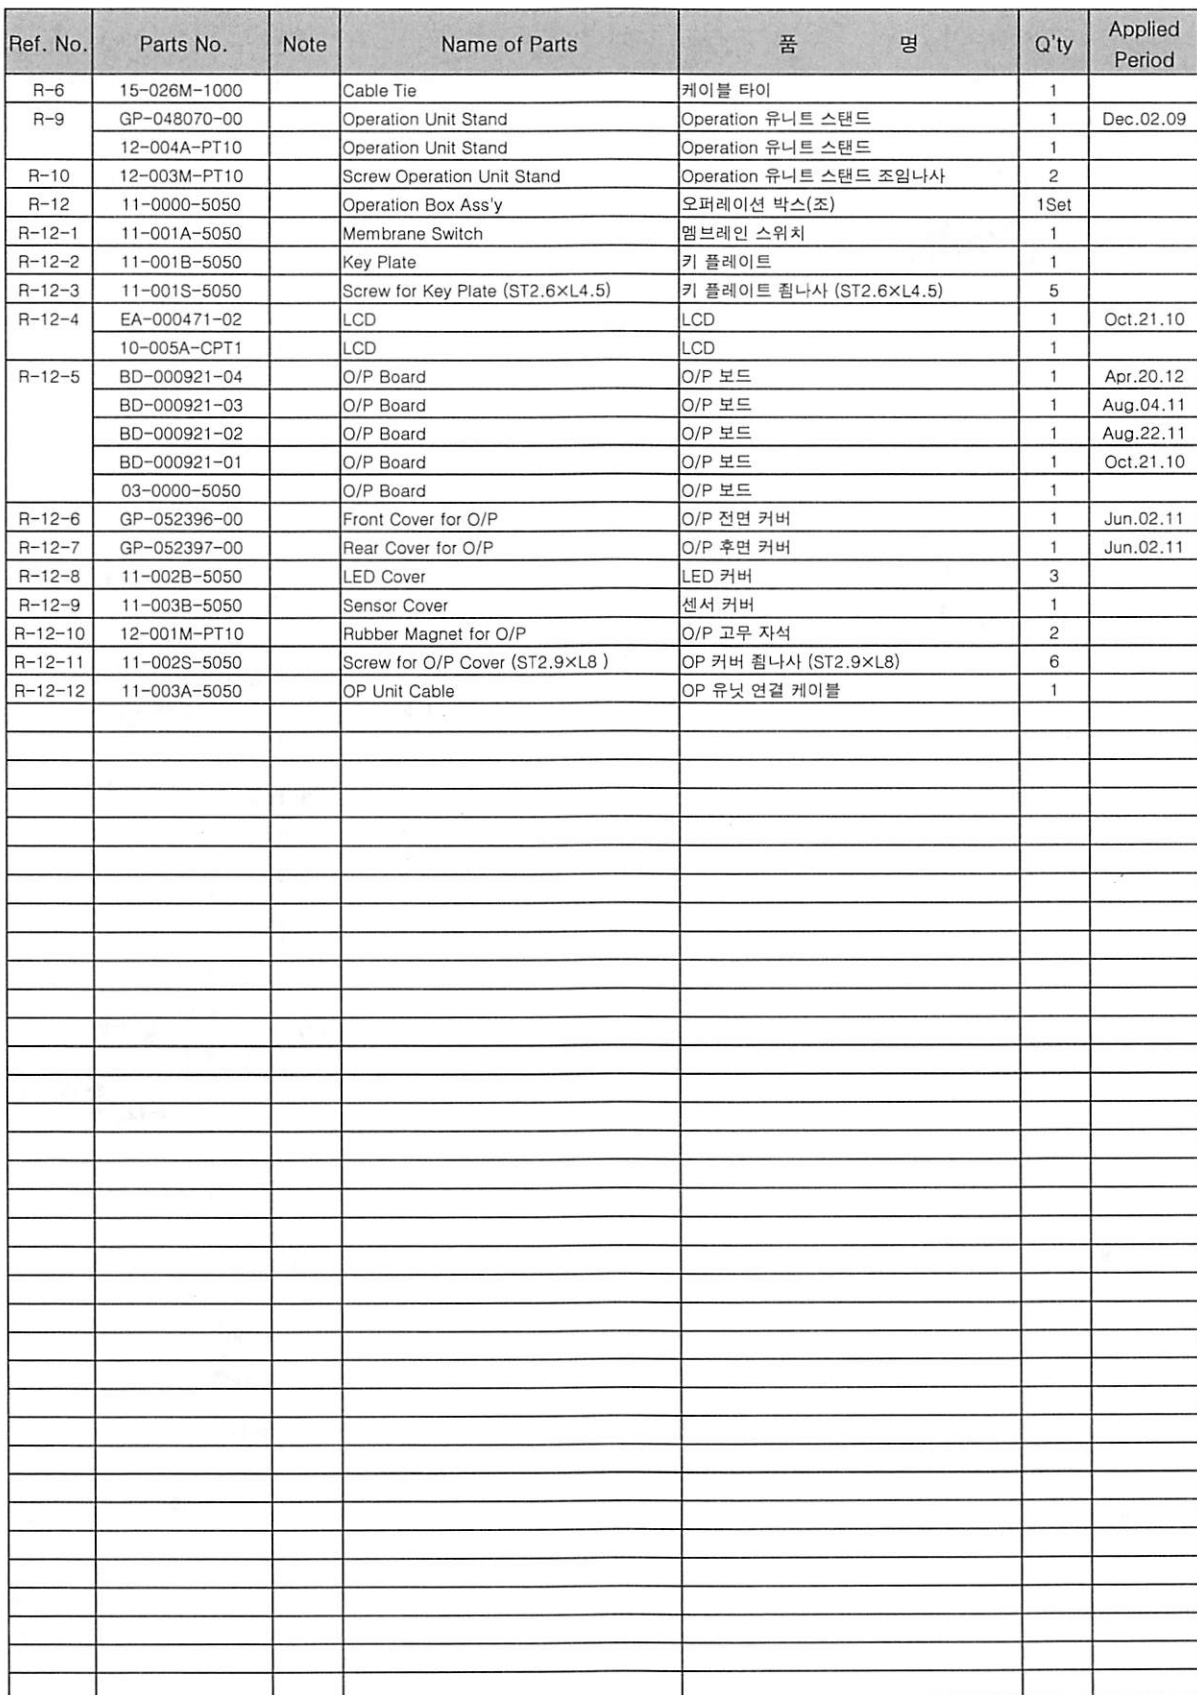 




Pedal Mechanism

  페달 관계

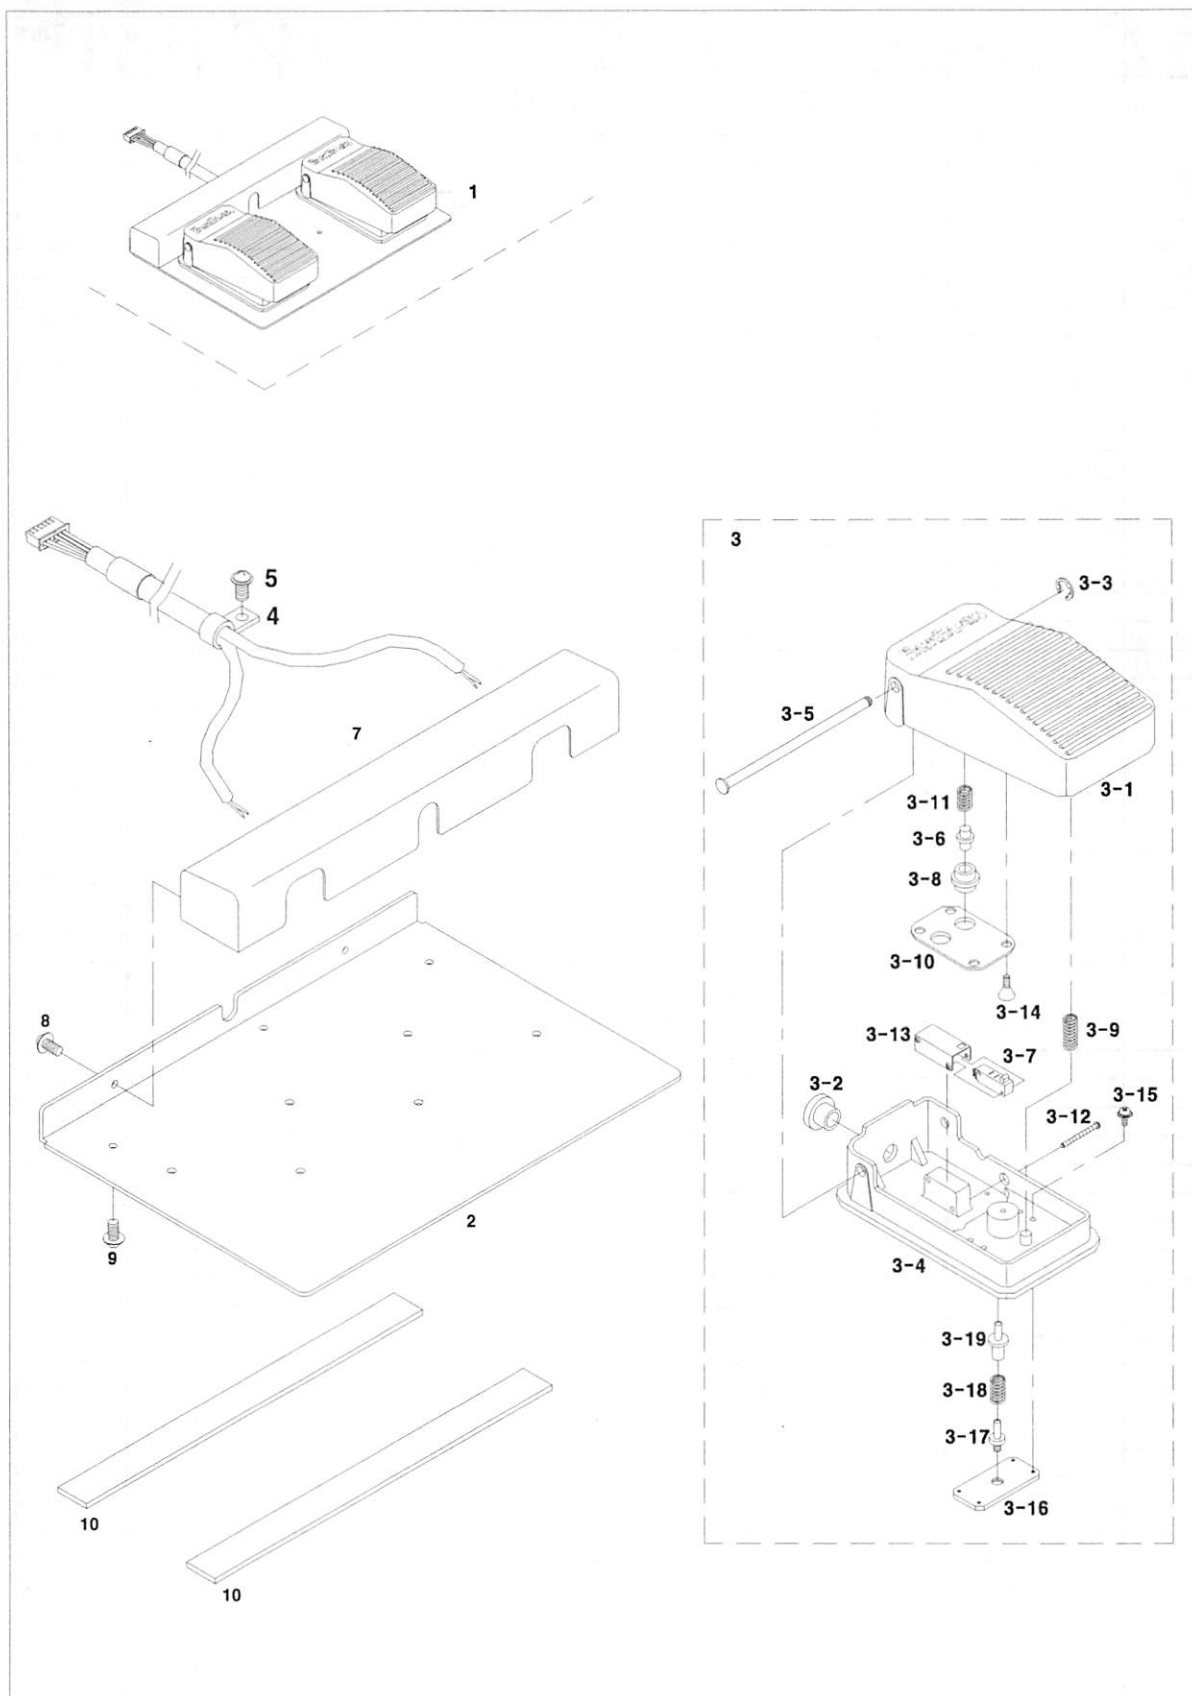


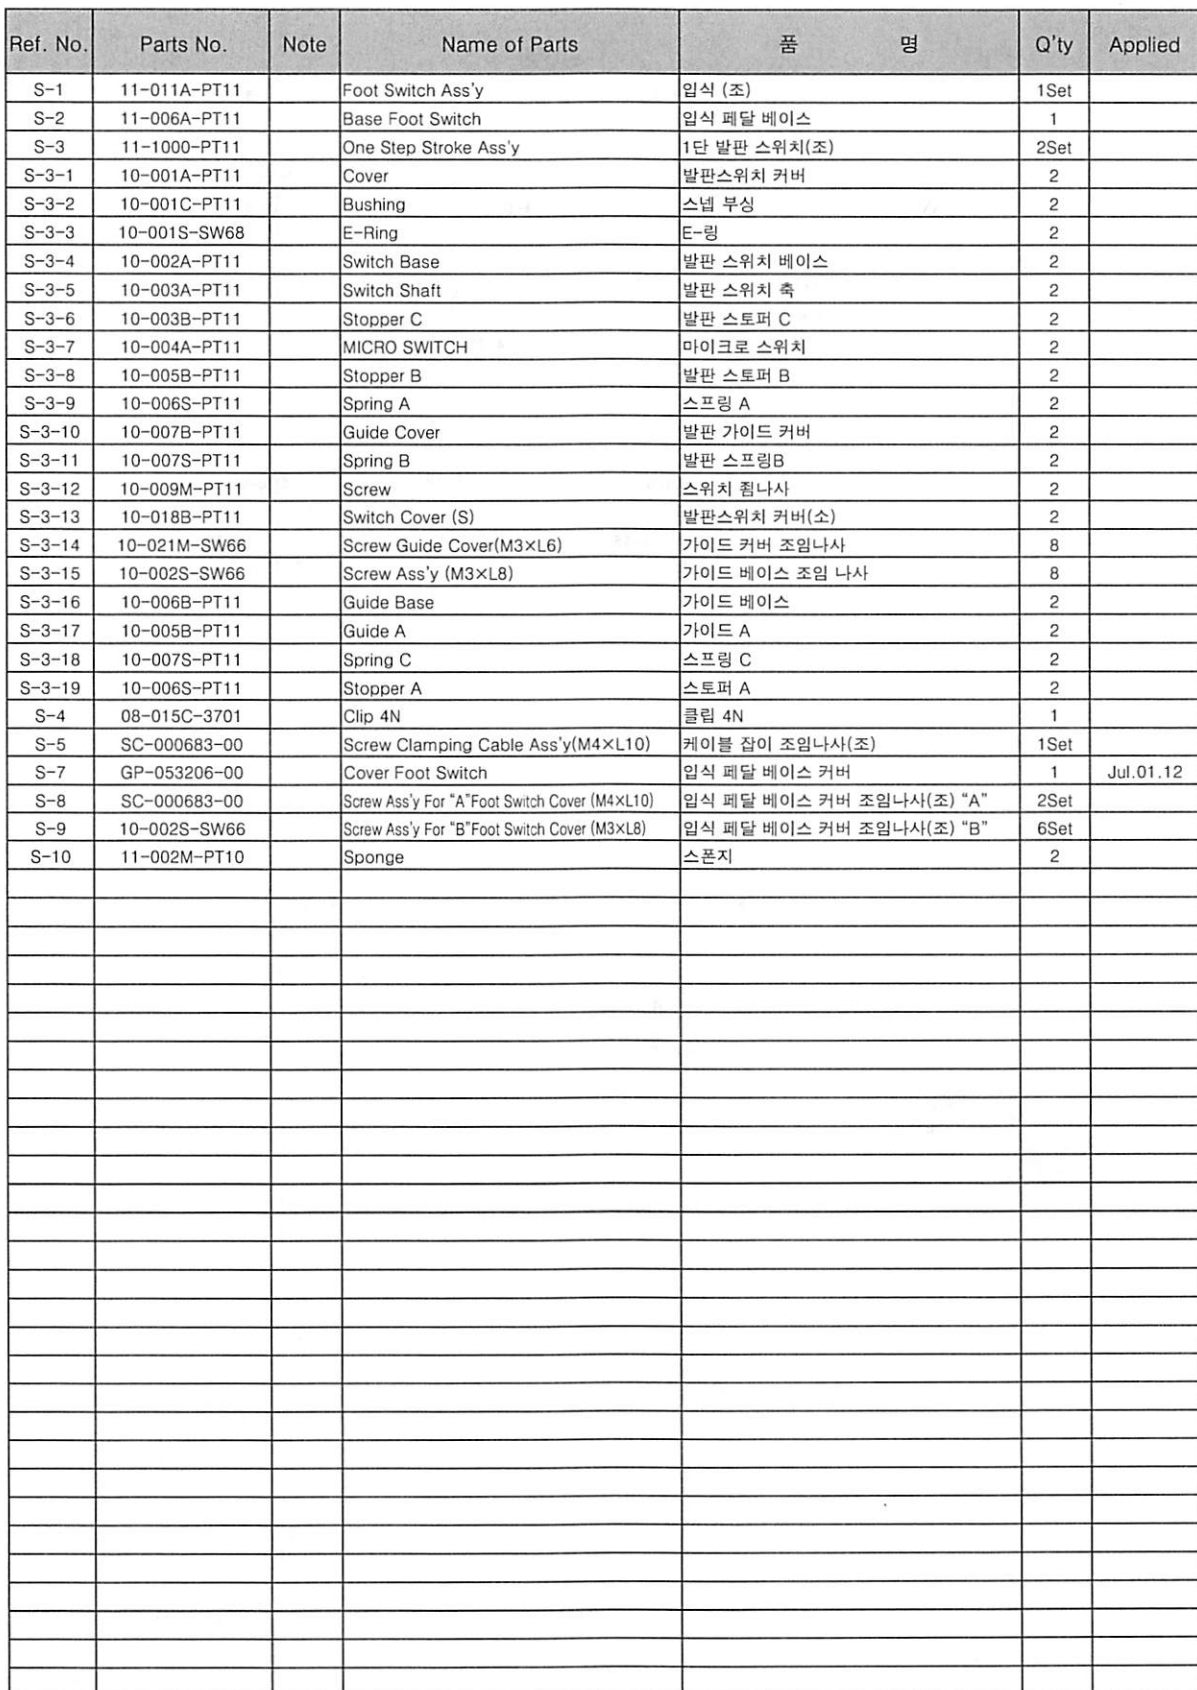




Pedal Mechanism

 
페달 관계

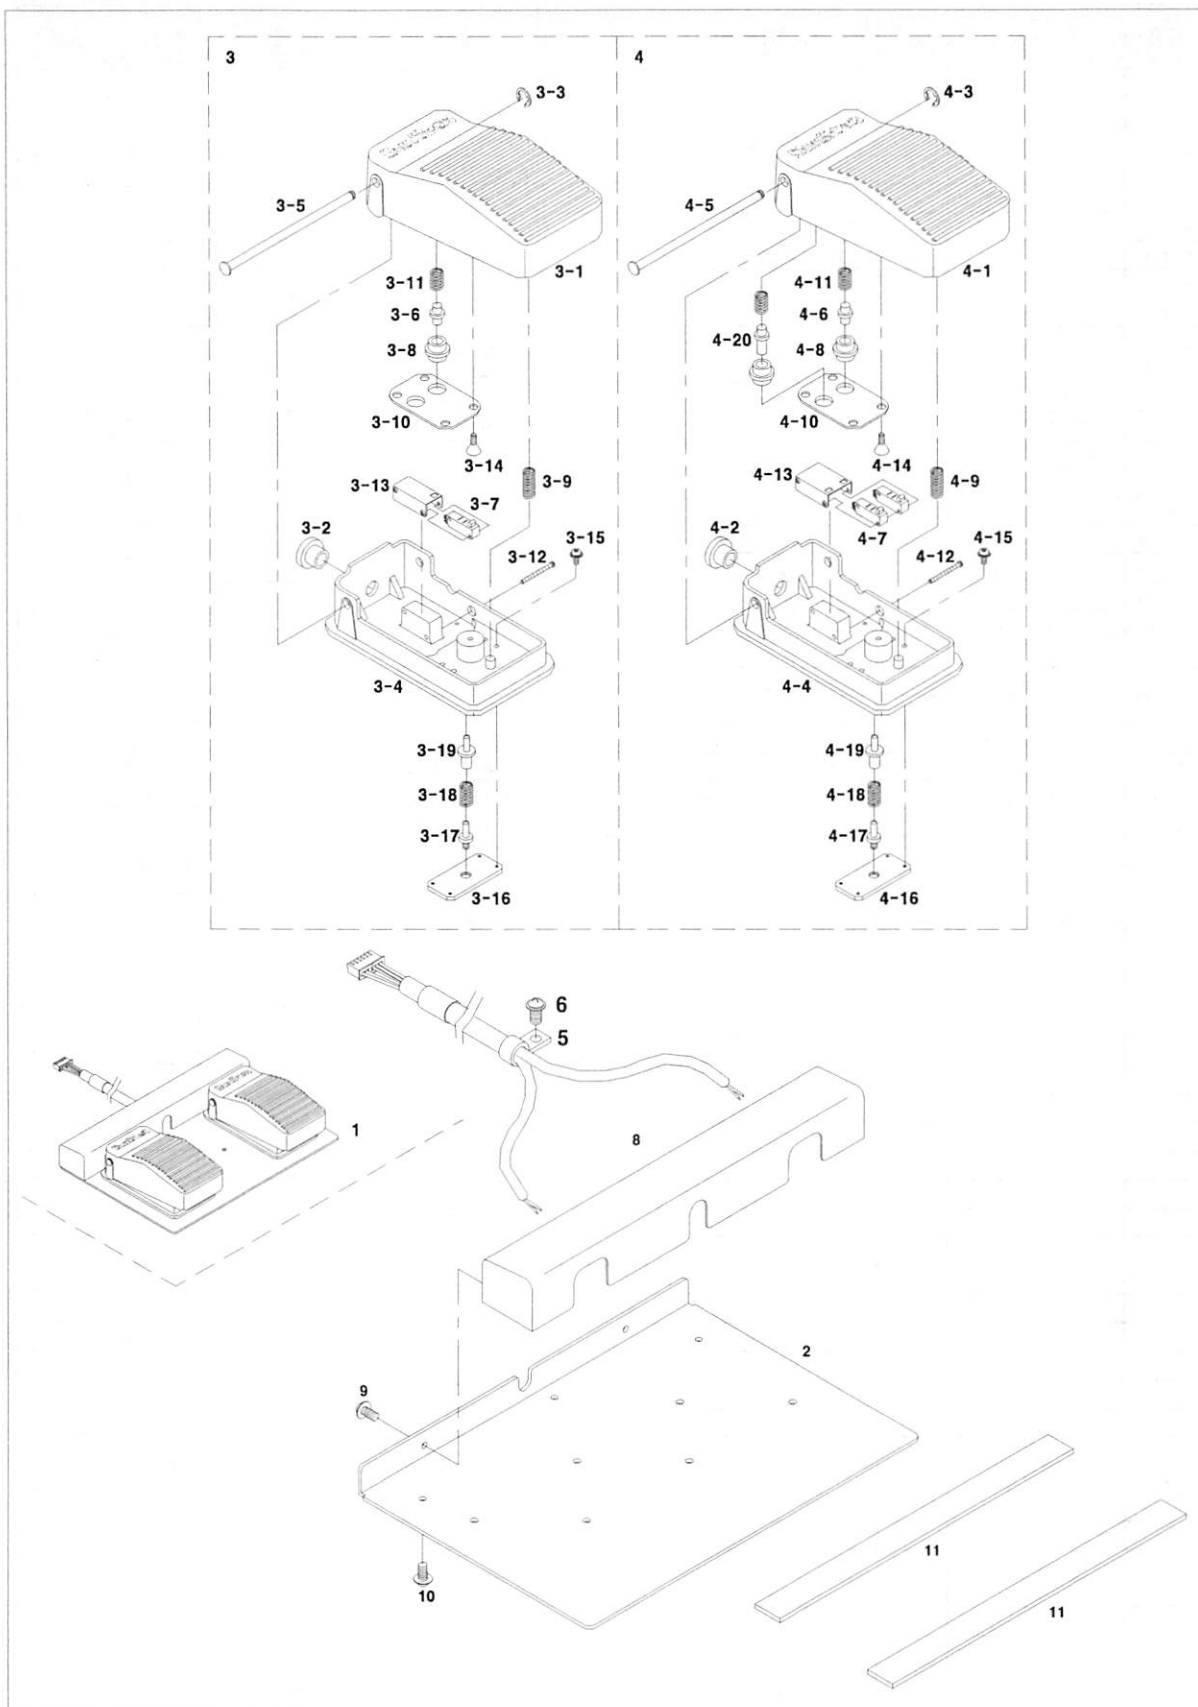

Ref. No.	Parts No.	Note	Name of Parts	품 명	Q'ty	Applied
S-1	11-012A-PT11		Foot Switch Ass'y	임식 (조)	1Set	
S-2	11-006A-PT11		Base Foot Switch	임식 페달 베이스	1	
S-3	11-1000-PT11		One Step Stroke Ass'y	1단 발판 스위치(조)	1Set	
S-3-1	10-001A-PT11		Cover	발판스위치 커버	1	
S-3-2	10-001C-PT11		Bushing	스냅 부싱	1	
S-3-3	10-001S-SW68		E-Ring	E-링	1	
S-3-4	10-002A-PT11		Switch Base	발판 스위치 베이스	1	
S-3-5	10-003A-PT11		Switch Shaft	발판 스위치 축	1	
S-3-6	10-003B-PT11		Stopper C	발판 스토퍼 C	1	
S-3-7	10-004A-PT11		MICRO SWITCH	마이크로 스위치	1	
S-3-8	10-005B-PT11		Stopper B	발판 스토퍼 B	1	
S-3-9	10-006S-PT11		Spring A	스프링 A	1	
S-3-10	10-007B-PT11		Guide Cover	발판 가이드 커버	1	
S-3-11	10-007S-PT11		Spring B	발판 스프링B	1	
S-3-12	10-009M-PT11		Screw	스위치 쥘나사	1	
S-3-13	10-018B-PT11		Switch Cover (S)	발판스위치 커버(소)	1	
S-3-14	10-021M-SW66		Screw Guide Cover(M3×L6)	가이드 커버 조임나사	4	
S-3-15	10-002S-SW66		Screw Ass'y (M3×L8)	가이드 베이스 조임 나사	4	
S-3-16	10-006B-PT11		Guide Base	가이드 베이스	1	
S-3-17	10-005B-PT11		Guide A	가이드 A	1	
S-3-18	10-007S-PT11		Spring C	스프링 C	1	
S-3-19	10-006S-PT11		Stopper A	스토퍼 A	1	
S-4	11-2000-PT11		Two Step Stroke Ass'y	2단 발판 스위치(조)	1Set	
S-4-1	10-001A-PT11		Cover	발판스위치 커버	1	
S-4-2	10-001C-PT11		Bushing	스냅 부싱	1	
S-4-3	10-001S-SW68		E-Ring	E-링	1	
S-4-4	10-002A-PT11		Switch Base	발판 스위치 베이스	1	
S-4-5	10-003A-PT11		Switch Shaft	발판 스위치 축	1	
S-4-6	10-003B-PT11		Stopper C	발판 스토퍼 C	1	
S-4-7	10-004A-PT11		MICRO SWITCH	마이크로 스위치	2	
S-4-8	10-005B-PT11		Stopper B	발판 스토퍼 B	1	
S-4-9	10-006S-PT11		Spring A	스프링 A	1	
S-4-10	10-007B-PT11		Guide Cover	발판 가이드 커버	1	
S-4-11	10-007S-PT11		Spring B	발판 스프링B	1	
S-4-12	10-009M-PT11		Screw	스위치 쥘나사	1	
S-4-13	10-007B-PT11		Switch Cover (L)	발판스위치 커버(대)	1	
S-4-14	10-021M-SW66		Screw Guide Cover(M3×L6)	가이드 커버 조임나사	4	
S-4-15	10-002S-SW66		Screw Ass'y (M3×L8)	가이드 베이스 조임 나사	4	
S-4-16	10-006B-PT11		Guide Base	가이드 베이스	1	
S-4-17	10-005B-PT11		Guide A	가이드 A	1	
S-4-18	10-007S-PT11		Spring C	스프링 C	1	
S-4-19	10-006S-PT11		Stopper A	스토퍼 A	1	
S-4-20	10-002B-PT11		Stopper B	스토퍼 B	1	
S-5	08-015C-3701		Clip 4N	클립 4N	1	
S-6	SC-000683-00		Screw Clamping Cable Ass'y(M4×L10)	케이블 잡이 조임나사(조)	1Set	
S-8	GP-053206-00		Cover Foot Switch	임식 페달 베이스 커버	1	Jul.01.11
S-9	SC-000683-00		Screw Ass'y For "A"Foot Switch Cover (M4×L10)	임식 페달 베이스 커버 조임나사(조) "A"	2Set	
S-10	10-002S-SW66		Screw Ass'y For "B"Foot Switch Cover (M3×L8)	임식 페달 베이스 커버 조임나사(조) "B"	6Set	
S-11	11-002M-PT10		Sponge	스폰지	2	

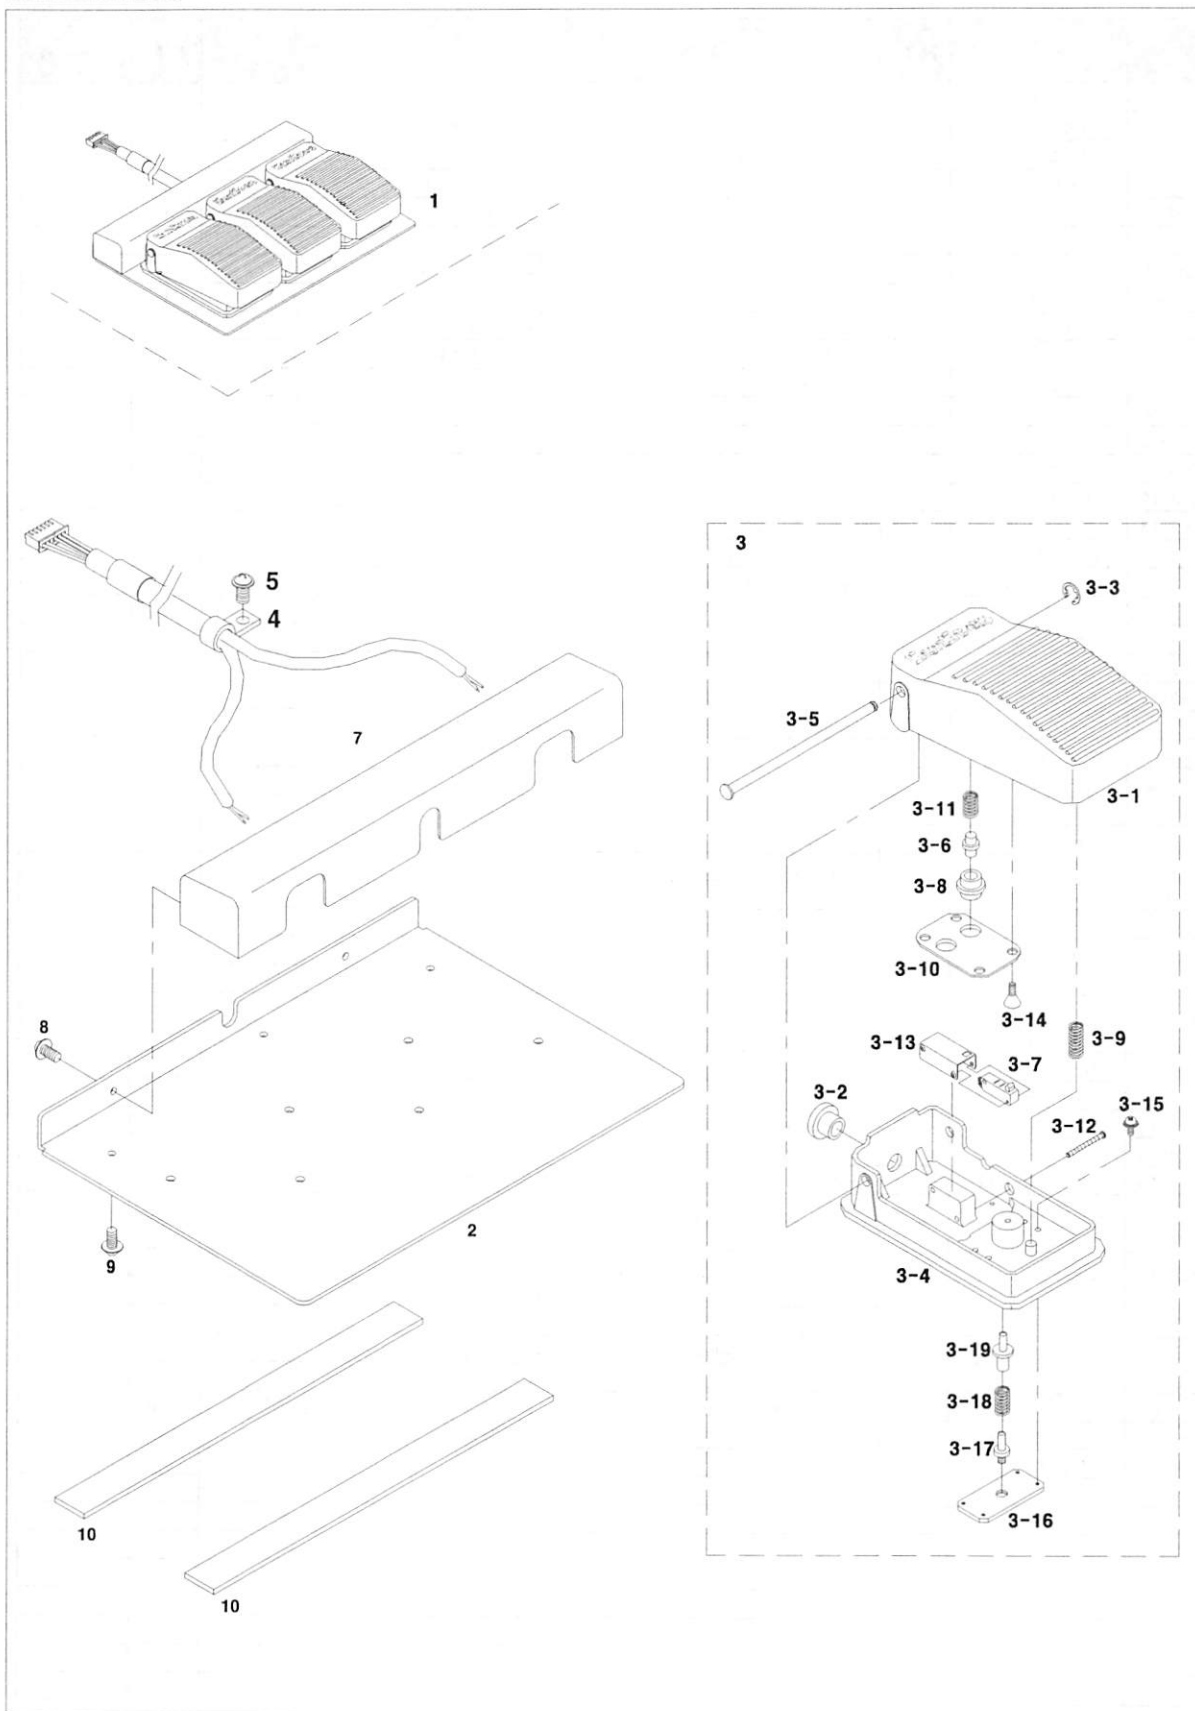 

[illegible]

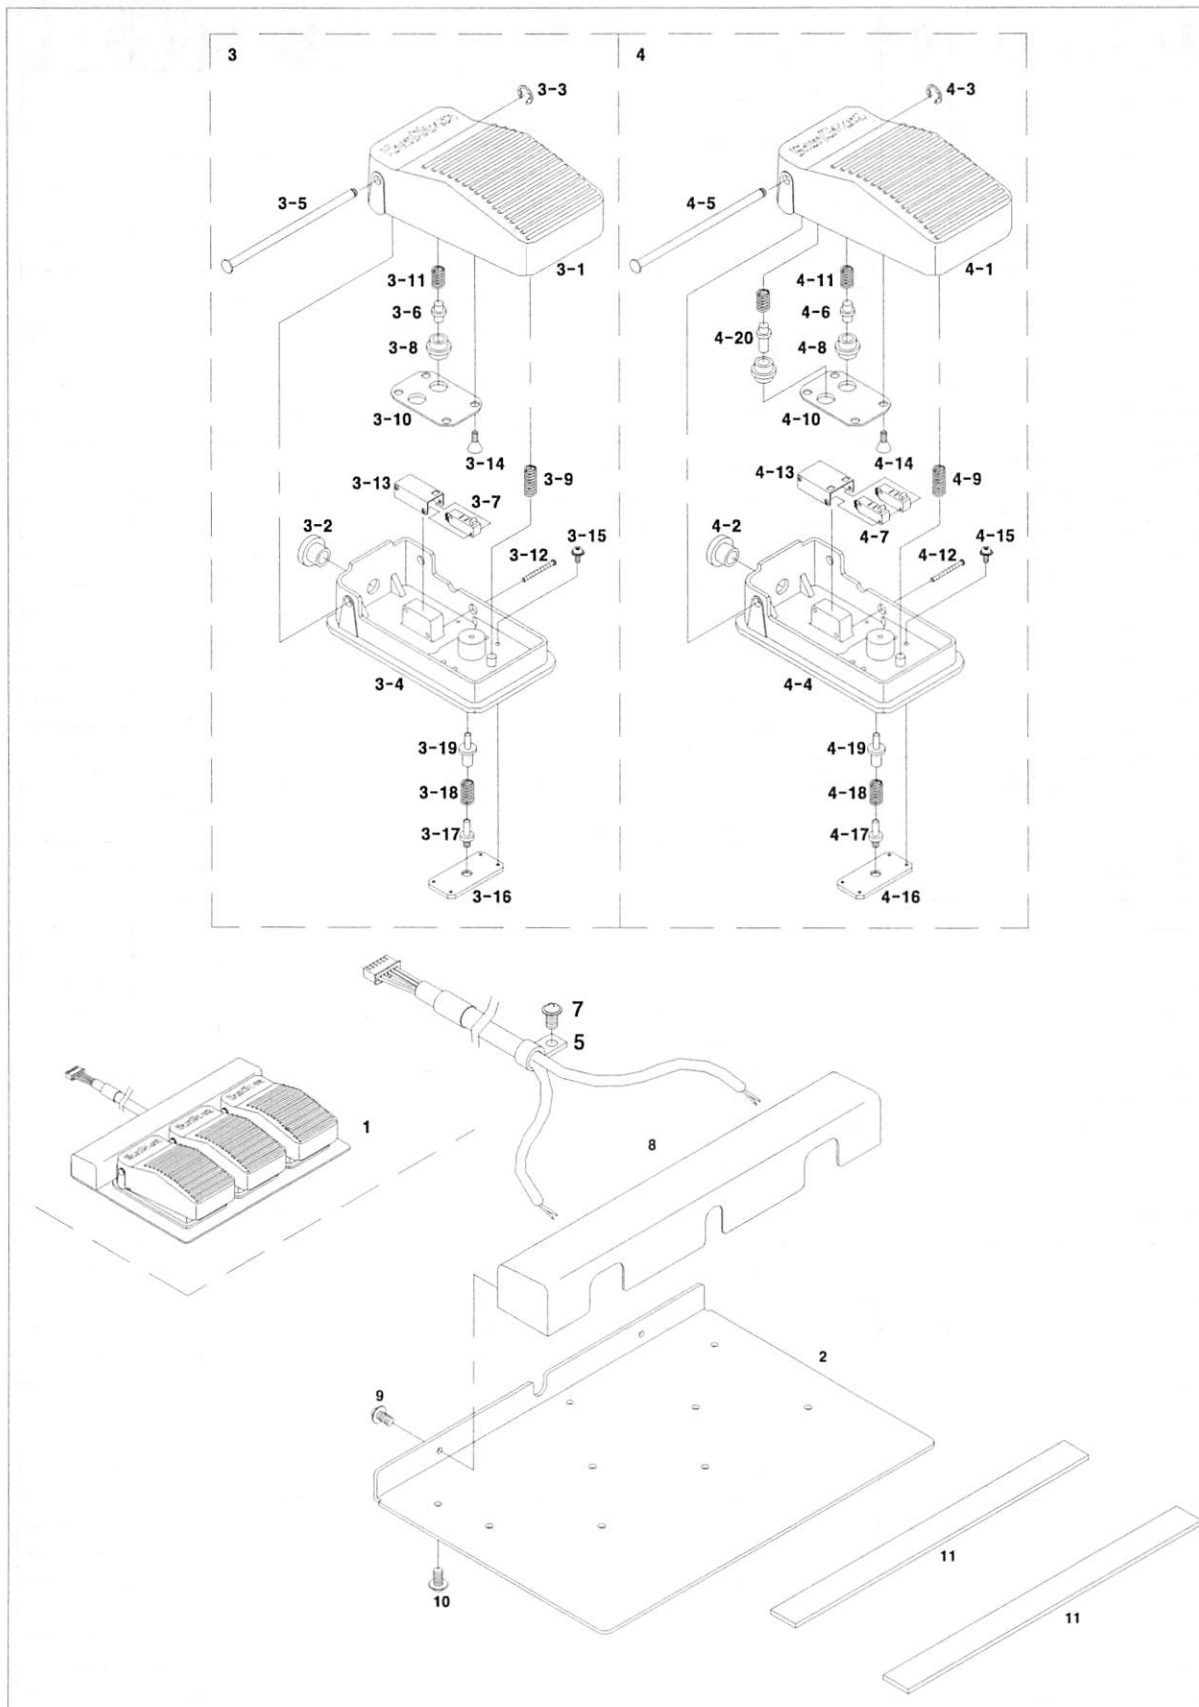 


[illegible]




Feed Mechanism

 피이드 관계

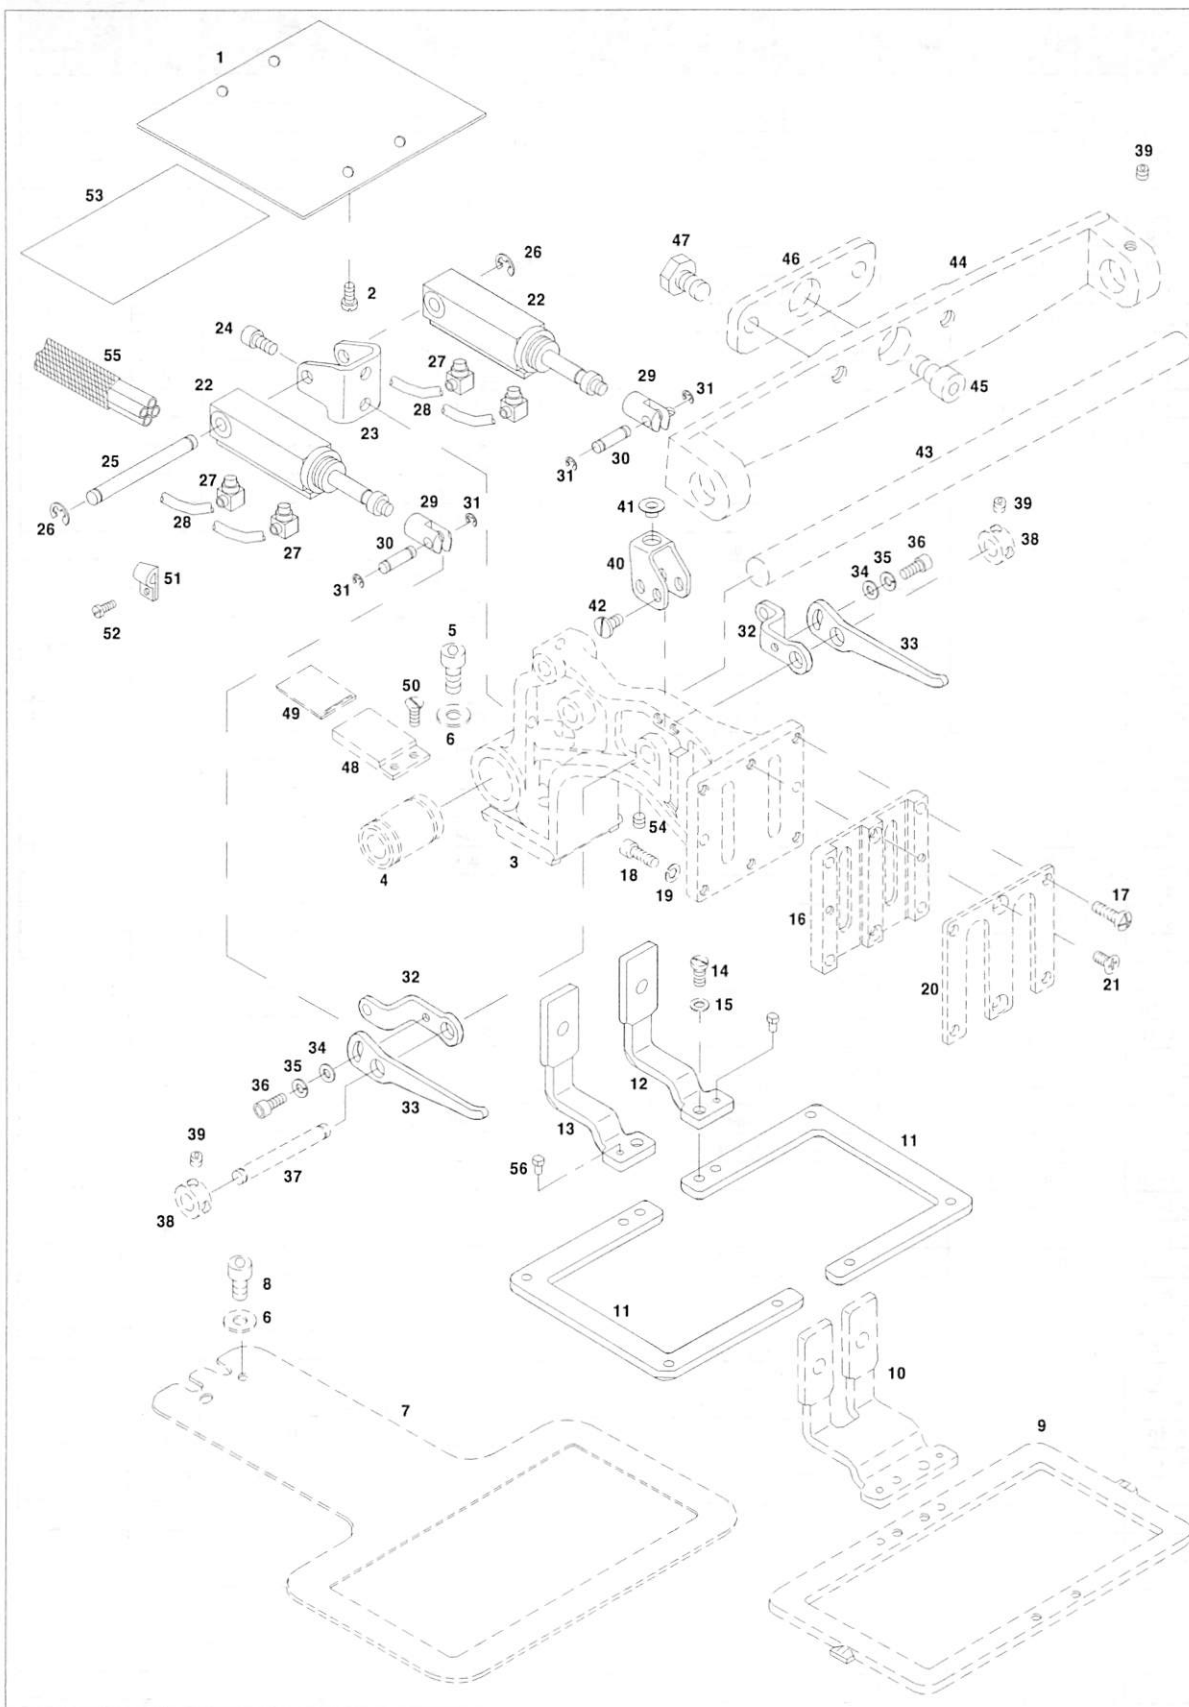

Ref. No.	Parts No.	Note	Name of Parts	품 명	Q'ty	Applied Period
T-1	CPR-BJ001500		Presser Plate	누름판	1	
T-2	DSC-BA000500		Screw(3/16"n=28)	침나사	4	
T-3	CCP-BB001200		Feed Bracket	피이드 브라켓	1	
T-4	PBR-FA000400		Ball Bush	볼 부시	1	
T-5	PSC-AC005800		Screw	침나사	2	
T-6	PWS-AA000600		Washer	와셔	2	
T-7	CGA-GJ000901		Lower Feed Plate	하 피이드 판	1	Jul.18.11
T-8	PSC-AC004600		Screw(M6×P1)	침나사	2	
T-9	CGA-GK000601	20	Upper Feed Plate	상 피이드 판	1	
T-10	ACP-PS000700	20	Feed Plate Clamp Ass'y	피이드 판 클램프(조)	1Set	
T-11	CGA-GK001000	22	Upper Feed Plate	상 피이드 판(분리형)	2	
T-12	ACP-PS000800	22	Feed Plate Clamp Ass'y (L)	피이드 판 클램프(조) [좌]	1Set	
T-13	ACP-PS000900	22	Feed Plate Clamp Ass'y (R)	피이드 판 클램프(조) [우]	1Set	
T-14	DSC-BF003600		Screw(11/64"n=40)	침나사	2	
T-15	DWS-AA001100		Washer	와셔	2	
T-16	CCP-BK001400		Feed Plate Clamp Guide Block	피이드 판 클램프 가이드 블록	1	
T-17	DSC-BF001200		Screw(11/64"n=40)	침나사	4	
T-18	PSC-AC000800		Screw(M4×P0.7)	침나사	2	
T-19	DWS-AA001100		Washer	와셔	2	
T-20	CCP-BJ001600		Feed Plate Clamp Cover	피이드 판 클램프 커버	1	
T-21	DSC-BC000100		Screw(M4×P0.7)	침나사	2	
T-22	PPP-CA003800		Air Cylinder	에어 실린더	2	
T-23	CCP-BB003700		Cylinder Base	실린더 베이스	1	
T-24	DSC-CB000700		Screw(M5×P0.8)	침나사	2	
T-25	CCP-KC001500		Cylinder Shaft	실린더 축	1	
T-26	PSR-AC000200		E-Ring	E 링 멈춤 링(호칭경Ø5)	2	
T-27	PPP-AA000100		Air Elbow	에어 엘보우	4	
T-28	PPP-AD000100		Air Hose	에어 호스	4	
T-29	CCP-BM000100		Cylinder Knuckle	실린더 너클	2	
T-30	DPN-AA000400		Connecting Link Shaft	연결 링크 축	2	
T-31	PSR-AC000300		E-Ring	E 링 멈춤링(호칭경Ø4)	4	
T-32	CCP-CA001500		Link Plate A	링크 판 A	2	
T-33	CCP-CM002300		Link Plate B	링크 판 B	2	
T-34	DWS-AA001100		Washer	와셔	2	
T-35	PWS-CA000700		Spring Washer	스프링 와셔	2	
T-36	PSC-AC001500		Screw(M4×P0.7)	침나사	2	
T-37	CCP-KC000300		Lifting Lever Shaft	올림 레버 축	1	
T-38	DCL-AA001500		Lifting Lever Shaft Collar	올림 레버 축 카라	2	
T-39	DSC-CA000400		Screw	고정나사	4	
T-40	CCP-BB003800		Slider Base	슬라이더 베이스	1	
T-41	CCP-BF000700		Clamp Shaft Holder	클램프 축 홀더	1	
T-42	DSC-BJ000200		Screw(11/64"n=40)	침나사	4	
T-43	CYF-KC000801		X-Guide Shaft	X 가이드 축	1	
T-44	CYF-BB001001		X-Guide Shaft Bracket	X 가이드 축 브라켓	1	Jul.12.10
T-45	PSC-AC004600		Screw(M6×P1)	침나사	1	
T-46	CYF-BB001100		Y-Moving Shaft Bracket	Y 이송 축 브라켓	1	
T-47	DSC-AA000800		Screw(15/64"n=28)	침나사	2	
T-48	CMB-LA004800		Y-Fixed Cover	Y 고정 커버	1	
T-49	CMB-LB004300		Y-Moving Cover	Y 이송 커버	1	
T-50	DSC-BC000100		Screw	침나사	2	
T-51	PTC-AH000200		Cable Clamp (6N)	케이블 잡이	1	
T-52	DSC-BJ000200		Screw(3/16"n=28)	침나사	1	
T-53	CPR-LF000200		Presser Plate Sheet	누름판 시트	1	
T-54	DSC-CB000700		Screw	침나사	1	
T-55	44S033S-306H		Hose Cover	호스 커버	1	
T-56	22S014S-306H		Pin	피이드판위치 제어핀	4	

 Note: 20→ Pneumatic Monolithic Feeding Frame
22→ Pneumatic Separately-Driven Feeding Frame

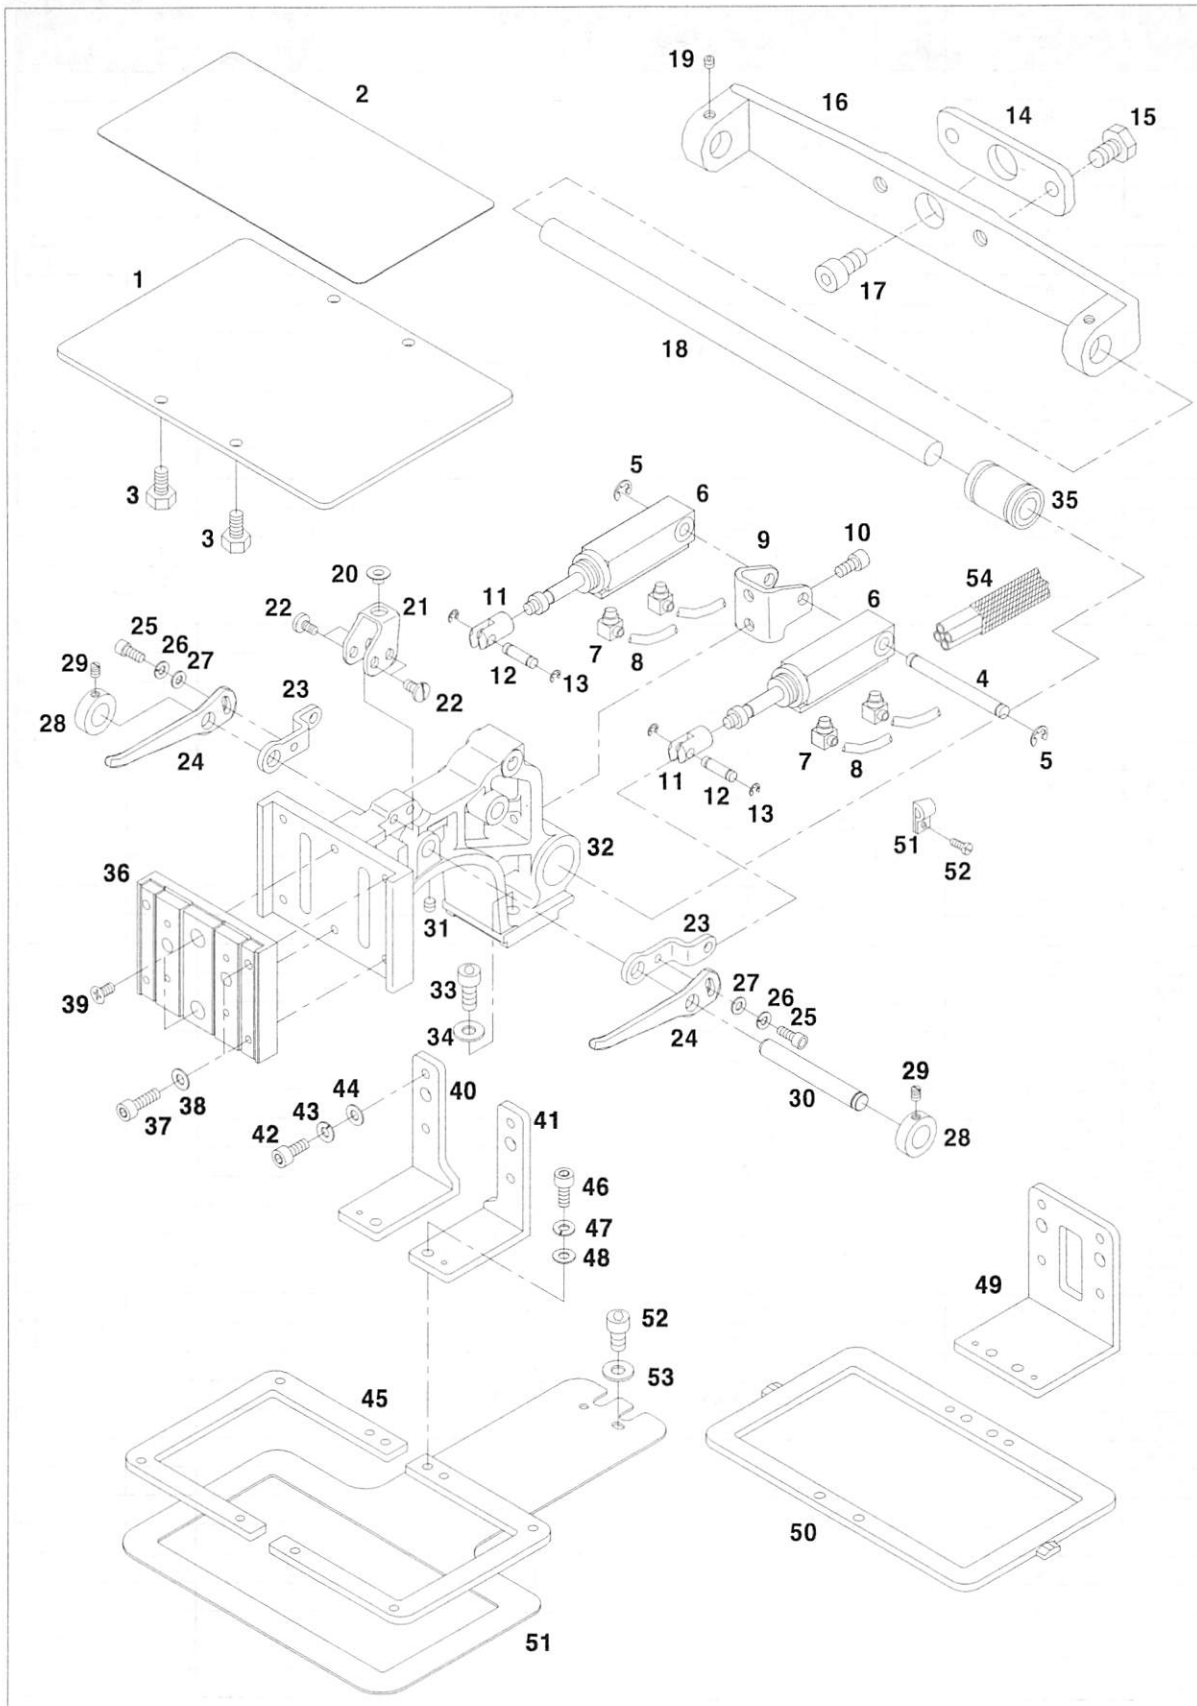


Ref. No.	Parts No.	Note	Name of Parts	품 명	Q'ty	Assembly
T1-1	CPR-BJ001500		Presser Plate	누름판	1	
T1-2	CPR-LF000200		Presser Plate Sheet	누름판 시트	1	
T1-3	DSC-AA003100		Screw(3/16"n=28)	누름판 침나사(3/16"N=28)	4	
T1-4	CCP-KC001500		Cylinder Shaft	실린더 축	1	
T1-5	PSR-AC000200		E-Ring	실린더 축 E-링(Ø5)	2	
T1-6	PPP-CA003800		Air Cylinder	에어 실린더	2	
T1-7	PPP-AA000100		Air Elbow	에어 엘보우	4	
T1-8	PPP-AD000100		Air Hose	에어 호스(Ø4)	4	
T1-9	CCP-BB003700		Cylinder Base	실린더 베이스	1	
T1-10	DSC-CB000700		Screw(M5×L10)	베이스 침나사(M5×L10)	2	
T1-11	CCP-BM000100		Cylinder Knuckle	실린더 너클	2	
T1-12	DPN-AA000400		Connecting Link Shaft	연결 링크 축	2	
T1-13	PSR-AC000300		E-Ring	링크 축 E-링(Ø4)	4	
T1-14	CYF-BB001100		Y-Moving Shaft Bracket	Y 이송 축 브라켓	1	
T1-15	DSC-AA000800		Screw(15/64"n=28)	브라켓 침나사(15/64"n=28)	2	
T1-16	CYF-BB001001		X-Guide Shaft Bracket	X 가이드 축 브라켓	1	Jul.12.10
T1-17	PSC-AC004600		Screw(M6×L10)	Y 이송 축 침나사(M6×L10)	1	
T1-18	CYF-KC000801		X-Guide Shaft	X 가이드 축	1	
T1-19	DSC-CA000400		Screw(M5×P0.8)	X-가이드 축 고정나사(M5×P0.8)	2	
T1-20	CCP-BF000700		Clamp Shaft Holder	클램프 축 홀더	1	
T1-21	CCP-BB003800		Slider Base	슬라이더 베이스	1	
T1-22	DSC-BJ000200		Screw(11/64"n=40)	베이스 침나사(11/64"n=40)	4	
T1-23	CCP-CA001500		Link Plate A	링크 판 A	2	
T1-24	CCP-CM002300		Link Plate B	링크 판 B	2	
T1-25	PSC-AC001500		Screw(M4×P0.7)	링크판 침나사(M4×P0.7)	2	
T1-26	PWS-CA000700		Spring Washer	스프링 와셔	2	
T1-27	DWS-AA001100		Washer	침나사 와셔	2	
T1-28	DCL-AA001500		Lifting Lever Shaft Collar	올림 레버 축 카라	2	
T1-29	DSC-CA000400		Screw(11/64"n=40)	카라 침나사(11/64"n=40)	4	
T1-30	CCP-KC000300		Lifting Lever Shaft	올림 레버 축	1	
T1-31	DSC-CB000700		Screw(M5×P0.8)	올림레버 축 침나사(M5 X P0.8)	1	
T1-32	CCP-BB000900		Feed Bracket	피이드 브라켓	1	
T1-33	PSC-AC003200		Screw(M6×P1)	피이드 브라켓 고정나사(M6×P1)	2	
T1-34	PWS-AA000300		Washer	고정나사 와셔	2	
T1-35	PBR-FA000400		Ball Bush	X 가이드 축 볼 부시	1	
T1-36	ACP-PS000500		Clamp Guide(Ass'y)	클램프 가이드(조)	1Set	
T1-37	PSC-AC005000		Screw(M4×L20)	클램프 가이드 침나사A(M4×L20)	4	
T1-38	DWS-AA001100		Washer	침나사A 와셔	4	
T1-39	PSC-AC003500		Screw(M4×P0.7)	클램프 가이드 침나사B(M4×P0.7)	2	
T1-40	ACP-PS001000	22	Feed Plate Clamp (L)	피이드 판 클램프(좌)	1	
T1-41	ACP-PS001100	22	Feed Plate Clamp (R)	피이드 판 클램프(우)	1	
T1-42	PSC-AC003500		Screw(M4×L12)	피이드 판 클램프 고정나사(M4×L12)	4	
T1-43	DWS-AA007300		Spring Washer	스프링 와셔	4	
T1-44	PWS-AA001000		Washer	고정나사 와셔	4	
T1-45	CGA-GK001000	22	Upper Feed Plate	상피이드 판(분리형)	2	
T1-46	PSC-AC000200		Screw(M4×L10)	상피이드 판 고정나사(M4×L10)	4	
T1-47	DWS-AA007300		Spring Washer	스프링 와셔	4	
T1-48	PWS-AA001000		Washer	고정나사 와셔	4	
T1-49	ACP-PS000400	20	Feed Plate Clamp Ass'y	피이드 판 클램프(조)	1Set	
T1-50	CGA-GK001400	20	Upper Feed Plate	상피이드 판	1	
T1-51	CGA-GJ001601		Lower Feed Plate	하피이드 판	1	Jul.18.11
T1-52	PSC-AC004600		Screw(M6×L10)	하피이드 판 고정나사(M6×L10)	2	
T1-53	PWS-AA000600		Washer	고정나사 와셔	2	
T1-54	49-018A-12HA		Hose Cover	호스 커버	1	
T1-55	AS-008073-00	*22	Feed Plate Clamp Lamp(L)	피이드 판 클램프(좌)	1	
T1-56	AS-008072-00	*22	Feed Plate Clamp Lamp(R)	피이드 판 클램프(우)	1	
T1-57	CGA-GK001501	*22	Upper Feed Plate	상피이드 판(분리형)	2	
T1-58	ACP-PS000700	*20	Feed Plate Clamp Ass'y	피이드 판 클램프(조)	1Set	

Note: 20→ Pneumatic Monolithic Feeding Frame
22→ Pneumatic Separately-Driven Feeding Frame



Air Control Mechanism

 에어 제어 관계

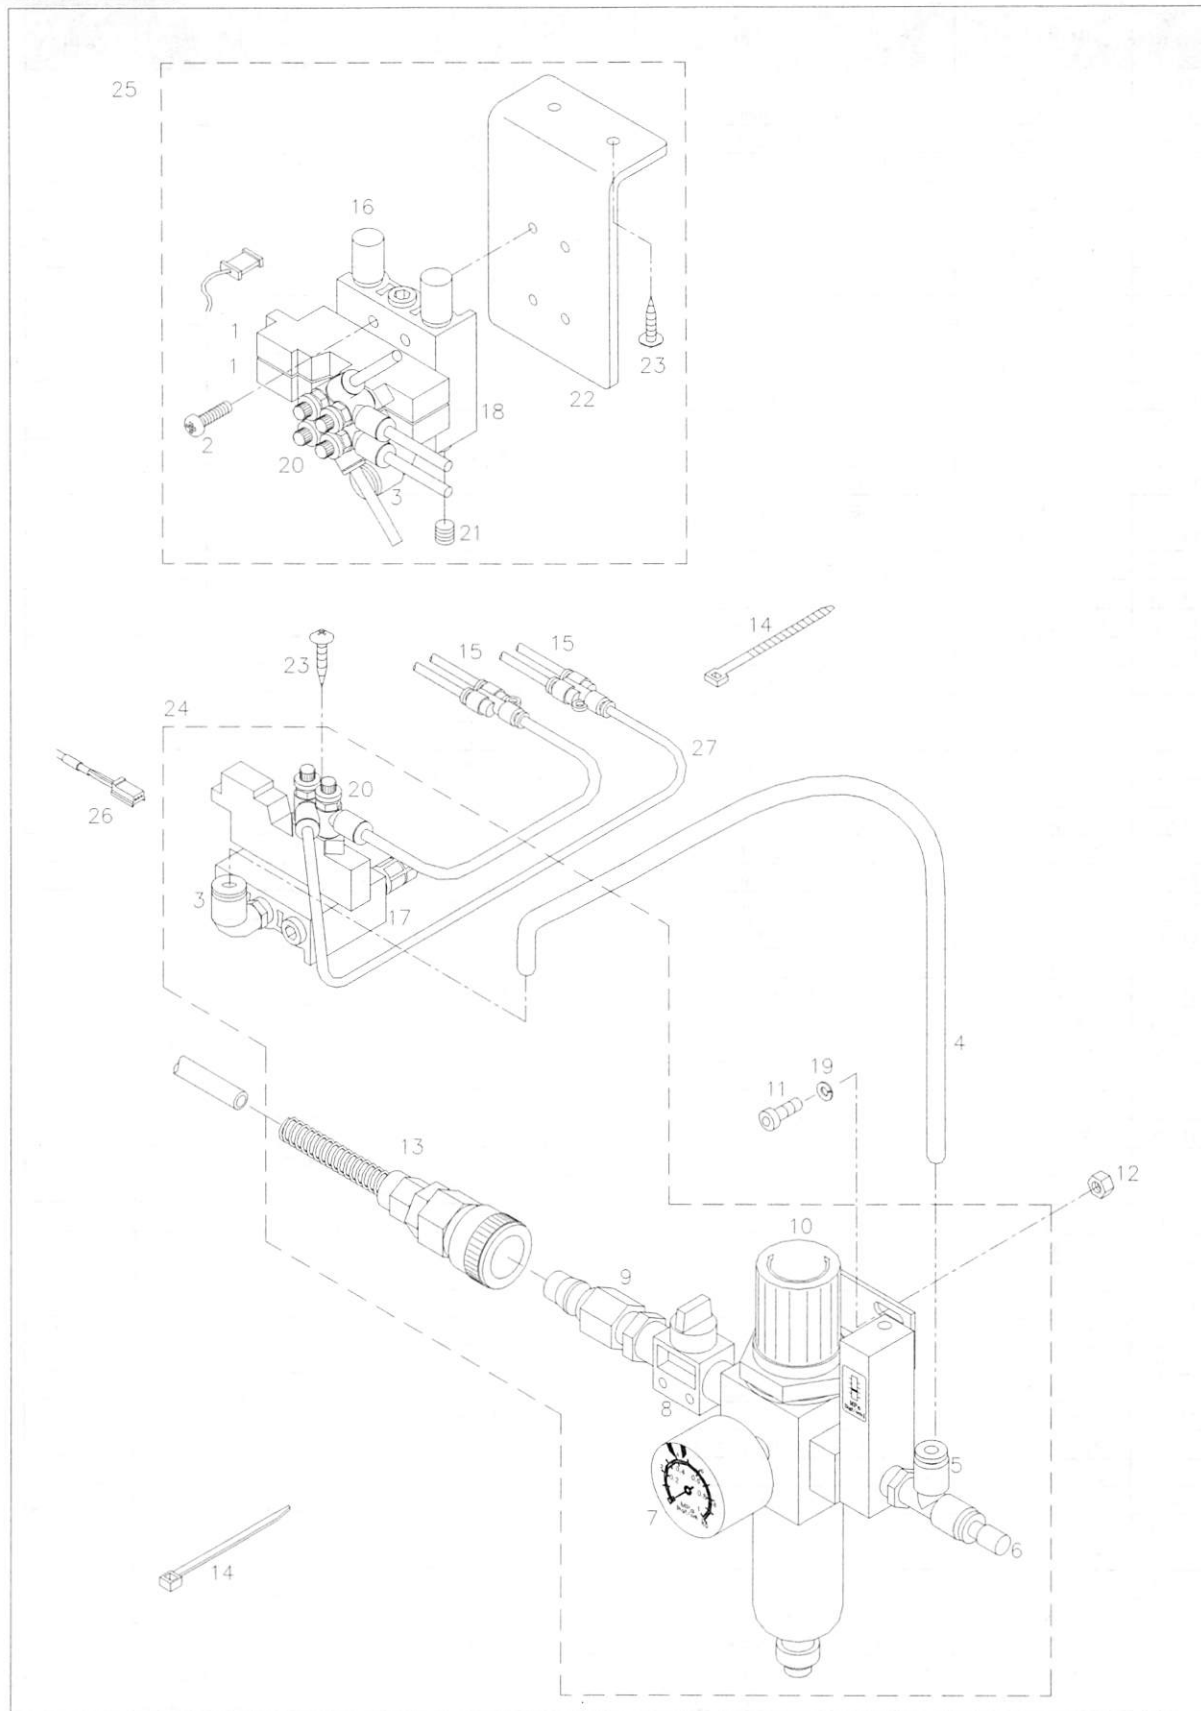


[illegible]

Note: 20→ Pneumatic Monolithic Feeding Frame
22→ Pneumatic Separately-Driven Feeding Frame

V

SPS/A-□□-HP(GP)

 SPS/A-□□-HP(GP)

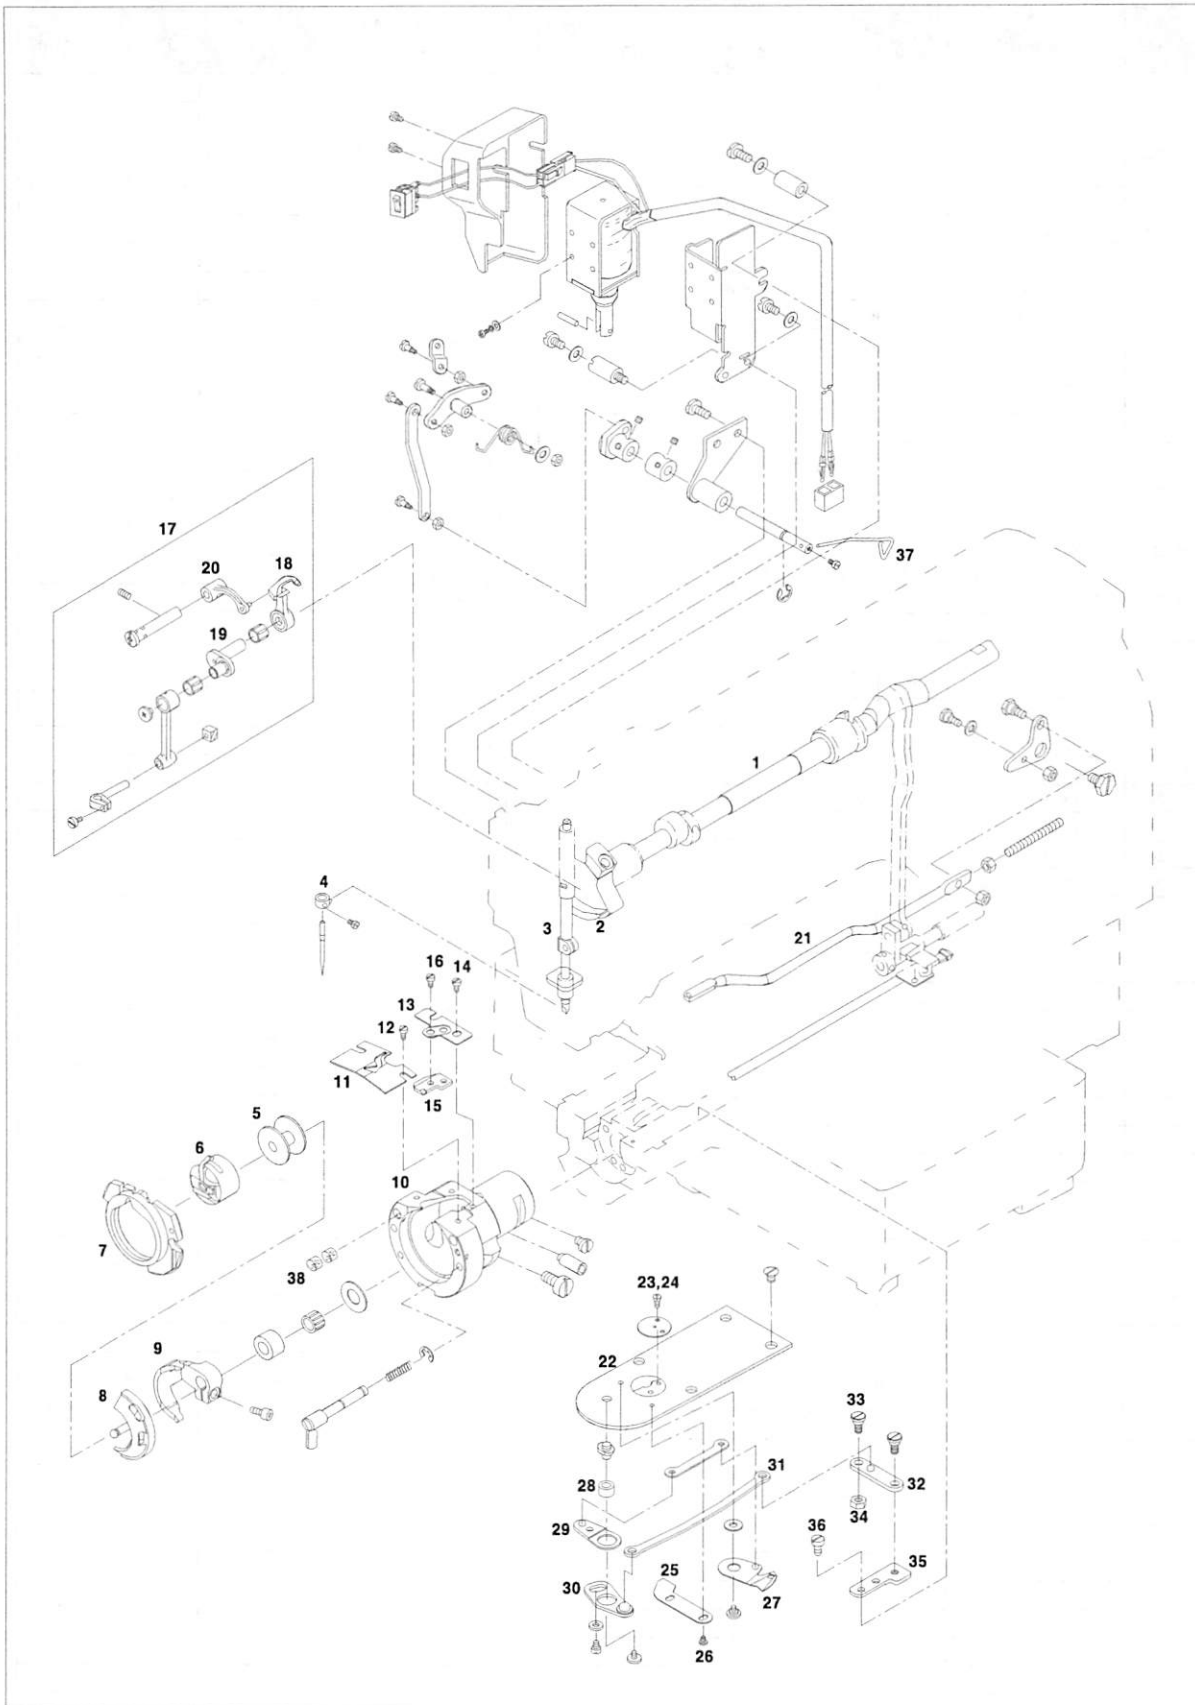

[illegible]

 
Note: HS→ Heavy Material (후물웅)

GS→ General Material (일반용)



Exclusive Parts for SPS/B-1507

SPS/B-1507 전용 부품 관계

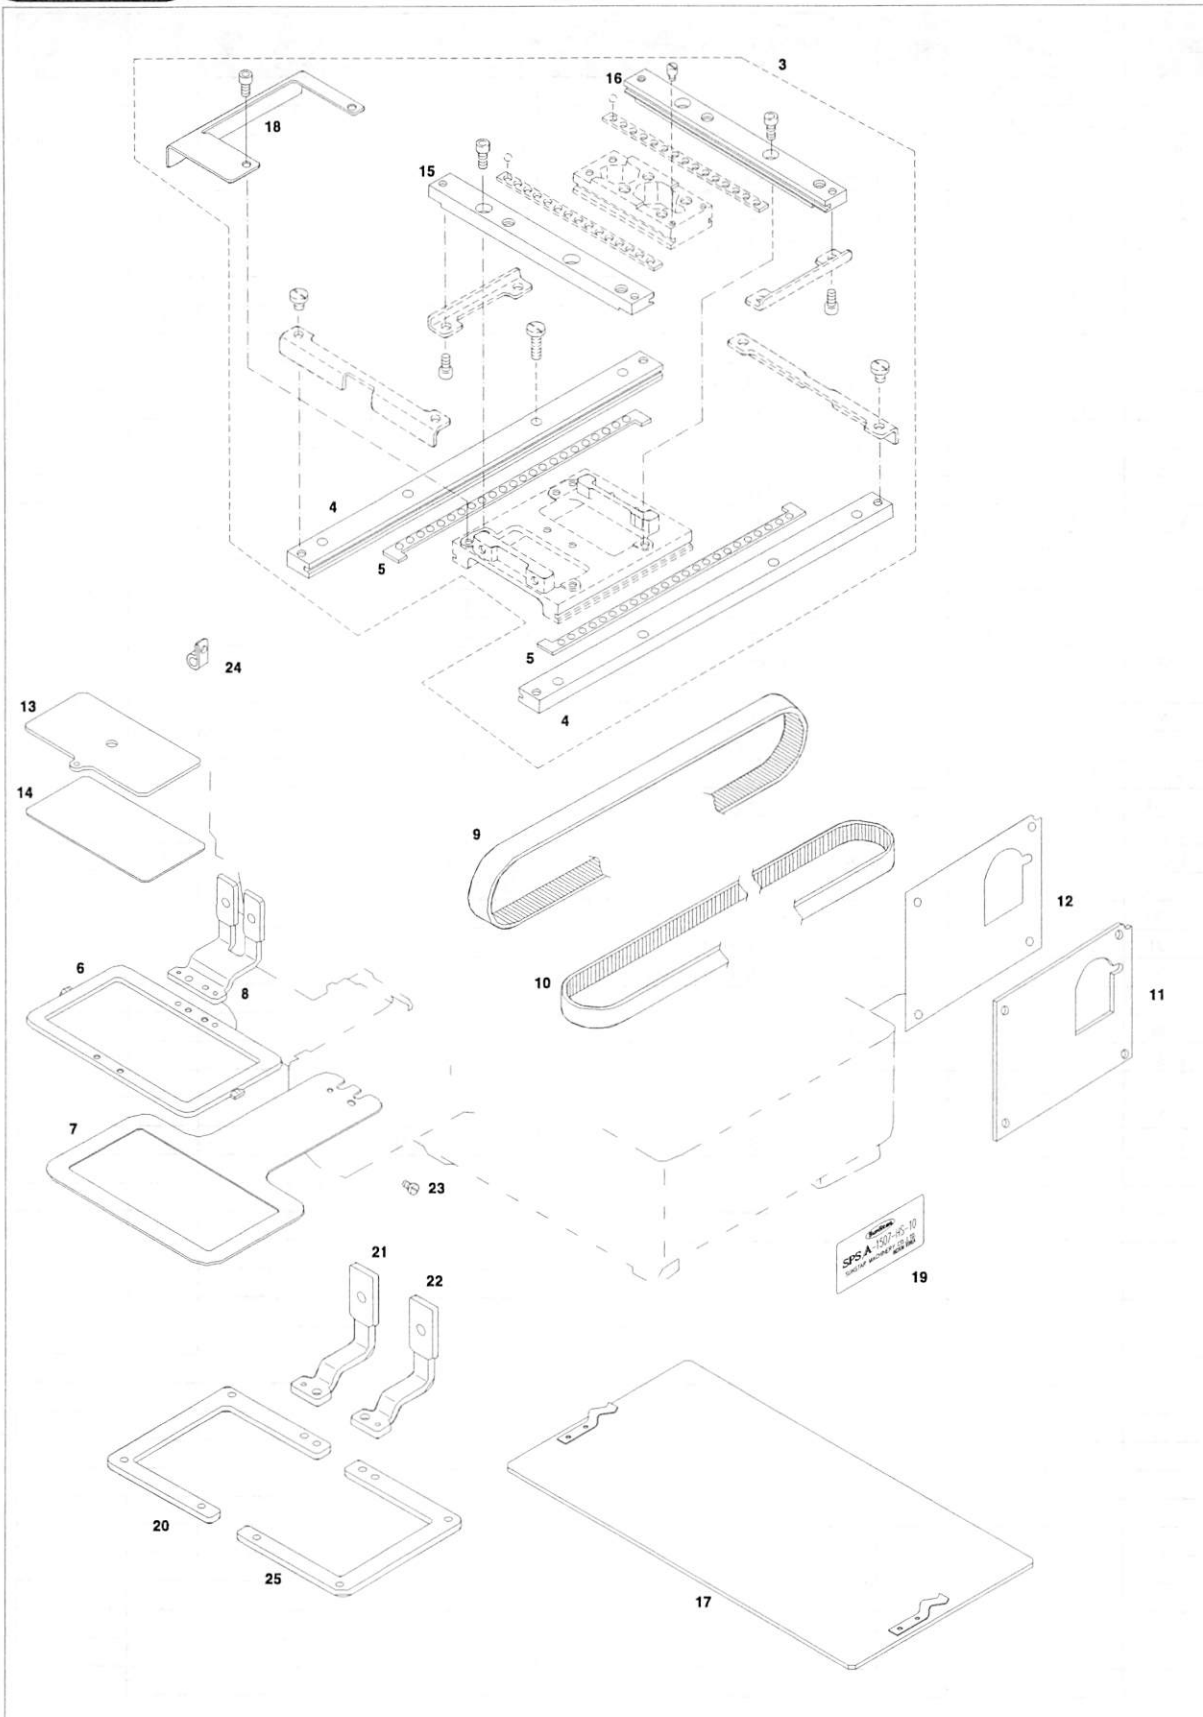



Note. HS→ Heavy Material (무거운)
GS→ General Material (일반용)



Barcode Reader Mechanism (Option)

  바코드 리더기 관계 (선택사양)

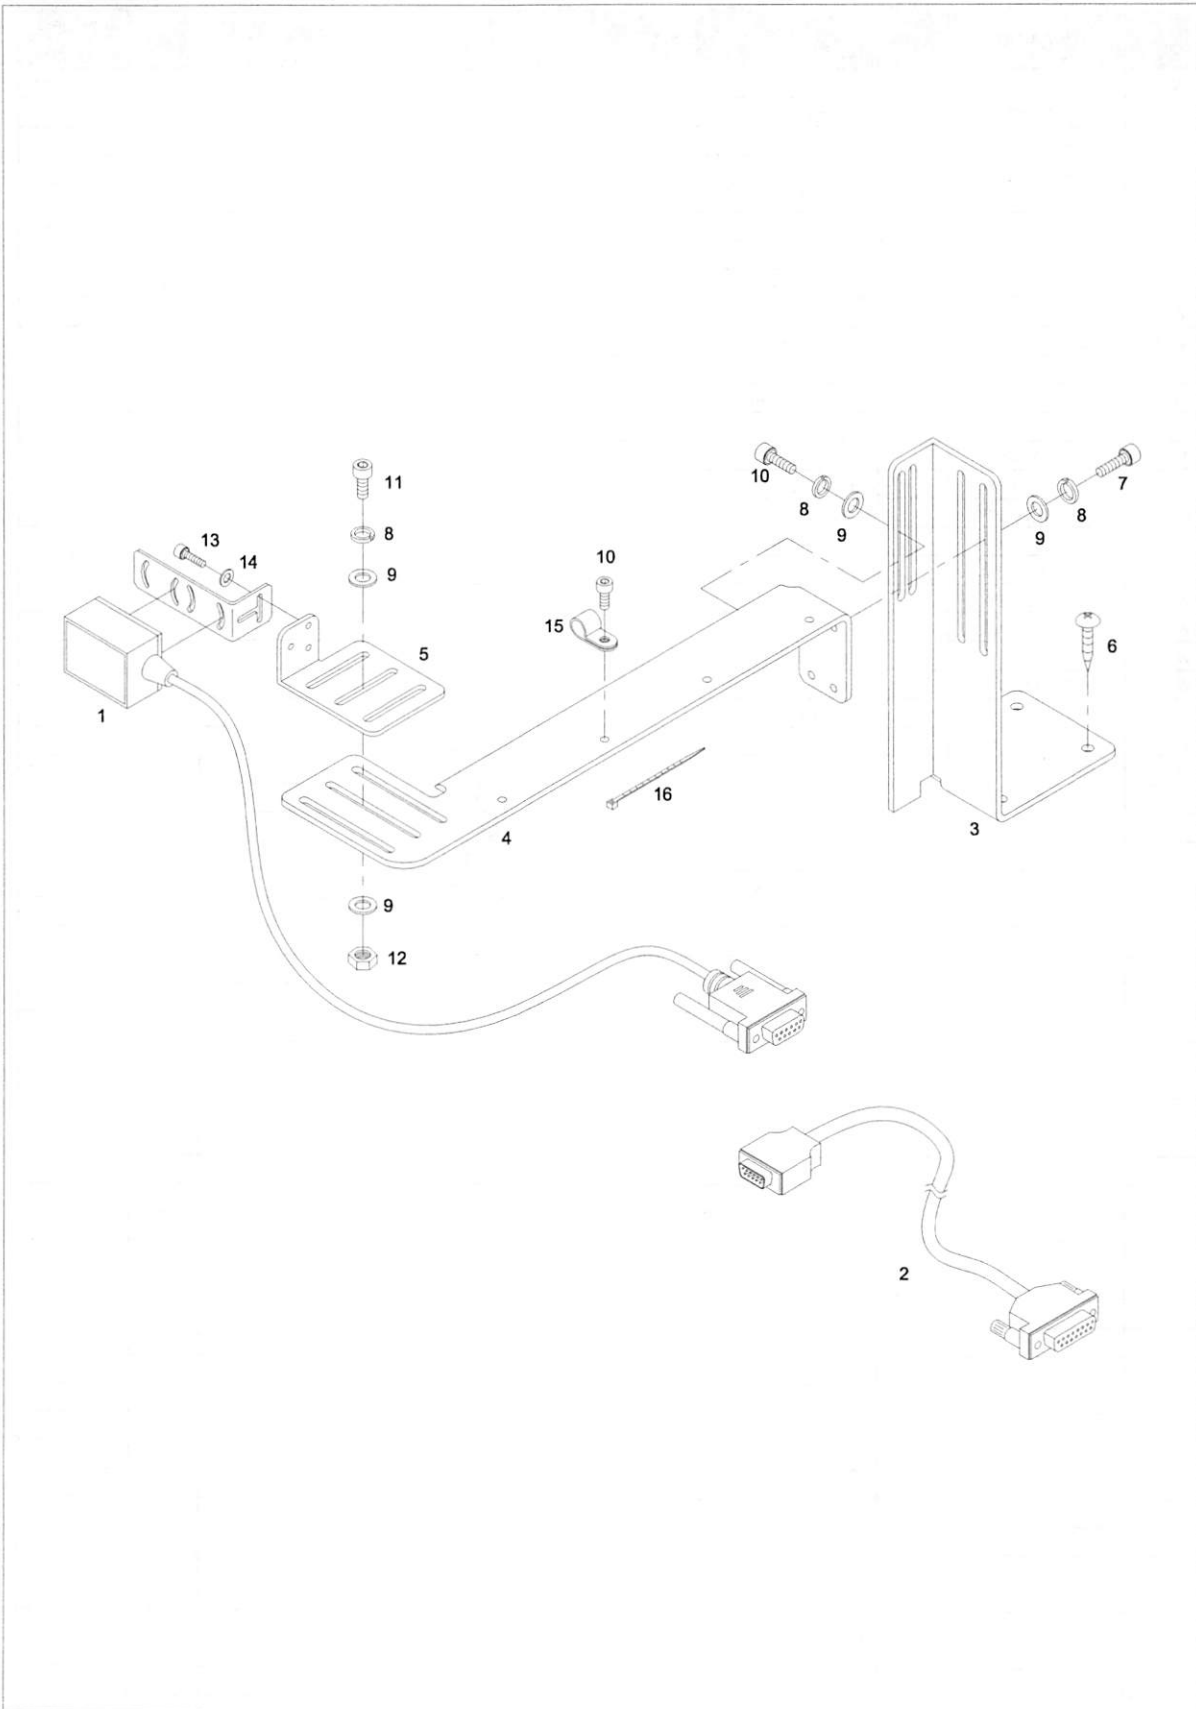

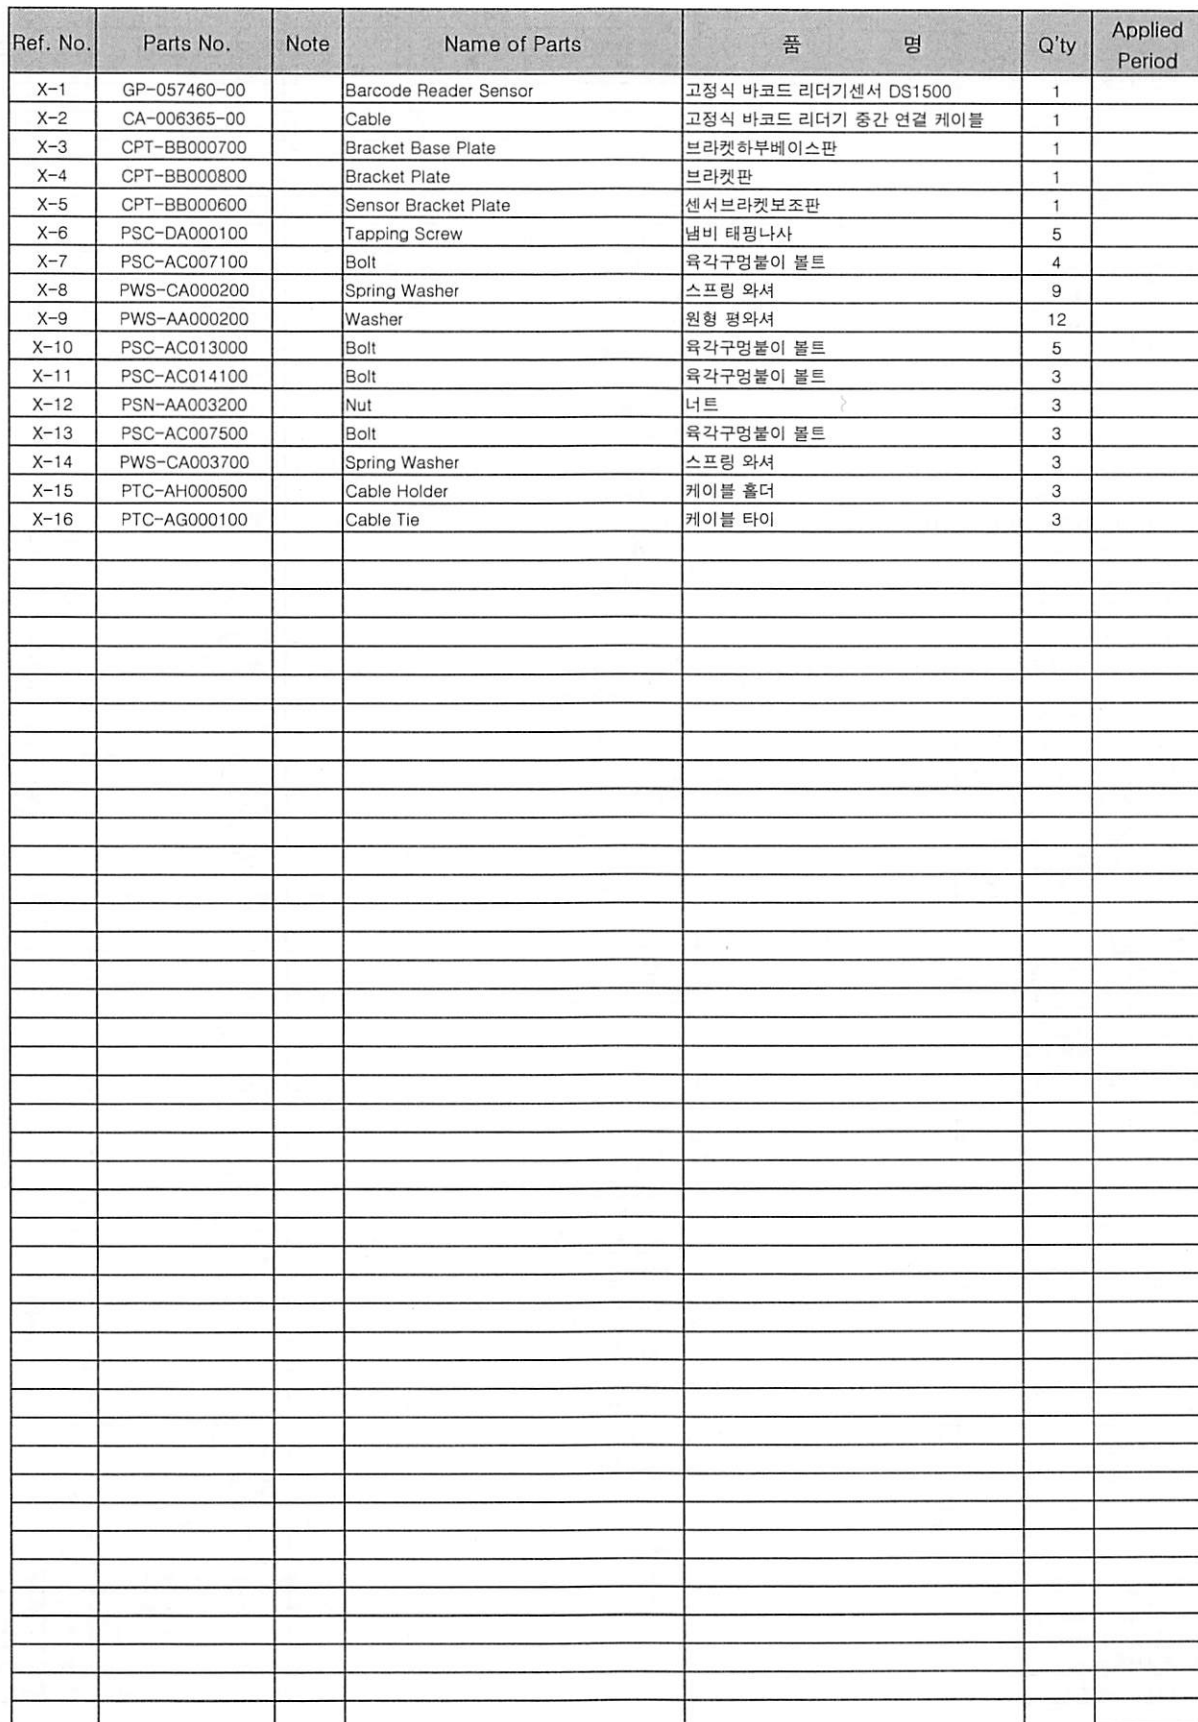

73

Index

Parts No.	Name of Parts	Page	Ref.No.	Parts No.	Name of Parts	Page	Ref.No.	Parts No.	Name of Parts	Page	Ref.No.
006-00T-0011	Needle(DP×17 #18)	15	C-27	10-001C-PT11	Bushing	61	S-3-2	10-005B-PT11	Stopper B	57	S-3-8
006-00T-0011	Needle(DP×17 #18)	47	P-10	10-001C-PT11	Bushing	61	S-4-2	10-005B-PT11	Stopper B	57	S-4-8
006-00T-0013	Needle(DP×5 # 14)	47	P-11	10-001M-PT02	Bolt Control Box(M6×L45)	49	Q-2	10-005B-PT11	Stopper B	59	S-3-8
006-00T-0013	Needle(DP×5 #14)	15	C-27	10-001S-SW68	E-Ring	55	S-3-3	10-005B-PT11	Stopper B	61	S-3-8
01-001B-CPT2	Fan Cover	49	Q-27	10-001S-SW68	E-Ring	57	S-3-3	10-005B-PT11	Stopper B	61	S-4-8
01-001C-ZIZA	Fuse 7A 250V	49	Q-58	10-001S-SW68	E-Ring	57	S-4-3	10-005M-PT10	Isolation Bushing "A"	49	Q-49
01-002C-ZIZA	Fuse 5A 250V	51	Q-59	10-001S-SW68	E-Ring	59	S-3-3	10-006B-PT11	Guide Base	55	S-3-16
01-002M-AU12	Bolt Fan (M4×0.7 L=35)	49	Q-28	10-001S-SW68	E-Ring	61	S-3-3	10-006B-PT11	Guide Base	57	S-3-16
01-004S-BT01	Sticker Replacing Filter	49	Q-55	10-001S-SW68	E-Ring	61	S-4-3	10-006B-PT11	Guide Base	57	S-4-16
01-011C-WE10	USB Board Stud	51	Q-93	10-002A-PT01	Front Cover Control Box	49	Q-6	10-006B-PT11	Guide Base	59	S-3-16
01-102A-PT10	Step Motor Output Cable	51	Q-70	10-002A-PT11	Switch Base	55	S-3-4	10-006B-PT11	Guide Base	61	S-3-16
01S001S-306D	Arm&Bed Ass'y	9	A-1-1	10-002A-PT11	Switch Base	57	S-3-4	10-006B-PT11	Guide Base	61	S-4-16
01S001S-507D	Arm&Bed Ass'y	71	W-1-1	10-002A-PT11	Switch Base	57	S-4-4	10-006M-PT10	Isolation Bushing "B"	49	Q-48
01S093S-306H	X-Moving Cover Ass'y	13	B-14	10-002A-PT11	Switch Base	59	S-3-4	10-006S-PT11	Spring A	55	S-3-9
01S133S-306H	Earth Cable	11	A-67	10-002A-PT11	Switch Base	61	S-3-4	10-006S-PT11	Spring A	57	S-3-9
02-0000-PT18	Power Board Ass'y	49	Q-16	10-002A-PT11	Switch Base	61	S-4-4	10-006S-PT11	Spring A	57	S-4-9
02-101A-PT10	Power Input	51	Q-71	10-002B-PT11	Stopper B	57	S-4-20	10-006S-PT11	Spring A	59	S-3-9
02-102A-PS10	Synchro Connect Cable	51	Q-72	10-002B-PT11	Stopper B	61	S-4-20	10-006S-PT11	Stopper A	55	S-3-19
02-103A-PT10	Solenoid Power Cable	51	Q-73	10-002S-SW66	Screw Ass'y (M3×L8)	55	S-3-15	10-006S-PT11	Stopper A	57	S-3-19
02-105A-PT10	Step Motor Power Cable	51	Q-75	10-002S-SW66	Screw Ass'y (M3×L8)	57	S-3-15	10-006S-PT11	Stopper A	57	S-4-19
02-106A-PT10	Fan Cable	51	Q-82	10-002S-SW66	Screw Ass'y (M3×L8)	57	S-4-15	10-006S-PT11	Stopper A	59	S-3-19
02-203A-PS10	Main Driving Motor Output Cable	51	Q-84	10-002S-SW66	Screw Ass'y (M3×L8)	59	S-3-15	10-006S-PT11	Stopper A	61	S-3-9
02S001P-306H	Upper Shaft	69	V-1	10-002S-SW66	Screw Ass'y (M3×L8)	61	S-3-15	10-006S-PT11	Stopper A	61	S-3-19
03-0000-5050	O/P Board	53	R-12-5	10-002S-SW66	Screw Ass'y (M3×L8)	61	S-4-15	10-006S-PT11	Stopper A	61	S-4-9
03-010A-PT10	Stud (3-5-37)	49	Q-41	10-002S-SW66	Screw Ass'y For "B"Foot Switch Cover (M3×L8)	55	S-9	10-006S-PT11	Stopper A	61	S-4-19
03-011A-PT10	Stud (3-5-42)	49	Q-42	10-002S-SW66	Screw Ass'y For "B"Foot Switch Cover (M3×L8)	57	S-10	10-007B-PT11	Guide Cover	55	S-3-10
03-101A-PT10	Key Input Cable	51	Q-76	10-002S-SW66	Screw Ass'y For "B"Foot Switch Cover (M3×L8)	59	S-9	10-007B-PT11	Guide Cover	57	S-3-10
03-102A-PT10	Communication Cable	51	Q-86	10-002S-SW66	Screw Ass'y For "B"Foot Switch Cover (M3×L8)	61	S-10	10-007B-PT11	Guide Cover	57	S-4-10
03-103A-PT10	Digital Speed Cable	51	Q-77	10-002S-SW66	Screw Ass'y For Main Driving Board (M3×L8)	49	Q-31	10-007B-PT11	Guide Cover	59	S-3-10
03-104A-PT10	Motor Control Cable	51	Q-78	10-003A-PT11	Switch Shaft	55	S-3-5	10-007B-PT11	Guide Cover	61	S-3-10
03-106A-PT10	Switch Input Cable	51	Q-79	10-003A-PT11	Switch Shaft	57	S-3-5	10-007B-PT11	Guide Cover	61	S-4-10
03-108A-PT10	Air Solenoid Output Cable	51	Q-80	10-003A-PT11	Switch Shaft	57	S-4-5	10-007B-PT11	Switch Cover (L)	57	S-4-13
03-207A-PT10	Electrical Solenoid Output Cable	51	Q-81	10-003A-PT11	Switch Shaft	59	S-3-5	10-007B-PT11	Switch Cover (L)	61	S-4-13
04-001S-PT10	Encoder Sticker	51	Q-63	10-003A-PT11	Switch Shaft	61	S-3-5	10-007S-PT11	Spring B	55	S-3-11
04-002S-PT10	Synchro Sticker	51	Q-64	10-003A-PT11	Switch Shaft	61	S-4-5	10-007S-PT11	Spring B	57	S-3-11
04-005C-ZIZA	Fuse 8A 250V	51	Q-60	10-003B-PT10	Connecting Plate I/O & CPU	49	Q-45	10-007S-PT11	Spring B	57	S-4-11
05-003B-AU10	Fuse 0.5A 250V	51	Q-61	10-003B-PT11	Stopper C	55	S-3-6	10-007S-PT11	Spring B	59	S-3-11
05S004S-306H	Solenoid Pin	21	F-4	10-003B-PT11	Stopper C	57	S-3-6	10-007S-PT11	Spring B	61	S-3-11
07018SC-8118	Screw(M3×L8)	51	Q-89	10-003B-PT11	Stopper C	57	S-4-6	10-007S-PT11	Spring B	61	S-4-11
07-025S-3701	Screw Ass'y	49	Q-21	10-003B-PT11	Stopper C	59	S-3-6	10-007S-PT11	Spring C	55	S-3-18
07S131P-306H	Shuttle (Large)	69	V-10	10-003B-PT11	Stopper C	61	S-3-6	10-007S-PT11	Spring C	57	S-3-18
08-002M-SW67	Stud CPU P.C.B (3-5-10)	49	Q-44	10-003B-PT11	Stopper C	61	S-4-6	10-007S-PT11	Spring C	57	S-4-18
08-015C-3701	Clip 4N	55	S-4	10-003M-PT01	Screw Ass'y For Connectors Cover	49	Q-53	10-007S-PT11	Spring C	59	S-3-18
08-015C-3701	Clip 4N	57	S-5	10-003M-PT01	Screw Ass'y For CPU P.C.B Cover	49	Q-51	10-007S-PT11	Spring C	61	S-3-18
08-015C-3701	Clip 4N	59	S-4	10-003M-PT01	Screw Control Box	49	Q-7	10-007S-PT11	Spring C	61	S-4-18
08-015C-3701	Clip 4N	61	S-5	10-003M-PT01	Screw Cover	49	Q-9	10-008A-PT10	Cover Connectors	49	Q-52
08S001P-306H	Thread Take-Up Lever Ass'y	69	V-17	10-003M-PT10	Screw Bridge Diode(M4×L16)	49	Q-38	10-009M-PT11	Screw	55	S-3-12
08S201S-306H	Thread Take-Up Lever Ass'y	15	C-7	10-003S-SW66	Spring Washer Control Box	49	Q-3	10-009M-PT11	Screw	57	S-3-12
09-025R-SC53	Rubber Cap	51	Q-65	10-004A-PT11	MICRO SWITCH	55	S-3-7	10-009M-PT11	Screw	57	S-4-12
09-041S-3701	Nut Fan(M4)	49	Q-29	10-004A-PT11	MICRO SWITCH	57	S-3-7	10-009M-PT11	Screw	59	S-3-12
10-001A-PT01	Control Box	49	Q-1	10-004A-PT11	MICRO SWITCH	57	S-4-7	10-009M-PT11	Screw	61	S-3-12
10-001A-PT11	Cover	55	S-3-1	10-004A-PT11	MICRO SWITCH	59	S-3-7	10-009M-PT11	Screw	61	S-4-12
10-001A-PT11	Cover	57	S-3-1	10-004A-PT11	Micro Switch	61	S-3-7	10-012M-PT10	Stud Main Driving Board (3-5-15)	49	Q-34
10-001A-PT11	Cover	57	S-4-1	10-004A-PT11	MICRO SWITCH	61	S-4-7	10-018B-PT11	Switch Cover (S)	55	S-3-13
10-001A-PT11	Cover	59	S-3-1	10-005A-CPT1	LCD	53	R-12-4	10-018B-PT11	Switch Cover (S)	57	S-3-13
10-001A-PT11	Cover	61	S-3-1	10-005B-PT11	Guide A	55	S-3-17	10-018B-PT11	Switch Cover (S)	59	S-3-13
10-001A-PT11	Cover	61	S-4-1	10-005B-PT11	Guide A	57	S-3-17	10-018B-PT11	Switch Cover (S)	61	S-3-13
10-001C-PT01	Fuse 3.15A 250V	51	Q-62	10-005B-PT11	Guide A	57	S-4-17	10-021M-SW66	Screw Guide Cover(M3×L6)	55	S-3-14
10-001C-PT11	Bushing	55	S-3-2	10-005B-PT11	Guide A	59	S-3-17	10-021M-SW66	Screw Guide Cover(M3×L6)	57	S-3-14
10-001C-PT11	Bushing	57	S-3-2	10-005B-PT11	Guide A	61	S-3-17	10-021M-SW66	Screw Guide Cover(M3×L6)	57	S-4-14
10-001C-PT11	Bushing	57	S-4-2	10-005B-PT11	Guide A	61	S-4-17	10-021M-SW66	Screw Guide Cover(M3×L6)	59	S-3-14
10-001C-PT11	Bushing	59	S-3-2	10-005B-PT11	Stopper B	55	S-3-8	10-021M-SW66	Screw Guide Cover(M3×L6)	61	S-3-14

Index

Parts No.	Name of Parts	Page	Ref.No.	Parts No.	Name of Parts	Page	Ref.No.	Parts No.	Name of Parts	Page	Ref.No.
10-021M-SW66	Screw Guide Cover(M3xL6)	61	S-4-14	ACP-PS0004	Feed Plate Clamp Ass'y	41	M1-36	CAB-AB0012	Bed	13	B-1
10-104A-PT10	X-Y Board Radiator	49	Q-24	ACP-PS0004	Feed Plate Clamp Ass'y	65	T1-49	CAB-AB0055	Bed(1507/B)	71	W-2
10-104A-PT18	Transformer	49	Q-20	ACP-PS0005	Clamp Guide Ass'y	41	M1-32	CAC-JB0001	Oiler	47	P-4
10-115A-PT10	Radiator Main	49	Q-32	ACP-PS0005	Clamp Guide(Ass'y)	65	T1-36	CAC-JB0002	Bottle of Oil	47	P-22
11-0000-5050	Operation Box Ass'y	53	R-12	ACP-PS0007	Feed Plate Clamp Ass'y	39	M-16	CAC-MA0001	Head Cover	47	P-25
11-001A-5050	Membrane Switch	53	R-12-1	ACP-PS0007	Feed Plate Clamp Ass'y	63	T-10	CAC-MD0002	Inner Box	47	P-67
11-001B-5050	Key Plate	53	R-12-2	ACP-PS0007	Feed Plate Clamp Ass'y	65	T1-58	CAC-MG0001	Sponge	47	P-12
11-001S-5050	Screw for Key Plate (ST2.6xL4.5)	53	R-12-3	ACP-PS0008	Feed Plate Clamp Ass'y (L)	63	T-12	CAR-BB0001	Manifold Bracket	67	U-22
11-002B-5050	LED Cover	53	R-12-8	ACP-PS0009	Feed Plate Clamp Ass'y (R)	63	T-13	CBW-BA0001	Bobbin Winder Action Body	17	D-13
11-002M-PT10	Sponge	55	S-10	ACP-PS0010	Feed Plate Clamp (L)	65	T1-40	CBW-BH0001	Bobbin Stopper	17	D-19
11-002M-PT10	Sponge	57	S-11	ACP-PS0011	Feed Plate Clamp (R)	65	T1-41	CBW-BJ0001	Thread Winder Action Plate	17	D-31
11-002M-PT10	Sponge	59	S-10	ACP-PS0012	Feed Plate Clamp Ass'y(L)	71	W-21	CBW-BJ0002	Bobbin Winder Adjusting Plate	17	D-20
11-002M-PT10	Sponge	61	S-11	ACP-PS0013	Feed Plate Clamp Ass'y(R)	71	W-22	CBW-BN0001	Bobbin Stand	17	D-18
11-002S-5050	Screw for O/P Cover (ST2.9xL8)	53	R-12-11	ACP-PS0014	Feed Plate Clamp Ass'y	71	W-8	CBW-CM0001	Bobbin Winder Lever	17	D-23
11-003A-5050	OP Unit Cable	53	R-12-12	AHK-PS0001	Inner Hook Presser Shaft Ass'y	19	E-39	CBW-CP0001	Thread Winder Action Pulley	17	D-14
11-003B-5050	Sensor Cover	53	R-12-9	ALS-PS0004	Lower Shaft Ass'y	19	E-1	CBW-DZ0001	Thread Winder Adjusting Cam	17	D-28
11-006A-PT11	Base Foot Switch	55	S-2	AMB-PS0001	Safety Plate Ass'y	9	A-33	CBW-FA0001	Thread Winder Action Ring	17	D-16
11-006A-PT11	Base Foot Switch	57	S-2	AMB-PS0002	Silicon Tank Ass'y	9	A-27	CBW-FA0002	Bobbin Winder Shaft Rubber Ring	17	D-17
11-006A-PT11	Base Foot Switch	59	S-2	AMB-PS0003	Thread Tension Controller Ass'y	17	D-35	CBW-KC0001	Bobbin Winder Lever Shaft	17	D-25
11-006A-PT11	Base Foot Switch	61	S-2	AMB-PS0006	Hook Cover Ass'y	19	E-44	CBW-KZ0001	Bobbin Winder Shaft	17	D-12
11-011A-PT11	Foot Switch Ass'y	55	S-1	APR-PS0007	Presser Plate Arm(R) Ass'y	25	G-3	CCP-BB0009	Feed Bracket	41	M1-7
11-012A-PT11	Foot Switch Ass'y	57	S-1	APR-PS0008	Presser Plate Arm(L) Ass'y	25	G-2	CCP-BB0009	Feed Bracket	65	T1-32
11-019M-2350	Solenoid Tube	29	I-33	AS-000135	Ball Guide Ass'y	71	W-3	CCP-BB0012	Feed Bracket	39	M-7
11-1000-PT11	One Step Stroke Ass'y	55	S-3	AS-000317	Plastic Blank Plate Ass'y(1507)	47	P-8-1	CCP-BB0012	Feed Bracket	63	T-3
11-1000-PT11	One Step Stroke Ass'y	57	S-3	AS-000317	Plastic Blank Plate Ass'y	71	W-17	CCP-BB0037	Cylinder Base	63	T-23
11-1000-PT11	One Step Stroke Ass'y	59	S-3	AS-007277	Y-Sensor Bracket Ass'y	37	L-37	CCP-BB0037	Cylinder Base	65	T1-9
11-1000-PT11	One Step Stroke Ass'y	61	S-3	AS-008065	Feed Plate Clamp Ass'y	41	M1-49	CCP-BB0038	Slider Base	63	T-40
11-111A-PT11	Foot Switch Ass'y	59	S-1	AS-008072	Feed Plate Clamp Lamp(R)	65	T1-56	CCP-BB0038	Slider Base	65	T1-21
11-2000-PT11	Two Step Stroke Ass'y	57	S-4	AS-008073	Feed Plate Clamp Lamp(L)	65	T1-55	CCP-BF0007	Clamp Shaft Holder	63	T-41
11-2000-PT11	Two Step Stroke Ass'y	61	S-4	ATA-PS0001	Thread Tension Adjusting Ass'y	27	H-1	CCP-BF0007	Clamp Shaft Holder	65	T1-20
11S036S-306H	Wiper On/Off Switch Ass'y	29	I-29	ATA-PS0002	Second Thread Tension Adjusting Ass'y	27	H-15	CCP-BJ0015	Lifting Lever Adjusting Plate	39	M-37
12-001M-PT10	Rubber Magnet for O/P	53	R-12-10	ATT-PS0004	Moving Mes	31	J-45	CCP-BJ0015	Lifting Lever Adjusting Plate	41	M1-26
12-002B-5050	Sensor/Switch Cable	51	Q-83	ATT-PS0004	Moving Mes	47	P-23	CCP-BJ0016	Feed Plate Clamp Cover	39	M-20
12-003M-PT10	Screw Operation Unit Stand	53	R-10	ATT-PS0006	Thread Trimming Lever "A"	33	J-52	CCP-BJ0016	Feed Plate Clamp Cover	63	T-20
12-004A-PT10	Operation Unit Stand	53	R-9	ATT-PS0007	Thread Trimming Lever "B"(H)	31	J-49	CCP-BK0014	Feed Plate Clamp Guide Block	39	M-19
1306HS-20	Air Pressure Ass'y	67	U-24	ATT-PS0008	Thread Trimming Lever "B"(G)	31	J-50	CCP-BK0014	Feed Plate Clamp Guide Block	63	T-16
1306HS-22	Air Pressure Ass'y	67	U-25	ATT-PS0024	Moving Mes	69	V-27	CCP-BM0001	Cylinder Knuckle	63	T-29
15-022S-1000	Screw Connecting Plate	49	Q-46	AWP-PS0001	Wiper Bracket Ass'y	29	I-1	CCP-BM0001	Cylinder Knuckle	65	T1-11
15-026M-1000	Cable Tie	51	Q-67	AWP-PS0002	Wiper Crank Ass'y	29	I-9	CCP-CA0005	Connecting Link	39	M-33
15-026M-1000	Cable Tie	53	R-6	AWP-PS0003	Wiper Rock Link Ass'y	29	I-13	CCP-CA0005	Connecting Link	41	M1-21
20S001S-306H	Ball Guide Ass'y	35	K-1	AXY-SM0012	X-Sensor Bracket Ass'y	35	K-48	CCP-CA0006	Feed Bracket Support Link(L)	39	M-44
20S002S-306H	X-Fixed Race	35	K-2	BD-000208	CPU Board Ass'y	49	Q-43	CCP-CA0006	Feed Bracket Support Link(L)	41	M1-30
20S004S-306H	Race Table	35	K-4	BD-000210	CPU Board Ass'y	49	Q-43	CCP-CA0007	Feed Bracket Support Link(R)	39	M-45
20S008S-306H	Ball Gauge Ass'y	35	K-7	BD-000239	I/O Board Ass'y	49	Q-39	CCP-CA0007	Feed Bracket Support Link(R)	41	M1-31
20S012S-306H	Screw(M4x0.7)	35	K-11	BD-000296	Main Driving Board Ass'y	49	Q-30	CCP-CA0015	Link Plate A	63	T-32
20S015S-306H	Y-Ball Gauge	35	K-13	BD-000582	Step Board	49	Q-22	CCP-CA0015	Link Plate A	65	T1-23
20S017S-306H	Screw(M4xP0.7)	35	K-15	BD-000855	486 CPU Board Ass'y	49	Q-43	CCP-CD0004	Slider	39	M-13
20S018S-306H	Ball	35	K-16	BD-000856	486 CPU Board Ass'y	49	Q-43	CCP-CD0004	Slider	41	M1-13
21S036S-306H	Cable Ring	25	G-29	BD-000921	O/P Board	53	R-12-5	CCP-CM0009	Lifting Lever(L)	39	M-9
22-1811-PT01	Control Box Ass'y	49	Q-57	BD-000927	USB Joint Board	51	Q-92	CCP-CM0009	Lifting Lever(L)	41	M1-9
22S014S-306H	Pin	63	T-56	BD-000928	486 CPU Board Ass'y	49	Q-43	CCP-CM0010	Lifting Lever(R)	39	M-10
44S033S-306H	Hose Cover	63	T-55	BD-000928	486 CPU Board Ass'y	49	Q-43	CCP-CM0010	Lifting Lever(R)	41	M1-10
49-018A-12HA	Hose Cover	65	T1-54	BD-000961	Power Board Ass'y	49	Q-16	CCP-CM0011	Feed Bracket Driving Lever(L)	39	M-11
90S017S-306H	Cable Holder	47	P-42	BD-001523	I/O Board Ass'y -Barcode Reader	49	Q-39	CCP-CM0011	Feed Bracket Driving Lever(L)	41	M1-11
91-001C-1230	Accessory Bag	47	P-26	CA-001916	CPU FDD Control Cable	51	Q-85	CCP-CM0012	Feed Bracket Driving Lever(R)	39	M-12
91-001C-PT10	Flat Washer Control Box	49	Q-4	CA-005011	Cable	67	U-26	CCP-CM0012	Feed Bracket Driving Lever(R)	41	M1-12
91-002S-1067	Nail	47	P-43	CA-005277	USB Connector Cable	51	Q-95	CCP-CM0023	Link Plate B	63	T-33
91S012S-306H	Plastic Plate Stopper	47	P-9	CA-006365	Cable	73	X-2	CCP-CM0023	Link Plate B	65	T1-24
91S013S-306H	Screw(11/64"x=40)	47	P-15	CA-006366	Main Driving Motor Power	51	Q-74	CCP-KC0002	Slider Shaft	39	M-14
91S015S-306H	Plastic Blank Plate Ass'y	47	P-8	CA-006367	Fan Cable	51	Q-98	CCP-KC0002	Slider Shaft	41	M1-14
ABW-PS0001	Bobbin Winder Ass'y	17	D-44	CAB-AA0015	Arm	9	A-1	CCP-KC0003	Lifting Lever Shaft	39	M-30
ABW-PS0002	Bobbin Winder Base Ass'y	17	D-11	CAB-AA0085	Arm(1507/B)	71	W-1	CCP-KC0003	Lifting Lever Shaft	41	M1-18

Index

Parts No.	Name of Parts	Page	Ref.No.	Parts No.	Name of Parts	Page	Ref.No.	Parts No.	Name of Parts	Page	Ref.No.
CCP-KC0003	Lifting Lever Shaft	63	T-37	CLB-JG0003	Shuttle Lubrication Oil Hose	43	N-27	CMB-LB0038	Right Cover	9	A-14
CCP-KC0003	Lifting Lever Shaft	65	T1-30	CLB-JG0006	Oil Hose	43	N-5	CMB-LB0039	Needle Plate Support Cover	13	B-17
CCP-KC0015	Cylinder Shaft	63	T-25	CLB-JJ0001	Oil Window	43	N-33	CMB-LB0040	X-Motor Cover	13	B-2
CCP-KC0015	Cylinder Shaft	65	T1-4	CLB-JL0001	Felt	43	N-2	CMB-LB0041	X-Fixed Cover(L) Ass'y	13	B-8
CGA-GC0001	Presser Foot(A)	23	F-61	CLB-JL0002	Balance Lubrication Felt(F)	43	N-10	CMB-LB0042	X-Fixed Cover(R) Ass'y	13	B-12
CGA-GJ0009	Lower Feed Plate	39	M-24	CLB-JL0003	Balance Lubrication Felt(M)	43	N-11	CMB-LB0043	Y-Moving Cover	39	M-41
CGA-GJ0009	Lower Feed Plate	41	M1-44	CLB-JL0004	Balance Lubrication Felt(R)	43	N-12	CMB-LB0043	Y-Moving Cover	63	T-49
CGA-GJ0009	Lower Feed Plate	63	T-7	CLB-JL0005	Felt	43	N-20	CMB-LD0001	Oil Sticker	9	A-50
CGA-GJ0009	Lower Feed Plate	71	W-7	CLB-JL0006	Oscillator Shaft Gear Lubrication Felt	43	N-24	CMB-LD0002	Caution Sticker	9	A-17
CGA-GJ0016	Lower Feed Plate	41	M1-51	CLB-JL0007	Shuttle Lubrication Felt(L)	43	N-31	CMB-LF0007	Support Cover Coating Film	13	B-28
CGA-GJ0016	Lower Feed Plate	65	T1-51	CLB-JL0008	Shuttle Lubrication Felt(S)	43	N-32	CMB-NB0001	Thread Winder Mes	17	D-33
CGA-GK0006	Upper Feed Plate	39	M-15	CLB-JL0009	Felt	43	N-36	CNB-BF0001	Needle Bar Holder	15	C-18
CGA-GK0006	Upper Feed Plate	41	M1-40	CLB-JL0010	Oil Return Felt(A)	43	N-19	CNB-CD0001	Needle Bar Guide Block	15	C-20
CGA-GK0006	Upper Feed Plate	63	T-9	CLB-JL0011	Arm Oil Return Felt	43	N-21	CNB-HK0001	Thread Guide For Needle Bar(H)	15	C-25
CGA-GK0010	Upper Feed Plate	63	T-11	CLB-JL0012	Bed Oil Return Felt	43	N-28	CNB-HK0017	Thread Guide For Needle Bar(G)	15	C-26
CGA-GK0010	Upper Feed Plate	65	T1-45	CLB-JN0001	Oil Gauge	43	N-34	CNB-HK0018	Thread Guide for Needle Bar	69	V-4
CGA-GK0014	Upper Feed Plate	41	M1-50	CLS-CC0001	Crank Rod	19	E-10	CNB-KA0001	Needle Bar	15	C-21
CGA-GK0014	Upper Feed Plate	65	T1-50	CLS-KC0003	Lower Shaft	19	E-2	CNB-KA0021	Needle Bar	69	V-3
CGA-GK0014	Upper Feed Plate	71	W-6	CLS-KH0001	Oscillator Shaft	19	E-14	CPB-BB0001	Position Link Stopper Bracket	23	F-66
CGA-GK0015	Upper Feed Plate	65	T1-57	CMB-BB0001	Safety Bracket	9	A-35	CPB-BF0001	Presser Bar Holder	23	F-58
CGA-GK0015	Upper Feed Plate(L)	71	W-20	CMB-BB0001	Safety Bracket	47	P-46	CPB-BH0001	Finger Guard	23	F-62
CGA-GK0016	Upper Feed Plate(R)	71	W-25	CMB-BB0002	Pause Switch Bracket	9	A-47	CPB-CA0001	Position Link	21	F-51
CHK-BD0001	Shuttle(L)	19	E-30	CMB-BB0005	Support Cover Bracket A	13	B-21	CPB-CA0002	Presser Link	21	F-46
CHK-BJ0001	Plate for Separating Upper Thread(H)	19	E-36	CMB-BB0009	Hook Cover Hinge	19	E-45	CPB-CA0003	Presser Driving Link	21	F-48
CHK-BJ0002	Inner Hook Presser Plate	19	E-40	CMB-BB0024	Support Cover Bracket(L)	13	B-24	CPB-CB0001	Presser Fork Crank	21	F-35
CHK-BJ0003	Plate for Separating Upper Thread(G)	19	E-37	CMB-BB0025	Support Cover Bracket(R)	13	B-26	CPB-CB0002	Presser Adjusting Arm	21	F-42
CHK-BJ0005	Upper Thread Loop Adjusting Plate	69	V-13	CMB-BB0026	Support Cover Adjusting Plate	13	B-18	CPB-CC0001	Presser Cam Connection Rod	21	F-34
CHK-BK0001	Upper Thread Loop Adjusting Guide	69	V-15	CMB-BG0001	Safety Plate Holder	9	A-36	CPB-DC0001	Presser Cam	21	F-32
CHK-CH0001	Shuttle Race Adjusting Shaft	19	E-31	CMB-BG0001	Safety Plate Holder	47	P-47	CPB-FB0001	Position Link Stopper Rubber	23	F-68
CHK-HA0001	Shuttle(H)	19	E-26	CMB-BH0001	Felt Holder For Silicon Oil Supply	9	A-31	CPB-KB0001	Presser Bar	21	F-57
CHK-HA0016	Shuttle(G)	19	E-27	CMB-BJ0001	Safety Plate	9	A-34	CPB-KC0001	Presser Adjusting Bar	21	F-55
CHK-HA0017	Shuttle	69	V-8	CMB-BJ0001	Safety Plate	47	P-45	CPB-KF0001	Presser Shaft	21	F-41
CHK-HB0001	Bobbin	19	E-25	CMB-BP0002	X-Moving Cover Guide Rail Ass'y	13	B-16	CPM-BJ0001	Presser Solenoid Stopper	21	F-28
CHK-HB0001	Bobbin	47	P-5	CMB-FC0002	Left Cover Gasket	9	A-10	CPM-CA0003	Lifting Link C	21	F-7
CHK-HB0001	Bobbin	69	V-5	CMB-FC0006	Face Plate Gasket	9	A-4	CPM-CB0001	Lifting Link B	21	F-10
CHK-HC0001	Bobbin Case Ass'y	19	E-22	CMB-FC0013	Right Cover Gasket	9	A-15	CPM-CL0001	Lifting Link B Roller	21	F-17
CHK-HC0012	Bobbin Case Ass'y	69	V-6	CMB-FC0013	Right Cover Gasket	71	W-12	CPM-CM0002	Lifting Link A	21	F-23
CHK-HP0001	Shuttle Driver	19	E-28	CMB-FD0005	Bed Rubber	13	B-27	CPM-KF0001	Lifting Link B Shaft	21	F-11
CHK-HP0003	Shuttle Driver	69	V-9	CMB-HK0002	Thread Guide(L)	9	A-21	CPR-BB0003	Solenoid Bracket	25	G-25
CHK-HQ0001	Shuttle Race Ring	19	E-21	CMB-HK0006	Thread Guide(R)	9	A-23	CPR-BB0004	Link Connecting Plate	25	G-13
CHK-HQ0004	Shuttle Race Ring	69	V-7	CMB-HK0007	Thread Guide(U)	9	A-26	CPR-BJ00080	Presser Plate	71	W-13
CHK-HQ0004	Shuttle Upper Spring	69	V-11	CMB-HK0008	Thread Guide(A) Ass'y	9	A-18	CPR-BJ0009	Presser Plate	25	G-35
CHK-KZ0001	Inner Hook Presser Shaft	19	E-41	CMB-HK0009	Thread Guide(B)	9	A-19	CPR-BJ0015	Presser Plate	63	T-1
CHP-CL0001	Hand Pulley Roller	17	D-8	CMB-HK0010	Thread Guide Plate	17	D-42	CPR-BJ0015	Presser Plate	65	T1-1
CHP-CP0001	Hand Pulley	17	D-1	CMB-HK0011	Arm Thread Guide	9	A-24	CPR-CA0008	Presser Plate Solenoid Connecting Link	25	G-19
CHP-KZ0001	Hand Pulley Shaft	17	D-6	CMB-HM0001	Thread Tension Adjusting Shaft(15/34"m-28)	17	D-41	CPR-CA0009	L-Shape Link Connecting Plate	25	G-11
CLB-BG0001	Crank Rod Lubrication Plate	43	N-1	CMB-JB0001	Silicon Tank	9	A-28	CPR-CA0010	Presser Plate Connecting Link	25	G-5
CLB-BG0002	Oil Hose Holder(L)	43	N-6	CMB-JJ0001	Silicon Oil Window	9	A-29	CPR-CA0011	Presser Link	25	G-16
CLB-BG0003	Balance Lubrication Plate	43	N-9	CMB-JL0001	Silicon Felt	9	A-30	CPR-CB0001	L-Shape Link	25	G-8
CLB-BG0003	Oil Hose Holder(A)	43	N-8	CMB-LA0001	Thread Take Up Cover	9	A-7	CPR-CM0007	Lowering Lever	25	G-40
CLB-BG0004	Needle Bar Crank Rod Lubrication Plate	43	N-18	CMB-LA0010	Face Plate	9	A-3	CPR-CM0008	Lowering Plate	25	G-41
CLB-BG0005	Oscillator Shaft Gear Lubrication Plate	43	N-23	CMB-LA0014	Hook Cover	19	E-46	CPR-FB0001	Rubber Washer	25	G-34
CLB-BG0007	Shuttle Lubrication Plate	43	N-30	CMB-LA0024	Y-Stepping Motor Cover	9	A-12	CPR-FB0002	Presser Plate Solenoid Rubber Washer	25	G-21
CLB-BH0001	Oil Hose Holder(B)	43	N-14	CMB-LA0046	Top Cover	9	A-49	CPR-KC0006	Presser Plate Shaft	25	G-32
CLB-BH0002	Needle Bar Oil Wick Holder	43	N-16	CMB-LA0047	Motor Cover	9	A-56	CPR-KC0007	Presser Plate Link Shaft	25	G-1
CLB-BJ0001	Felt Plate	43	N-37	CMB-LA0048	Y-Fixed Cover	39	M-40	CPR-KF0003	Lowering Lever Shaft	25	G-39
CLB-FA0001	Oil Window Rubber Ring	43	N-35	CMB-LA0048	Y-Fixed Cover	63	T-48	CPR-LF0001	Presser Plate Sheet	71	W-14
CLB-JD0003	Oil Wick	43	N-4	CMB-LB0001	Left Cover	9	A-9	CPR-LF0002	Presser Plate Sheet	25	G-37
CLB-JD0003	Shuttle Lubrication Wick	43	N-26	CMB-LB0019	Right Cover	71	W-11	CPR-LF0002	Presser Plate Sheet	63	T-53
CLB-JF0008	Pipe	43	N-45	CMB-LB0020	Rear Cover	9	A-11	CPR-LF0002	Presser Plate Sheet	65	T1-2
CLB-JG0001	Arm Oil Return Felt Oil Hose	43	N-22	CMB-LB0022	Bed Cover	13	B-6	CPT-BB0006	Sensor Bracket Plate	73	X-5
CLB-JG0002	Bed Oil Return Felt Oil Hose	43	N-29	CMB-LB0023	X-Moving Cover	13	B-15	CPT-BB0007	Bracket Base Plate	73	X-3

Index

Parts No.	Name of Parts	Page	Ref.No.	Parts No.	Name of Parts	Page	Ref.No.	Parts No.	Name of Parts	Page	Ref.No.
CPT-BB0008	Bracket Plate	73	X-4	CTT-CM0002	Thread Release Lever	31	J-22	DBS-DA0002	Needle Bar Bushing(U)	15	C-22
CST-BA0001	Bed Base	47	P-29	CTT-CM0026	Thread Trimming Lever "B"	69	V-29	DBS-DA0003	Needle Bar Bushing(L)	15	C-24
CST-BA0001	Nail	45	O-6	CTT-CM0027	Thread Trimming Lever "A"	69	V-30	DBS-DA0004	Hand Pulley Bushing	17	D-4
CST-BB0010	Hinge	45	O-13	CTT-DG0001	Thread Trimming Cam	31	J-8	DBS-DA0005	Lower Shaft Rear Bushing	19	E-6
CST-BB0010	Hinge	47	P-34	CTT-FB0001	Rubber Washer for 12	31	J-15	DBS-DA0009	Presser Bar Bushing	23	F-59
CST-BJ0002	Earth Plate	45	O-9	CTT-GL0001	Needle Plate Cover(H)	31	J-40	DBS-DA0010	Presser Shaft Bushing A	21	F-39
CST-FD0008	Cushion Rubber	45	O-8	CTT-GL0008	Needle Plate Cover(G)	31	J-41	DBS-DA0011	Presser Shaft Bushing B	21	F-40
CST-FD0008	Cushion Rubber	47	P-32	CTT-GL0010	Cover For Needle Plate(H)	69	V-23	DBS-DA0031	Upper Shaft Bushing (R)	15	C-40
CST-FD0009	Bed Base	45	O-4	CTT-GL0011	Cover For Needle Plate(G)	69	V-24	DBS-DA0032	Y-Moving Shaft Bushing(F)	37	L-27
CST-FF0002	Hinge Rubber	45	O-14	CTT-KC0001	Thread Trimming Shaft	31	J-12	DBS-DA0033	Y-Moving Shaft Bushing(R)	37	L-28
CST-FF0002	Hinge Rubber	47	P-35	CTT-NB0001	Fixed Mes	31	J-43	DBS-DB0001	Upper Shaft Bushing(F)	15	C-28
CST-JB0001	Oilier	45	O-7	CTT-NB0001	Fixed Mes	47	P-24	DBS-DB0002	Upper Shaft Bushing(M)	15	C-33
CST-JB0001	Oilier	47	P-31	CTT-NB0016	Fixed Mes	69	V-25	DCL-AA0001	Upper Shaft Collar	15	C-34
CST-LG0011	Table Ass'y	45	O-1	CUS-BJ0001	Fix Plate For Crank Balancer	15	C-37	DCL-AA0002	Oscillator Shaft Collar(L)	19	E-15
CST-LH0005	Table Stand Ass'y	45	O-2	CUS-CF0001	Bobbin Winder Driving Wheel	15	C-29	DCL-AA0003	Oscillator Shaft Collar(R)	19	E-20
CST-MF0001	Thread Stand Ass'y	45	O-20	CUS-DA0001	Link Cam	15	C-2	DCL-AA0004	Lower Shaft Collar	19	E-9
CST-MF0001	Thread Stand Ass'y	47	P-44	CUS-DA0005	Link Cam	69	V-2	DCL-AA0004	Presser Driving Link Collar	21	F-50
CTA-BA0001	Thread Tension Adjusting Body	27	H-2	CUS-DB0001	Crank Balancer	15	C-36	DCL-AA0004	Thread Trimming Shaft Collar	31	J-13
CTA-BD0001	Spring Cover	27	H-9	CUS-KG0007	Upper Shaft	15	C-1	DCL-AA0007	Wiper Rotation Shaft Collar	29	I-5
CTA-BD0002	Spring Cover	17	D-39	CWP-BB0001	Wiper Base	29	I-18	DCL-AA0008	Lifting Link B Shaft Collar	21	F-13
CTA-BJ0001	Spring Stopper	27	H-12	CWP-BH0001	Wiper	29	I-7	DCL-AA0012	X-Drive Shaft Collar	35	K-30
CTA-BJ0001	Thread Tension Spring Stopper	17	D-37	CWP-BH0009	Wiper	69	V-37	DCL-AA0015	Lifting Lever Shaft Collar	39	M-36
CTA-BJ0002	Presser Plate For 7	27	H-8	CWP-CA0001	Wiper Solenoid Connecting Link	29	I-17	DCL-AA0015	Lifting Lever Shaft Collar	41	M1-24
CTA-BJ0003	Thread Detecting Plate	27	H-46	CWP-CA0002	Wiper Rod	29	I-12	DCL-AA0015	Lifting Lever Shaft Collar	63	T-38
CTA-BJ0004	Thread Detecting Plate Guide	27	H-44	CWP-KC0001	Wiper Rotation Shaft	29	I-3	DCL-AA0015	Lifting Lever Shaft Collar	65	T1-28
CTA-BN0001	Thread Detecting Plate Ring	27	H-45	CWP-LA0001	Wiper Cover	29	I-23	DCL-BB0001	Thread Release Shaft Collar	27	H-37
CTA-HL0001	Thread Guide Disk	27	H-7	CXF-BA0010	Y-Fixed Race (L)	71	W-15	DCL-BB0002	Wiper Base Collar	29	I-22
CTA-HL0001	Thread Tension Disk	17	D-40	CXF-BA0010	Y-Fixed Race(L)	35	K-12	DCR-AD0002	Coupling	15	C-44
CTA-HM0001	Thread Tension Adjusting Shaft	27	H-3	CXF-BA0011	Y-Fixed Race (R)	71	W-16	DGR-AA0001	Lower Shaft Gear	19	E-3
CTA-HM0002	Second Thread Tension Adjusting Shaft	27	H-16	CXF-BA0011	Y-Fixed Race(R)	35	K-10	DGR-AA0002	Oscillator Shaft Gear	19	E-16
CTH-CB0001	Thread Take-Up Lever Crank	15	C-9	CXF-BA0013	Y-Moving Race	35	K-8	DGR-AA0017	X-Drive Gear	35	K-23
CTH-CB0002	Thread Take-Up Lever Crank	69	V-20	CXF-BB0011	X-Tension Adjusting Bracket	35	K-38	DGR-AA0018	X-Driven Gear	35	K-25
CTH-CC0001	Needle Bar Crank Rod	15	C-16	CXF-BB0012	X-Driven Pulley Bracket	35	K-36	DGR-AC0001	Hand Pulley Gear A	15	C-31
CTH-CJ000100	Needle Bar Crank	15	C-13	CXF-BJ0019	Y-Stopper	35	K-14	DGR-AC0001	Hand Pulley Gear B	17	D-10
CTH-CJ000200	Needle Bar Crank	69	V-19	CXF-BJ0020	X-Stopper	35	K-5	DGR-AC0006	Y-Drive Gear	37	L-5
CTH-HJ000100	Thread Take-Up Lever	15	C-8	CXF-BJ0021	X-Sensor Slit	35	K-17	DGR-AC0007	Y-Driven Gear	37	L-7
CTH-HJ000200	Thread Take-Up Lever	69	V-18	CXF-BJ0021	X-Sensor Slit	71	W-18	DPK-CA0002	Rubber	43	N-43
CTR-BH000	Thread Release Connecting Rod	27	H-22	CXF-BJ0023	X-Sensor Bracket	35	K-44	DPK-CA0003	Bed Front Part Rubber Cap	13	B-29
CTR-BJ0001	Thread Release Action Bar Guide	27	H-41	CXF-KC0005	X-Drive Shaft Collar	35	K-27	DPK-CA0029	Rubber Cap	37	L-38
CTR-BJ0002	Thread Release Adjusting Plate	27	H-29	CXF-KC0006	X-Y Driven Timming Pulley Shaft	35	K-35	DPK-CB0001	Arm Left Part Rubber(L)	9	A-53
CTR-BJ0003	Thread Release Stopper	27	H-27	CXF-KC0006	X-Y Driven Timming Pulley Shaft	37	L-21	DPK-CB0001	Bed Right Part Rubber Cap	13	B-30
CTR-CA0001	Thread Release Link	27	H-20	CYF-BB0010	X-Guide Shaft Bracket	39	M-3	DPK-CB0002	Arm Left Part Rubber Cap(M)	9	A-54
CTR-CC0001	Thread Release Action Bar	27	H-39	CYF-BB0010	X-Guide Shaft Bracket	41	M1-3	DPK-CB0002	Rubber Cap For Face Plate	9	A-6
CTT-BB0001	Thread Trimming Solenoid Bracket	31	J-2	CYF-BB0010	X-Guide Shaft Bracket	63	T-44	DPK-CB0004	Arm Upper Part Rubber Cap	9	A-51
CTT-BJ0001	Thread Trimming Driving Link Stopper	31	J-7	CYF-BB0010	X-Guide Shaft Bracket	65	T1-16	DPK-CB0004	Needle Bar Rubber Cap	9	A-52
CTT-BJ0003	Thread Release Notch	31	J-10	CYF-BB0011	Y-Moving Shaft Bracket	39	M-4	DPK-CB0007	Arm Left Part Rubber Cap(S)	9	A-55
CTT-BJ0006	Needle Plate	31	J-38	CYF-BB0011	Y-Moving Shaft Bracket	41	M1-4	DPK-CB0015	Rubber Cap	11	A-63
CTT-BJ004500	Needle Plate	69	V-22	CYF-BB0011	Y-Moving Shaft Bracket	63	T-46	DPL-BD0008	X-Y Driven Timming Pulley	35	K-34
CTT-BJ004600	Thread Trimming Connecting Plate	69	V-35	CYF-BB0011	Y-Moving Shaft Bracket	65	T1-14	DPL-BD0008	X-Y Driven Timming Pulley	37	L-32
CTT-CA000100	Moving Mes Link	31	J-48	CYF-BB0012	Y-Driven Pulley Bracket	37	L-16	DPL-BD0010	X-Y Drive Timming Pulley	35	K-29
CTT-CA001500	Moving Mes Link	69	V-28	CYF-BB0013	Y-Sensor Bracket	37	L-35	DPL-BD0010	X-Y Drive Timming Pulley	37	L-31
CTT-CB000100	Thread Trimming Connecting Link	31	J-30	CYF-BF0003	Y-Belt Bracket	37	L-12	DPN-AA0003	Presser Cam Connection Rod Pin	21	F-37
CTT-CB000400	Thread Trimming Driving Link Ass'y	31	J-16	CYF-BJ0025	X-Belt Holder Plate	35	K-33	DPN-AA0004	Connecting Link Shaft	39	M-34
CTT-CB001600	Thread Trimming Connecting Crank	69	V-32	CYF-BJ0025	Y-Belt Holder Plate	37	L-13	DPN-AA0004	Connecting Link Shaft	41	M1-22
CTT-CC000500	Thread Trimming Connecting Rod	31	J-25	CYF-BJ0026	Y-Sensor Slit	37	L-24	DPN-AA0004	Connecting Link Shaft	63	T-30
CTT-CC000700	Thread Trimming Connecting Bar	31	J-32	CYF-BJ0027	Y-Moving Oil Cover	37	L-29	DPN-AA0004	Connecting Link Shaft	65	T1-12
CTT-CC001800	Thread Trimmer Connecting Bar	69	V-21	CYF-KC0006	Y-Drive Shaft	37	L-8	DPN-AA0005	Thread Release Pin	27	H-43
CTT-CC001900	Thread Trimming Rod	69	V-31	CYF-KC0008	X-Guide Shaft	39	M-1	DPN-AA0015	Pin For Presser Plate Shaft	25	G-33
CTT-CL0001	Thread Trimming Lever Ring	31	J-51	CYF-KC0008	X-Guide Shaft	41	M1-1	DPN-AD0003	Thread Take-Up Crank Shaft	15	C-10
CTT-CL0001	Thread Trimming Lever Ring	33	J-51	CYF-KC0008	X-Guide Shaft	63	T-43	DPN-AD0004	Thread Release Shaft	27	H-35
CTT-CL0002	Thread Trimming Cam Roller	31	J-19	CYF-KC0008	X-Guide Shaft	65	T1-18	DPN-AD0006	Thread Trimming Cam Roller Shaft	31	J-20
CTT-CM0001	Rotating Link For 1	31	J-5	CYF-KC0009	Y-Moving Shaft	37	L-26	DPN-AD0009	Lifting Link A Hinge Shaft	21	F-24

Index

Parts No.	Name of Parts	Page	Ref.No.	Parts No.	Name of Parts	Page	Ref.No.	Parts No.	Name of Parts	Page	Ref.No.
DPN-AD0014	Hinge Pin	45	O-15	DSC-BF0013	Screw	43	N-38	DSC-CB0004	Screw(1/4"n=40)	21	F-33
DPN-AD0014	Hinge Pin	47	P-36	DSC-BF0013	Screw(3/32"n=56)	19	E-38	DSC-CB0004	Screw(1/4"n=40)	21	F-43
DPN-AD0024	Feed Bracket Action Lever Pin	39	M-38	DSC-BF0015	Screw	15	C-19	DSC-CB0004	Screw(1/4"n=40)	31	J-9
DPN-AD0024	Feed Bracket Action Lever Pin	41	M1-28	DSC-BF0016	Screw	15	C-17	DSC-CB0004	Screw(15/64"n=28)	15	C-32
DPN-BB0001	Position Link Stopper	23	F-64	DSC-BF0017	Screw	17	D-32	DSC-CB0005	Screw	13	B-32
DPN-BB0005	Pin	39	M-46	DSC-BF0018	Screw(1/8"n=40)	17	D-21	DSC-CB0005	Screw	37	L-28-1
DPN-BB0005	Pin	41	M1-52	DSC-BF0020	Screw(9/64"n=40)	31	J-44	DSC-CB0005	Screw(15/64"n=28)	15	C-12
DPN-BB0011	Shuttle Race Ring Pin	19	E-21-1	DSC-BF0021	Thread Trimming Lever Screw	33	J-54	DSC-CB0005	Screw(15/64"n=28)	15	C-14
DSC-AA0002	Screw(11/64"n=40)	27	H-33	DSC-BF0022	Screw	13	B-31	DSC-CB0005	Screw(15/64"n=28)	17	D-5
DSC-AA0004	Link Stopper Screw	31	J-35	DSC-BF0022	Screw(11/64"n=40)	69	V-36	DSC-CB0005	Screw(15/64"n=28)	19	E-19
DSC-AA0008	Screw(15/64"n=28)	39	M-5	DSC-BF0022	Screw(M5xP0.8)	13	B-19	DSC-CB0005	Screw(15/64"n=28)	25	G-4
DSC-AA0008	Screw(15/64"n=28)	41	M1-5	DSC-BF0023	Screw(15/64"n=28)	9	A-57	DSC-CB0005	Screw(15/64"n=28)	31	J-17
DSC-AA0008	Screw(15/64"n=28)	63	T-47	DSC-BF0024	Screw(9/64"n=40)	43	N-13	DSC-CB0005	Screw(15/64"n=28)	35	K-24
DSC-AA0008	Screw(15/64"n=28)	65	T1-15	DSC-BF0025	Screw	43	N-42	DSC-CB0005	Screw(15/64"n=28)	37	L-6
DSC-AA0031	Screw(3/16"n=28)	65	T1-3	DSC-BF0029	Screw(15/64"n=28)	47	P-60	DSC-CB0006	Screw	19	E-5-1
DSC-BA0001	Screw	29	I-24	DSC-BF0031	Screw	71	W-23	DSC-CB0007	Screw	19	E-5
DSC-BA0001	Screw(9/64"n=40)	9	A-22	DSC-BF0031	Screw(11/64"n=40)	9	A-59	DSC-CB0007	Screw	25	G-47
DSC-BA0001	Screw(9/64"n=40)	29	I-8	DSC-BF0036	Screw(11/64"n=40)	39	M-17	DSC-CB0007	Screw	63	T-54
DSC-BA0002	Screw(9/64"n=40)	23	F-63	DSC-BF0036	Screw(11/64"n=40)	63	T-14	DSC-CB0007	Screw(11/64"n=40)	9	A-32
DSC-BA0005	Screw (3/16"n=28)	15	C-38	DSC-BF0077	Screw(1/8"n=40)	69	V-12	DSC-CB0007	Screw(11/64"n=40)	15	C-23
DSC-BA0005	Screw(11/64"n=40)	29	I-21	DSC-BF0077	Screw(1/8"n=40)	69	V-14	DSC-CB0007	Screw(11/64"n=40)	21	F-14
DSC-BA0005	Screw(3/16"n=28)	21	F-30	DSC-BF0084	Screw(3/16"n=28)	9	A-16	DSC-CB0007	Screw(11/64"n=40)	25	G-31
DSC-BA0005	Screw(3/16"n=28)	27	H-28	DSC-BF0141	Screw(3/32"n=56)	69	V-26	DSC-CB0007	Screw(11/64"n=40)	39	M-2
DSC-BA0005	Screw(3/16"n=28)	31	J-3	DSC-BF0142	Screw(1/8"n=40)	69	V-16	DSC-CB0007	Screw(15/64"n=28)	31	J-14
DSC-BA0005	Screw(3/16"n=28)	63	T-2	DSC-BG0001	Screw(9/64"n=40)	27	H-47	DSC-CB0007	Screw(3/16"n=28)	21	F-26
DSC-BA0033	Screw	43	N-41	DSC-BG0001	Screw(M4xP0.7)	9	A-13	DSC-CB0007	Screw(3/16"n=28)	27	H-36
DSC-BB0003	Screw(M4xP0.5)	31	J-42	DSC-BJ0001	Screw(9/32"n=28)	15	C-5	DSC-CB0007	Screw(M5xL10)	65	T1-10
DSC-BB0004	Screw	13	B-7	DSC-BJ0002	Screw(11/64"n=40)	9	A-5	DSC-CB0007	Screw(M5xL5)	45	O-16
DSC-BC0001	Screw	39	M-43	DSC-BJ0002	Screw(11/64"n=40)	9	A-43	DSC-CB0007	Screw(M5xL5, P=0.8)	33	J-58
DSC-BC0001	Screw	63	T-50	DSC-BJ0002	Screw(11/64"n=40)	9	A-45	DSC-CB0007	Screw(M5xP0.8)	39	M-39
DSC-BC0001	Screw(11/64"n=40)	31	J-39	DSC-BJ0002	Screw(11/64"n=40)	13	B-3	DSC-CB0007	Screw(M5xP0.8)	41	M1-29
DSC-BC0001	Screw(M4xP0.7)	63	T-21	DSC-BJ0002	Screw(11/64"n=40)	19	E-49	DSC-CB0007	Screw(M5xP0.8)	63	T-24
DSC-BC0002	Screw(9/64"n=40)	17	D-34	DSC-BJ0002	Screw(11/64"n=40)	37	L-15	DSC-CB0007	Screw(M5xP0.8)	65	T1-31
DSC-BF0001	Screw For C-21	15	C-50	DSC-BJ0002	Screw(11/64"n=40)	43	N-25	DSC-CB0007	Screw(M6xP0.8)	41	M1-2
DSC-BF0002	Screw	17	D-2	DSC-BJ0002	Screw(11/64"n=40)	47	P-54	DSC-FA0001	Safety Plate Hinge Screw	9	A-37
DSC-BF0003	Screw(3/16"n=28)	21	F-12	DSC-BJ0002	Screw(11/64"n=40)	63	T-42	DSC-FA0001	Safety Plate Hinge Screw	47	P-48
DSC-BF0004	Screw(15/64"n=28)	9	A-20	DSC-BJ0002	Screw(11/64"n=40)	65	T1-22	DSC-FA0002	Hand Pulley Roller Hinge Screw	17	D-9
DSC-BF0006	Screw(3/16"n=28)	13	B-22	DSC-BJ0002	Screw(3/16"n=28)	63	T-52	DSC-FA0003	Position Link Hinge Screw	21	F-52
DSC-BF0006	Screw(3/16"n=28)	29	I-2	DSC-BJ0003	Screw(9/64"n=40)	9	A-8	DSC-FA0004	Presser Link Hinge Screw	21	F-47
DSC-BF0006	Screw(3/16"n=28)	37	L-30	DSC-BJ0003	Screw(9/64"n=40)	27	H-42	DSC-FA0005	Presser Adjusting Arm Hinge Screw	21	F-45
DSC-BF0006	Screw(3/16"n=28)	43	N-3	DSC-BJ0003	Screw(M4xP0.7)	37	L-36	DSC-FA0008	Hinge Screw for 9	29	I-10
DSC-BF0007	Screw(15/64"n=28)	9	A-58	DSC-BJ0004	Screw(11/64"n=40)	11	A-65	DSC-FA0009	Hinge Screw for 13	29	I-14
DSC-BF0007	Screw(15/64"n=28)	15	C-4	DSC-BJ0004	Screw(11/64"n=40)	19	E-11	DSC-FA0014	Hinge Screw For 39	27	H-40
DSC-BF0007	Screw(15/64"n=28)	21	F-36	DSC-BJ0005	Screw	23	F-70	DSC-FA0015	Thread Release Link Hinge Screw	27	H-21
DSC-BF0007	Screw(15/64"n=28)	25	G-14	DSC-BJ0006	Screw(15/64"n=28)	23	F-67	DSC-FA0016	Hinge Screw A For 22	27	H-23
DSC-BF0007	Screw(15/64"n=28)	47	P-57	DSC-BJ0008	Screw(11/64"n=40)	33	J-55	DSC-FA0018	Hinge Screw For Moving Mes	31	J-46
DSC-BF0008	Screw(15/64"n=28)	15	C-6	DSC-BJ0009	Screw	11	A-68	DSC-FA0020	Lifting Link C Hinge Screw	21	F-8
DSC-BF0008	Screw(15/64"n=28)	19	E-32	DSC-BJ0011	Screw(11/64"n=40)	43	N-7	DSC-FA0021	Lifting Link B Hinge Screw	21	F-18
DSC-BF0009	Screw	39	M-37-1	DSC-BJ0032	Screw	29	I-32	DSC-FA0022	Lifting Link B Spring Hinge Screw	21	F-20
DSC-BF0009	Screw(11/64"n=40)	19	E-33	DSC-CA0002	Screw(9/64"n=40)	27	H-4	DSC-FA0037	Hinge Screw A For 5	25	G-6
DSC-BF0009	Screw(11/64"n=40)	35	K-6	DSC-CA0004	Screw	63	T-39	DSC-FA0045	Presser Link Hinge Screw	25	G-18
DSC-BF0009	Screw(11/64"n=40)	41	M1-27	DSC-CA0004	Screw(11/64"n=40)	41	M1-25	DSC-FA0046	Hinge Screw B For 5	25	G-7
DSC-BF0010	Screw	35	K-47	DSC-CA0004	Screw(11/64"n=40)	65	T1-29	DSC-FA0047	L-Shape Link Hinge Screw	25	G-9
DSC-BF0010	Screw(11/64"n=40)	21	F-3	DSC-CA0004	Screw(M5xP0.8)	65	T1-19	DSC-FA0176	Stud For Connecting Crank	69	V-33
DSC-BF0010	Screw(11/64"n=40)	25	G-28	DSC-CB0001	Screw For C-29	15	C-30	DSC-FB0001	Crank Rod Hinge Screw	19	E-12
DSC-BF0010	Screw(11/64"n=40)	35	K-37	DSC-CB0003	Screw	37	L-33	DSC-FB0002	Hinge Screw B For 22	27	H-25
DSC-BF0010	Screw(11/64"n=40)	35	K-45	DSC-CB0003	Screw(11/64"n=40)	17	D-15	DSC-FB0003	Hinge Screw For 32	31	J-33
DSC-BF0010	Screw(11/64"n=40)	47	P-59	DSC-CB0003	Screw(11/64"n=40)	23	F-60	DSC-FB0004	Hinge Screw For 30	31	J-31
DSC-BF0012	Screw(11/64"n=40)	35	K-3	DSC-CB0003	Screw(11/64"n=40)	35	K-31	DSC-FB0007	Hinge Screw For 11	25	G-12
DSC-BF0012	Screw(11/64"n=40)	37	L-14	DSC-CB0003	Screw(M4xP0.7)	35	K-46	DSC-FD0001	Hinge Screw For 25	31	J-28
DSC-BF0012	Screw(11/64"n=40)	39	M-21	DSC-CB0004	Screw(1/4"n=40)	15	C-35	DSC-FF0001	Presser Driving Link Hinge Screw	21	F-49
DSC-BF0012	Screw(11/64"n=40)	63	T-17	DSC-CB0004	Screw(1/4"n=40)	19	E-20-1	DSC-FF0003	Y-Moving Race Hinge Stud	35	K-9

Index

Parts No.	Name of Parts	Page	Ref.No.	Parts No.	Name of Parts	Page	Ref.No.	Parts No.	Name of Parts	Page	Ref.No.
DSC-FG0001	Thread Trimming Lever Shaft	33	J-53	DSP-BA0001	Thread Tension Adjusting Spring(H)	27	H-10	EP-000071	Fan	51	Q-97
DSC-GA0001	Thread Release Lever Pin	31	J-23	DSP-BA0002	Second Thread Tension Adjusting Spring	27	H-17	EP-000291	Fan Ass'y	49	Q-26
DSC-HA0001	Presser Adjusting Screw	21	F-53	DSP-BA0003	Thread Tension Spring	17	D-38	EP-000497	USB Flash Drive	47	P-68
DSC-HB0003	Wiper Base Joint	29	I-19	DSP-BA0010	Thread Tension Adjusting Spring(G)	27	H-11	GP-001897	X-Ball Gauge	71	W-5
DSC-HB0005	Lifting Link C Hinge Stud	21	F-9	DSP-BB0001	Thread Take-Up Spring(H)	27	H-5	GP-001898	X-Fixed Race	71	W-4
DSC-HB0011	Lowering Stopper	25	G-43	DSP-BB0009	Thread Take-Up Spring(G)	27	H-6	GP-001924	Model Mark	71	W-19
DSC-HD0001	Safety Plate Spring Hook	9	A-41	DWS-AA0001	Link Cam Washer	15	C-3	GP-009357	Model Sticker(HS)-10	11	A-60
DSC-HD0001	Safety Plate Spring Hook	47	P-52	DWS-AA0002	Washer	17	D-22	GP-009358	Model Sticker(GS)-10	11	A-61
DSC-HD0002	Spring Hook Screw	27	H-31	DWS-AA0003	Shuttle Bearing Washer	19	E-35	GP-011049	Sticker Caution	49	Q-54
DSC-HD0002	Spring Hooker	31	J-37	DWS-AA0003	Washer	47	P-50	GP-014837	X-Sensor	35	K-42
DSC-HD0003	Spring Hook	21	F-22	DWS-AA0004	Washer	9	A-39	GP-014837	Y-Sensor	37	L-22
DSD-AA0001	Wiper Solenoid Ass'y	29	I-25	DWS-AA0004	Washer	17	D-27	GP-018205	CE Mark	11	A-66
DSD-AA0006	Presser Solenoid Ass'y	21	F-1	DWS-AA0005	Thread Release Stopper Washer	35	K-37-1	GP-019553	Pause Switch	9	A-46
DSD-AA0007	Presser Plate Solenoid Ass'y	25	G-24	DWS-AA0005	Washer	9	A-44	GP-034235	Oil Adjustment Block	43	N-40
DSD-AB0001	Thread Trimming Solenoid Ass'y	31	J-1	DWS-AA0005	Washer	25	G-28-2	GP-038188	Cover CPU P.C.B	49	Q-50
DSN-AA0002	Nut(3/16"n=28)	9	A-42	DWS-AA0005	Washer	43	N-17	GP-038536	Wick	43	N-39
DSN-AA0002	Nut(3/16"n=28)	27	H-24	DWS-AA0005	Washer	47	P-55	GP-046265	486 CPU Card Sticker	51	Q-87
DSN-AA0002	Nut(3/16"n=28)	47	P-53	DWS-AA0006	Stopper Washer	31	J-3-1	GP-048070	Operation Unit Stand	53	R-9
DSN-AA0003	Nut (11/64"n=40)	29	I-11	DWS-AA0006	Washer	21	F-31	GP-049857	USB Board Bracket	51	Q-88
DSN-AA0003	Nut(11/64"n=40)	9	A-38	DWS-AA0006	Washer	25	G-27	GP-049858	USB Connector Cover	51	Q-90
DSN-AA0003	Nut(11/64"n=40)	27	H-32	DWS-AA0006	Washer	27	H-48	GP-050297	Front Cover Control Box	49	Q-6
DSN-AA0003	Nut(11/64"n=40)	47	P-49	DWS-AA0006	Washer	29	I-20	GP-050302	Connecting Plate I/O & CPU	49	Q-45
DSN-AA0004	Nut(3/16"n=28)	31	J-4	DWS-AA0006	Washer	31	J-29	GP-052136	Voltage Sticker	51	Q-66
DSN-AA0005	Nut(1/4"n=40)	19	E-13	DWS-AA0006	Washer	35	K-40	GP-052396	Front Cover for O/P	53	R-12-6
DSN-AA0005	Nut(11/4"n=40)	23	F-69	DWS-AA0006	Washer	37	L-20	GP-052397	Rear Cover for O/P	53	R-12-7
DSN-AA0006	Nut(15/64"n=40)	31	J-24	DWS-AA0006	Washer	47	P-58	GP-053206	Cover Foot Switch	55	S-7
DSN-AA0006	Nut(3/16"n=32)	21	F-19	DWS-AA0006	Washer (φ5)	15	C-49	GP-053206	Cover Foot Switch	57	S-8
DSN-AA0006	Opener Nut	29	I-7-1	DWS-AA0007	Washer	19	E-17	GP-053206	Cover Foot Switch	59	S-7
DSN-AA0007	Nut	17	D-43	DWS-AA0008	Thrust Washer	19	E-8	GP-053206	Cover Foot Switch	61	S-8
DSN-AA0007	Nut(15/64"n=28)	27	H-19	DWS-AA0011	Washer	21	F-2	GP-057460	Barcode Reader Sensor	73	X-1
DSN-AA0008	Nut(3/16"n=28)	31	J-34	DWS-AA0011	Washer	35	K-21	GP-057463	Cover Control Box	49	Q-8
DSN-AA0008	Nut(3/16"n=28)	43	N-15	DWS-AA0011	Washer	37	L-3	PBR-AA0006	Bearing(F608zz)	25	G-17
DSN-AA0009	Nut (11/64"n=40)	69	V-34	DWS-AA0011	Washer	39	M-18	PBR-AA0006	Radial Bearing(F608ZZ)	35	K-28
DSN-AA0009	Nut(11/64"n=40)	31	J-21	DWS-AA0011	Washer	39	M-23	PBR-AA0006	Radial Bearing(F608ZZ)	37	L-9
DSN-AA0009	Spring Hooker Shaft Nut	31	J-37-1	DWS-AA0011	Washer	41	M1-34	PBR-AA0009	Bearing(686)	21	F-27
DSN-CC0001	Nut For Presser Adjusting Screw	21	F-54	DWS-AA0011	Washer	63	T-15	PBR-AA0010	Radial Bearing(F687ZZ)	21	F-16
DSN-CD0001	Thread Adjusting Nut	27	H-13	DWS-AA0011	Washer	63	T-19	PBR-AC0001	Thrust Bearing(T1680)	35	K-22
DSN-CD0001	Thread Tension Nut	17	D-36	DWS-AA0011	Washer	63	T-34	PBR-AC0001	Thrust Bearing(T1680)	37	L-4
DSN-CD0002	Second Thread Adjusting Nut	27	H-18	DWS-AA0011	Washer	65	T1-27	PBR-BA0001	Needle Bearing(KT151917)	15	C-41
DSN-CF0001	Presser Adjusting Arm Nut	21	F-44	DWS-AA0011	Washer	65	T1-38	PBR-BA0002	Needle Roll Bearing	19	E-51
DSP-AA0001	Hand Pulley Spring	17	D-3	DWS-AA0012	Washer	21	F-15	PBR-BA0003	Needle Bearing(KT81110)	19	E-7
DSP-AA0002	Presser Adjusting Spring	21	F-56	DWS-AA0012	Washer	27	H-26	PBR-BA0005	Needle Bearing	15	C-15
DSP-AA0003	Position Link Stopper Spring	23	F-65	DWS-AA0013	Washer	25	G-10	PBR-BA0006	Needle Bearing	15	C-11
DSP-AA0006	Inner Hook Spring	19	E-43	DWS-AA0013	Washer	27	H-38	PBR-FA0004	Ball Bush	63	T-4
DSP-AA0007	Spring for 12	31	J-18	DWS-AA0013	Washer	39	M-31	PBR-FA0004	Ball Bush	65	T1-35
DSP-AA0010	Stopper Spring	21	F-29	DWS-AA0013	Washer	41	M1-19	PBR-FA0004	Ball Bush for X-Guide Shaft	41	M1-8
DSP-AB0001	Thread Winder Spring	17	D-30	DWS-AA0017	Washer(t=0.4)	31	J-47	PBR-FA0004	Ball Bush(SDM 10UU)	39	M-8
DSP-AB0002	Thread Release Return Spring	27	H-30	DWS-AA0018	Washer(t=0.5)	31	J-47	PBR-FA0005	Ball Bush(SDM 16UU)	25	G-30
DSP-AB0003	Spring For 32	31	J-36	DWS-AA0021	Washer	67	U-19	PBR-GB0001	Rod End(R)	31	J-26
DSP-AB0004	Lifting Link B Spring	21	F-21	DWS-AA0022	Washer	21	F-6	PBT-BD0005	X-Timming Belt	71	W-9
DSP-AB0008	Lifting Lever Tension Spring	39	M-27	DWS-AA0034	Washer	35	K-26	PBT-BD0007	Y-Timming Belt	71	W-10
DSP-AB0008	Lifting Lever Tension Spring	41	M1-15	DWS-AA0037	Y-Driving Gear Washer	37	L-34	PBT-BD0008	X-Timming Belt	35	K-32
DSP-AC0001	Safety Plate Spring	9	A-40	DWS-AA0040	Washer(t=0.6)	31	J-47	PBT-BD0009	Y-Timming belt	37	L-11
DSP-AC0001	Safety Plate Spring	47	P-51	DWS-AA0041	Washer(t=0.7)	31	J-47	PMT-BH0001	X-Driving Motor Ass'y	35	K-19
DSP-AC0002	Wiper Spring	29	I-16	DWS-AA0042	Presser Plate Spacer	25	G-15	PMT-BH0001	Y-Drive Motor Ass'y	37	L-1
DSP-AC0003	Lifting Lever Tension Spring(L)	39	M-28	DWS-AA0073	Spring Washer	41	M1-39	PPN-AA0001	Pin	19	E-4
DSP-AC0003	Lifting Lever Tension Spring(L)	41	M1-16	DWS-AA0073	Spring Washer	41	M1-43	PPN-AA0002	Presser Plate Guide Pin	25	G-38
DSP-AC0004	Lifting Lever Tension Spring(R)	39	M-29	DWS-AA0073	Spring Washer	65	T1-43	PPN-AF0001	Spring Pin	17	D-7
DSP-AC0004	Lifting Lever Tension Spring(R)	41	M1-17	DWS-AA0073	Spring Washer	65	T1-47	PPN-AF0002	X-Moving Cover Stopper Pin(Ø1.5)	13	B-16-1
DSP-AC0006	Spring	25	G-42	DWS-CA0001	Spring Washer (φ5)	15	C-48	PPN-AF0003	Spring Pin(Ø2×t9.8)	19	E-50
DSP-AD0001	Hook Cover Plate Spring A	19	E-47	EA-000029	Foot Switch Ass'y	61	S-1	PPN-AG0003	Snap Pin(R-Pin)	25	G-23
DSP-AD0002	Hook Cover Plate Spring B	19	E-48	EA-000471	LCD	53	R-12-4	PPP-AA0001	Air Elbow	63	T-27

Index

Parts No.	Name of Parts	Page	Ref.No.	Parts No.	Name of Parts	Page	Ref.No.	Parts No.	Name of Parts	Page	Ref.No.
PPP-AA0001	Air Elbow	65	T1-7	PSC-AC0050	Screw(M6xL20)	41	M1-33	PWS-AA0002	Washer	33	J-56
PPP-AA0003	Elbow Union	67	U-3	PSC-AC0058	Screw	39	M-42	PWS-AA0002	Washer	41	M1-38
PPP-AA0004	Tee	67	U-5	PSC-AC0058	Screw	63	T-5	PWS-AA0002	Washer	41	M1-42
PPP-AA0005	Joint Plug	67	U-9	PSC-AC0058	Screw(M6xP1)	41	M1-47	PWS-AA0002	Washer	73	X-9
PPP-AA0043	Quick Coupling	67	U-15	PSC-AC0071	Bolt	73	X-7	PWS-AA0003	Washer	65	T1-34
PPP-AB0011	Speed Controller	67	U-20	PSC-AC0075	Bolt	73	X-13	PWS-AA0004	Washer	13	B-20
PPP-AD0001	Air Hose	63	T-28	PSC-AC0130	Bolt	73	X-10	PWS-AA0004	Washer	13	B-23
PPP-AD0001	Air Hose	65	T1-8	PSC-AC0141	Bolt	73	X-11	PWS-AA0004	Washer	27	H-34
PPP-AD0001	Air Tube(TU-4025)	67	U-27	PSC-AD0035	Screw(M4xL12)	41	M1-37	PWS-AA0005	Washer	29	I-28
PPP-AD0002	Air Tube(TU-0604B)	67	U-4	PSC-BA0001	Screw	29	I-26	PWS-AA0006	Washer	11	A-64
PPP-AF0001	Joint Socket Ass'y	67	U-13	PSC-BA0002	Tapping Screw(M4xI35)	67	U-2	PWS-AA0006	Washer	39	M-26
PPP-AF0001	Plug 1/8"	67	U-21	PSC-BB0004	Screw(M4xP0.7)	13	B-11	PWS-AA0006	Washer	41	M1-46
PPP-AF0002	Plug	67	U-6	PSC-BH0002	Screw(M5xP0.8)	37	L-17	PWS-AA0006	Washer	41	M1-48
PPP-AG0001	Finger Valve	67	U-8	PSC-CB0001	Screw (M6x1.0 L=8)	15	C-45	PWS-AA0006	Washer	45	O-18
PPP-BA0004	Solenoid Valve	67	U-1	PSC-CB0002	Screw(M4xP0.7)	17	D-24	PWS-AA0006	Washer	47	P-38
PPP-BB0001	Manifold Block	67	U-18	PSC-CB0002	Screw(M4xP0.7)	29	I-6	PWS-AA0006	Washer	47	P-56
PPP-BB0010	Manifold Block	67	U-17	PSC-CB0004	Screw	43	N-44	PWS-AA0006	Washer	63	T-6
PPP-BC0001	Silencer	67	U-16	PSC-DA0001	Tapping Screw	73	X-6	PWS-AA0006	Washer	65	T1-53
PPP-BD0001	Filter Regulator Ass'y	67	U-7	PSC-DD0001	Tapping Screw	67	U-23	PWS-AA0008	Washer	47	P-41
PPP-BG0001	Air Presser Switch	67	U-10	PSC-DD0002	Screw Nail	47	P-28	PWS-AA0010	Washer	65	T1-44
PPP-CA0038	Air Cylinder	63	T-22	PSN-AA0001	Nut	25	G-46	PWS-AA0010	Washer	65	T1-48
PPP-CA0038	Air Cylinder	65	T1-6	PSN-AA0001	Nut(M5xP0.8)	35	K-41	PWS-AA0015	Washer	25	G-44
PSC-AA0003	Bolt(M8xI65)	45	O-10	PSN-AA0002	Nut(M4xP0.8)	31	J-27	PWS-AA0015	Washer	37	L-18
PSC-AA0003	Bolt(M8xI65)	47	P-33	PSN-AA0004	Nut(M8)	45	O-12	PWS-CA0001	Spring Washer	29	I-27
PSC-AA0005	Bolt(M8xI60)	45	O-17	PSN-AA0007	Nut(M5xP0.8)	67	U-12	PWS-CA0002	Spring Washer	73	X-8
PSC-AA0005	Bolt(M8xI60)	47	P-37	PSN-AA0009	Nut	45	O-19	PWS-CA0002	Washer	33	J-57
PSC-AA0009	Screw(M8)	25	G-36	PSN-AA0009	Nut	47	P-39	PWS-CA0007	Spring Washer	63	T-35
PSC-AC0002	Screw(M4xL10)	65	T1-46	PSN-AA0032	Nut	73	X-12	PWS-CA0007	Spring Washer	65	T1-26
PSC-AC0002	Screw(M4xP0.7)	17	D-29	PSR-AC0001	E-Ring	19	E-18	PWS-CA0008	Spring Washer	25	G-28-1
PSC-AC0003	Screw(M4xP0.7)	19	E-29	PSR-AC0002	E-Ring	17	D-26	PWS-CA0037	Spring Washer	73	X-14
PSC-AC0007	Screw(M4xP0.7)	35	K-20	PSR-AC0002	E-Ring	21	F-38	SC-000683	Screw Ass'y (M4xL10)	49	O-17
PSC-AC0007	Screw(M4xP0.7)	37	L-2	PSR-AC0002	E-Ring	29	I-4	SC-000683	Screw Ass'y (M4xL10)	49	Q-33
PSC-AC0008	Screw(M4xP0.7)	39	M-22	PSR-AC0002	E-Ring	63	T-26	SC-000683	Screw Ass'y For "A"Foot Switch Cover (M4xL10)	55	S-8
PSC-AC0008	Screw(M4xP0.7)	63	T-18	PSR-AC0002	E-Ring	65	T1-5	SC-000683	Screw Ass'y For "A"Foot Switch Cover (M4xL10)	57	S-9
PSC-AC0009	Screw(M5xP0.8)	13	B-25	PSR-AC0003	E-Ring	39	M-35	SC-000683	Screw Ass'y For "A"Foot Switch Cover (M4xL10)	59	S-8
PSC-AC0009	Screw(M5xP0.8)	25	G-26	PSR-AC0003	E-Ring	41	M1-23	SC-000683	Screw Ass'y For "A"Foot Switch Cover (M4xL10)	61	S-9
PSC-AC0009	Screw(M6)	27	H-14	PSR-AC0003	E-Ring	63	T-31	SC-000683	Screw Clamping Cable Ass'y(M4xL10)	55	S-5
PSC-AC0010	Screw (M5x0.8 L=25)	15	C-47	PSR-AC0003	E-Ring	65	T1-13	SC-000683	Screw Clamping Cable Ass'y(M4xL10)	57	S-6
PSC-AC0014	Screw(M4xP0.7)	31	J-6	PSR-AC0004	E-Ring	19	E-42	SC-000683	Screw Clamping Cable Ass'y(M4xL10)	59	S-5
PSC-AC0015	Screw(M4xP0.7)	31	J-11	PSR-AC0005	E-Ring	37	L-10	SC-000683	Screw Clamping Cable Ass'y(M4xL10)	61	S-7
PSC-AC0015	Screw(M4xP0.7)	63	T-36	PSR-AC0007	E-Ring	39	M-32	SC-000683	Screw IPM (M4x0.7 L=10)	49	Q-35
PSC-AC0015	Screw(M4xP0.7)	65	T1-25	PSR-AC0009	E-Ring	41	M1-20	SC-000683	Screw(M4xL10)	49	Q-25
PSC-AC0017	Screw(M5xP0.8)	67	U-11	PSR-AG0001	Grip Ring	21	F-5	SC-000684	Screw(M3xL10)	51	Q-96
PSC-AC0018	Screw(M4xP0.7)	35	K-18	PSR-AH0001	Snap Ring	15	C-39	SC-001099	Screw Ass'y I/O Board(M3xL7)	49	Q-40
PSC-AC0018	Screw(M4xP0.7)	37	L-25	PSR-AH0002	Retaining Ring	15	C-43	SC-001099	Screw(M3xL7)	51	Q-94
PSC-AC0032	Screw(M6xP1)	65	T1-33	PTC-AG0001	Cable Tie	73	X-16	SF-0140-8012	Roller Felt For Shuttle(L)	69	V-38
PSC-AC0035	Screw(M4xL12)	65	T1-42	PTC-AG0002	Cable Tie	67	U-14	SFAM-550-003	Main Motor	15	C-46
PSC-AC0035	Screw(M4xL20)	41	M1-35	PTC-AG0002	Tie	47	P-27	SN-000323	USB Connector Cover Nut	51	Q-91
PSC-AC0035	Screw(M4xP0.7)	65	T1-39	PTC-AH0001	Cable Holder 5N	11	A-62	TR-KS01-1306	Screw Nail	45	O-3
PSC-AC0041	Screw(M4xL10)	41	M1-41	PTC-AH0002	Cable Clamp (6N)	63	T-51	-	CD Manual	47	P-69
PSC-AC0046	Screw	25	G-45	PTC-AH0002	Cable Holder	45	O-21	-	Nail	47	P-30
PSC-AC0046	Screw(M6xL10)	41	M1-45	PTC-AH0003	Cable Holder	71	W-24	-	Oil Supporter	45	O-5
PSC-AC0046	Screw(M6xL10)	65	T1-17	PTC-AH0005	Cable Holder	73	X-15				
PSC-AC0046	Screw(M6xL10)	65	T1-52	PTL-AB0001	L-Shape Wrench	47	P-7				
PSC-AC0046	Screw(M6xP1)	39	M-6	PTL-AB0002	L-Shape Wrench	47	P-7				
PSC-AC0046	Screw(M6xP1)	39	M-25	PTL-AB0003	L-Shape Wrench	47	P-7				
PSC-AC0046	Screw(M6xP1)	63	T-8	PTL-AB0004	L-Shape Wrench	47	P-7				
PSC-AC0046	Screw(M6xP1)	63	T-45	PTL-AB0005	L-Shape Wrench	47	P-7				
PSC-AC0046	Screw(M6xP10)	41	M1-6	PTL-BA0001	Driver(L)	47	P-2				
PSC-AC0048	Screw(M5xP0.8)	37	L-19	PTL-BA0002	Driver(S), (M)	47	P-1				
PSC-AC0048	X-Tension Adjusting Bolt	35	K-39	PTL-CB0001	Spaner(9x10)	47	P-3				
PSC-AC0050	Screw(M4xL20)	65	T1-37	PWS-AA0001	Thrust Bearing Washer (AS1730)	15	C-42				

Index

[illegible]