



## **USER'S MANUAL**

---

### **KM-250/KM-350 SERIES**

High-Speed, 1-Needle, Drop-Feed  
Automatic Thread Trimmer

High-Speed, 1-Needle, Drop-Feed,  
Needle-Feed Automatic Thread  
Trimmer

### **KM-506/KM-530 SERIES**

High-Speed 1-Needle, Drop-Feed  
Knife-Attached Automatic Thread  
Trimmer

High-Speed, 1-Needle, Drop-Feed,  
Needle-Feed Knife-Attached  
Automatic Thread Trimmer

- 1) FOR AT MOST USE WITH EASINESS  
PLEASE CERTAINLY READ THIS MANUAL  
BEFORE STARTING USE
- 2) KEEP THIS MANUAL IN SAFE PLACE  
FOR REFERENCE WHEN THE MACHINE  
BREAKS DOWN.



1. Thank you for purchasing our product. Based on the rich expertise and experience accumulated in industrial sewing machine production, SUNSTAR will manufacture industrial sewing machines, which deliver more diverse functions, high performance, powerful operation, enhanced durability, and more sophisticated design to meet a number of user's needs.
2. Please read this user's manual thoroughly before using the machine. Make sure to properly use the machine to enjoy its full performance.
3. The specifications of the machine are subject to change, aimed to enhance product performance, without prior notice.
4. This product is designed, manufactured, and sold as an industrial sewing machine. It should not be used for other than industrial purpose.



**SunStar CO., LTD.**

# Contents

## **Safety Rules for Machines .....4**

### **1. Specifications**

1) Automatic trimmer.....	8
2) Servo motor .....	8
3) 470 motor .....	9
4) 470 motor controller.....	9
5) Peripheral automation devices (optional).....	9

### **2. Installation**

1) Machine head .....	10
2) Chip discharge plate.....	10
3) Resistance box for knee-lifting solenoid .....	11
4) Lubrication .....	11
5) Belt tension adjustment.....	12
6) Program unit.....	12
7) Belt cover .....	13
8) Location detector assembly and adjustment .....	14
9) Location adjustment of location detector.....	14
10) Check for stop position of sewing machine.....	15
11) Back tack button.....	15

### **3. Control and Adjustment of the Sewing Machine**

1) Needle insertion .....	16
2) Needle bar adjustment .....	16
3) Timing adjustment of needle and hook .....	16
4) Lubrication adjustment of thread take-up lever .....	16
5) Lubrication adjustment of hook.....	17
6) Inserting lower thread and tension adjustment .....	18
7) Routing upper thread.....	18
8) Upper thread adjustment.....	19
9) Height and tension adjustment of presser foot.....	20
10) Adjustment of automatic knee-lifter .....	20
11) Stitch length adjustment.....	21
12) Height and inclination adjustment of feed dog .....	21
13) Feed cam adjustment .....	22
14) Adjustment of needle movement.....	22
15) Timing adjustment of trimmer.....	23
16) Tension adjustment of fixed blade.....	24
17) Replacement of movable knife.....	24
18) Replacement of fixed blade .....	24
19) Adjustment of bobbin catcher .....	24
20) Wiper adjustment .....	25
21) Knife adjustment .....	26
22) Use of chip discharge guide and auxiliary needle plate .....	27
23) Change of cutting width.....	27

### **4. Cause of Troubles and Troubleshooting**

1) Sewing machine troubleshooting .....	29
---	----

# Safety rules for machines

Safety labels in the manual are categorized into danger, warning and caution.  
Failure to follow the safety rules may result in physical injuries or mechanical damages.  
The safety labels and symbols are defined as follows.

## [ The meaning of the safety marks ]



**Danger**

Instructions here shall be observed strictly.  
Otherwise, the user will be killed or suffer severe physical injuries.



**Warning**

Instructions here must be observed, or the user could suffer fatal or severe physical injuries.



**Caution**

Instructions here should be observed, or the user could face physical injuries or mechanical damages

## [ The meaning of marks ]






This mark means a 'must-not.'



This mark means a 'must' for safety.



This mark means that an electric shock may be caused if the instruction is not followed properly.

<p><b>1-1) Machine mobilization</b></p>  <p>Danger</p>	<p>Only personnel with a full understanding of the safety rules should move the machines. The following directions must be observed when delivering the machines.</p> <ul style="list-style-type: none"> <li>Ⓐ At least two or more people should move the machine.</li> <li>Ⓑ Before delivering the machine, thoroughly wipe off the oil on the machine to prevent accidents.</li> </ul>
<p><b>1-2) Machine installation</b></p>  <p>Caution</p>	<p>Physical damages such as functional difficulties or breakdowns may occur depending on installation conditions of the machines. Be sure to heed the following conditions.</p> <ul style="list-style-type: none"> <li>Ⓐ Remove the packing from top to bottom. Watch out for nails on the wooden box.</li> <li>Ⓑ Install a climate controller and clean it regularly to prevent dust and moisture build-up from contaminating and corroding the machines.</li> <li>Ⓒ Keep the machines away from direct sunlight.</li> <li>Ⓓ Keep a minimum distance of 50cm between the machine at both sides and backside and the wall to secure sufficient space for repair.</li> <li>Ⓔ Do not operate the machine near areas with danger of explosion. Refrain from running the machine in the vicinity of risky places, e.g., where a large quantity of aerosol-spraying products or oxygen are handled, unless specific guarantees are given otherwise for the operation of the machine to prevent explosion at such places.</li> <li>Ⓕ The user should install an illuminator in the work area for the machine does not come supplied with any lighting apparatus due to the specific features of the machine.</li> </ul> <p>[Note] Details of the machine installation are laid out in No. 2 Installation.</p>
<p><b>1-3) Troubleshooting</b></p>  <p>Danger</p>	<p>When the machine is in need of repair, only our authorized service technicians must handle it.</p> <ul style="list-style-type: none"> <li>Ⓐ Before cleaning and repairing the machine, shut off the power supply and wait four minutes for the machine to discharge completely.</li> <li>Ⓑ No part of the machine or specifications may be modified without prior consultation with our company. Any such modification could risk safe operation of the machine.</li> <li>Ⓒ In case of repair, replace only with standard OEM parts from SunStar.</li> <li>Ⓓ After repair, put safety covers back on the machine.</li> </ul>

#### 1-4) Machine operation



Caution

KM-250 Series are intended to be used for industrial purposes for sewing textiles and other similar materials. Carefully study the following instructions before operating the machine.

- Ⓐ Read the manual thoroughly and understand the instructions fully before use.
- Ⓑ Put on proper safety garments.
- Ⓒ While the machine is in motion, keep your hands or any part of your body away from moving parts, e.g., needle, hook, thread take-up spring and pulley, etc.
- Ⓓ Do not remove any form of safety covers while the machine is in use.
- Ⓔ Be sure to connect the ground (earth) wire.
- Ⓕ Before opening electric boxes such as the control box, shut down the power supply and make sure the power switch is in "off" mode.
- Ⓖ Stop the machine before threading the needle or checking after sewing work is finished.
- Ⓗ Never turn the power switch on with the pedal down.
- Ⓘ Do not use the machine if the cooling fan is clogged. Clean the air filter embedded in the control box at least once a week.
- ⓫ Keep the machine away from strong electromagnetic fields such as high-frequency welding machines.



Caution


Always start the machine with safety covers in place since fingers or hands could be injured or cut off by the belt. Turn off the power switch when conducting a regular check on the machine.

#### 1-5) Safety device



Caution

- Ⓐ Safety label: Safety instructions for machine operations
- Ⓑ Thread take-up spring cover : A device designed to prevent the human body from coming in contact with the thread take-up spring
- Ⓒ Belt cover: A device intended to avoid potential risks of getting hands, feet or clothes jammed by the belt
- Ⓓ Finger guard: A device built to keep fingers away from the needle

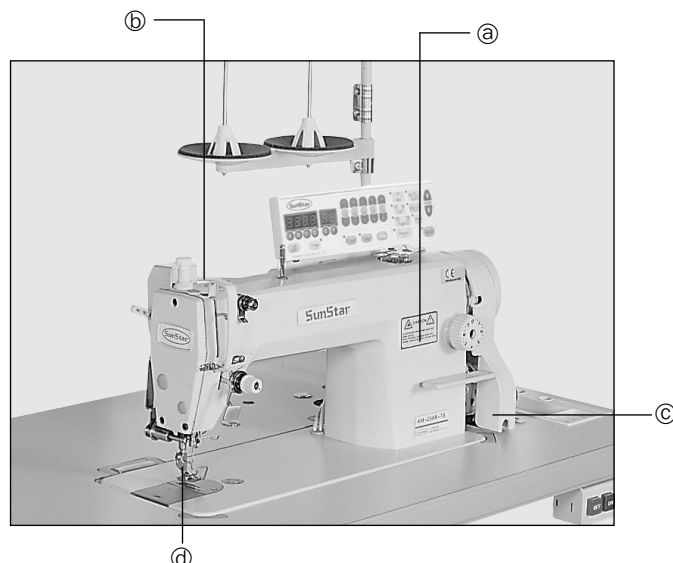


## 1-6) Location of caution mark



"Caution" is attached on the machine for safety. Read the directions of "caution" carefully before running the machine.

### [Location of caution mark]

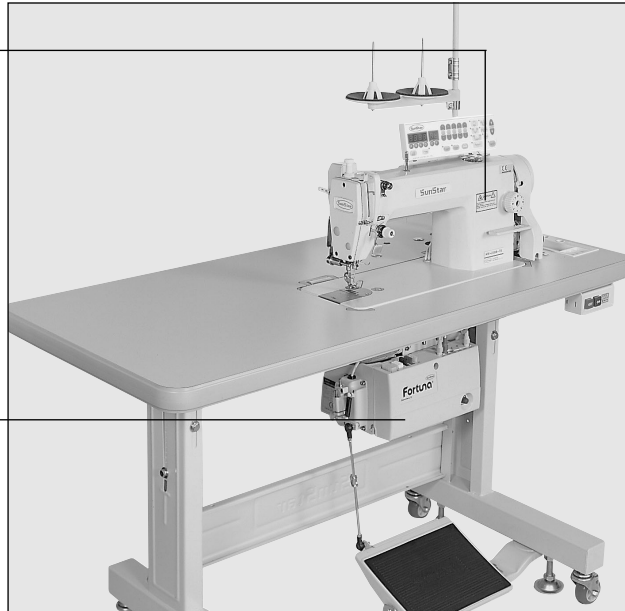

## 1-7) Contents of "caution"



# 1

## Specifications

### 1) Automatic Trimmer

#### (1) KM-250 (1-needle high-speed drop feed) Series

Description	Usage	Max Speed (common speed)	Max Stitch Length	Needle Type	Presser Foot Height
KM-250AU-7S	for ultra-thin and new materials	3,200 SPM (2,500 SPM)	4 mm	DB 1 × #9 KN (#9~#18)	manual 5.5 mm, knee 14mm
KM-250AU-7N	for ultra-thin and new materials	3,200 SPM (2,500 SPM)	4 mm	DB 1 × #9 KN (#9~#18)	manual 5.5 mm, knee 14mm
KM-250A-7S	for thin materials (for general use)	5,500 SPM (5,000 SPM)	4 mm	DB 1 × #14 (#9~#18)	manual 5.5 mm, knee 14mm
KM-250A-7N	for thin materials (for general use)	5,500 SPM (5,000 SPM)	4 mm	DB 1 × #14 (#9~#18)	manual 5.5 mm, knee 14mm
KM-250B-7S	for medium to heavy materials	4,000 SPM (3,500 SPM)	7 mm	DB 1 × #21 (#20~#25)	manual 5.5 mm, knee 14mm
KM-250B-7N	for medium to heavy materials	4,000 SPM (3,500 SPM)	7 mm	DB 1 × #21 (#20~#25)	manual 5.5 mm, knee 14mm
KM-250BH-7S	for heavy materials	3,500 SPM (3,000 SPM)	7 mm	DB 1 × #21 (#20~#25)	manual 5.5 mm, knee 14mm
KM-250BH-7N	for heavy materials	3,500 SPM (3,000 SPM)	7 mm	DB 1 × #21 (#20~#25)	manual 5.5 mm, knee 14mm

#### (2) KM-350(1-needle high-speed drop feed) Series

Description	Usage	Max Speed (common speed)	Max Stitch Length	Needle Type	Presser Foot Height
KM-350A-7S	for thin materials (for general use)	5,000 SPM (4,000 SPM)	4 mm	DB 1 × #14 (#9~#18)	manual 5.5 mm, knee 13mm
KM-350A-7N	for thin materials (for general use)	5,000 SPM (4,000 SPM)	4 mm	DB 1 × #14 (#9~#18)	manual 5.5 mm, knee 13mm
KM-350B-7S	for heavy materials	4,000 SPM (3,000 SPM)	5 mm	DB 1 × #21 (#20~#25)	manual 5.5 mm, knee 13mm
KM-350B-7N	for heavy materials	4,000 SPM (3,000 SPM)	5 mm	DB 1 × #21 (#20~#25)	manual 5.5 mm, knee 13mm
KM-350BL-7S	for heavy materials	3,200 SPM	6 mm	DB 1 × #21 (#20~#25)	manual 5.5 mm, knee 14mm

#### (3) KM-506 (1-needle knife-attached drop feed) Series

Description	Usage	Max Speed (common speed)	Max Stitch Length	Needle Type	Presser Foot Height
KM-506-7S	for general use	5,000 SPM (4,000 SPM)	5 mm	DB 1 × #14 (#9~#18)	manual 5.5 mm, knee 13mm
KM-506-7N	for general use	5,000 SPM (4,000 SPM)	5 mm	DB 1 × #14 (#9~#18)	manual 5.5 mm, knee 13mm

#### (4) KM-530 (1-needle knife-attached drop feed) Series

Description	Usage	Max Speed (common speed)	Max Stitch Length	Needle Type	Presser Foot Height
KM-530-7S	for general use	5,000 SPM (4,000 SPM)	5 mm	DB 1 × #14 (#9~#18)	manual 5.5 mm, knee 13mm
KM-530-7N	for general use	5,000 SPM (4,000 SPM)	5 mm	DB 1 × #14 (#9~#18)	manual 5.5 mm, knee 13mm

### 2) Servo Motor

MODEL	VOLT	WATT	HERTZ
SC55-1A	single phase 110V	550W	50/60 Hz
SC55-2A	single phase 220V	550W	50/60 Hz
SC55-3A	triple phase 220V	550W	50/60 Hz



### 3) 470 Motor

PM470



MODEL	PHASE	HERTZ	VOLT
PM470	1 : 1 $\phi$	5 : 50Hz	1 : 110V
		6 : 60Hz	
	1 : 1 $\phi$ 3 : 3 $\phi$	5 : 50Hz	2 : 220V
		6 : 60Hz	
	3 : 3 $\phi$	5 : 50Hz	3 : 380V
		6 : 60Hz	
	1 : 1 $\phi$	5 : 50Hz	4 : 110V / 220V
		6 : 60Hz	
	3 : 3 $\phi$	5 : 50Hz	5 : 220V / 380V
		6 : 60Hz	

### 4) 470 Motor Controller

PC470



A

001

MODEL	VOLT	MODEL	SUB CLASS
PC470	1 : 110V	A	001
	2 : 220V		

### 5) Peripheral Automation Devices (Optional)








Name	Model	Usage
Auto Knee Lifting System	SPF-5	A device that operates with a solenoid by lifting the presser foot automatically at pedal reverse gear 1.
Production Counter	SCOUN-1	A counting device, which indicates the completed quantity on the program unit panel, including added, subtracted, corrected or remaining quantity along with other performance rates.
Material Edge Sensor	SEDG-1 SEDG-2	A device that senses the edge or thickness of the sewing material to stop the machine without manual pedaling. Available in two types: SEDG-1 for edge sensing type and SEDG-2 for thickness sensing type.
Standing Pedal	SPDL-1 SPDL-2	A device needed when only one operator runs several sewing machines. Pedals for acceleration, thread trimming, presser foot and ascending are built separately. Two types, SPDL-1 and EDPL-1 for fixed speed type and SPDL-2 and EDPL-2 for adjustable speed type are available.

- S= servo motor
- E= 470 motor

# 2


## Installation

### Warning

	► The machine must be installed by a trained technician only.
	► Any electrical wiring must be performed by a qualified technician or agent.
	► The machines weigh over 33 kg. As such, two or more people should carry out the installation.
	► Plug in only after the installation is complete. If the operator mistakenly steps down on the pedal with the plug in, the machine will start automatically and can cause physical injuries.
	► Connect the ground (earth) wire. An unstable connection may result in an electric shock or a malfunction.
	► Place the belt cover on top of the machine.
	► Use both hands when bending the machine backward or returning it to the normal position. Using only one hand can lead to physical injuries due to the weight of the machine.

### 1) Machine head


※ Insert the head hinge① into the bed holes and fit it to the rubber hinge②. Then stand it on the rubber cushions③ in the four corners.

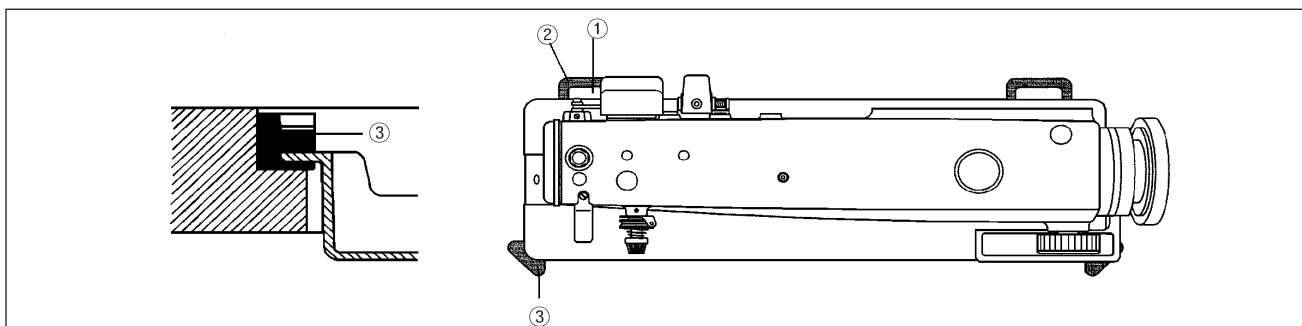

[Fig. 1]

### 2) Chip discharge plate (KM-506/530 Series)

Use the chip discharge plate installation guidelines included in the accessory box to attach the plate to the bottom of the table as in the figure.

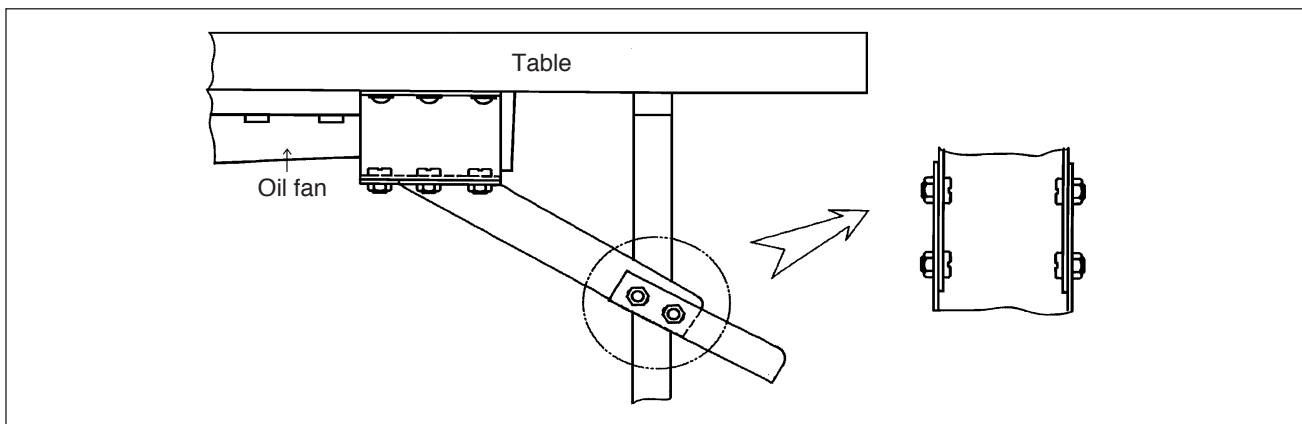


[Fig. 2]

### 3) Resistance box for knee-lifting solenoid (KM-□-7N)

#### (1) Installation

- A. Attach the resistance box around the motor under the table.
- B. Connect the connector from the solenoid to the resistance box as shown in Fig. 3, and then connect the line from the resistance box to the control box.

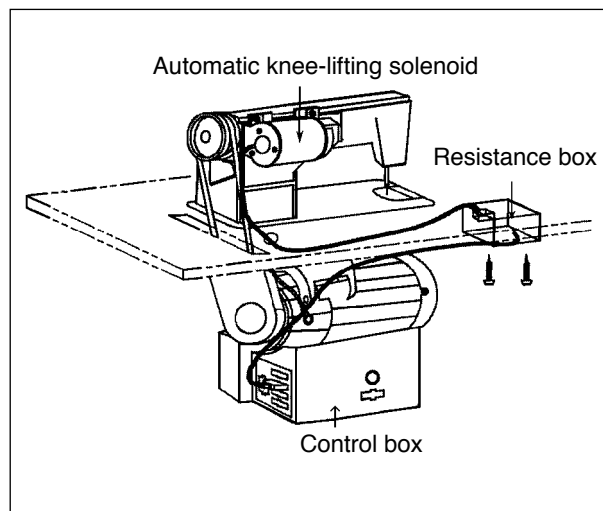

[Fig. 3]



### Caution



- ▶ Plug in only after oil supply is finished. If the operator mistakenly steps on the pedal with the plug in, the machine will start automatically and can cause severe injuries.
- ▶ When handling lubricants, wear protective glasses or gloves to avoid contact with your eyes or skin. Inflammation may be caused otherwise. Never drink lubricants since they can cause vomiting or diarrhea. Keep out of the reach of children.




- ▶ Operate the machine only after adding oil when the machine is being used for the first time or has been left unused for a long time.

### 4) Lubrication

#### (1) Installing Magnetic Chip Remover

- A. Attach the magnetic chip remover that is in the accessory box to the oil pump inside the bed.  
(See Fig. 4)


※ Do not use the magnet for other purposes. Use of the sewing machine without the magnet may cause malfunction and has a bearing on the machine's durability.

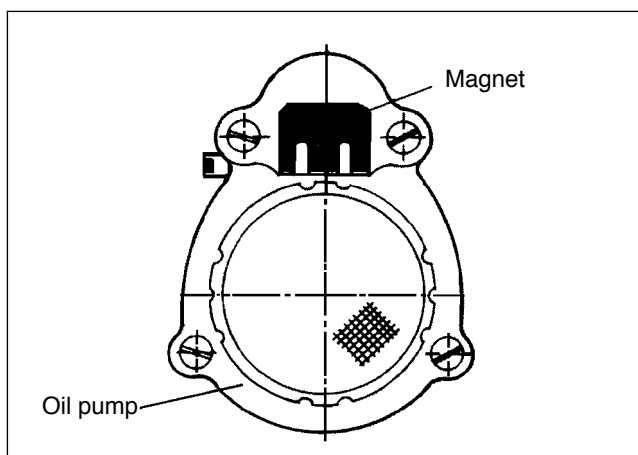

[Fig.4]

## (2) Lubricating the oil fan


- A. Fill the lubricant up to the “HIGH” mark. (See Fig.5.)
- B. The lubricant must be SUNSTAR’ s oil provided exclusively for industrial sewing machines or SHELL’ s Tellus C10.
- C. If the oil in use is down to the “LOW” mark, fill in to “HIGH” immediately.
- D. Once every two weeks is deemed the appropriate interval for oil refills.

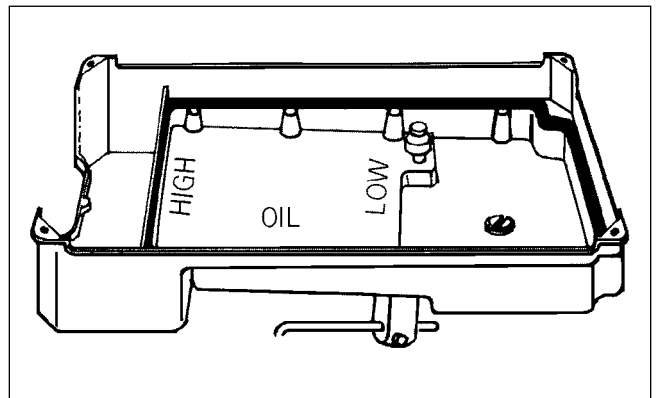

[Fig.5]

## 5) Belt Tension Adjustment

Sufficient loosening of the fixed nuts①, ② after motor③ installation would create tension to the belt④. Tighten the fixed nut① first and then tighten the fixed nut② to an unmovable position. (See Fig. 6)

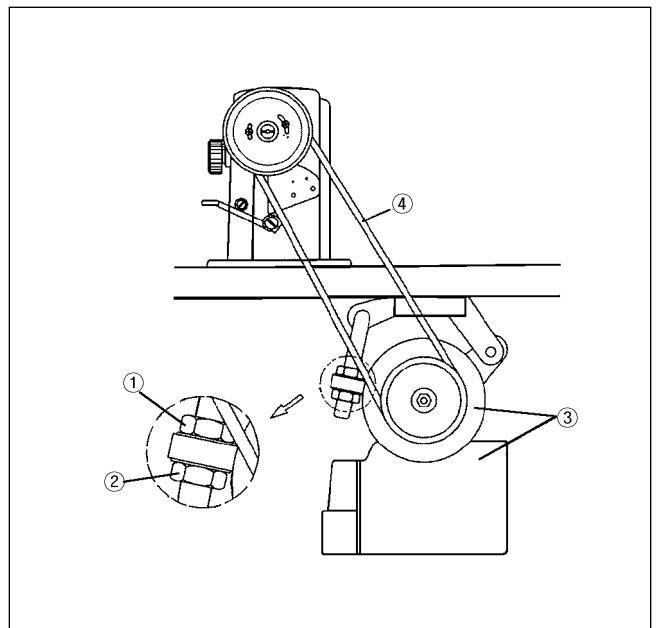


[Fig.6]

## 6) Program Unit

### (1) Installing automatic knee-lifting solenoid (in unit)


- A. Use four fixing screws③ to attach the bracket② onto the program unit①.
- B. Fasten the bracket② onto the machine body, using two fixing bolts④ and three clamp screws in the back lid of the machine. (See Fig. 7)

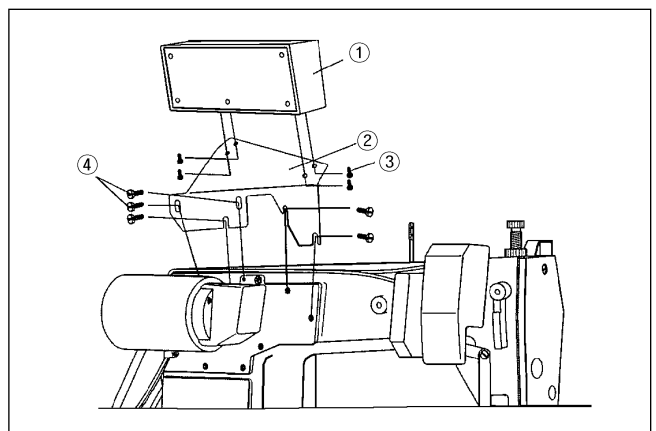

[Fig.7]

## (2) Installing manual knee-lifter


- A. Use four fixing screws③ to attach the bracket② onto the program unit①.
- B. Fasten the bracket tightly using the three fixing screws in the back lid of the machine. (See Fig. 8)

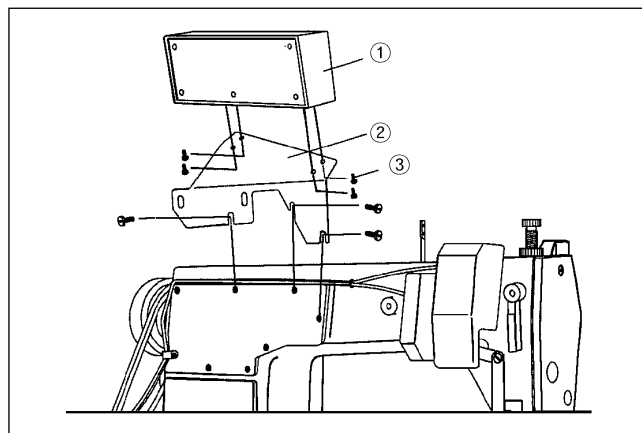

[Fig.8]


## 7) Belt Cover

- (1) Use the clamp screws② in the machine body and the washer ③ to fasten the belt cover "A"①. Installation of the belt cover will be easier if the sewing machine is laid down to an appropriate degree. (See Fig. 9)

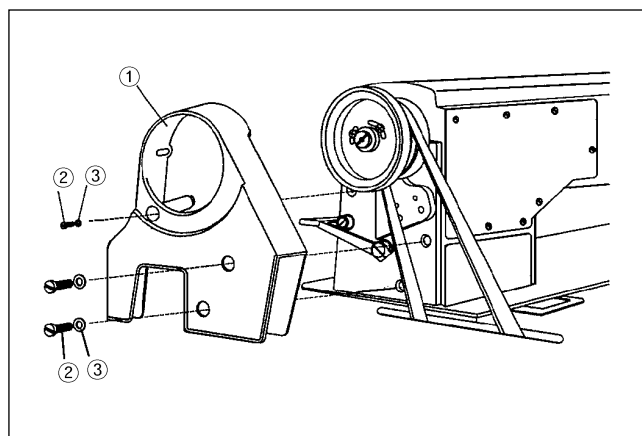

[Fig.9]

- (2) Attach the belt cover "B"④ to the table. Please exercise caution so that the belt does not get jammed inside the belt cover "B"④. (See Fig. 10)

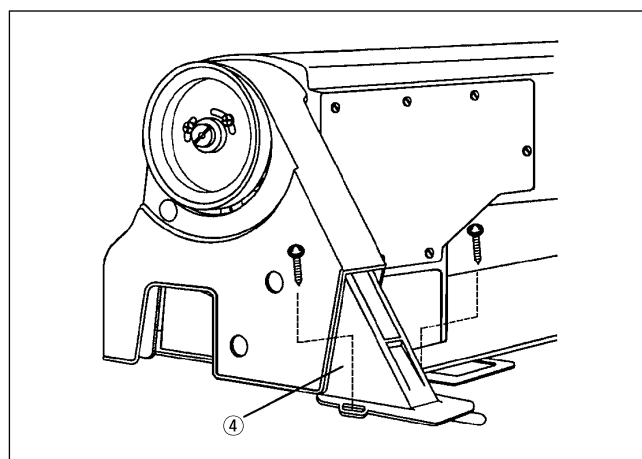


[Fig.10]

## 8) Location Detector Assembly and Adjustment

### (1) Installing the location detector

#### A. Installing on the servo motor (in-built location detector)

A location detector sensor is attached to the back side of the arm. The appropriate clearance between the location detector and the pulley is 0.5mm. (See Fig. 11)

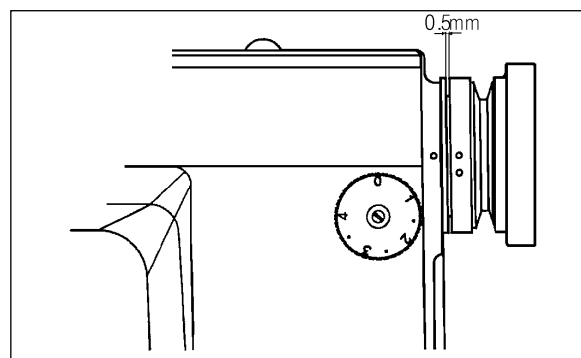


[Fig.11]

### (2) Installing the 470 motor


After assembling the parts in the numbered order as in Fig. 12, adjust the synchronization shaft horizontally such that the photo film is placed at the center of the photo interrupter as in Fig. 13. Then fasten it tightly with two fixing screws using a hexagonal wrench.

#### [Caution]

- Assemble after adjusting the position such that the letters “UP” and “DOWN” are facing the front side when seen from the pulley as is shown in Fig. 12.
- The film will already be adjusted by default.

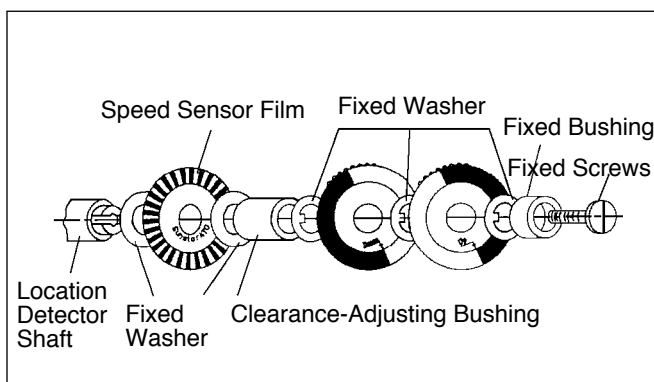

[Fig.12]

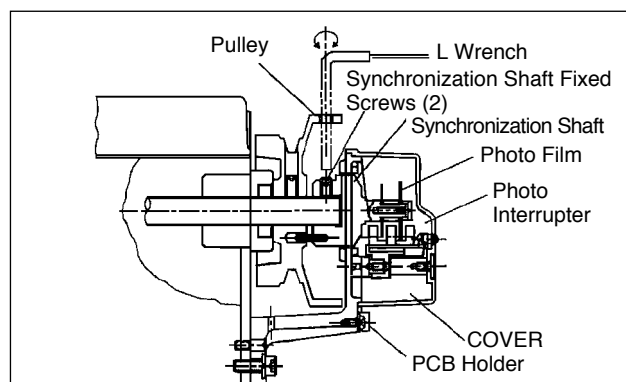


[Fig.13]


## 9) Location Adjustment of Location Detector

### (1) For in-built location detectors

For the needle bar's upper stop position setting, loosen the tightening screw① on the side of N · U punched mark of the pulley and set the white punched mark③ of the pulley in parallel with the punched mark of the arm④ at the desired upper stop position by moving the screw sideways. For the needle bar's lower stop position setting, loosen the tightening screw② on the side of N · D punched mark of the pulley and set the needle bar to stop at 2.5mm~3.0mm above from the needle bar's lowest position as the lower stop position by moving the screw sideways. (see Fig. 14 and Fig. 15)

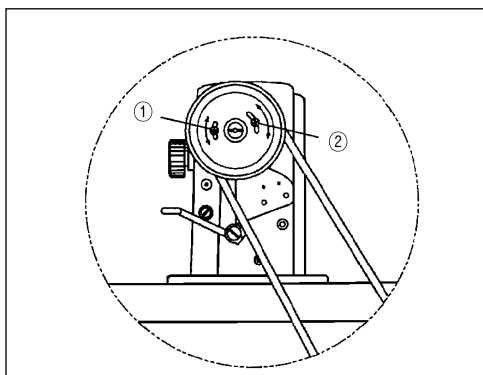


[Fig.14]

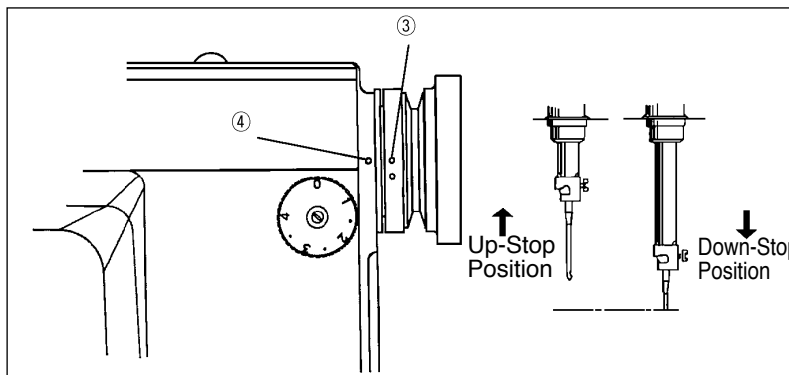


[Fig.15]

## (2) For 470 Motors

Turn the pulley manually to position the needle bar at the lowest point about to move back up. Then, loosen the fixed screws on the film as in Fig. 12 and align the "DOWN" film with the film adjustment baseline and the sensor housing baseline as in Fig. 16 & 17. Tighten the fixed screws just enough so that the film does not rotate. In the same way, place the thread take-up lever at the highest point, then loosen the fixed screws again and adjust the "UP" film as in shown the figure. Be careful that the "DOWN" film A that was tightened before does not move when adjusting the "UP" film.

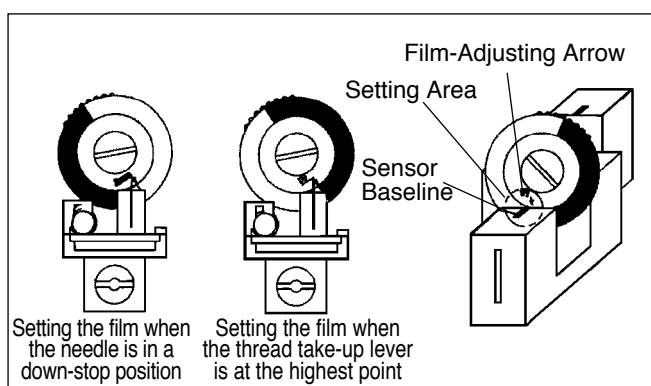

[Fig. 16]

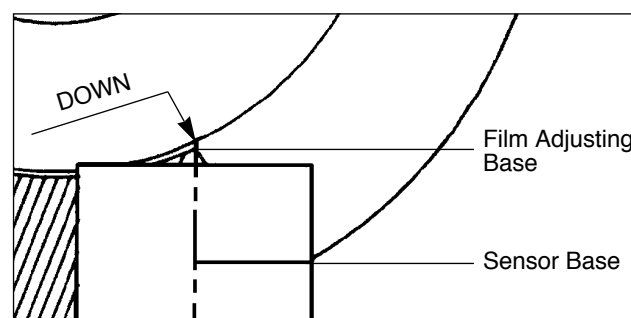


[Fig. 17]

## 10) Check for Stop Position of Sewing Machine

Check for the machine stop position after moving the needle up and down by pushing the reverse button. See whether the carved sign on the arm and the white carved sign on the pulley are aligned when the needle is in an up position. If not, adjustment to the photo film of the location detector or to the location of the magnetic holder will be necessary since there may be problems with the trimming. In other words, the needle's up-stop position should be identical with the stop position of the needle bar after the trimming operation, which would signify that there is nothing wrong with the operation timing of the trimmer. (See Fig. 18.) (Refer to the explanation about the Adjustment of Location Detector on page 14.)

## 11) Back Tack Button

Pressing the back tack button or reverse button① during forward sewing will start reverse sewing immediately. When you stop the machine and restart it by stepping down on the pedal with the reverse button① already pressed down, you can perform reverse sewing from the beginning. When the machine is in a "stop" mode, you can change the up-down position of the needle bar by pressing the reverse button. Lightly pressing the button once when the needle is in a down-stop position will stop the needle bar in a high position. Pressing the reverse button twice within less than a second when it is in an up-stop position will stop the needle bar in a low position. In short, the button delivers two functions: one for reverse sewing and the other for converting vertical position of the needle. (See Fig. 18)

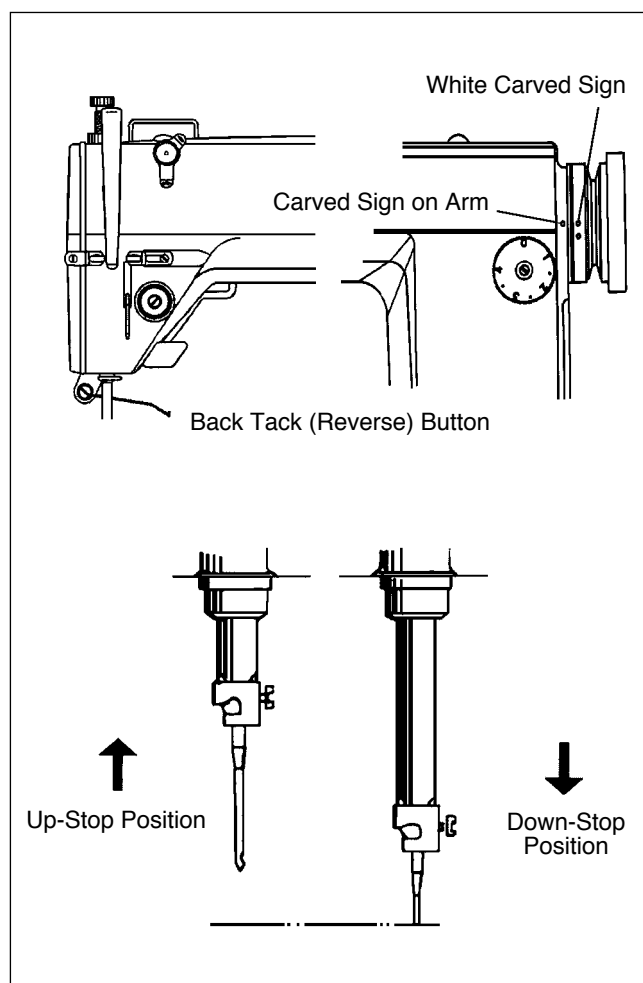

[Fig. 18]




## Caution



- ▶ Always turn off the power when mounting a needle. If the operator mistakenly steps on the pedal while the power is on, the machine will start automatically and can result in physical injuries.
- ▶ When using clutch motor, be aware that the motor will continue to rotate for a while even after the power is switched off due to inertia. Start to work on the sewing machine only after the motor has come to a complete stop.

### 1) Needle Insertion


With the needle groove① facing left, insert the needle tip into the upper end of the stopper hole② and fasten the needle with the clamp screw③. (See Fig. 19)

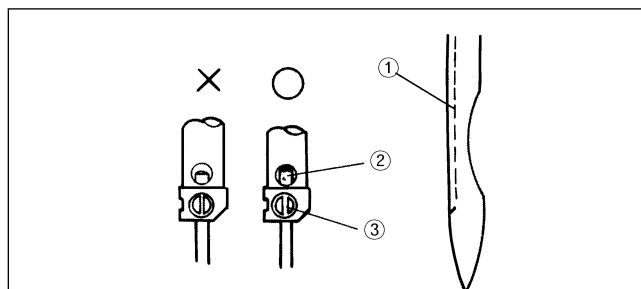

[Fig. 19]

### 2) Needle Bar Adjustment

As is shown in Fig. 20, unscrew the rubber plugs④ in the needle bar adjustment hole that is on the face plate and turn the pulley so that the needle bar is in a down-stop position. Then turn loose the clamp screws⑤ on the needle bar handle, move the needle bar such that the lowest carved sign on the needle bar⑦ is in line with the bottom of the needle bar lower bushing⑥, and tighten the clamp screws of the needle bar handle. Lastly, plug in the rubber plugs④.

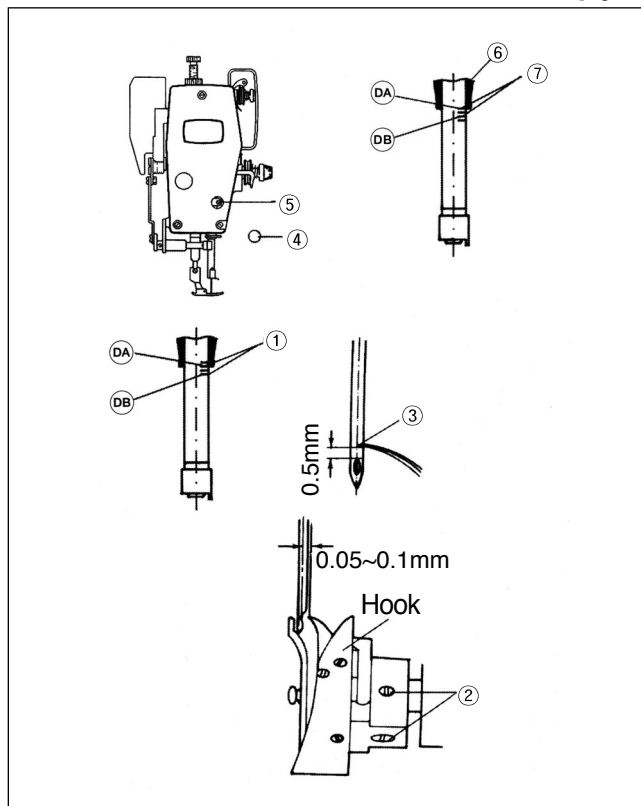


[Fig. 20]

### 3) Timing Adjustment of Needle and Hook

As can be seen in Fig. 20, align the bottom of the needle bar bushing⑥ with the hook fixed position sign① marked on the needle bar and loosen the three hook fixing screws②. Turn the hook so that the edge of the hook③ is in line with the needle center. Adjust such that the distance between the inside of the groove on the needle side and the edge of the hook③ is 0.05-0.1mm, then tighten the three fixing screws② again.

### 4) Lubrication Adjustment of Thread Take-Up Lever

As in Fig. 21, oil flow is at its maximum when the mark② on the head of the oil flow control pin① and the center of the hole③ on the thread take-up lever crank shaft is directly aligned. In contrast, oil flow decreases when the mark is turned closer to the corner⑤ of the link cam washer④. Furthermore, if the mark passes the corner of the link cam washer, oil will not flow at all.

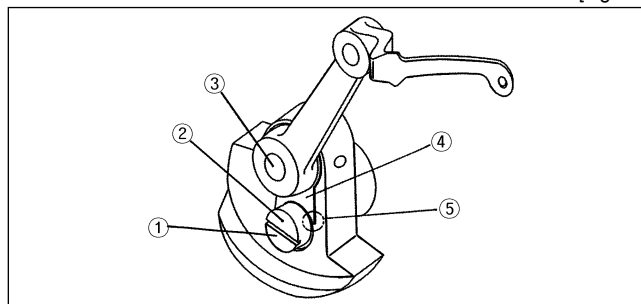

[Fig. 21]



## **Caution**



- ▶ When checking the oil level in the hook, keep your hands or oil flow checking paper away from any moving parts including transfer tools, to avoid injury.


### 5) Lubrication Adjustment of Hook

#### (1) Checking the oil supply level of hook

- A. After racing the sewing machine for three minutes (at an appropriate speed), secure the oil flow checking paper as shown in Fig. 22 and run the machine for about five seconds. Then check the oil tape marked on the paper.
- B. Check the oil supply level three times. The appropriate level of oil is when the oil level neither exceeds the maximum amount nor falls below the minimum level. (Insufficient oil would jam the hook, whereas excessive oil would contaminate the sewing material with oil.)

#### (2) Adjustment of the Oil Supply Level

Turn the oil flow adjusting screw① in the lower shaft front bushing in a clockwise direction for more oil flow. Turn it counterclockwise for less oil.

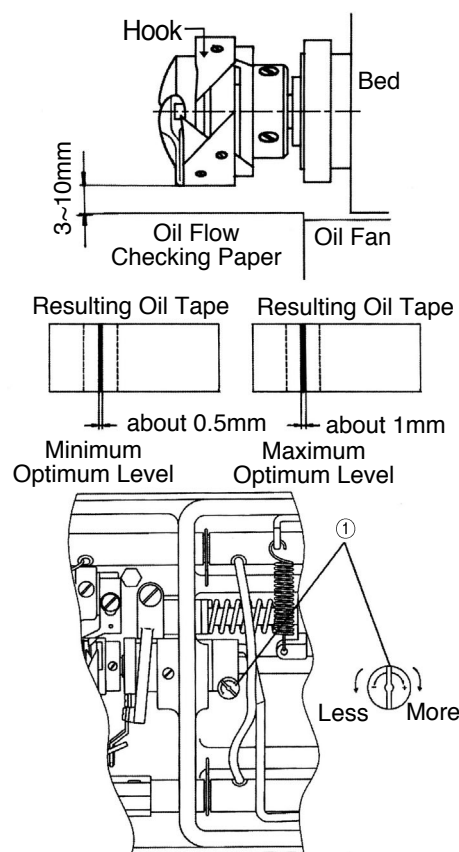


[Fig. 22]

## **Caution**



- ▶ Turn off the power when adjusting the lower thread tension. If the operator mistakenly steps down on the pedal while switched on, the machine will start automatically and can cause physical injuries.
- ▶ When using the clutch motor, be aware that the motor will continue to rotate for a while after the power is switched off. Start to work only after the motor has come to a complete stop.

## 6) Inserting Lower Thread and Tension Adjustment

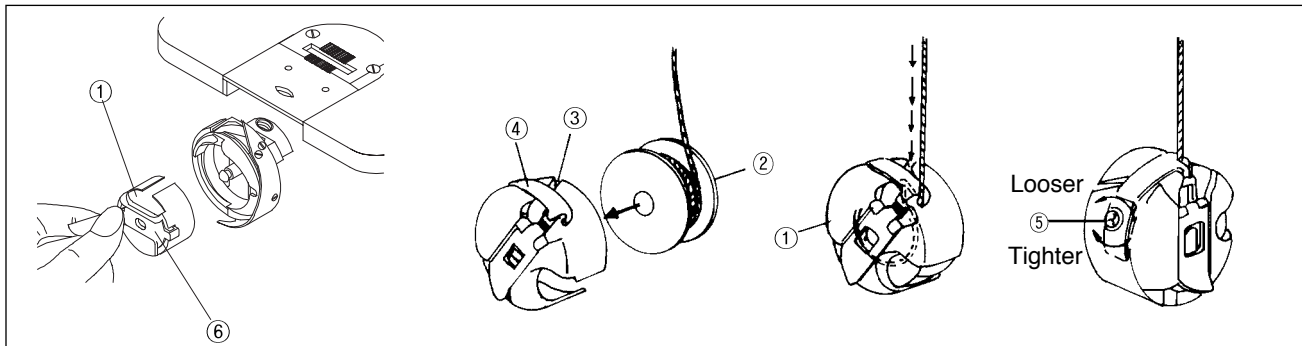

[Fig. 23]

A. After placing a bobbin② in a bobbin case①, push the thread through the thread groove③ and hook it under the tension adjusting plate spring④. To tighten the lower thread, turn the tension adjusting screw⑤ clockwise; turn it counterclockwise to loosen. Adjust the tension of the lower thread so that it will fall slowly by gravity when the bobbin case① is dropped while holding the end of the thread. (See Fig. 23)

### B. Inserting and Removing the Bobbin Case

Hold the bobbin case handle⑥ and insert it into the hook. Pull the handle⑥ to remove. (The bobbin② will fall out if the handle is let go.) (See Fig. 23.)




## Caution




- ▶ Turn off the power switch when routing the upper thread. If the operator mistakenly presses down on the pedal while switched on, the machine will start automatically and can cause physical injuries.
- ▶ When using the clutch motor, be aware that the motor will continue to rotate for a while after the power is switched off. Start to work on the sewing machine only after the motor has come to a complete stop.

## 7) Routing Upper Thread

Place the thread take-up lever at the highest position and route the upper thread in the order indicated in Figures 24 and 25.

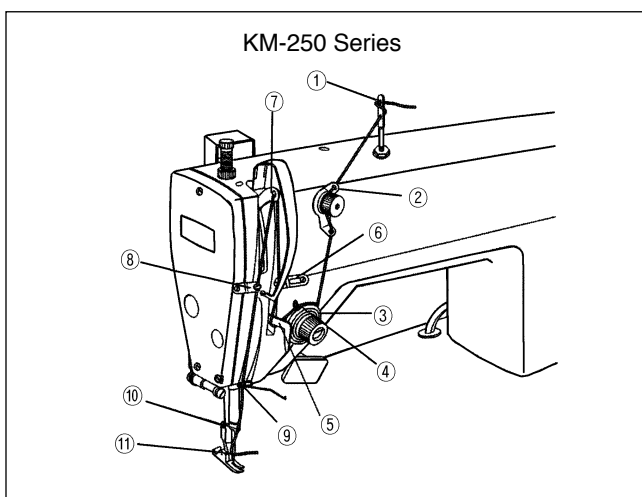

[Fig. 24]

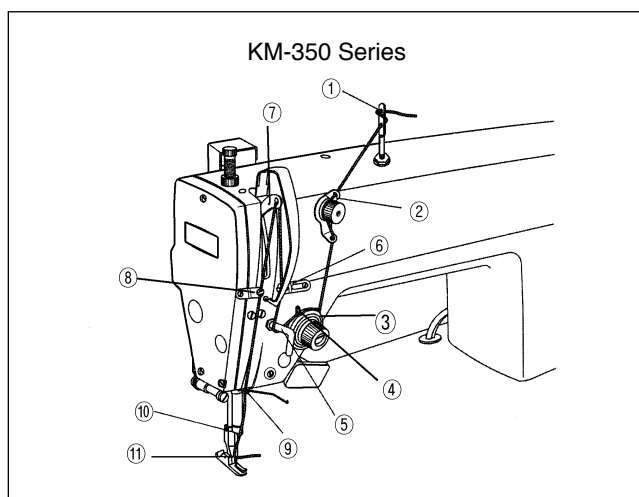

[Fig. 25]

## 8) Upper Thread Adjustment

### (1) Main thread adjustment device

The tension of the upper thread gets tighter if the tension adjusting nut① as in Fig. 26 is turned in a clockwise direction and it gets looser when turned in the opposite direction. The tension of the thread should differ according to the sewing conditions which depend on the material, thread, stitch length, etc. So the tension should be adjusted as seen fit for the conditions.

### (2) Tension adjustment of thread take up lever spring


As in Fig. 26, use a driver in the thread adjustment shaft groove② to adjust the spring tension. The thread take up lever spring grows tighter when the driver is turned clockwise and looser when turned counterclockwise.

### (3) Auxiliary thread adjuster


Turn the auxiliary thread tension adjusting nut① in clockwise direction to make the remaining thread length on the needle after trimming shorter and in counterclockwise direction to make it longer, as shown in Fig. 27. The appropriate length of the upper thread remaining after trimming is 30~40mm.

### (4) Thread release control


The thread release takes place simultaneously with the movement of the trimming solenoid. As seen in Fig. 28, the amount of thread release is controlled by moving the fixed position of the thread release wire②, which is connected with the clutch lever①, left and right. Loosen the two fixing nuts③ and pull the cable wire② to the left. Then fasten the nuts③ to release the thread to a large extent. If the cable wire is pushed to the right and the nuts③ tightened, the thread release happens on a lesser scale. After adjustment, tighten the nuts③ once again and check whether the opening of the thread guide plate④ of the thread adjuster is about 0.5-1mm when the thread releaser is in operation. There should be no opening when the thread releaser is not in operation; the thread guide plates④ should be touching back to back. The moving stroke of the thread release lever① is 11mm. Adjust such that the thread guide plates④ do not open when the cable wire is pulled about 0-8mm and that the plates open when the cable wire is pulled about 8-11mm. (See Fig. 28.)

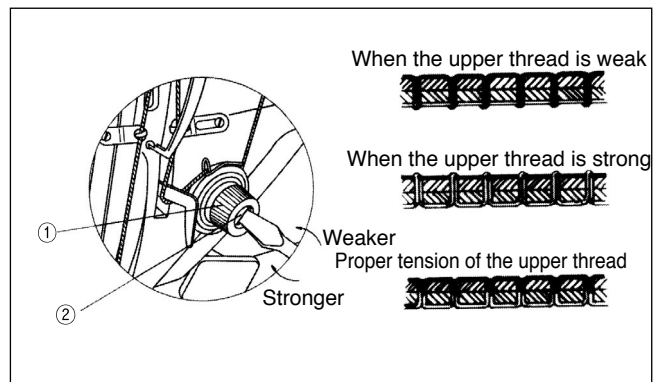

[Fig. 26]

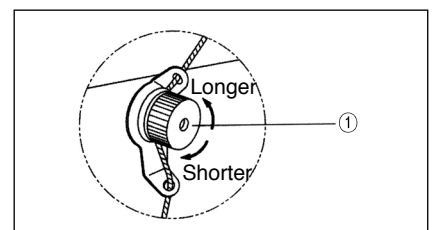

[Fig. 27]

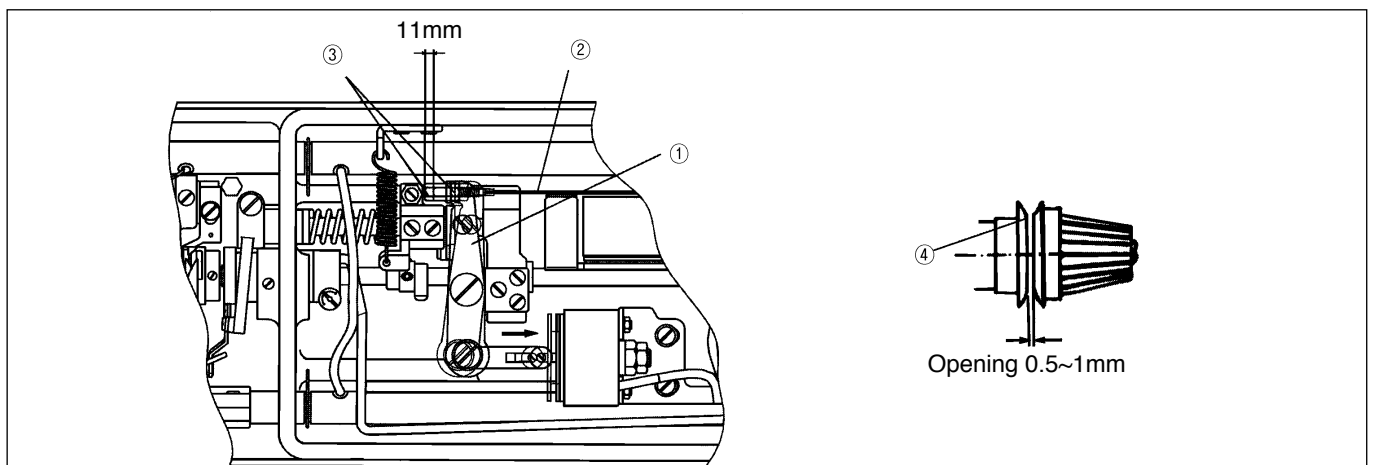

[Fig. 28]



## Caution



- ▶ After disassembling and adjusting a safety device, always place it back to the original position and check whether it functions as intended.
- ▶ Use both hands when pushing the machine backward or returning it to the original position. Due to the weight of the machine, your hand can get stuck in the machine if you should slip.
- ▶ When adjusting the machine with the switch on, be sure to pay extreme caution.




- ▶ Only trained engineers must perform troubleshooting or inspection of the machine.
- ▶ For electrical repair or inspection, consult with qualified technicians or agent.

### 9) Height and Tension Adjustment of Presser Foot

(1) As in Fig. 29, remove the rubber plug② in the face plate and place the presser foot③ on the needle plate. Then, loosen the presser bar fixing screw④ and adjust the height of the presser bar. The presser foot③ will fall when the presser bar is lifted and rise when the presser bar is moved down. Move the presser foot lifter⑤ manually to place the bottom face of the presser foot 5.5mm above the top face of the needle plate and tighten the presser bar fixing screws firmly.

#### (2) Tension adjustment


As described in Fig. 29, the tension of the presser foot will grow stronger when the tension adjusting screw⑥ is turned clockwise and weaker when turned counterclockwise. Make sure to screw in the fixing nut ① after adjustment.

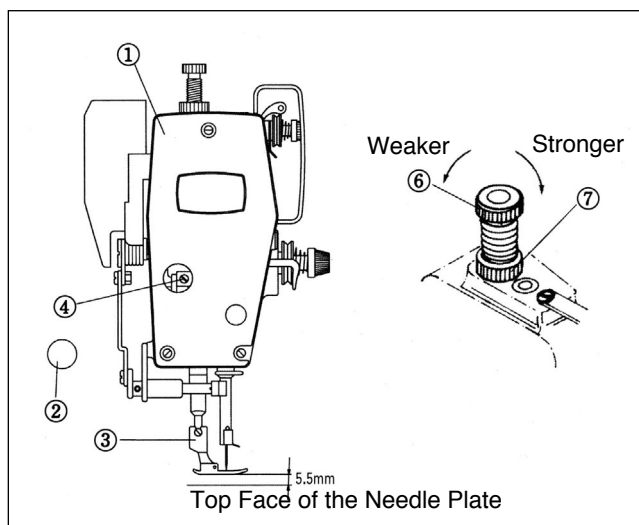

[Fig. 29]

### 10) Adjustment of Automatic Knee-Lifter (Optional)


An automatic knee-lifter will be attached to the sewing machine at point of delivery. The lifting amount of the presser foot when automatically lifting the knee is controlled by the automatic knee-lifting solenoid shaft crank①. First, loosen the solenoid cover fixing screw③ and remove the solenoid cover②. If the solenoid shaft⑤ is moved left and the fixing screw④ is tightened when the solenoid crank shaft fixing screw④ is loose, the lifting amount of the presser foot grows smaller. If the solenoid shaft⑤ is moved to the right, the lifting amount will grow bigger. Assemble the cover back after the adjustment is completed. (The presser foot lifting amount for the automatic knee-lifter will be set to 13mm by default at point of delivery.)

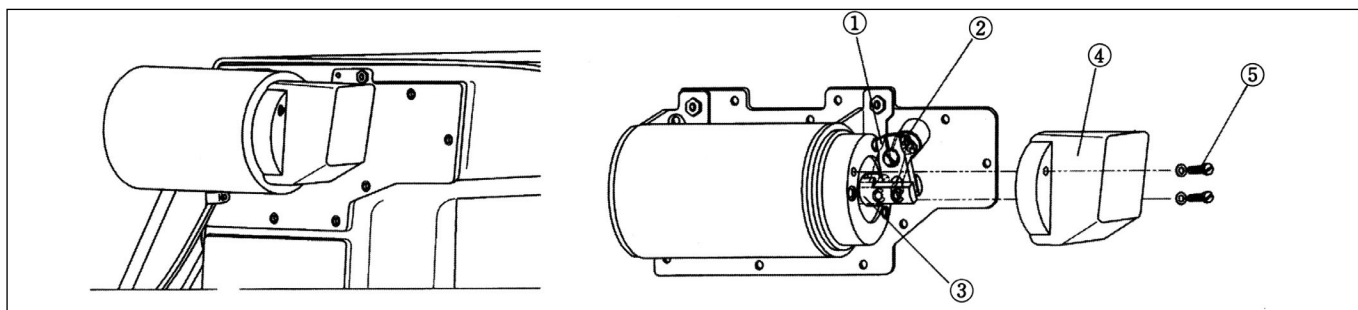

[Fig. 30]

## 11) Stitch Length Adjustment

As is shown in Fig. 31, the number marked by the stitch length adjusting dial① signifies the stitch length in mm units. Move the dial sideways to set it to the desired stitch length (Turn it in clockwise direction and the stitch length will decrease while turning it counterclockwise will increase the stitch length.)

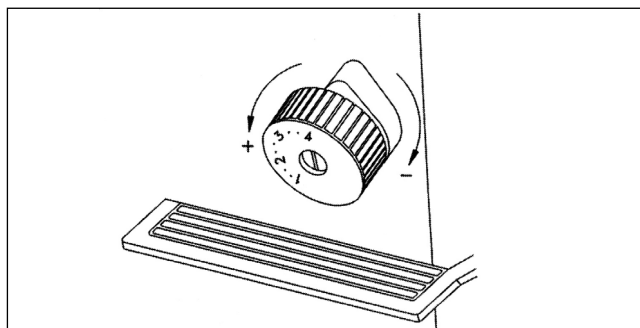


[Fig. 31]

## 12) Height and inclination Adjustment of Feed Dog

### (1) Height adjustment of the feed dog

(※ For KM-350/530 Series users, the stitch length adjusting dial must be set to “0” here.)


The height of the feed dog is adjusted by moving the lifter crank① after the lifter crank fixing screw② is loosened. The standard height from the top face of the needle plate to the top of the feed dog when the stitch length dial is at its maximum and the feed dog is at its highest point is 0.6~0.7mm for very thin materials, 0.75~0.85mm for general materials, and 1~1.2mm for heavy materials. (See Fig. 32)

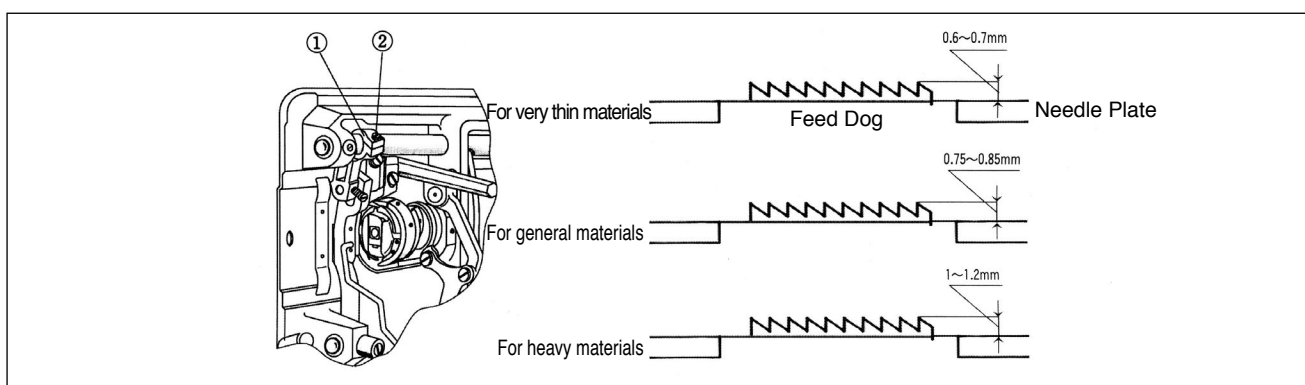

[Fig. 32]

### (2) Inclination adjustment of the feed dog

- A. To adjust the inclination of the feed dog, first loosen the feed dog support shaft fixing screw⑥ in the horizontal pushing crank④ and adjust by turning feed dog support shaft⑤ up and down in the direction of the arrow with a driver. Turning the feed dog support shaft⑤ clockwise will raise the front part of the feed dog, while turning it counterclockwise will lower the front part of the feed dog. (See Fig. 33.)
- B. The standard inclination of the feed dog is when the carved sign on the feed dog support shaft is horizontally in line with the horizontal pushing crank as in pictureⒷ in Fig. 33. However, to prevent puckering, adjust the feed dog to that the front is a little higher than the back as in pictureⒶ in Fig. 33. Also, to prevent material jamming, lower the front of the feed dog as in pictureⓒ in Fig. 33.
- C. Adjustment of the inclination of the feed dog③ will result in a change in the height of the feed dog, so recheck the height.

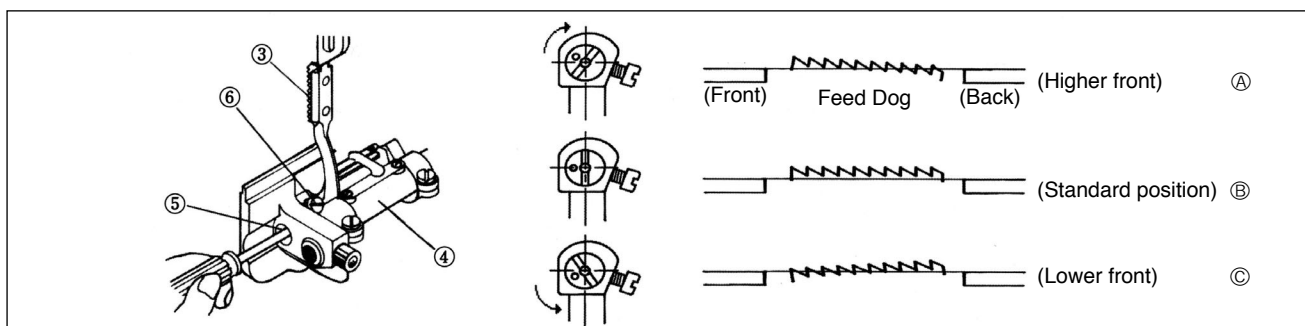

[Fig. 33]

### 13) Feed Cam Adjustment

The timing of the feed dog and needle is adjusted by turning the feed cam① up and down. When the pulley is turned such that the feed dog is lowered so that the top of the feed dog is aligned with the top of the needle plate, the lower needle hole will come in direct line with the top of the feed dog. This is the standard position. (For the KM-350/530 Series, the standard is when the end of the needle is in line with the top of the feed dog when the top of the feed dog is aligned in height with the top of the needle plate.)


(※ For KM-350/530 Series users, the stitch length adjusting dial must be set to "0" here.)

#### KM-250/506 Series

- A. To have the appropriate amount of tension in the thread, make the feed dog movement a little slower than the needle movement. To do this, loosen the feed cam fixing screw② and turn the feed cam① in the opposite direction of the arrow. Then, tighten the feed cam fixing screw②.
- B. To prevent material jam, make the feed dog movement a little faster than the needle movement. To do this, loosen the feed cam fixing screw② and turn the feed cam① in the arrow direction and then tighten the feed cam fixing screw②.

#### KM-350/530 Series


- A. If the feed dog movement is faster than the needle movement, loosen the feed cam fixing screw② and turn the feed cam① in the arrow direction and then tighten the feed cam fixing screw②.
- B. On the other hand, if the feed dog movement is slower than the needle movement, loosen the feed cam fixing screw② and turn the feed cam① in the opposite direction of the arrow and then tighten the feed cam fixing screw②.

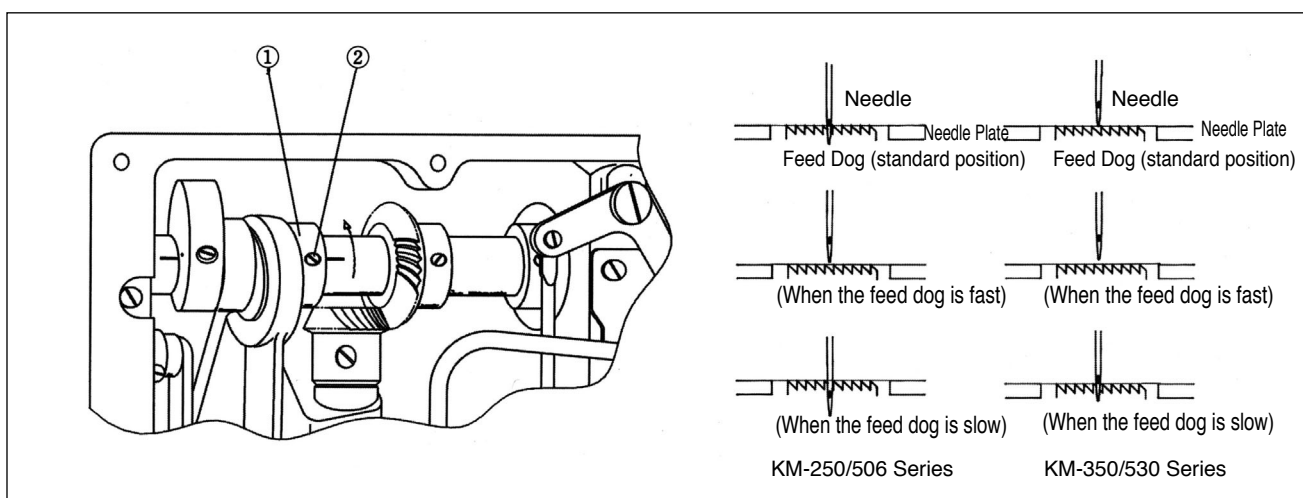

[Fig. 34]

### 14) Adjustment of Needle Movement (KM-350/KM-530 Series)


- (1) The standard position is when the needle feed connecting rod② is positioned at the carved sign marked on the horizontal pushing crank (back)①.
- (2) To increase the feed dog movement over the needle movement, loosen nut③ and adjust the needle feed connecting rod④ in ㉞ direction and then tighten nut③. The feed dog movement can increase about 20% in excess of the needle movement and this adjustment is especially effective for slippery material or thick material, which are susceptible to jams.
- (3) In contrast, turning the needle feed connecting rod② in ㉞ direction would decrease needle movement such that it would be smaller than the feed dog movement.

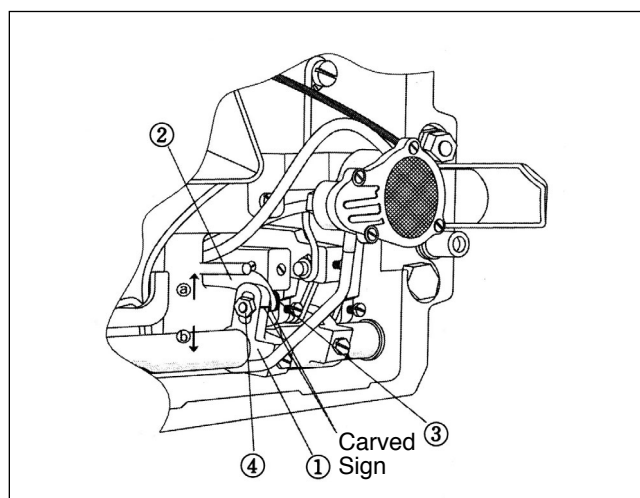

[Fig. 35]


## 15) Timing Adjustment of Trimmer

- (1) Turn the pulley① manually and align the red carved sign② on the pulley and the carved sign③ on the arm.
- (2) Separate the return spring④.

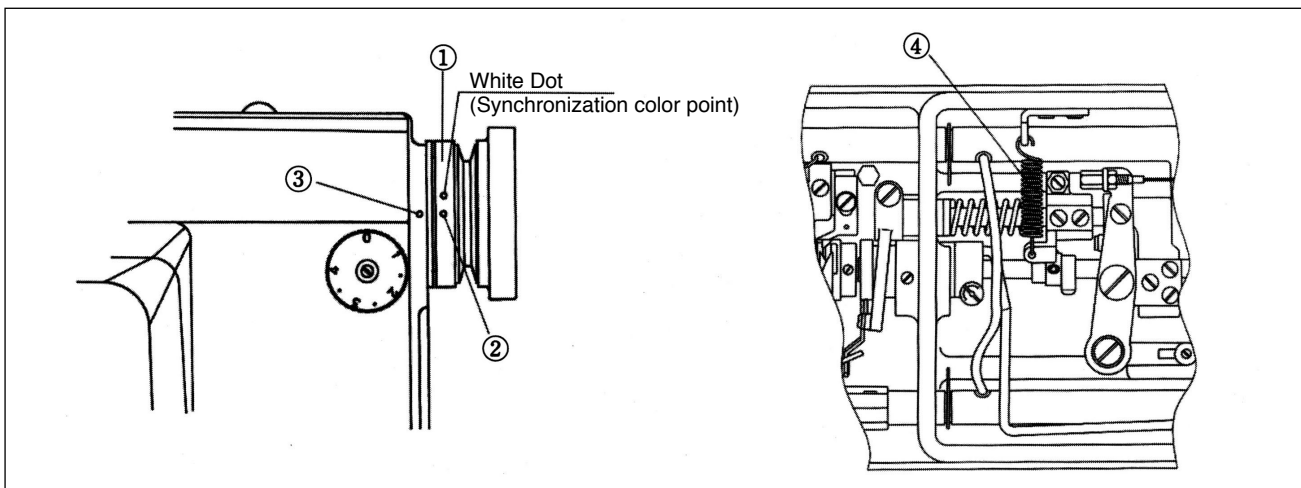


[Fig. 36]

- (3) Push the trimming lever⑤ so that the thread trimming knife⑦ on the hill of the movable knife⑥ is about 1~1.5mm more protruded than the end point of the fixed blade⑧.
- (4) Push the trimming solenoid shaft⑩ manually while the trimming cam fixing screw⑨ is loose. (At this point, the appropriate distance between the initial trimming cam⑪ and the roller single screw⑫ is 0.5mm.)

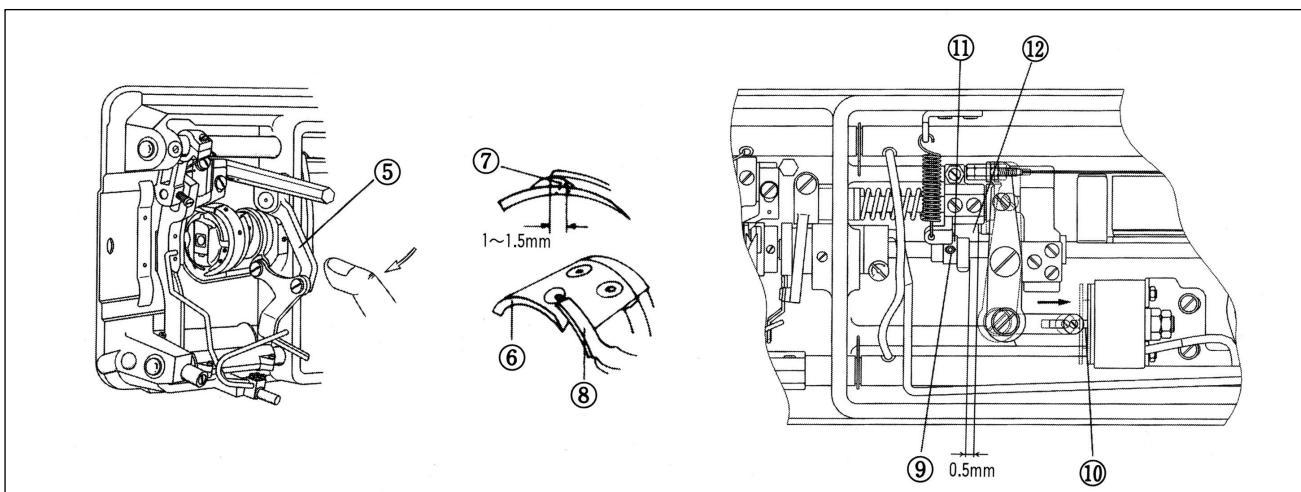

[Fig. 37]


- (5) Turn the trimming cam⑪ manually so that the edge⑬ of the roller driving part on the trimming cam⑪ touches the roller⑭.
- (6) Connect the return spring④.

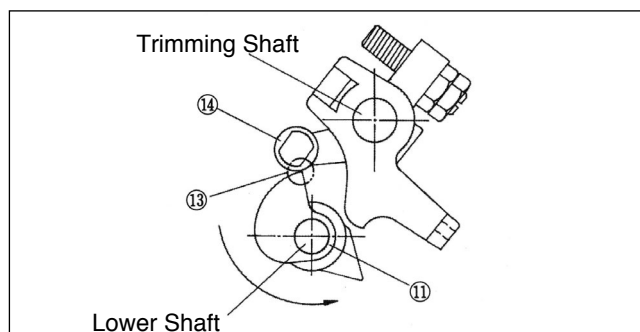

[Fig. 38]

## 16) Tension Adjustment of Fixed Blade


First, loosen the fixed blade tension adjusting nut① with a wrench box and then loosen the tension adjusting screw②. As in Fig. 39, adjust the tension adjusting screw of the fixed blade when the movable knife-edge meets the fixed knife-edge. Adjust just enough so that the knife edges meet without too much tension. After adjustment, make sure to tighten the tension adjusting nut① using the wrench box in the accessory box.

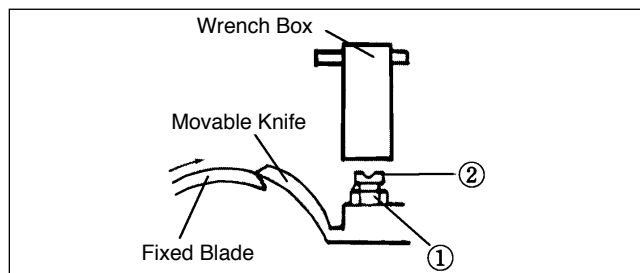

[Fig. 39]

## 17) Replacement of Movable Knife


To change the movable knife①, turn the pulley manually to place the needle at the highest point. Then, remove the needle plate by unfastening the two movable knife fixing screws② as seen in Fig. 40. Follow these instructions in reverse order to assemble.

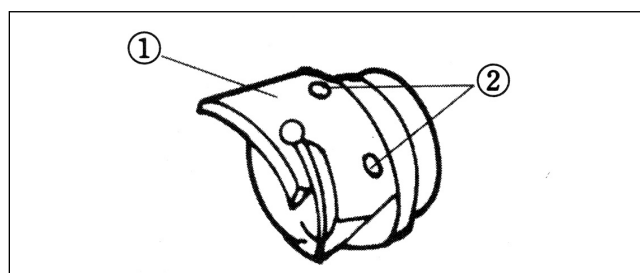

[Fig. 40]


## 18) Replacement of Fixed Blade

A. To change the fixed knife①, loosen the inner spindle stopper fixing screw② as in Fig. 41, remove the washer ③ and inner spindle stopper④, then unfasten the fixed knife fixing screw⑤. Follow these instructions in reverse order to assemble.

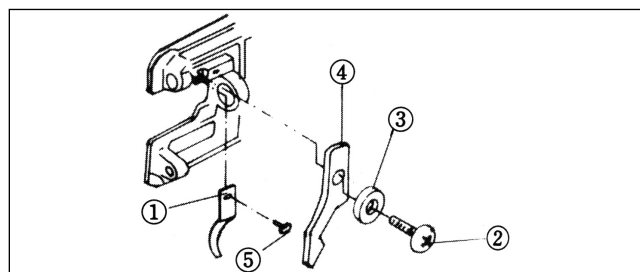

[Fig. 41]

B. If the edge of the fixed blade is worn, make sure to grind the knife edge with an oil grindstone as shown in Fig. 42.

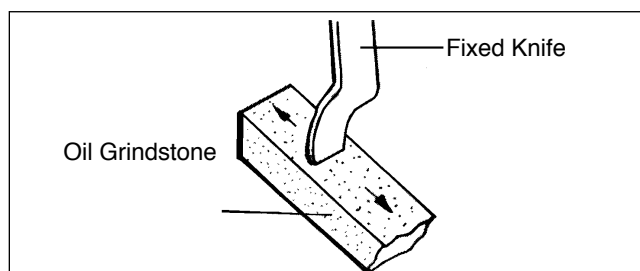


[Fig. 42]

## 19) Adjustment of Bobbin Catcher

### (1) Adjusting the operation lever of the bobbin catcher


If the bobbin catcher operation lever③ is not working as in Fig. 43, adjust the end of the bobbin catcher lever③ so that it is placed like ④ at the end of the connecting link②. Then, loosen the operation lever fixing screw⑥ and adjust.

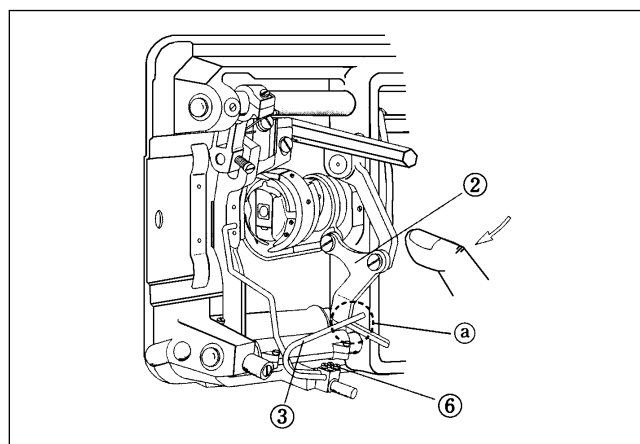

[Fig. 43]



(2) If the trimming was done manually, stop the machine when the edge of the fixed knife meets the bobbin catcher adjustment baseline that is marked on the top. Loosen the bobbin catcher fixing screw⑤ and adjust the bobbin catcher so that the contact surface of the bobbin catcher④ lightly touches the center of the protruding part of the bobbin①. Once the operation is completed, check to see whether the bobbin catcher springs back lightly.

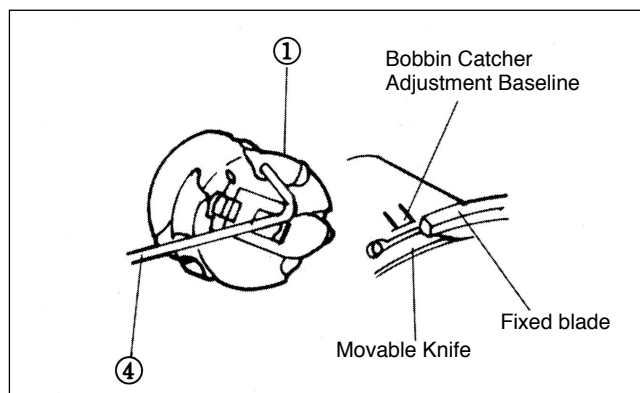


[Fig. 44]


## 20) Wiper Adjustment

### (1) KM-250-7/KM-350-7 Series

Turn the pulley manually and stop when the white carved signs on the arm and the pulley are aligned. (highest point of the thread take up lever) Loosen the two wiper shaft fixing screws① on the wiper base and press the connecting link② with the hand. Then adjust the wiper shaft③ so that the gap between the wiper and the needle is about 2mm and tighten the wiper shaft fixing screw①. Next, loosen the wiper fixing screw④ and adjust so that the gap between the lower end of the wiper and the end of the needle is about 2mm, after which the wiper fixing screw④ must be tightly fastened. (See Fig. 45 & 46)

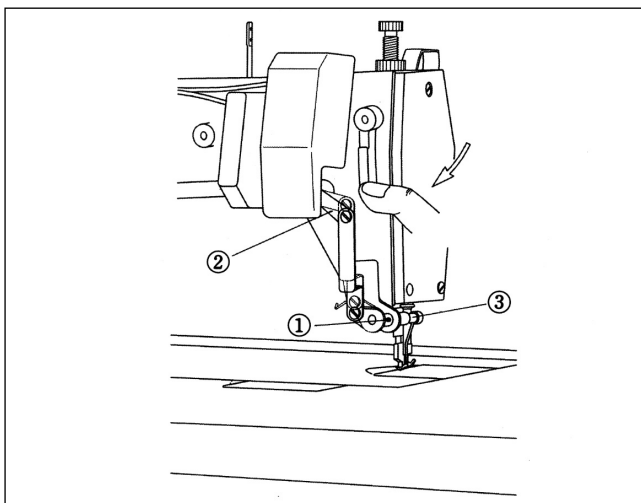

[Fig. 45]

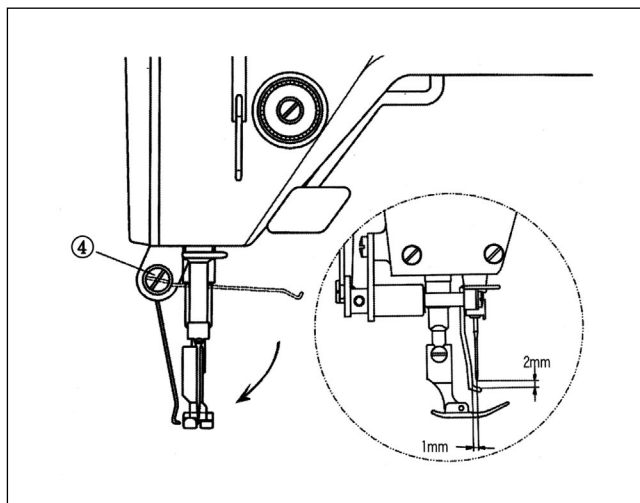


[Fig. 46]

### (2) KM-506-7/KM530-7 Series

Set the stitch length adjusting dial to "2."


Turn the pulley manually and stop when the white carved signs on the arm and pulley are in a straight line. (highest point of the thread take up lever) At this point, position the wiper so that the needle and the presser foot are about 2mm apart and then fix the position. (See Fig. 47)

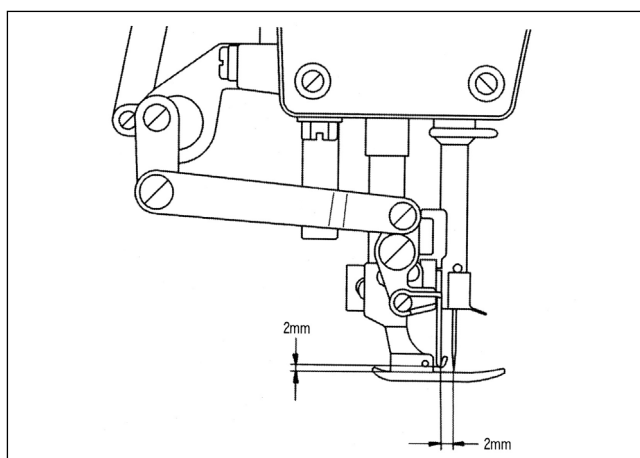

[Fig. 47]

## 21) Knife Adjustment (KM-506-7/KM-530-7 Series)


### (1) Adjusting the height of the knife

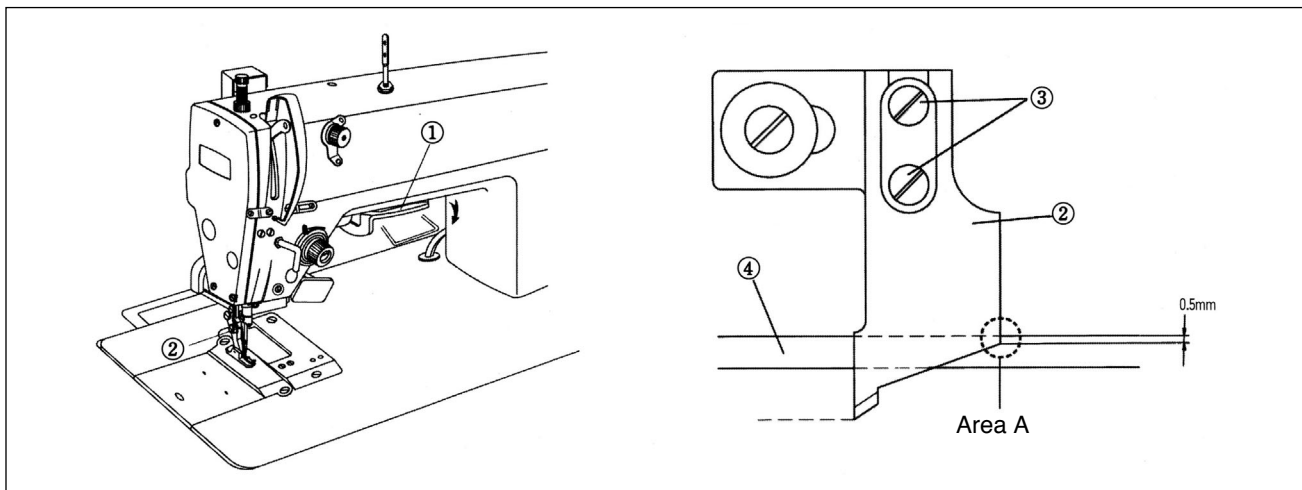

[Fig. 48]

- A. The knife② is operated by the lever① at the center of the sewing machine. If the lever① is pulled down, the cutting and sewing of the material can be done simultaneously. If the lever① is pulled up, sewing is done without cutting.
- B. Loosen the knife fixing screw③ when the lever① is pulled down and adjust so that Area A of knife② is about 0.5mm above the top face of the needle plate④. Then, tighten the knife fixing screw③.

### (2) Adjusting the front-back position of the knife

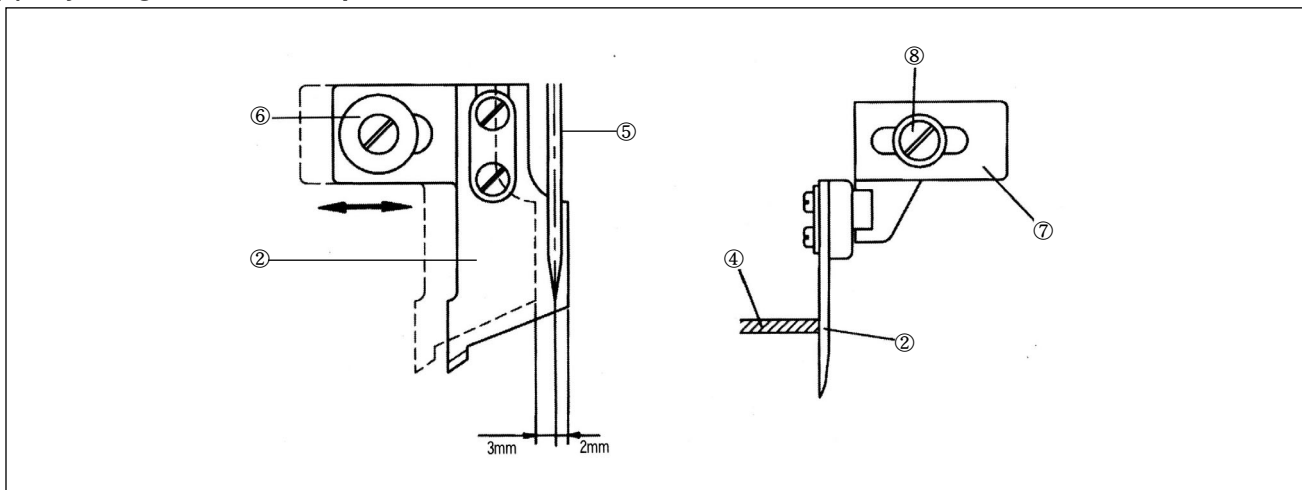

[Fig. 49]

- A. Set the stitch length adjusting dial to "0."

※ It is a standard that the edge of the blade ② meets the center of the needle ⑤.

To adjust the front-back position of the knife, loosen the knife plate fixing screw⑥ and move the knife plate back and forth. The adjustable width range of the knife edge is from 2mm forward to 3mm backward from the needle center.

### (3) Adjusting the left-right position of the knife

- A. To adjust the left-right position of the knife②, loosen the knife frame fixing screw⑦ and move the knife frame⑧ sideways.
- B. After loosening the knife frame fixing screw⑦ and adjusting the knife side so that it would touch the side of the needle plate④, tighten the fixing screw⑦.
- C. If the knife③ is too close to the needle plate④, there may be an overload on the knife when in operation; on the other hand, if the adhesion is too weak, there may be problems when cutting the material. Therefore, the lever① must always be operated after adjustment to check whether the knife② movement is smooth.


## 22) Use of Chip Discharge Guide and Auxiliary Needle Plate (KM-506/530 Series)

### (1) When Cutting and Sewing Simultaneously


When cutting and sewing are done at the same time, attach the chip discharge guide②, which is provided in the accessory box, to the auxiliary needle plate① with fixing screws③. (See Fig. 50)

### (2) When Sewing Only

When sewing is done alone without cutting, remove the chip discharge guide(upper)② and the insert the auxiliary needle plate cover④, which is provided in the accessory box, into the chip discharge groove in the auxiliary needle plate. (See Fig. 51)

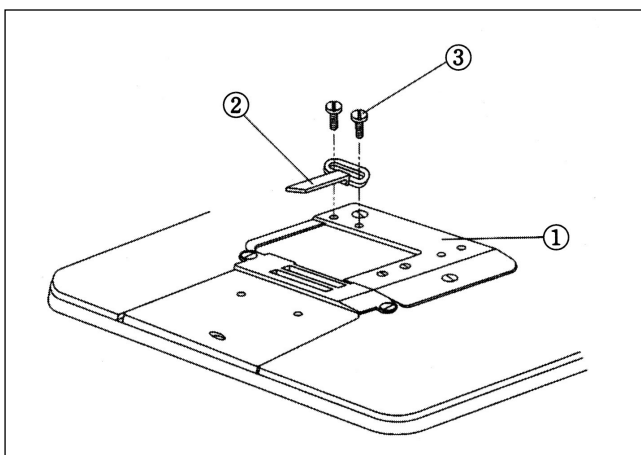

[Fig. 50]

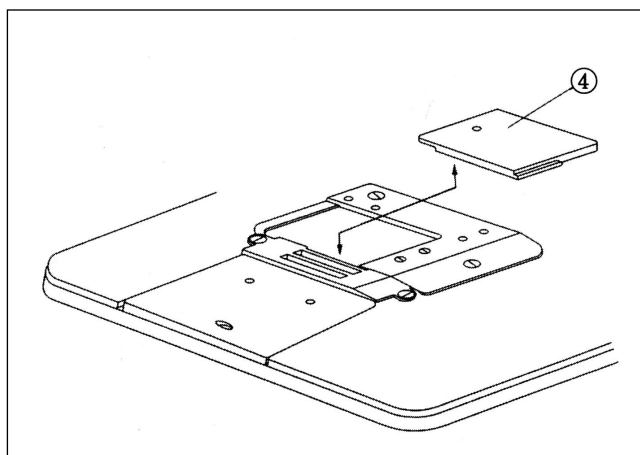


[Fig. 51]

## 23) Change of Cutting Width

### (1) Disassembly


- A. Loosen the needle fixing screw① and remove the needle②.
- B. Loosen the presser foot fixing screw③ and separate the presser foot④.
- C. Loosen the needle plate fixing screw⑤ and separate the needle plate⑥.
- D. Loosen the feed dog fixing screw⑦ and separate the feed dog⑧.
- E. Loosen the auxiliary needle plate fixing screw⑨ and separate the auxiliary needle plate⑩.
- F. Loosen the chip discharge guide(lower) fixing screw⑪ from the separated auxiliary needle plate⑨ and separate the chip discharge guide⑫.
- G. Loosen the knife fixing screw⑬ and separate the knife⑭.

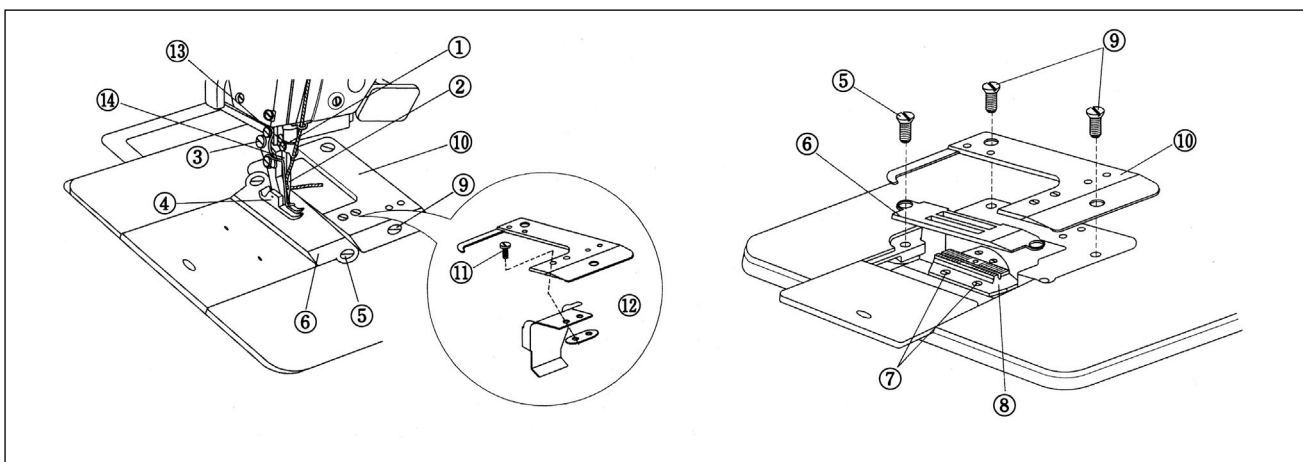

[Fig. 52]

## (2) Assembly

- A. Replace the chip discharge guide (lower)⑫ with the one fit for the desired cutting width and fix it with the auxiliary screw⑪ on the auxiliary needle plate⑩.
- B. Fix the auxiliary needle plate⑩ using two fixing screws⑨ on the bed.
- C. Fix the feed dog⑧ using the fixing screw⑦.
- D. Fix the needle plate⑥ on the bed using two fixing screws⑤.
- ※ Turn the pulley manually to check whether the space between the feed dog and needle plate during feed dog movement is equal in all directions. Then, adjust the knife frame to adjust the knife position.
- ※ Move the chip discharge guide (lower)⑫ to the left and right so that it is placed 0.05mm from the knife plate side ⑥. Then, use the fixing screw⑪ to fix the position.
- E. Adjust the knife frame so that the pressure of the knife⑭ and the needle plate side⑥ is appropriate. Then, tighten the fixing screw. (Refer to the explanation about knife position adjustment.)
- F. Attach the presser foot④ and tighten the fixing screw③.
- G. Fix the needle② with the fixing screw①.
- H. Adjust the knife position adjusting plate⑦ to get the desired cutting width and tighten the fixing screw⑧ after adjustment.
- ※ After assembly, refer to the knife position adjustment instructions on page 24 and readjust.

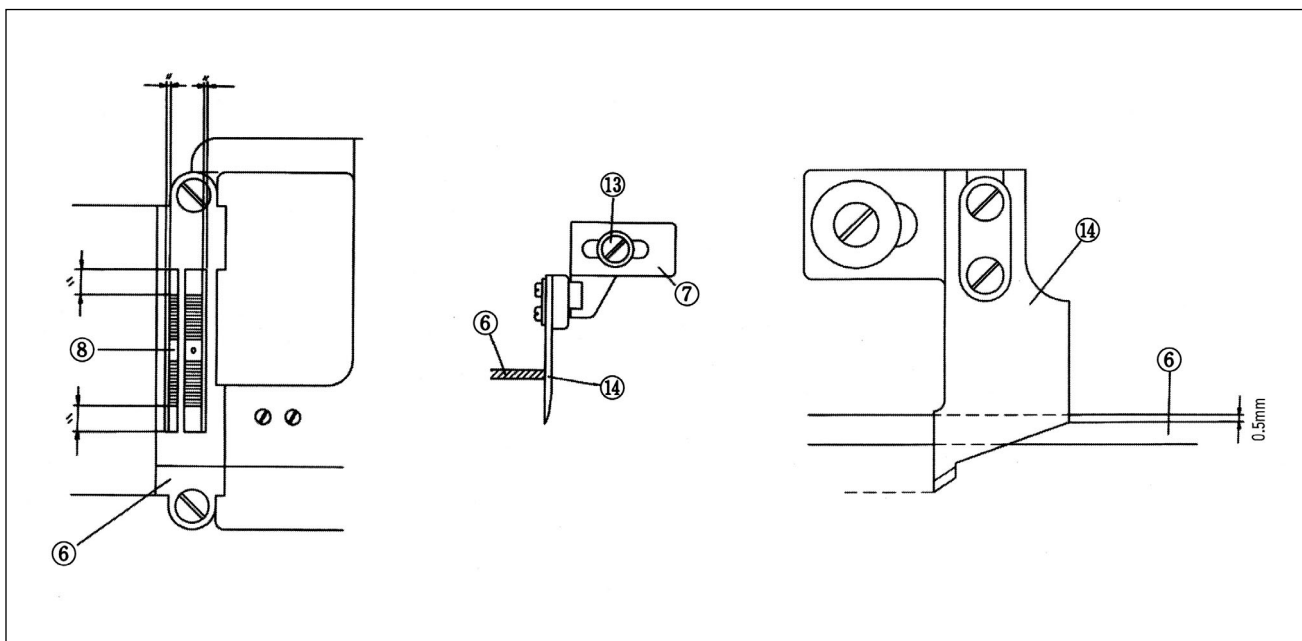

[Fig. 53]

# 4

## Cause of troubles and troubleshooting

### 1) Sewing machine troubleshooting

No	Symptom	Checkpoints	Root cause	Corrective action
1	Needle breaks	Direction and height of needle	Needle is inserted into wrong position.	Reinsert the needle correctly.
		Needle	Needle is bent.	Change the needle.
			Bad timing of feed dog.	Adjust the timing of feed dog.
		Ascending level of needle bar	Bad timing of needle and hook.	Adjust the timing of needle and hook.
		Height of needle	Bad timing of needle and hook.	Adjust the timing of needle and hook.
		Gap between needle and hook	Bad timing of needle and hook.	Adjust the timing of needle and hook.
2	Thread breaks	Threading method	Wrong threading.	Thread the needle correctly.
		Needle	Bent needle or broken needle tip.	Change the needle.
		Direction and height of needle	Needle inserted in the wrong position.	Insert the needle correctly.
		Upper thread tension	Too tight upper thread tension.	Reduce tension of upper thread.
		Lower thread tension	Too loose lower thread tension.	Reduce tension of lower thread.
		Working capacity of take-up lever spring	Loose upper thread.	Adjust take-up lever spring.
3	Stitch skips	Direction and height of needle	Needle inserted in the wrong position.	Reinsert the needle in the right direction.
		Needle	Bent needle or broken needle tip.	Change the needle.
		Threading	Thread passing at wrong position.	Change the needle.
		Ascending level of needle bar	Wrong timing of needle and hook.	Adjust the timing of needle and hook.
		Height of needle bar	Wrong timing of needle and hook.	Adjust the timing of needle and hook.
		Gap between needle and hook	Wrong timing of needle and hook.	Adjust the timing of needle and hook.
			Remaining length of upper thread is short .	Adjust the thread adjusting device.
		Racing-proof spring of bobbin case	Due to bobbin racing during trimming, lower thread dropping from bobbin case becomes too short to go up.	Change the racing protection spring.
		Take-up lever spring	Unable to lift lower thread due to weak take-up lever spring.	Adjust the working capacity of take-up lever spring.

No	Symptom	Checkpoints	Root cause	Corrective action
4	Upper thread does not sink.		Too tight upper thread tension.	Reduce tension of upper thread.
			Too loose lower thread tension.	Increase tension of lower thread.
5	Lower thread does not sink.		Too weak upper thread tension.	Too strong lower thread tension.
			Increase tension of upper thread.	Decrease tension of lower thread.
6	Trimming errors	Tension of fixed blade	Tension not aligned between movable and fixed blade.	Adjust tension of movable and fixed blade.
		Edge of movable and fixed blades	Abrasion in blade groove of movable and fixed blade.	Replace movable and fixed blade.
		Direction of needle	Wrong needle insertion.	Reinsert the needle correctly.
		Check the crossing of trimmer cam notch mark and blade	Insufficient crossing quantity of movable and fixed blade.	Adjust the stroke of movable and fixed blade.
7	Upper thread is pulled out when sewing commences.		Too strong upper thread tension.	Adjust tension of upper thread.
			Too thick a needle for thread.	Check thickness of needle.
		Check the Up-stop position of needle	Take-up lever pulls out the upper thread because the needle up and down position is too high.	Adjust the up-stop position of needle.

# MEMO