


圆刀裁剪机

CLOTH CUTTING MACHINE

50(WD-2)



50 Three Dimensional Assembly Picture

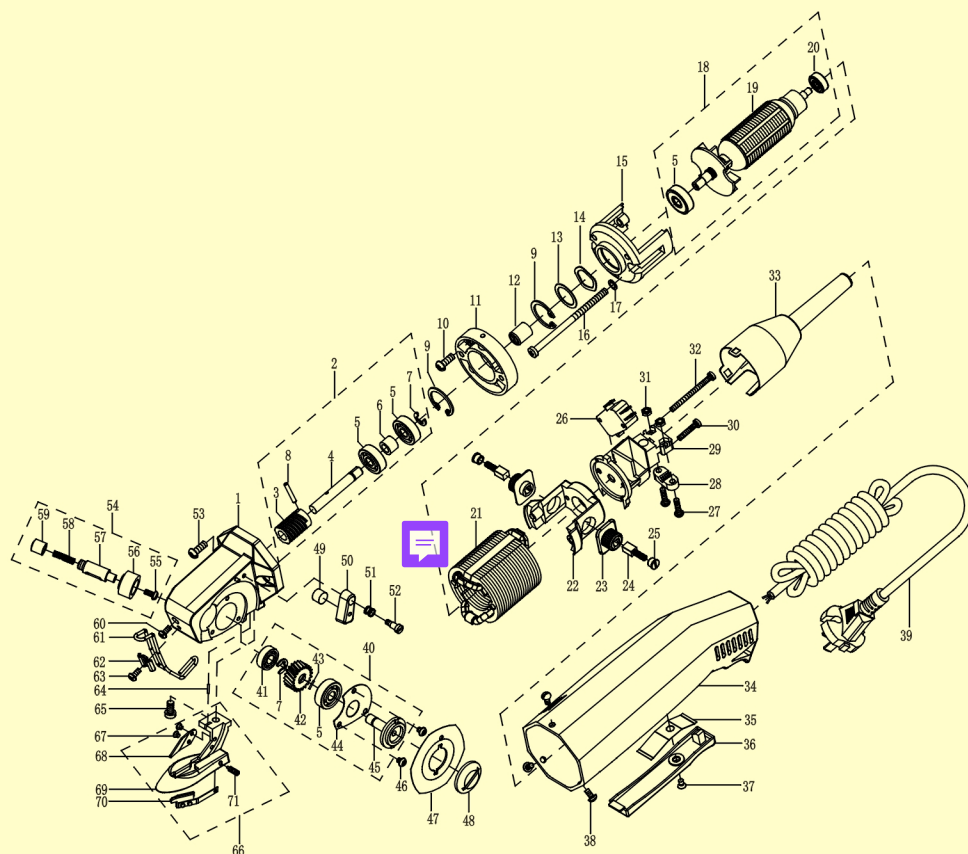

序号 零件编号及名称
Ref.no. Part.no & Description

- 1 W1机头Gear Housing
- 2 W74蜗杆成套Drive Gear Assembly
- 3 W32蜗杆Drive Gear
- 4 W34蜗杆轴Drive Gear Shaft
- 5 W5 626轴承Bearing
- 6 W36轴承隔套Spacer
- 7 W38轴用挡圈Collar
- 8 W33蜗杆轴Drive Gear Pin
- 9 W42孔用挡圈Collar
- 10 W39连接座螺钉Insulator Screw
- 11 W40连接座Insulator
- 12 W41十字接Coupling
- 13 W43平垫圈Undulated Washer
- 14 W44波形垫圈Wave Washer
- 15 W47风叶支架Holder For Motor Cooler
- 16 W45风叶支架螺钉Screw For Motor Cooler
- 17 W46螺钉垫圈Washer
- 18 W70转子成套Rotor Assembly
- 19 W50转子Rotor
- 20 W51轴承Bearing
- 21 W48定子Stator
- 22 W52碳刷支架Carbon Brush Holder
- 23 W53碳刷套Carbon Brush Socket
- 24 W54碳刷Carbon Brush
- 25 W55碳刷帽Carbon Brush Cap
- 26 W57微动开关Top Switch
- 27 W59压线块螺钉Crip Screw
- 28 W58压线块Crip
- 29 W56开关盖Switch Cap
- 30 W62开关座短螺钉Screw
- 31 W60压线块螺母Crip Nut
- 32 W61开关座长螺钉Screw
- 33 W63电源护套Cord Cover
- 34 W65电机外壳Arm
- 35 W69开关跳弹片Spring
- 36 W66开关盖Switch Cover

序号 零件编号及名称
Ref.no. Part.no & Description

- 37 W67开关跳螺钉Switch Cover Screw
- 38 W64电机外壳螺钉Screw
- 39 W68电源线Cord
- 40 W75蜗轮成套Worm Wheel Assembly
- 41 W2 696轴承Bearing
- 42 W3蜗轮Worm Wheel
- 43 W4轴销Spring Pin
- 44 W6蜗轮挡圈Cover Plate
- 45 W8蜗轮轴Stepped Shaft
- 46 W7挡圈螺钉Cover Plate Screw
- 47 W9六角刀片Side Knife
- 48 W10刀片帽Knife Lock Screw
- 49 W28油毡Oil Felt
- 50 W27润滑油Knife Oiler
- 51 W29润滑油弹簧Spring For Oiler
- 52 W30润滑油螺钉Screw For Oiler
- 53 W31机头螺钉Screw For Gear House
- 54 W71砂轮成套Grinder Assembly
- 55 W11砂轮紧固螺钉Grinder Screw
- 56 W12砂轮Grinder Wheel
- 57 W13砂轮轴套Grinder Shaft
- 58 W14弹簧Spring
- 59 W15砂轮按钮Push Button
- 60 W16砂轮轴套螺丝Screw
- 61 W17防护架Finger Guard
- 62 W18防护架压块Finger Guard Pressing Block
- 63 W19防护架螺钉Finger Guard Screw
- 64 W26压脚圆销Screw
- 65 W25压脚紧固螺钉Press Foot Pin
- 66 W76压脚成套Press Food Assembly
- 67 W22分布片铆钉Guide Plate Rivet
- 68 W21分布片Guide Plate
- 69 W20压脚Press Foot
- 70 W23下刀Lower Knife
- 71 W24下刀螺钉Lower Knife Screw

说明书

50 型电剪适用于服装、鞋帽、领带、制伞等企业使用。以剪断速度快、轻便灵活等特点。本机结构合理，功能齐全。

技术规格：

刀片尺寸：φ50 毫米
刀片转速：3500 转
剪裁高度：10 毫米
电压：单相110V~120V, 220V~240V
功率：60瓦

一、一般使用与装配

- 1.磨刀：启动电剪，轻按砂轮按钮(W15)砂轮 (W12)自动磨刀,保持刀片锋利。若砂轮油污过多，应先清除或更换后使用。
- 2.刀片装卸：将刀片 (W9) 孔旋止砂轮孔位置上，插入圆柱销用螺丝刀旋出或压紧刀片帽 (W10) 即可。
- 3.更换其它零件按立体装配图顺序进行。

二、保养要点

- 1.砂轮 (W12) 油污过多，应及时清除或更换，以保证有效磨刀，可保刀片锋利，减轻电机负担。
- 2.清除纤尘：刀片背后及电机内纤尘过多时应予以清除，以避免损坏电机。
- 3.蜗轮润滑：电剪正常使用,一个月后，应向机头背后注油孔注入润滑油脂。
- 4.刀片润滑：使用前先向润滑器、(W27)、油毡(W28) 注30#车油以减小刀片与下刀的摩擦。
- 5.更换电刷：经长期运转后，电刷 (W54) 磨损过半时，应断开电源更换电刷(若电动机运转不正常，立即停机检查电刷是否正常)。

三、勾布、卡布、裁断困难原因及排除

原 因	排 除
下刀(W23)或刀片 (W9) 有缺口或磨损过大	更 换
刀片与下刀位置、角度、弹力不正常	1.下刀卸下调整 2.下刀必须以最小的角度首先靠在刀片刃口上，弹力适度。
砂轮油污过多	除去砂轮油污或更换砂轮后，启动磨刀。

四、确保事宜

- 1.机器工作时必须使用本机相匹配电源并安全接地线，以防触电。
- 2.严禁将手或者身体其它部位接触高速运转的刀片。
- 3.在拆装机器零件时，一定要断开电源，以防触电。
- 4.严禁堵塞排风口。

附件清单

刀 片	1片	圆 柱 销	1条	十字接	2个	油 毡	1个
砂 轮	1个	电 刷	1付	润 滑 脂	1条		

Direction

50 Type electric scissors is suitable for clothes, shoes and hats ties, umbrella enterprise. It can cut off quickly and is portable and flexible. This machine has reasonable structure and all the necessary function.

Technical Specification:

Blade Size: φ 50 mm
Blade speed: 3500cycles
Pruning height: 10 mm
Voltage: single-pharse 110V~120V, 220V~240V
Power: 60 w

一、Common usage and assembling

- 1.Mill blade: start electric scissors , press abrasive button(W15) the abrasive wheel(W12)will Mill the blades automatically, to keep the blade sharp. If the abrasive wheel has more greasy dirt, should use it after cleaning or changing.
- 2.Blade load and unload: The blade is revolved to abrasive wheel hole , insert cylindrical pin to use flatt hand (appendix) to revolve out or compress blade hat (W10) .
3. Change other parts according to the order of three - dimensional assembly drawing.

二、Maintenance point

1. The abrasive wheel(W12)has more greasy dirt, it should be cleaned and changed in time to make sure of milling blade effectively and keep the blade sharp, reduce the shoulder of the electric machine.
2. Clean fine dirt: should clean the fine dirt behind the blade and in the electric machine to avoid damage.
3. Worm wheel lubricate: Normally use electric scissors, should put some drops grease to the oil hole. twice ~three times a month.
4. Blade lubricate: Before using , stakes 30 # oil to lubricative cotton to reduce the friction between the small blade and below blade.
5. Change the electric brush: After running for a long time , has damaged a half , should change the electric brush with the power cut off (if the electric motor is operating unnormally, please stop the machine at once to check the electric brush is normal).

三、The reason of cancelling cloth , blocking cloth and cut down hard and remove

Reason	Remove
below blade (V23) or blade (W9) has breach or damage	change
The position , angle and elasticity Between Blade and below blade	1.adjust blade below 2.Below blade must be leaned against the blade as min angle , suitable elasticity
Over greasy dirt of the abrasive wheel	Aftergetting rid of abrasive wheel greasy dirt ,start mill blade.

四、Make sure to:

- 1.Opearing voltage must be normal and connect earth wire for safety, toavoid shock.
- 2.Do not touch the high speed moving blade with fingers or another body organ.
- 3.When to load and unload parts,the power plug must be pulled down. toavoid shock.
- 4.Forbid to plug the fanlight.

Appendix list

blade	1 pc	cylindrical pin	1	connector	2	lubricative cotton	1
abrasive wheel	1 pc	electric brush	1	lubricative grease	1		