


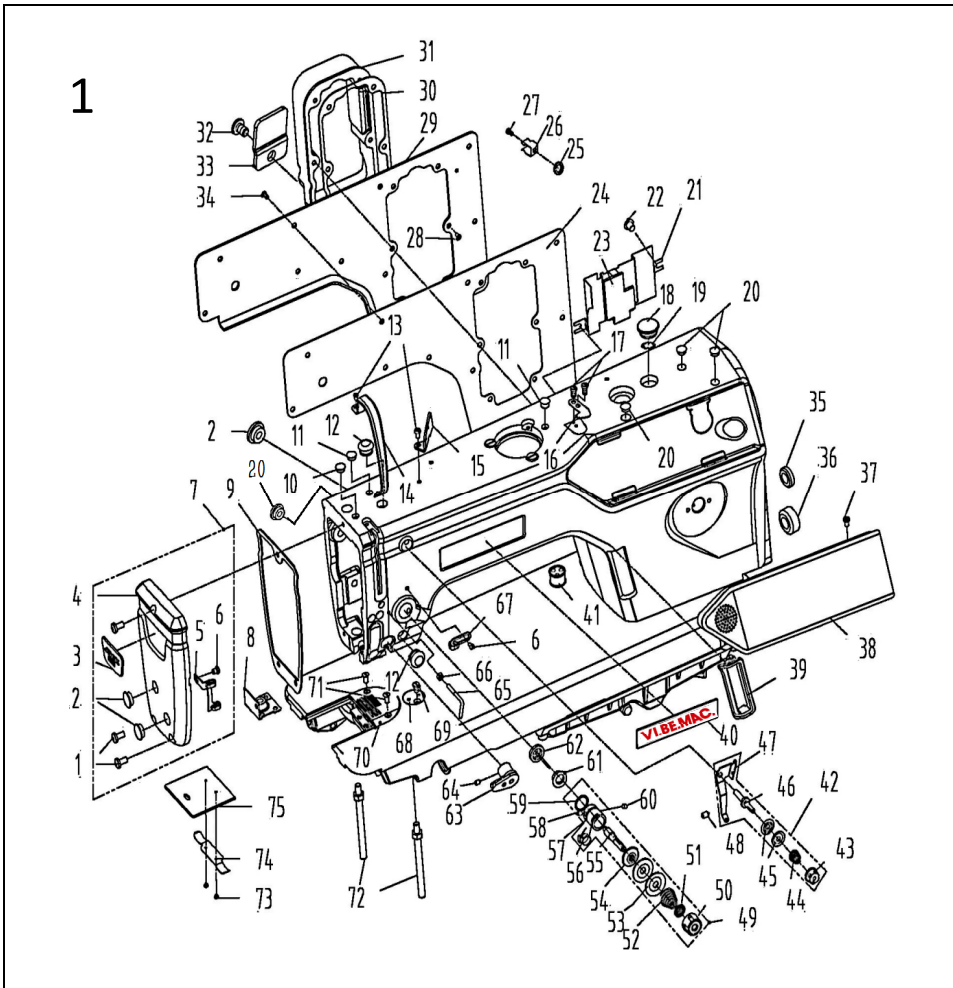


1. 机壳、外装部件/Machine Frame & Miscellaneous Cover Components

序号NO.	公司件号	Part NO.	名称	PartName	零件描述	Description	数量	Number
1	101S11001		后盖板螺钉	Screw SM3/16"×28 L=9			3	
2	10122003		面板调节孔橡胶	Rubber plug			2	
3	114437008		面板盖标牌	Head card			1	
4	14401005		面板	Face plate			1	
5	13813005		右线钩	Thread guide left			1	
6	101S11007		右线钩螺母	Screw SM11/64"×40 L=6			2	
7	303979		面板(喷漆)	Face plate asm			1	
8	14422001		针杆油封套	Needle bar oil seal set			1	
9	14422004		面板垫	Face plate gasket			1	
10	13122003		针杆上盖	Rubber plug			1	
11	10122005		挑线杆针座孔塞	Rubber plug			2	
12	10122004		针杆曲柄螺母	Rubber plug			2	
13	101S11004		挑线杆护套螺钉SM3/16"×28 L=7	Screw SM3/16"×28 L=7			2	
14	13812018		挑线杆防护罩	Thread take-up lever cover			1	
15	13512004		三孔线钩	3-hole thread guide			1	
16	11419001		刀片	Knife			1	
17	114511015		割线刀螺钉	Screw			1	
18	21022007		油圈	Rubber plug			1	
19	21012018		油封垫	Oil sealing washer			1	
20	13822001		限位屏片座	Rubber plug			4	
21	144012021		电机罩壳	Oil preventing plate			1	
22	141S11002		圆杆头螺钉SM3/16x28	Screw SM3/16"x28			2	
23	14423002		隔油板油毡	Oil cotton			1	
24	14422005		后盖板垫	Side plate gasket			1	
25	10128016		螺母(带橡胶垫圈)螺母	Washer			1	
26	13812007		螺栓	Buckle			1	
27	S04021		螺钉	Screw			1	
28	101S11001		后盖板螺钉SM3/16"×28 L=9	Screw SM3/16"×28 L=9			6	
29	303978		后盖板(喷漆)	Side plate			1	
30	14422002		拾压脚踏垫(防静电)	Flat pad			1	
31	303980		拾压脚踏垫(防静电)	Presser foot electrostatic cover plate			1	
32	101S11033		油管压板螺钉	Screw			1	
33	14412022		电线压板	Wire clamp			1	
34	101S11001		后盖板螺钉SM3/16"×28 L=9	Screw SM3/16"×28 L=9			12	
35	141S12006		送料调节孔塞	Rubber plug			1	
36	10122007		橡胶圈	Rubber plug			1	
37	138505001		螺钉	Screw			2	
38	11443001900		操作面板螺钉	Control panel,PowerMax			1	
39	114422006		装饰条	Decorative article			1	
40	114437006		机头商标牌	Head card			1	
41	14122001		橡胶圈(内孔)	Rubber plug			1	
42	1411300400		小夹线器组件	Thread tension asm.			1	
43	141S16019		小夹线器螺母	Thread tension nut			1	
44	11227001		小夹线弹簧	Thread tension spring			1	
45	14112017		小夹线板	Thread tension disk			2	
46	13810008		小夹线螺母柱	Thread tension post			1	
47	13812066		过线板	Thread tension guide plate			1	
48	138508006		小夹线器固定螺钉SM3/16"×28 L=7	Screw SM3/16"×28 L=7			1	
49	1411300500		夹线器组件(精密) (厚料)	Thread tension asm. (-H)			1	
50	141S16013		夹线器螺母	Thread tension nut			1	
51	10112001		夹线器螺母	Thread disk rotating stopper			1	
52	11427050		夹线弹簧 (厚料)	Thread tension spring A (-H)			1	
53	14112015		夹线板	Thread tension disk			2	
54	14112016		松线板	Disk stopper			1	
55	141S30001		夹线器螺钉	Thread tension post			1	
56	10127031		挑线杆 (厚料)	Thread take-up spring (-H)			1	
57	10103011		挑线簧调节座	Thread tension base			1	
58	101S15005		夹线器固定螺钉SM9/64"×40 L=5.5	Screw SM9/64"×40 L=5.5			1	
59	10122014		挑线器调节座O型圈	Rubber ring			1	
60	101S15010		左脚踏	Screw SM15/64"×28 L=10.5			1	
61	14403001		松线针支撑套	Loose wire nail support sleeve			1	
62	1442600300		松线针	Loose wire nail asm			1	
63	143000100		电子夹线器组件	Nest less e-device			1	
64	207514007		GB/T80 凹圆固定螺钉 M4×6	Screw M4x6			1	
65	13113001		固定式线轴	Thread guide			1	
66	140S16001		螺母SM9/64"×40	Nut SM9/64"×40			1	
67	10113004		右线钩	Thread guide night			1	
68	13812019		卷边脚座	Ruler stop seat			1	
69	101S11002		卷边器座螺钉	Screw SM11/64"×40 L=5.5			1	
70	13115002		针板 (厚料)	Needle plate (-H)			1	
71	104S17002		针板螺钉	Screw SM11/64"×40			2	
72	140S12001		橡胶柱	Machine head stud			2	
73	101S11019		橡胶垫圈	Slide plate			2	
74	10127009		橡胶板	Slide plate spring			1	
75	10115002		橡胶板	Screw SM3/32"×56 L=2			1	

2. 上轴、挑线部件/Main Shaft & Thread Take-up Components


序号NO.	公司件号	Part NO.	名称	PartName	零件描述	Description	数量	Number
1	13111002		塞子	Plug			2	
2	12226001		挑线连杆销	Thread take-up connecting rod pin			1	
3	101S15001		上轴螺钉	Screw SM15/64"×28 L=15			1	
4	13105010		挑线连杆 (厚料)	Thread take-up connecting rod (-H)			1	
5	14422008		挑线杆断油橡胶	Thread take-up lever rubber			1	
6	13538003		挑线杆分组件 (-L)	Thread take-up lever asm (-L)			1	
7	10124001		挑线杆送料轴套	Needle bearing (-L)			2	
8	13110010		挑线轴分组件 (厚料)	Thread take-up crank (-H)			1	
9	10105002		针杆连杆 (厚料)	Needle bar connecting rod (-H)			1	
10	101S17001		挑线曲柄螺钉 (左旋)	Screw			1	
12	10112003		针杆曲柄护板	Needle bar crank protecting plate			1	
13	101S15004		针杆曲柄固定螺钉 SM9/32"×28 L=16	Screw SM9/32"×28 L=16			1	
14	101S11003		针杆曲柄固定螺钉 SM9/32"×28 L=16	Screw SM9/32"×28 L=16			1	
15	10404001		针杆曲柄 (厚料)	Needle bar crank (-H)			1	
16	101S15002		送料轴固定螺钉SM1/4"×40 L=6	Screw SM1/4"×40 L=6			2	
17	14303008		上轴轴承套	Bearing bush			1	
18	10108001		上轴轴承	Main shaft thrust collar			1	
19	101S14001		上轴中套固定螺钉SM1/4"×40 L=6	Screw SM1/4"×40 L=6			2	
20	14403001		上轴中套套	Main shaft bushing mid			1	
21	101S15006		夹线器螺钉SM15/64"×28 L=7	Screw SM15/64"×28 L=7			1	
22	H03002		挡圈20	Snap ring 20			1	
23	11310014		送料轴衬套 (厚)	Feed eccentric cam (-H)			1	
24	10112037		送料轴衬套	Cover plate			1	
25	101S11013		送料轴衬套螺钉 SM1/4"×40 L=13	Screw SM1/4"×40 L=13			2	
26	113511013		护杆片螺钉 SM9/64"×40 L=5	Screw SM9/64"×40 L=5			2	
27	14422009		上轴油封套	Oil seal			1	
28	14403008		上轴轴承套	Bearing bush			1	
29	806023		GB/T276-2013 轴承61904-2RS	Needle bearing			1	
30	S10018		GB/T80 凹圆固定螺钉 M6×0.75×6	Screw M6×0.75×6			2	
31	H03001		GB/T894.1-1986挡圈15	Snap ring 15			1	
32	14302002		上轴	Main shaft			1	
34	S10009		螺钉	Screw			2	
35	114430001		手柄 (喷漆)	Handwheel			1	
36	12922015		橡胶圈	Rubber plug			1	
37	13826009		固定销	Pin			1	
38	11443002800		一体机电控壳壳组件 (施密斯)	Electronic control box			1	
39	W01009		GB/T97.1-1985垫圈 5	Washer 5			2	
40	114513001		直流电机螺钉M5×20	Screw M5×20			3	
41	114530001		螺母(内六角)M5×25	Screw M5×25			1	
42	11443003000		一体机电控组件 (施密斯)	Electronic control box			1	
43	144530001		电控后侧盖	Screw			1	
44	13831015		塑料袋28×18(cm)厚0.03mm	Plastic bag 28cmx18cmx0.03mm			1	
45	13833050		光电编码器电机 (施密斯)	Servo motor			1	
46	1383300700		电机罩壳组件 (施密斯)	Encoder housing assembly			1	
47	1383300900		电机罩壳组件 (施密斯)	Motor grating sensor asm			1	
48	1383300400		电机转子总成	Motor rotor			1	
49	13833003		电机定子总成(配施密斯)	Motor stator,axing			1	
50	13811060		绝缘防护罩	Insulating shield			1	
51	10122012		上轴衬套	Rubber plug			1	
52	144380100		挑线杆	Thread take-up lever asm			1	
53	B10046		深沟球轴承	Needle bearing			1	
54	S10018		螺钉	Screw			2	
55	14408001		针杆曲柄销	Needle bar crank snap ring			1	
56	S10026		螺钉	Screw			2	

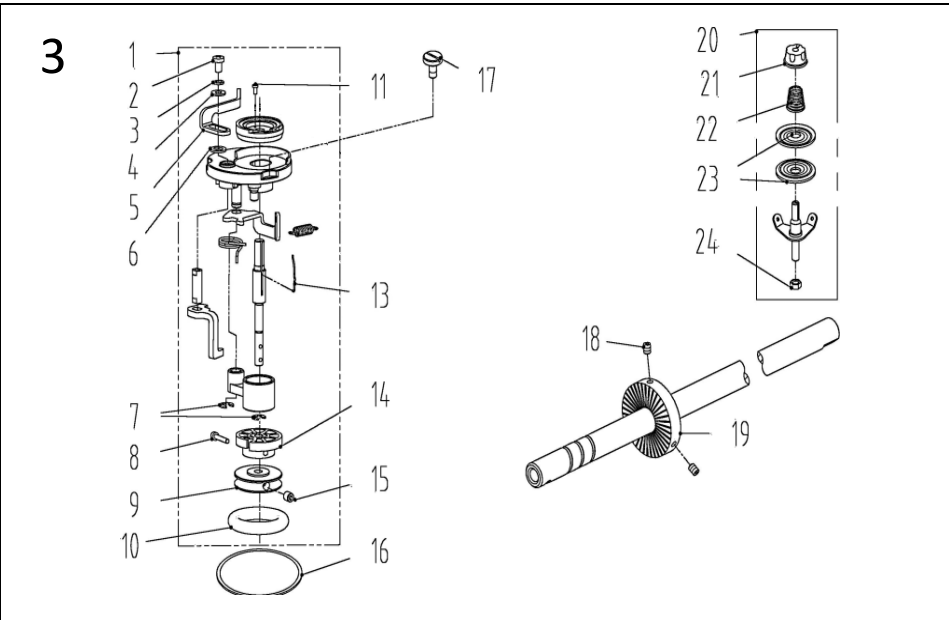

4. 针杆、竖轴、下轴部件/Needle bar,Upright Shaft & Hook Driving Shaft Components

序号NO.	公司件号	Part NO.	名称	PartName	零件描述	Description	数量	Number
1	10403019		下轴后轴套		Hook driving shaft bushing back		1	
2	113514020		下轴后套螺钉SM11/64"×40 L=6		Screw SM11/64"×40 L=6		1	
3	114514001		内六角平端头螺钉SM11/64"×40		Screw SM11/64"×40		1	
3	10108002		下轴挡圈		Hook driving shaft snap ring		1	
4	101S11012		下轴挡圈螺钉SM11/64"×40 L=4.8		Screw SM11/64"×40 L=4.8		2	
5	14003004		下轴中套		Lower shaft middle bushing		1	
6	11522001		油封组件12		oil seal 12		2	
7	1142201600		油封组件18		oil seal 18		1	
8	14103004		下轴前轴套组件		Lower shaft before bushing asm		1	
9	14402003		下轴		Hook driving shaft		1	
10	13823001		下轴油封芯		Oil wick		1	
11	101S30005		下轴油封套		set screw		1	
12	13618005		旋钩组件(进口) (-HL)		Hook asm (-HL)		1	
13	13618003		旋钩组件 (-HL)		Hook asm (-HL)		1	
13	10818501		梭芯 (-L)		Bobbin (-L)		1	
14	13618004		梭壳 (-L)		Bobbin case asm (-L)		1	
15	10117002		机针 (21#)		Needle (21#)		1	
16	11412063		针杆线勾 (厚料)		Needle bar thread guide (-H)		1	
17	104S11006		支针螺钉(进口) SM1/8"×44 L=4.5		Screw SM1/8"×44 L=4.5		1	
18	101S11005		针杆连接柱螺钉 SM9/64"×40 L=6		Screw SM9/64"×40 L=6		1	
19	144010100		针杆支架组件		Needle bar support asm		1	
20	14402014		针杆 (DLC) (厚料)		Needle bar (-H)		1	
21	14438002		针杆连接柱 (DLC)		Needle bar connecting rod		1	
22	114409003		针杆限位块		Slide block		1	
23	14403006		针杆支架底座		Needle bar stand collar		1	
24	138508006		小夹线器螺钉SM3/16"×28 L=7		Screw SM3/16"×28 L=7		2	
25	13111002		塞子		Plug		4	
26	131S1004		螺钉 9/64"×40 L=6		Screw 9/64"×40 L=6		2	
27	14426007		驱动连杆销 (DLC)		Driving connecting rod pin		2	
28	14405002		驱动连杆		Driving connecting rod		1	
29	14409004		针杆支架导轨		Needle bar guide		1	
30	101S11010		压脚压手螺钉		Presser foot screws		2	
31	10112032		限位块(厚料)		Finger positioner (-H)		1	
32	116511005		牙架固定螺钉 SM1/64"×40 L=13		Screw SM1/64"×40 L=13		1	
33	144513001		内六角圆杆头螺钉SM3/16"×28		Screw 3/16"×28		1	
34	131807001		滚珠轴承		Needle bearing		1	
35	14409003		滑动块导轨		Sliding block guide rail		1	
36	14404001		针杆前驱动轴销		Sent front drive the crank pin		1	
37	101S11016		送料曲柄螺钉 SM3/16"×28 L=14		Screw 3/16"×28 L=14		2	
38	14403004		针杆轴套		Before the needle swing axle sleeve		1	
39	14402009		针杆轴套		Needle bar swing axle		1	
40	135S15004		上轴夹线器螺钉		Screw of shaft clamping ring		4	
41	13108002		挡圈		Ring		2	
42	14403005		针杆轴后套		After the needle swing axle sleeve		1	
43	14404002		针杆后驱动轴销		After driving the crank		1	
44	10122006		送料调节器孔塞		Rubber plug		1	
45	131N01002		螺母		Nut		2	
46	14405001		针杆连接杆		Needle connecting rod		1	
47	144S20005		针杆后驱动轴销螺钉		After needle to drive the crank shaft screw		1	
48	144S01001		调节器柱销		Screw		1	
49	144S20006		针杆下驱动轴调节器螺钉		Driving crank adjustment screw		1	
50	10128013		垫圈6.3×13×1		Washer 6.3×13×1		1	
51	10102007		罩轴		Upright shaft		1	
54	13803004		罩轴上轴套		Upright shaft bushing lower		1	
55	10403020		罩轴下轴套		Upright shaft bushing upper		1	
56	131S11036		一字升降夹线器		Screw		1	
57	101S15014		齿轮螺钉SM1/4"×40 L=7		Screw SM1/4"×40 L=7		8	
58	10425004		上轴衬套		Upper shaft bush		1	
59	10425003		轴衬-上全轮		Upper small bevel gear		1	
58	10425002		轴衬-下全轮		Lower large bevel gear		1	
59	10425001		下轴全轮		Hook drive shaft bevel gear		1	


6

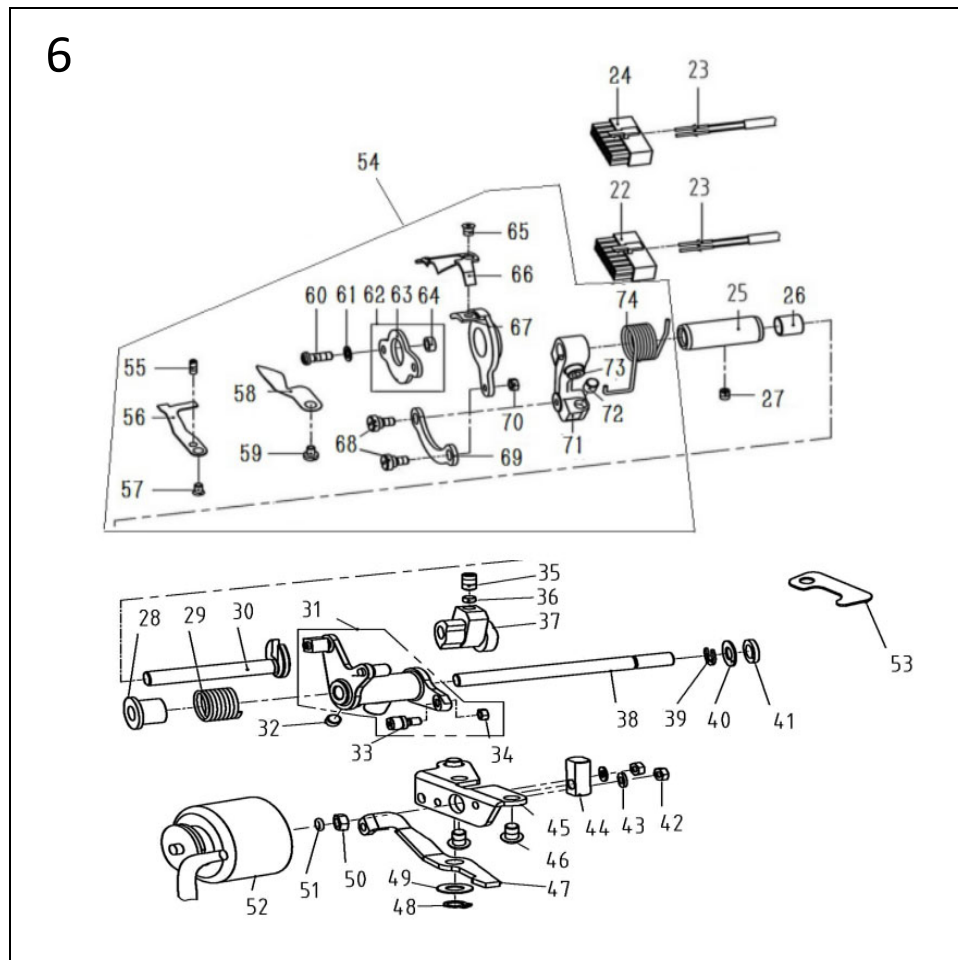


6. 自动剪线部件/Feed Mechanism Components

序号NO.	公司件号	Part NO.	名称	PartName	零件描述	Description	数量	Number
22	11230004		14孔接线器	Plug			1	
23	11230005		电线插针	Pin			2	
24	14130001		14孔接线器	Plug			1	
25	14103003		剪线轴套	Thread cutting shaft bushing			1	
26	11503005		驱动曲柄轴衬套	Crank drive shaft bushing			1	
27	113514020		螺钉SM11/64"x40 L=6	Screw SM11/64"x40 L=6			1	
28	11322002		扭簧盖盖	Spring cover			1	
29	11322002		弹簧	Spring			1	
30	14104002		剪线凸轮轴轴	Crank shaft			1	
31	1400400100		剪线驱动组件	Thread trimmer drive asm.			1	
32	101514001		上轴中套挡圈螺钉SM11/4"x40 L=6	Screw SM11/4"x40 L=6			1	
33	11324001		滚针	Roiling pin			1	
34	113516002		螺母SM11/64"x40	Nut SM11/64"x40			1	
35	116514005		螺钉SM11/4"x40 L=10	Screw SM11/4"x40 L=10			2	
36	11309030		凸轮顶柱	Push rod			2	
37	11310011		剪线凸轮 (厚料)	Cam (-H)			1	
38	14002004		轴	Shaft			1	
39	H05013		GB/T896-1986挡圈6	GB/T896-1986 pin			1	
40	10112003		针杆曲柄护板	Cunter weight protecting			1	
41	11322003		电磁铁缓冲片	Solenoid cushion rubber			1	
42	N01001		螺母 M4	Nut M4			2	
43	W01013		GB/T97.1-1985垫圈4.5	Washer			2	
44	11309001		切线电磁铁顶嘴	Solenoid pin			1	
45	1401200200		切线电磁铁支架组件	Bracket			1	
46	S17002		GB/T70.2-2000内六角平端头螺钉M6x10	Screw M6x10			2	
47	14112022		切线杆杆	Tangent lever			1	
48	H03015		GB/T894.1卡簧8	Ring 8			1	
49	10112003		针杆曲柄护板	Needle bar crank protecting plate			1	
50	112516006		螺母SM11/4"x40	Nut SM11/4"x40			1	
51	113822005		橡胶垫	Washer			1	
52	1403003400		剪线电磁铁组件	Thread trimmer solenoid asm.			1	
53	10112022		剪线电磁铁顶嘴	Plate			1	
54	140300012		自动剪线组件 (-HL用)	Feed Mechanism components (-HL)			1	
55	113515002		定刀调节螺钉SM11/8"x44 L=9.5	Screw SM11/8"x44 L=9.5			1	
56	13119001		定刀	Secant knife			1	
57	113517001		螺钉SM9/64"x40	Screw SM9/64"x40			1	
58	114413002		护针片	Needle guard patch			1	
59	201511009		螺钉SM9/64"x40 L=5.5	Screw SM9/64"x40 L=5.5			1	
60	113511001		螺钉SM11/64"x40 L=12	Screw SM11/64"x40 L=12			1	
61	10128003		牙床座螺钉垫圈	Washer			2	
62	14012004		刀架压板组件	Knife bracket press component			1	
63	114412001		刀架压板	Knife bracket press			1	
64	13803012		活动刀固定螺钉SM11/64"x40 L=4.4	Screw SM11/64"x40 L=4.4			2	
65	113517002		活动刀固定螺钉SM11/64"x40 L=4.4	Screw SM11/64"x40 L=4.4			2	
66	11319004		活动刀(薄料长嘴)	Motorial knife			1	
67	114419001		剪线刀架	Knife bracket			1	
68	113520001		连杆螺钉SM11/64"x40	hinge Screw SM11/64"x40			2	
69	114112013		连杆	Connecting rod			1	
70	114516004		螺母SM11/64"x40	Nut SM11/64"x40			1	
71	114404005		曲柄	Crank			1	
72	114422005		驱动曲柄止动块	Crank drive stopper block			1	
73	505004		螺钉M5x14	Screw M5x14			1	
74	11327001		弹簧	Spring			1	

8

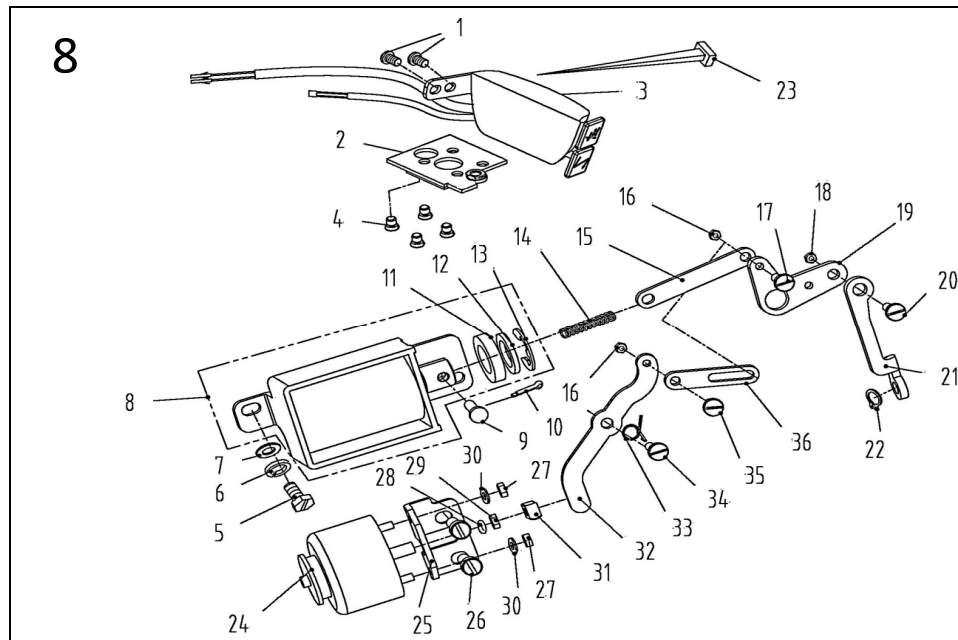

7

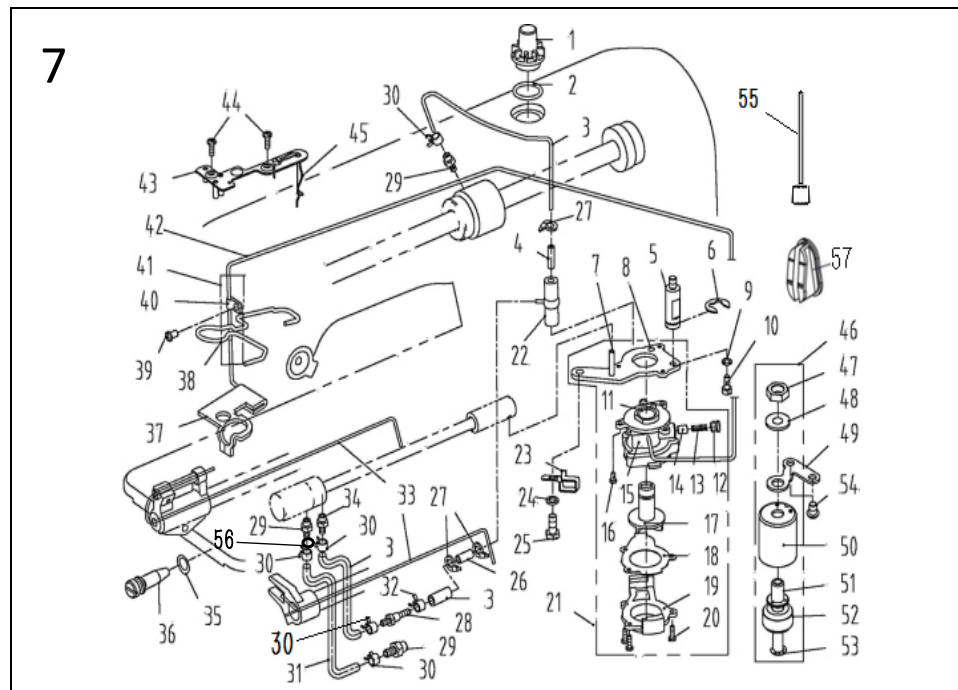


7. 润滑、油量检测部件/Oil Lubrication、Oil Measuring Components

序号NO.	公司件号	Part NO.	名称	PartName	零件描述	Description	数量	Number
1	11221004		油窗	Oil sight window			1	
2	10122019		橡胶圈	Rubber ring			1	
3	14021001		油管Φ4×Φ6	Tubing Φ4xΦ6			0.6	
4	14436001		铝油管Φ4.5xΦ6	Aluminum tubing Φ4.5xΦ6			1	
5	112530005		油泵连接螺母	Oil pump connecting stud			1	
6	11329010		开口挡圈10	Snap ring 10			1	
7	10121001		下油钩	Hook driving shaft oil tube			1	
8	10112020		油泵安装板	Oil pump installing base			1	
9	W03002		弹垫	Spring washer			1	
10	209512001		压脚螺钉SM11/64"x40 L=10.5	Screw SM11/64"x40 L=10.5			1	
11	10103022		油泵体衬套	Oil pump bushing			1	
12	101530007		柱塞螺钉	Plunger screw			1	
13	10127013		柱塞弹簧	Plunger spring			1	
14	10122018		回油柱塞	Plunger			1	
15	10120001		油泵体	Oil pump			1	
16	S04009		螺钉	Screw			3	
17	10111002		油泵泵头	Oil pump impeller			1	
18	10112021		油泵叶轮托板	Oil pump impeller cover			1	
19	10111007		油泵盖	Lubricating oil pump cover			1	
20	101530006		螺钉	Screw			3	
21	1012000100		油泵泵头	Lubricating oil pump component			1	
22	10136001		橡胶接头	Rubber joint			1	
23	14312007		过线勾	Over wire hook			1	
24	W02004		GB/T93-1987弹垫M6	Spring Washer M6			1	
25	116530003		拍牙叉固定螺钉SM15/64"x28 L=14.5	Screw SM15/64"x28 L=14.5			1	
26	14021003		铝油管	Aluminum tubing			1	
27	11211005		尼龙扎带	Cable band			4	
28	14036004		油嘴	Oil nozzle			1	
29	114430001		回油嘴	Oil nozzle			3	
30	20429001		油管卡簧6.5	Oil pipe clamp spring			4	
31	14021001		油管Φ4×Φ6	Tubing Φ4xΦ6			0.15	
32	10129007		油管Φ6	Oil pipe clamp spring			1	
33	10123010		油泥	Oil wick			2	
34	14036003		供油嘴	Oil nozzle			1	
35	14022011		O型圈	Rubber ring			1	
36	140530001		油量调节螺钉	Oil volume adjusting screw			1	
37	14423001		回油毡	Oil felt felt			1	
38	14427003		回油毡头	Asphalt felt clamp			1	
39	101511004		挑线杆护罩螺钉SM3/16"x28 L=7	Screw SM3/16"x28 L=7			1	
40	10112023		回管管夹	Oil tube clamp			1	
41	10121007		回油管组件	Oil return tube component			1	
42	10121008		回油管	Oil return tube			1	
43	10112025		油线固定板	Oil line fixing plate			1	
44	101511010		压脚板手螺钉SM9/64"x40 L=11	Screw SM9/64"x40 L=11			2	
45	10123010		油泥 (厚料)	Oil wick (-H)			1	
46	1443009000		油量检测装置组件	Oil measuring device			1	
47	N01009		螺母	Nut			1	
48	W02003		弹性垫圈	Washer			1	
49	14012006		油量检测装置固定板	Pull spring fixing plate			1	
50	14011004		油量检测罩壳	Shell			1	
51	14002005		导向柱	Guide pillar			1	
52	14011002		压脚	Foot			1	
53	H05009		开孔挡圈6	Ring 6			1	
54	101511026		油泵安装螺钉SM15/64"x28 L=9	Screw SM15/64"x28 L=9			2	
55	11412200200		油标	Oil mark			1	
56	20122033		垫片	Washer			1	
57	13811015		油窗	Oil window			1	

8. 自动倒送料、感应抬压脚部件/Automatic Reverse Feed Components

序号NO.	公司件号	Part NO.	名称	PartName	零件描述	Description	数量	Number
1	101511004		挑线杆护罩螺钉SM3/16"x28 L=7	Screw SM3/16"x28 L=7			2	
2	144300700		LED灯组件	LED Light asm			1	
3	11443001700		双开关组件	Double switch components			1	
4	131502001		螺钉 3/16"x28 L=6.5	Screw 3/16"x28 L=6.5			4	
5	116530003		拍牙叉固定螺钉SM15/64"x28 L=14.5	Screw SM15/64"x28 L=14.5			1	
6	W02004		GB/T93-1987弹垫M6	Spring washer M6			2	
7	11628005		拍牙叉固定螺钉垫圈	Washer			2	
8	1443001000		自动倒送料电磁铁	Auto reverse feed solenoid			1	
9	11326005		销子	Pin			1	
10	113829001		R形弹性开口销p1.5	Cotter pin			1	
11	11322040		橡胶垫片	rubber plunger			1	
12	11328031		垫片	Washer			1	
13	H05014		GB/T896-1986开口挡圈	Snap ring			1	
14	11227006		自动倒送料连杆顶弹簧	Plunger spring			1	
15	13812034		自动倒送料连杆	Auto reverse feed connecting rod			1	
16	143156014		曲柄短螺钉SM11/64"x40	Nut SM11/64"x40			2	
17	143152004		曲柄短螺钉SM11/64"x40	Hinge Screw SM11/64"x40			1	
18	112516007		曲柄长螺母SM11/4"x28	Nut SM11/4"x28			1	
19	14104005		自动倒送料曲柄	Auto reverse feed crank			1	
20	112520001		曲柄长螺钉 SM11/4"x28	Hinge Screw SM11/4"x28			1	
21	13812371		自动倒送料拉杆	Auto reverse feed pull shaft			1	
22	14029003		轴用弹性销 (厚料0.8mm)	External Circlip 0.8mm			1	
23	11211005		尼龙扎带	Cable band			8	
24	1443008000		短线电磁铁组件	Thread trimmer solenoid asm.			1	
25	14112002		短线电磁铁支架	Bracket			1	
26	101511026		油泵安装螺钉SM15/64"x28 L=9	Screw SM15/64"x28 L=9			2	
27	N01001		螺母 M4	Nut M4			2	
28	113822005		橡胶垫	Washer			1	
29	112516006		螺母SM11/4"x40	Nut SM11/4"x40			1	
30	W01013		GB/T97.1-1985垫圈4.5	Washer			2	
31	14126001		短线电磁铁销	pin			1	
32	14105001		短线电磁铁顶嘴	Pin			1	
33	14127001		限位挡块	Lower sensor			1	
34	141520001		倒送料连杆轴位螺钉	Screw			1	
35	1144NS20001		倒送料连杆轴位螺钉	Screw			1	
36	141520003		轴位螺钉SM11/64"x40	Screw SM11/64"x40			1	
36	14105002		辅助连杆	rod			1	

9

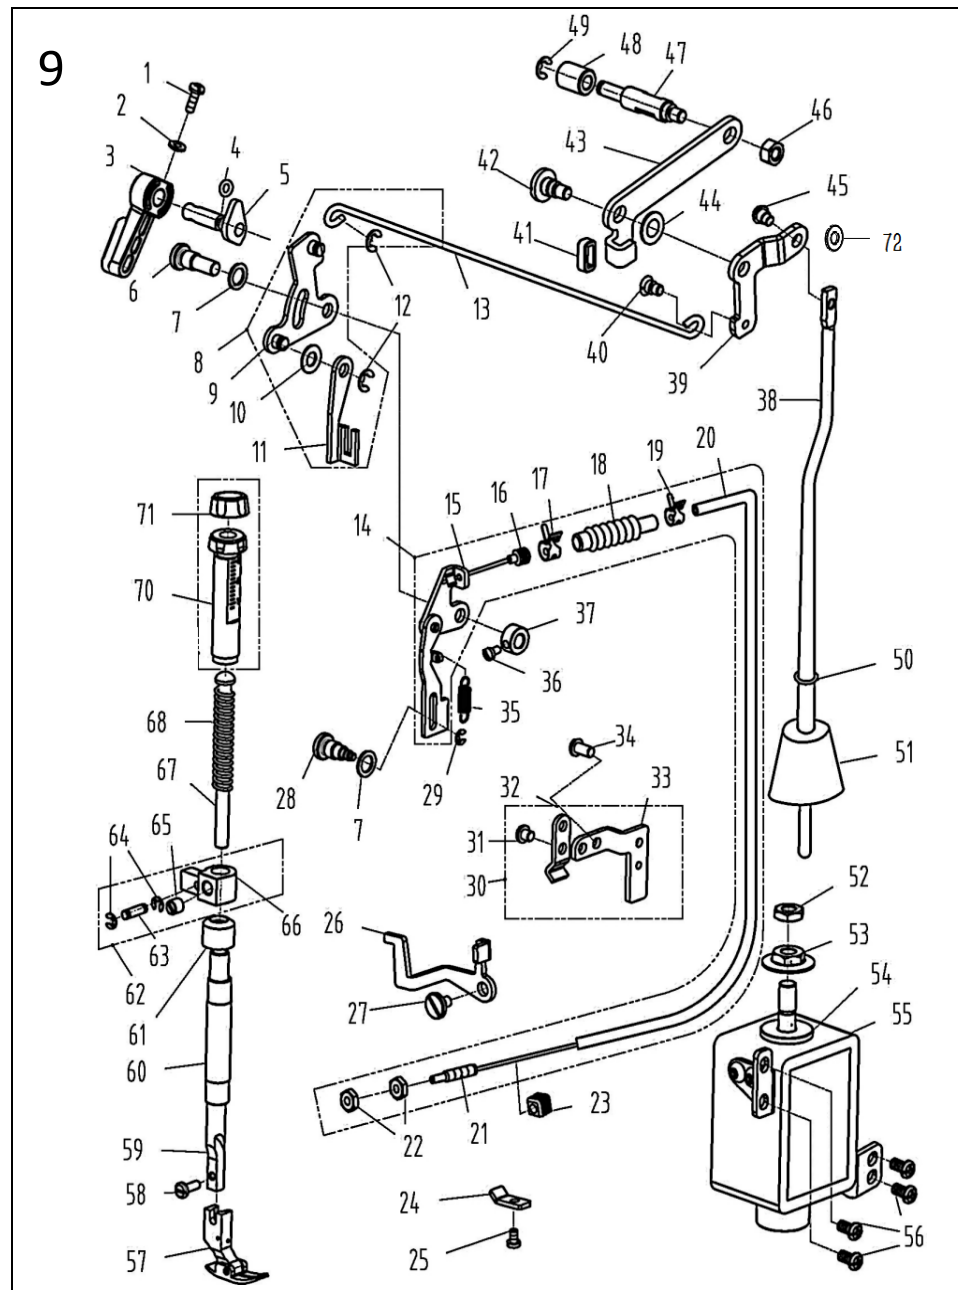

9. 压料、自动抬压脚部件 /Press